


ASSEMBLY INSTRUCTIONS

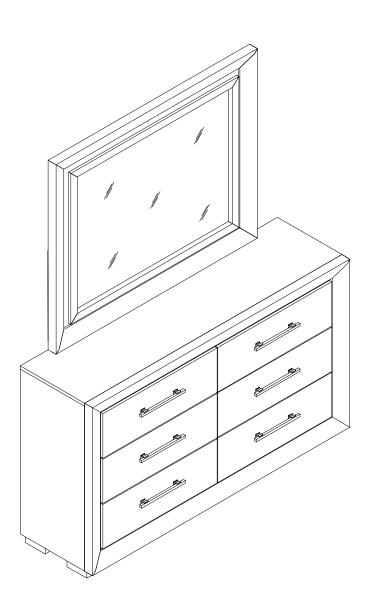

MODEL # FM7415D&M

Questions?

GIVE US A CALL: 1-888-980-5122 MON-FRI 8:30AM - 5:30PM (PT)

TOOLS REQUIRED



Allen Wrench

(Included)



Phillips Screwdriver (Not Included)



2 - People Recommended

ASSEMBLY RATING



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 24-02-26






Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.

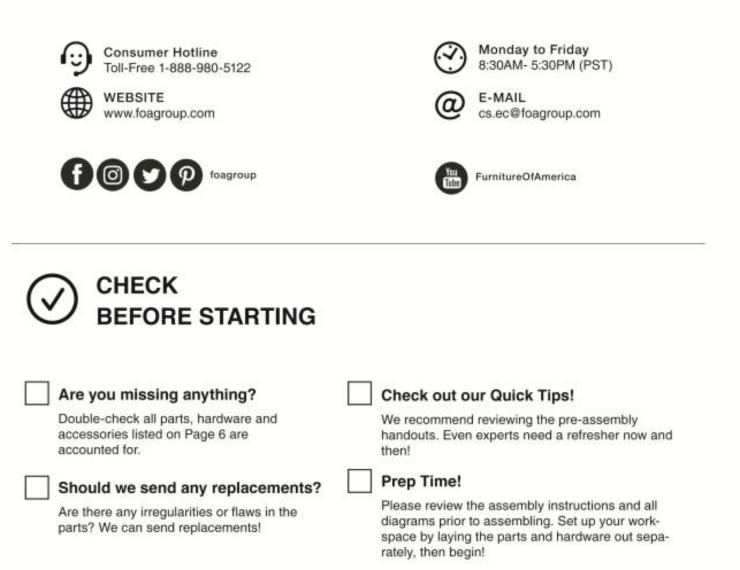

PRE ASSEMBLY

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



 












Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

Suitable Location

Assembling near the area of the intended location is highly recommended.

Sufficient Space

Make sure you have enough space to move around during the assembly.

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.


Flat Surface

 
Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

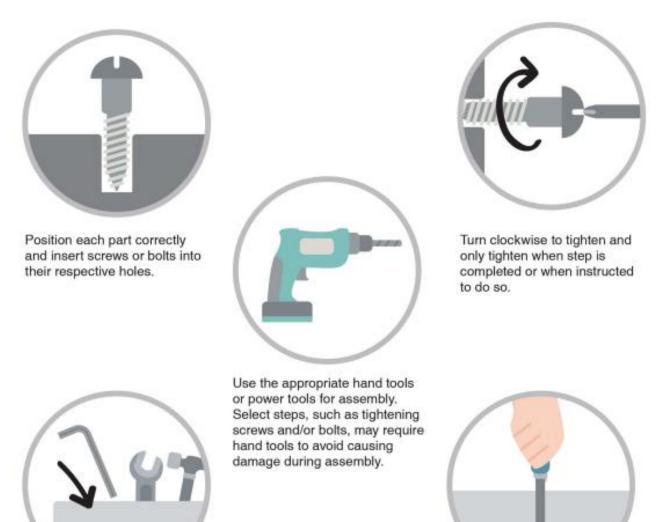



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

DRESSER & MIRROR

FM7415D&M

Anti Tip Kit


- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

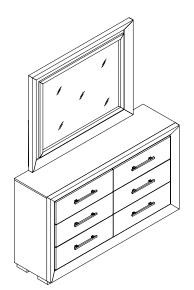


PARTS									
#1 1pc	#2 4pcs	#3 1pc	#4 1pc	#5 2pcs					
		(Ø1	/4")	< <u>~~~~</u>					
Dresser	Leg	Support Le 36x35x35m	•	Support Rail					
HARDWARE									
#A 8pcs	#B 8pcs		#C 8pcs	#D 8pcs					
				\bigcirc					
Bolt Ø5/16" x 1"	Bolt Ø	ð1/4" x 1-1/2"	Lock Washer Ø5/16"x13mm	Flat Washer Ø5/16"x19mm					
#E 8pcs	(#F 8pcs	#G 1 pc	#H 1 pc					
P		\bigcirc							
Lock Washer Ø1/4"x10mm		t Washer /4"x19mm	Allen Wrench M4	Allen Wrench					
#I 1 Set									

FM7415D&M is packed in 2 cases

Carton	Disignation	Part		Hardware	
FM7415-D	Dresser	#1			#A x 8pcs #C x 8pcs
	Legs(4pcs)	#2			#D x 8pcs #G x 1pc
	Support Leg	#3	<u>.</u>	Cor.	[°] #I x 1Set
FM7415-M	Mirror	#4			#B x 8pcs #E x 8pcs
	Mirror Support Rail (2pcs)	#5	(#F x 8pcs #H x 1pc

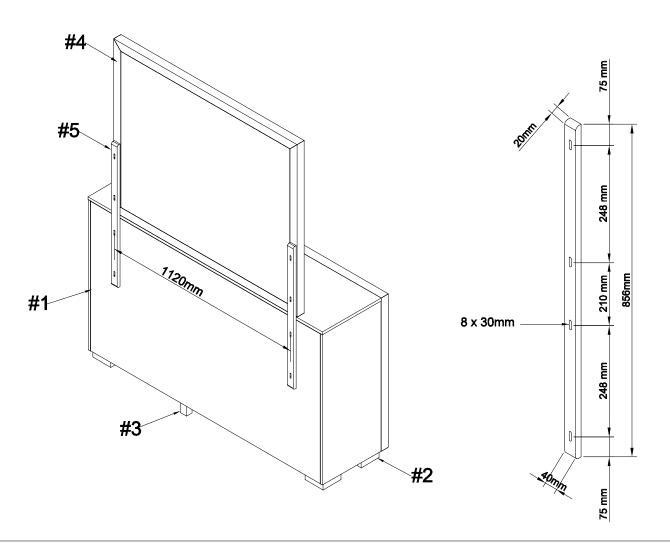


ASSEMBLY INSTRUCTIONS

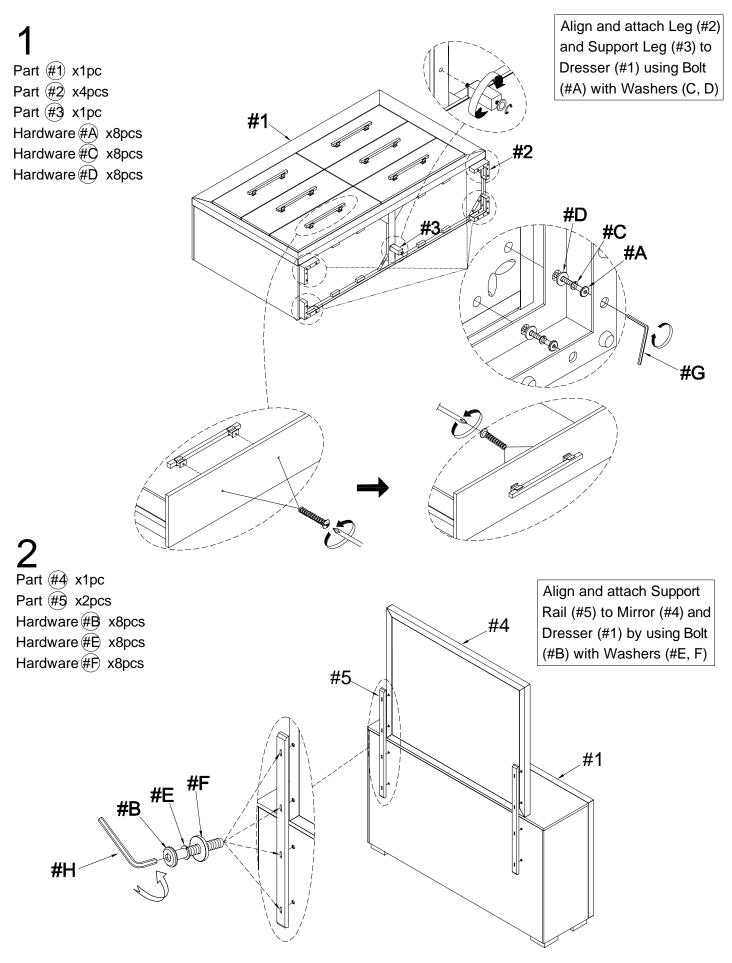

ASSEMBLY INSTRUCTIONS

3 Hardware(#I) x1Set

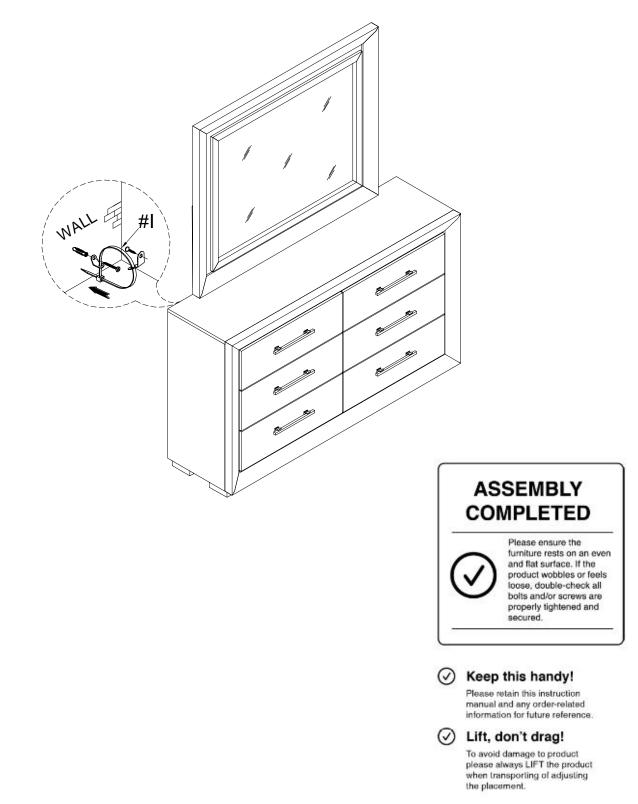

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.

 
ASSEMBLY INSTRUCTIONS

Wall Mounting and Fixing




EXPANSION WALL ANCHOR

Our provided expansion wall anchors are only suitable for masonry walls, such as drywall, plaster or concrete, and are best for holding lightweight items or for anti-tip prevention. If you are unsure of the correct wall anchor to use with the product, please request professional guidance. liability for product damage or failure due to using the incorrect anchors will fall on the installer.



CHECK BEFORE PROCEEDING

Prior to drilling or hammering, please check for wires or pipes. We recommend using a stud finder to locate a stud, which will offer more appropriate resistance and hold more weight.

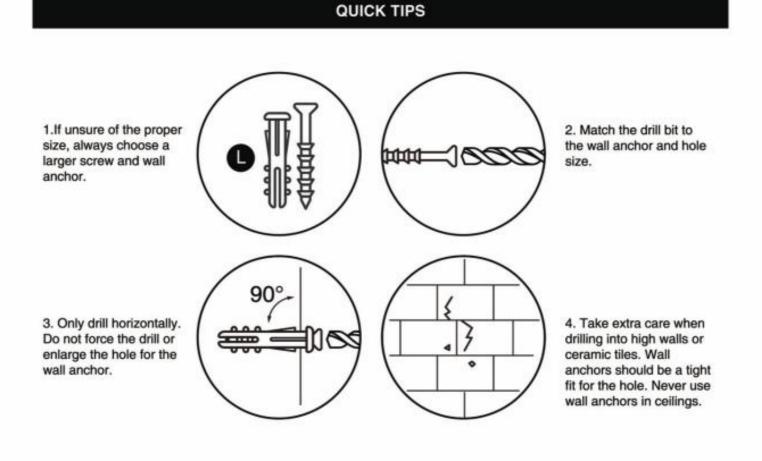

MAINTENANCE Yea



We recommend a yearly check to see if the wall anchor or screw has loosened. If so, please remove the existing wall anchor and screw, and use a new anchor.