

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

910311
SHOE BENCH

ITEM:910311

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 


ASSEMBLY TIME

60 MINUTES


PARTS IDENTIFICATION

A LEFT SIDE
PANEL




1 PC

 B RIGHT SIDE
PANEL

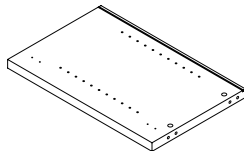


1 PC

 C MIDDLE DIVIDER
PANEL

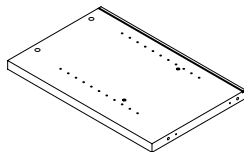


1 PC

 D BOTTOM PANEL

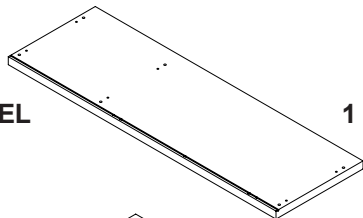


1 PC

 E LEFT TOP
PANEL

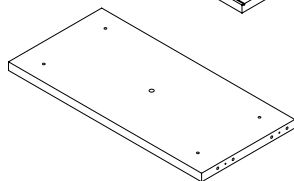


1 PC

 F RIGHT TOP
PANEL

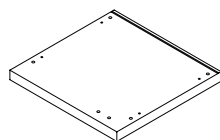


1PC

 G SMALL
ADJUSTABLE
SHELF




3PCS

 H LEFT LOWER
BACK PANEL

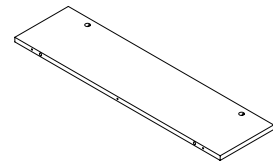


1 PC

 I BACK PANEL

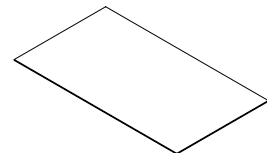


1 PC

 J DOOR

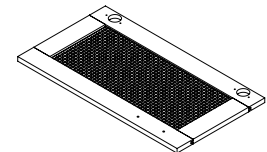


1 PC

 K DIVIDER PANEL




1PC

 L SEAT CUSHION

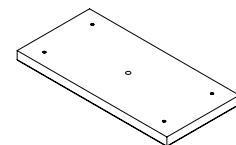


1 PC

 M LEG FRAME



2 PCS

 N CROSSBAR

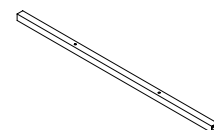

 
 
 
 
 


 
 

 

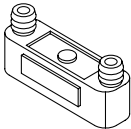 

 
 

 
1 PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:910311

HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	10	HINGE Ø35mm SR		2 PCS
2	WOODEN DOWEL Ø8x30mm		21 PCS	11	HINGE SCREW Ø4x15mm SR		8 PCS
3	CAM BOLT Ø7x35.5mm SR		8 PCS	12	BOLT M6x58mm BLK		2 PCS
4	CAM LOCK Ø15x12mm SR		8 PCS	13	BOLT M6x43mm BLK		4 PCS
5	BOLT Ø9.5x55mm SR		11 PCS	14	BOLT Ø7x50mm BLK		6 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		12 PCS	15	FLOOR PROTECTOR 30x30mm		4 PCS
7	DOOR CATCH		1 PC	16	ALLEN WRENCH 4mm SR		1 PC
8	HANDLE L= 120mm BLK		1 PC	17	STICKER Ø20mm		3 PCS
9	HANDLE BOLT BLK		2 PCS	18	SCREW Ø5x35mm BLK		4 PCS

Z8,Z9,Z10 not included in blister packaging.

 
 
NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.





ITEM: **910311**

STEP 1


COASTER
FINE FURNITURE

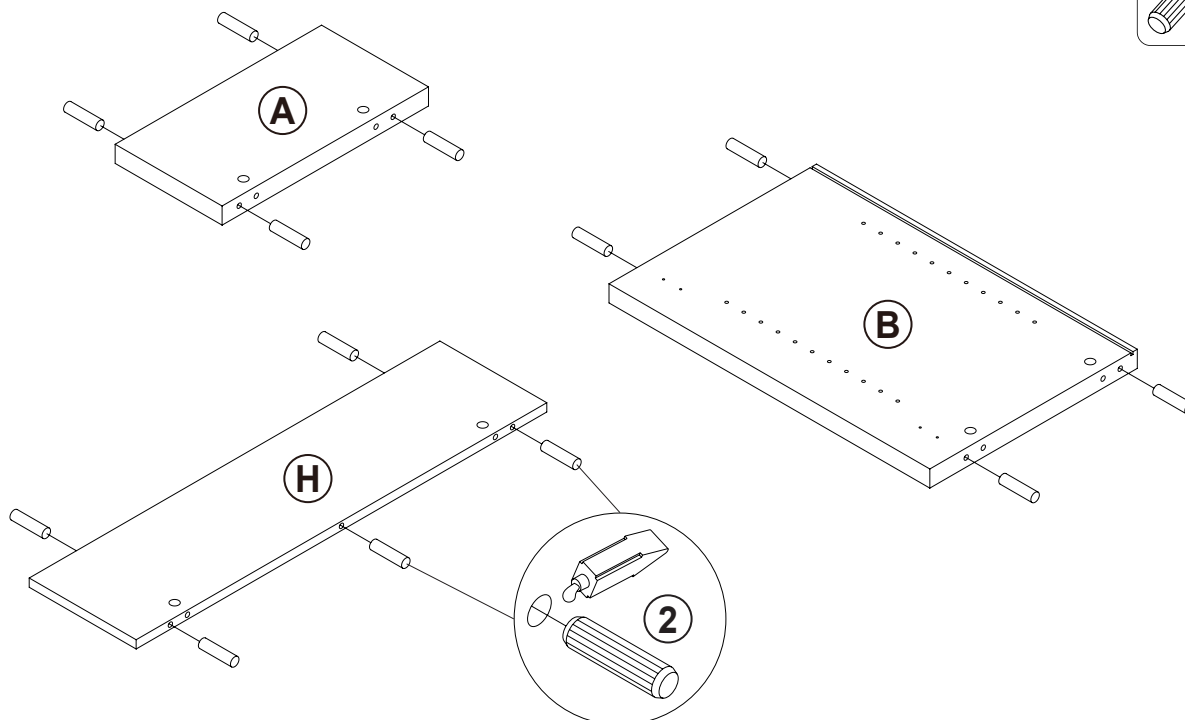

    
STEP 2

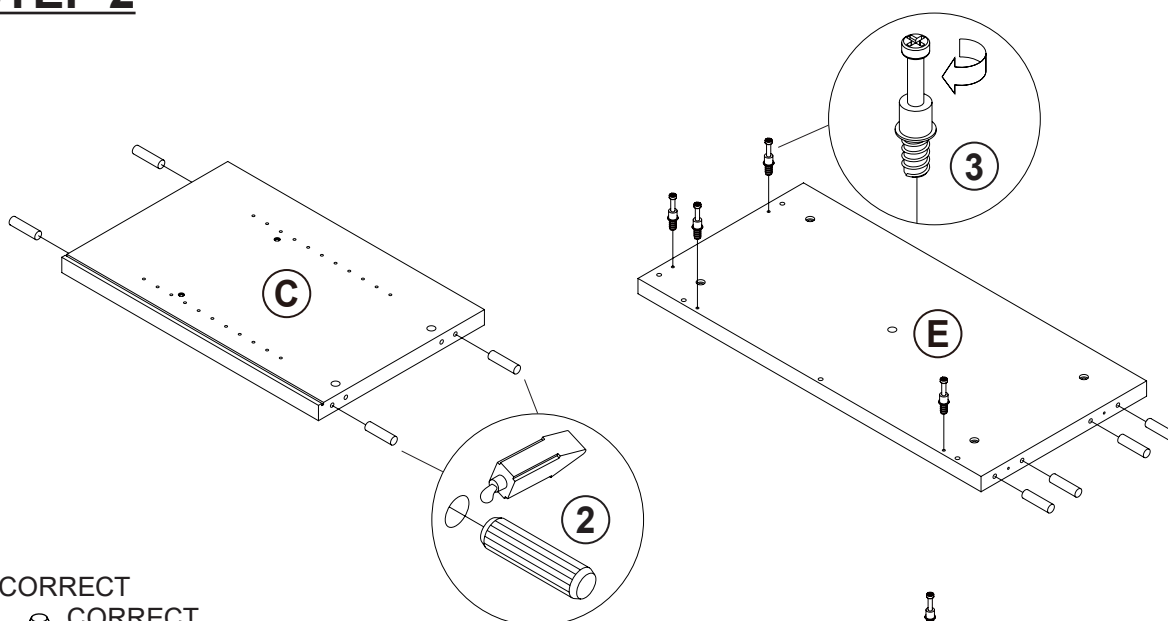

INCORRECT
CORRECT

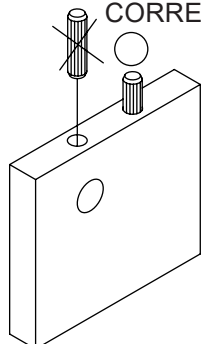 



 
Apply glue on all wooden dowels to ensure integrity of the structure.

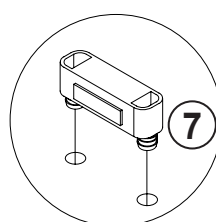





ITEM: **910311**

COASTER
FINE FURNITURE

   STEP 3

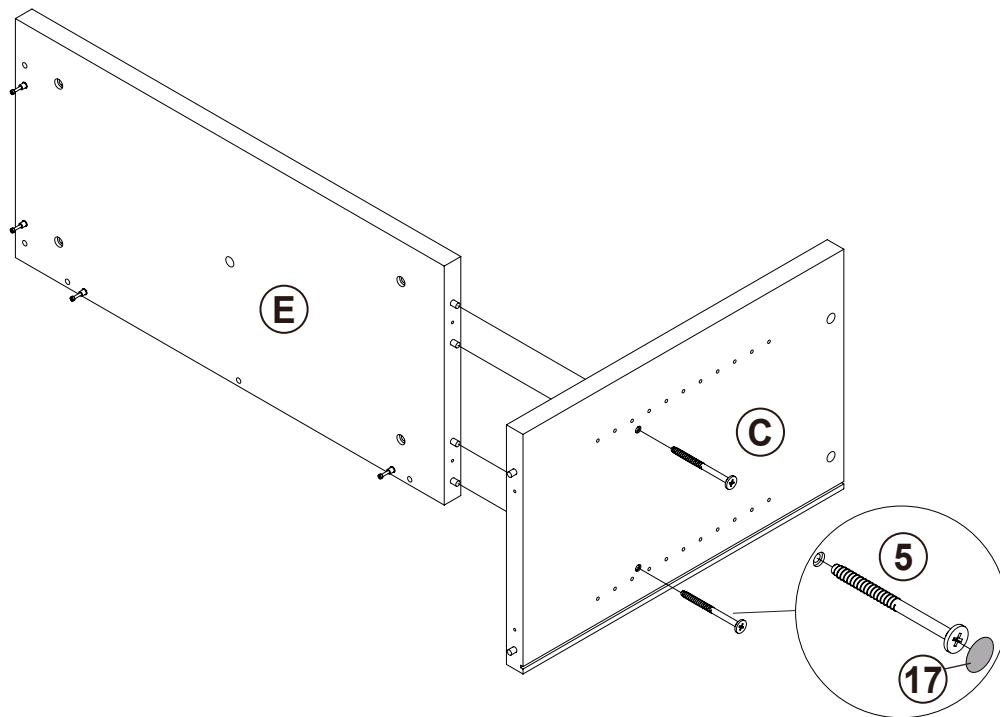


    STEP 4

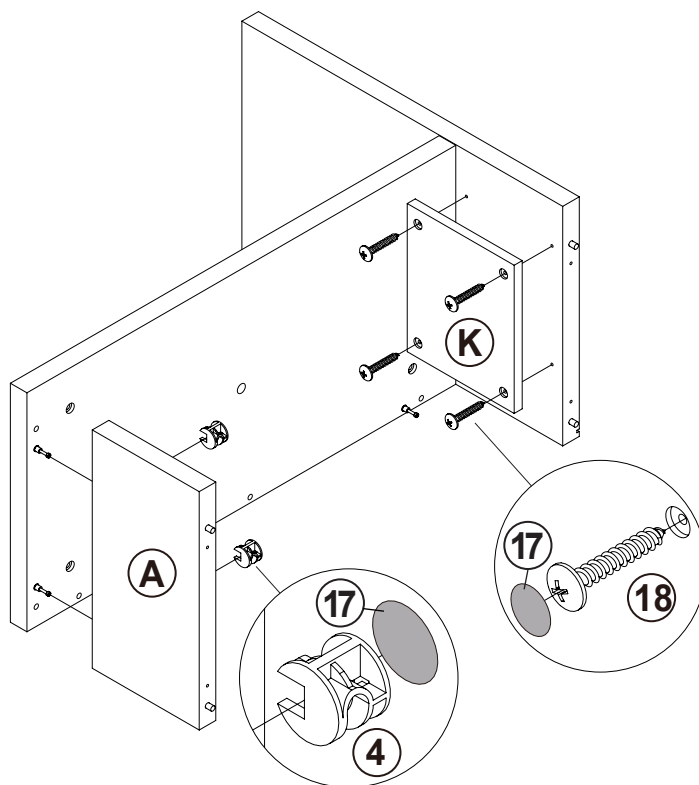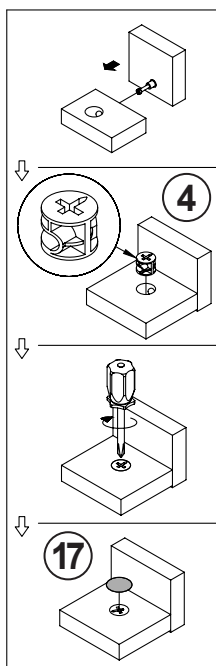


ITEM: **910311**

 STEP 5

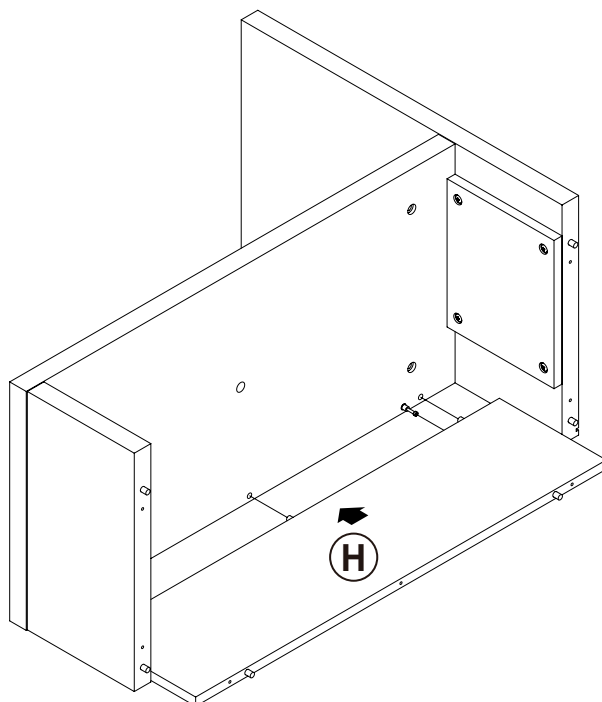


 
STEP 6

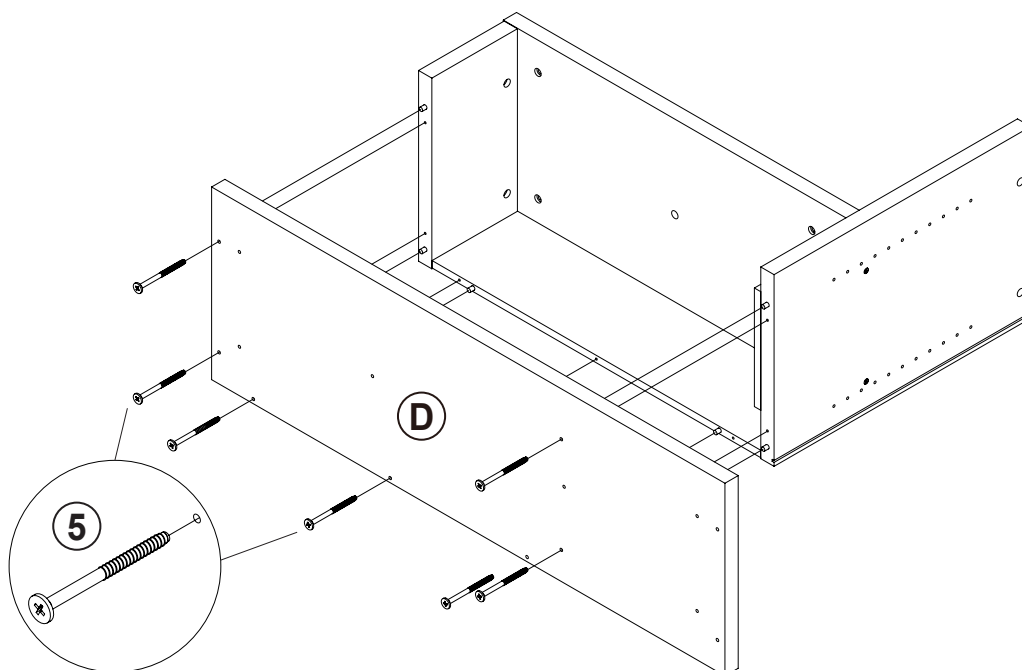




ITEM: **910311**

STEP 7

  COASTER
FINE FURNITURE

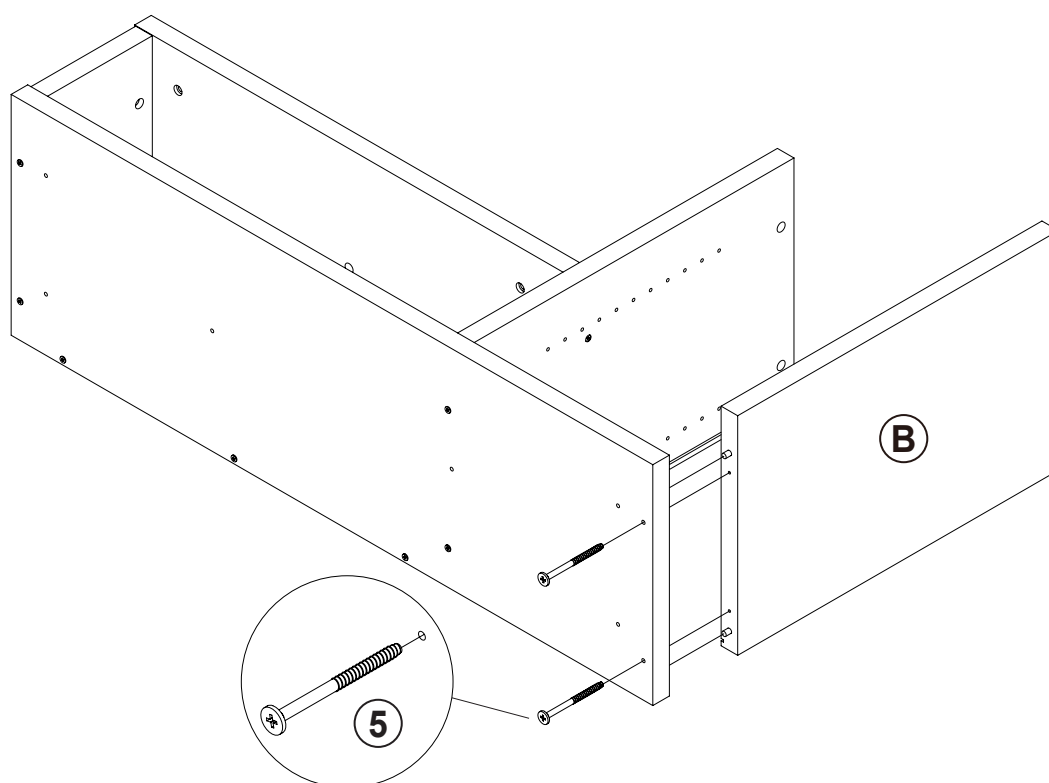


 
 
 
STEP 8

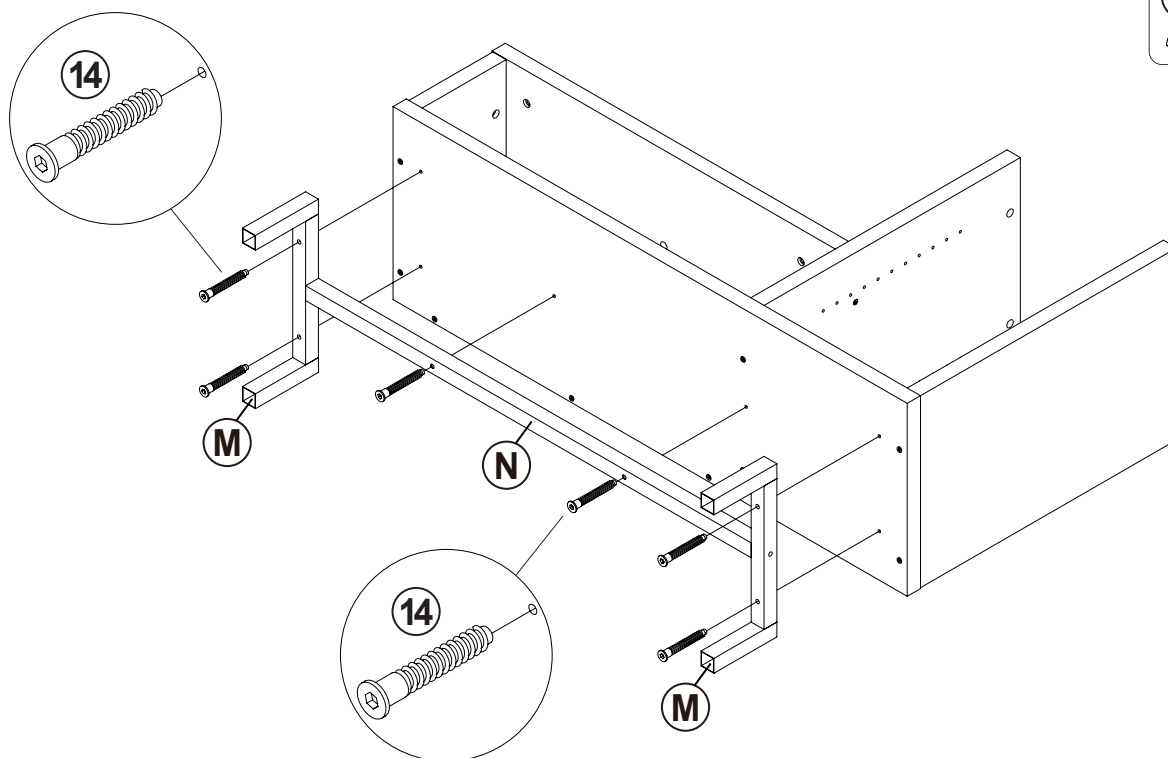





ITEM: **910311**

STEP 9

    COASTER
FINE FURNITURE

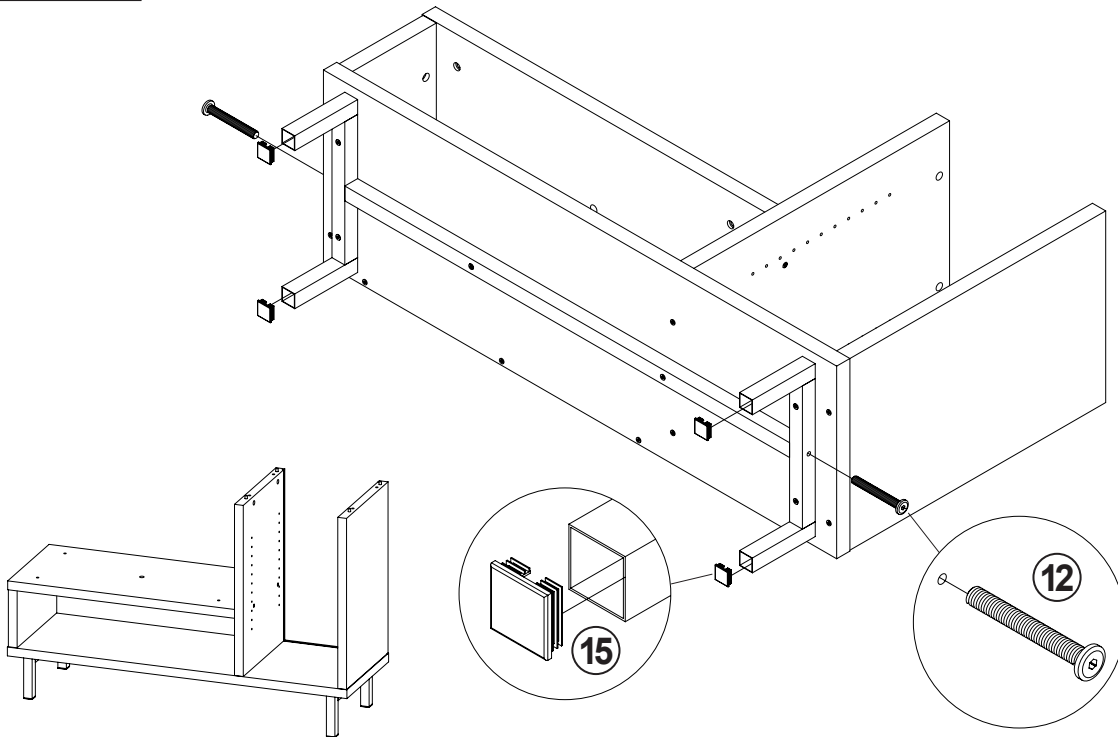

   
 
STEP 10

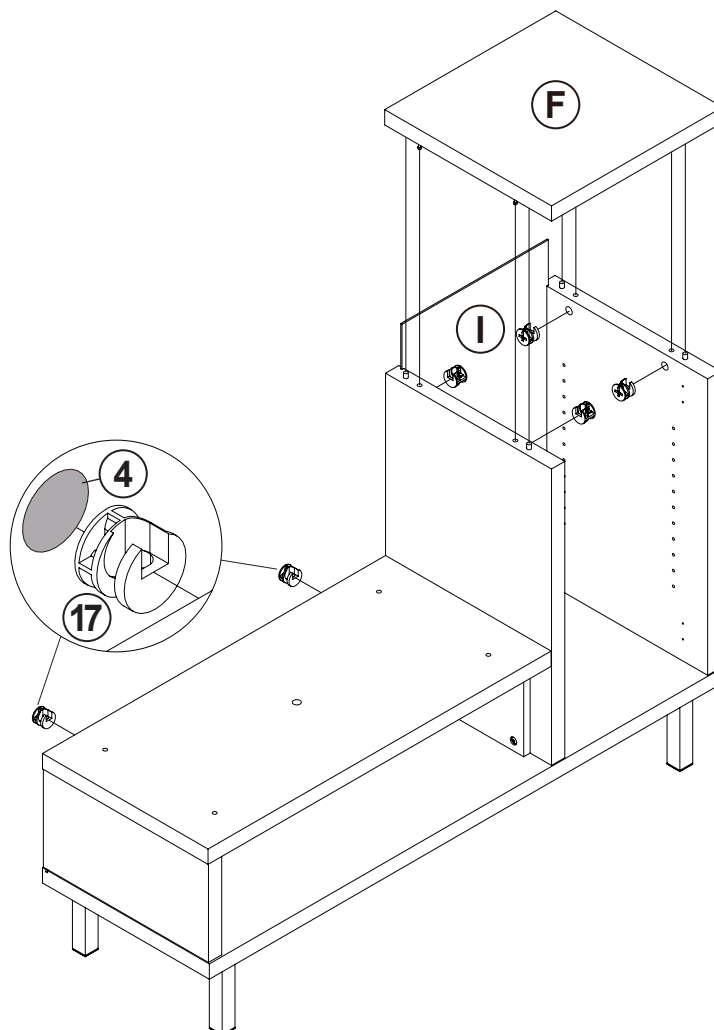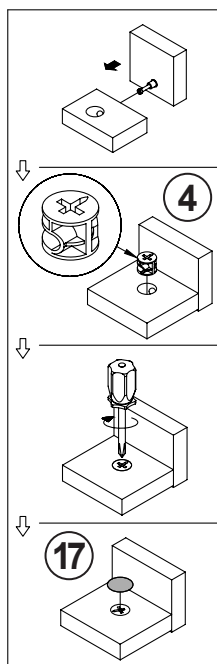



ITEM: **910311**

STEP 11

  COASTER
FINE FURNITURE

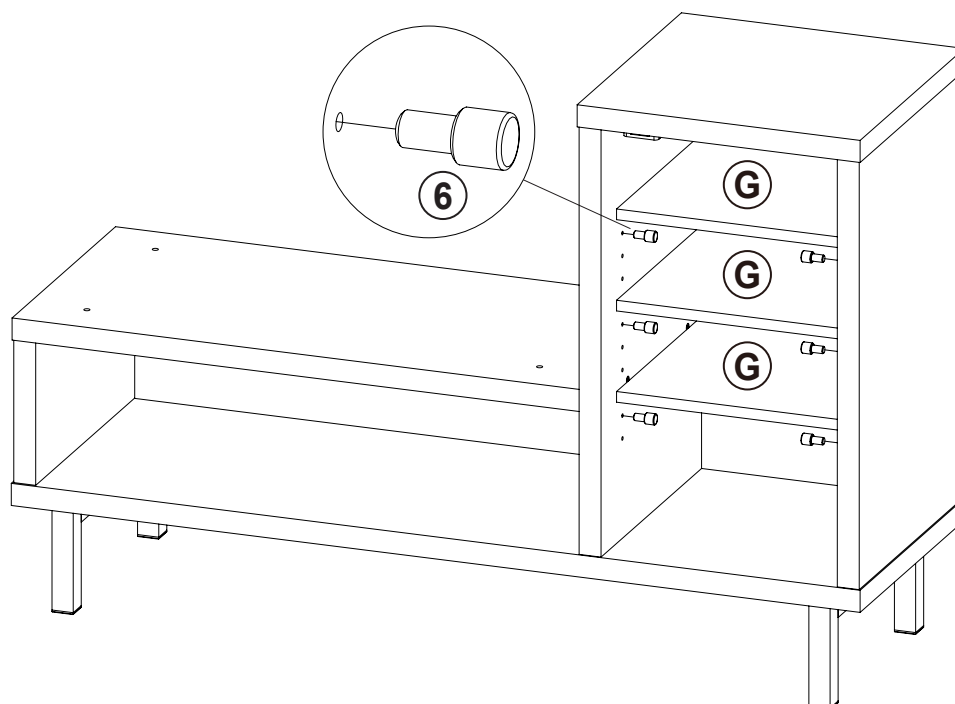

 
 
STEP 12

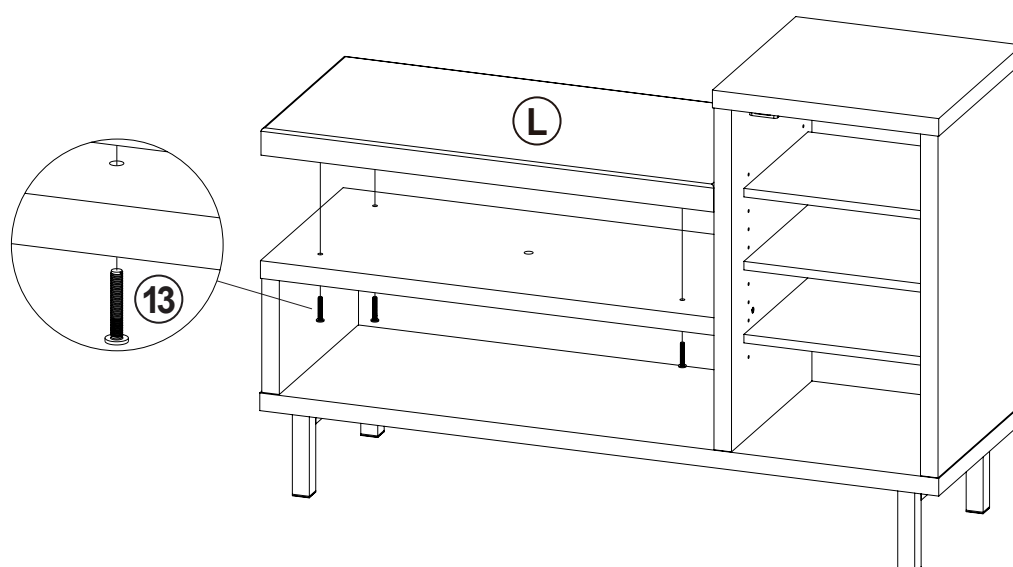


ITEM: **910311**

STEP 13

  
COASTER
FINE FURNITURE

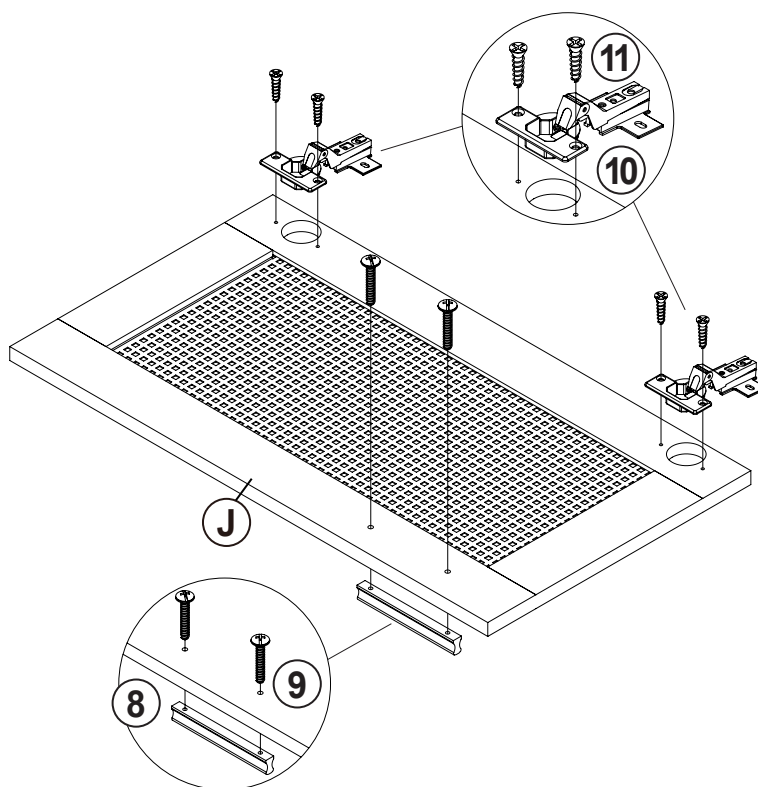

 
STEP 14

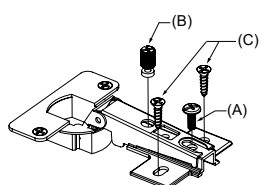




HORIZONTAL BY
SCREW A ADJUSTMENT

 


LATERAL BY
SCREW B ADJUSTMENT

 


VERTICAL BY
SCREW C ADJUSTMENT

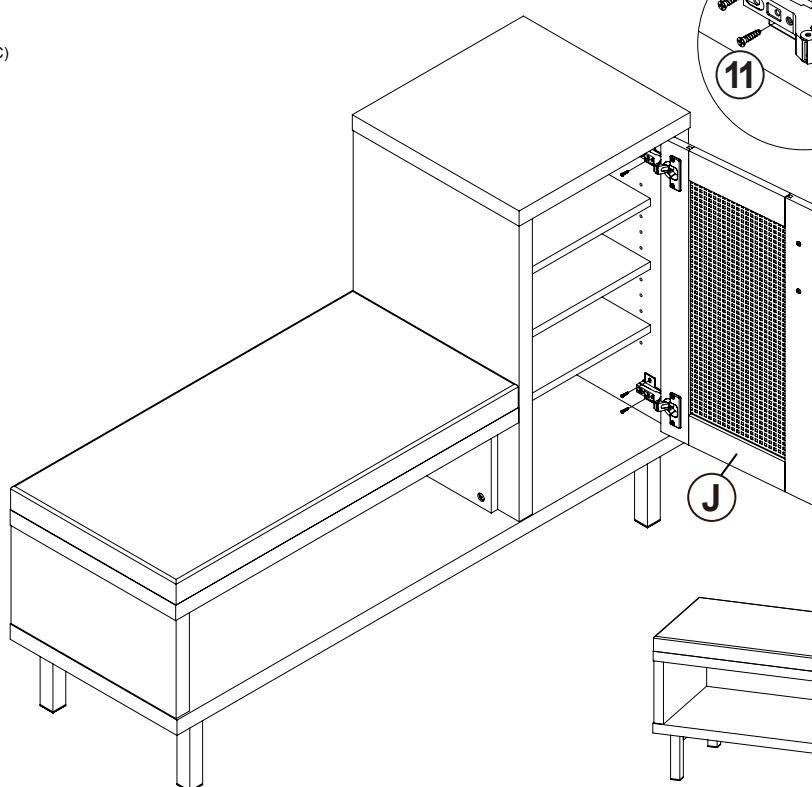   

COMPLETE

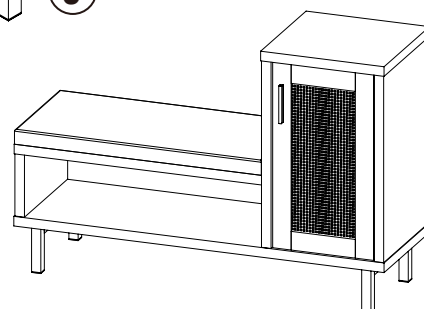 

ITEM: 910311

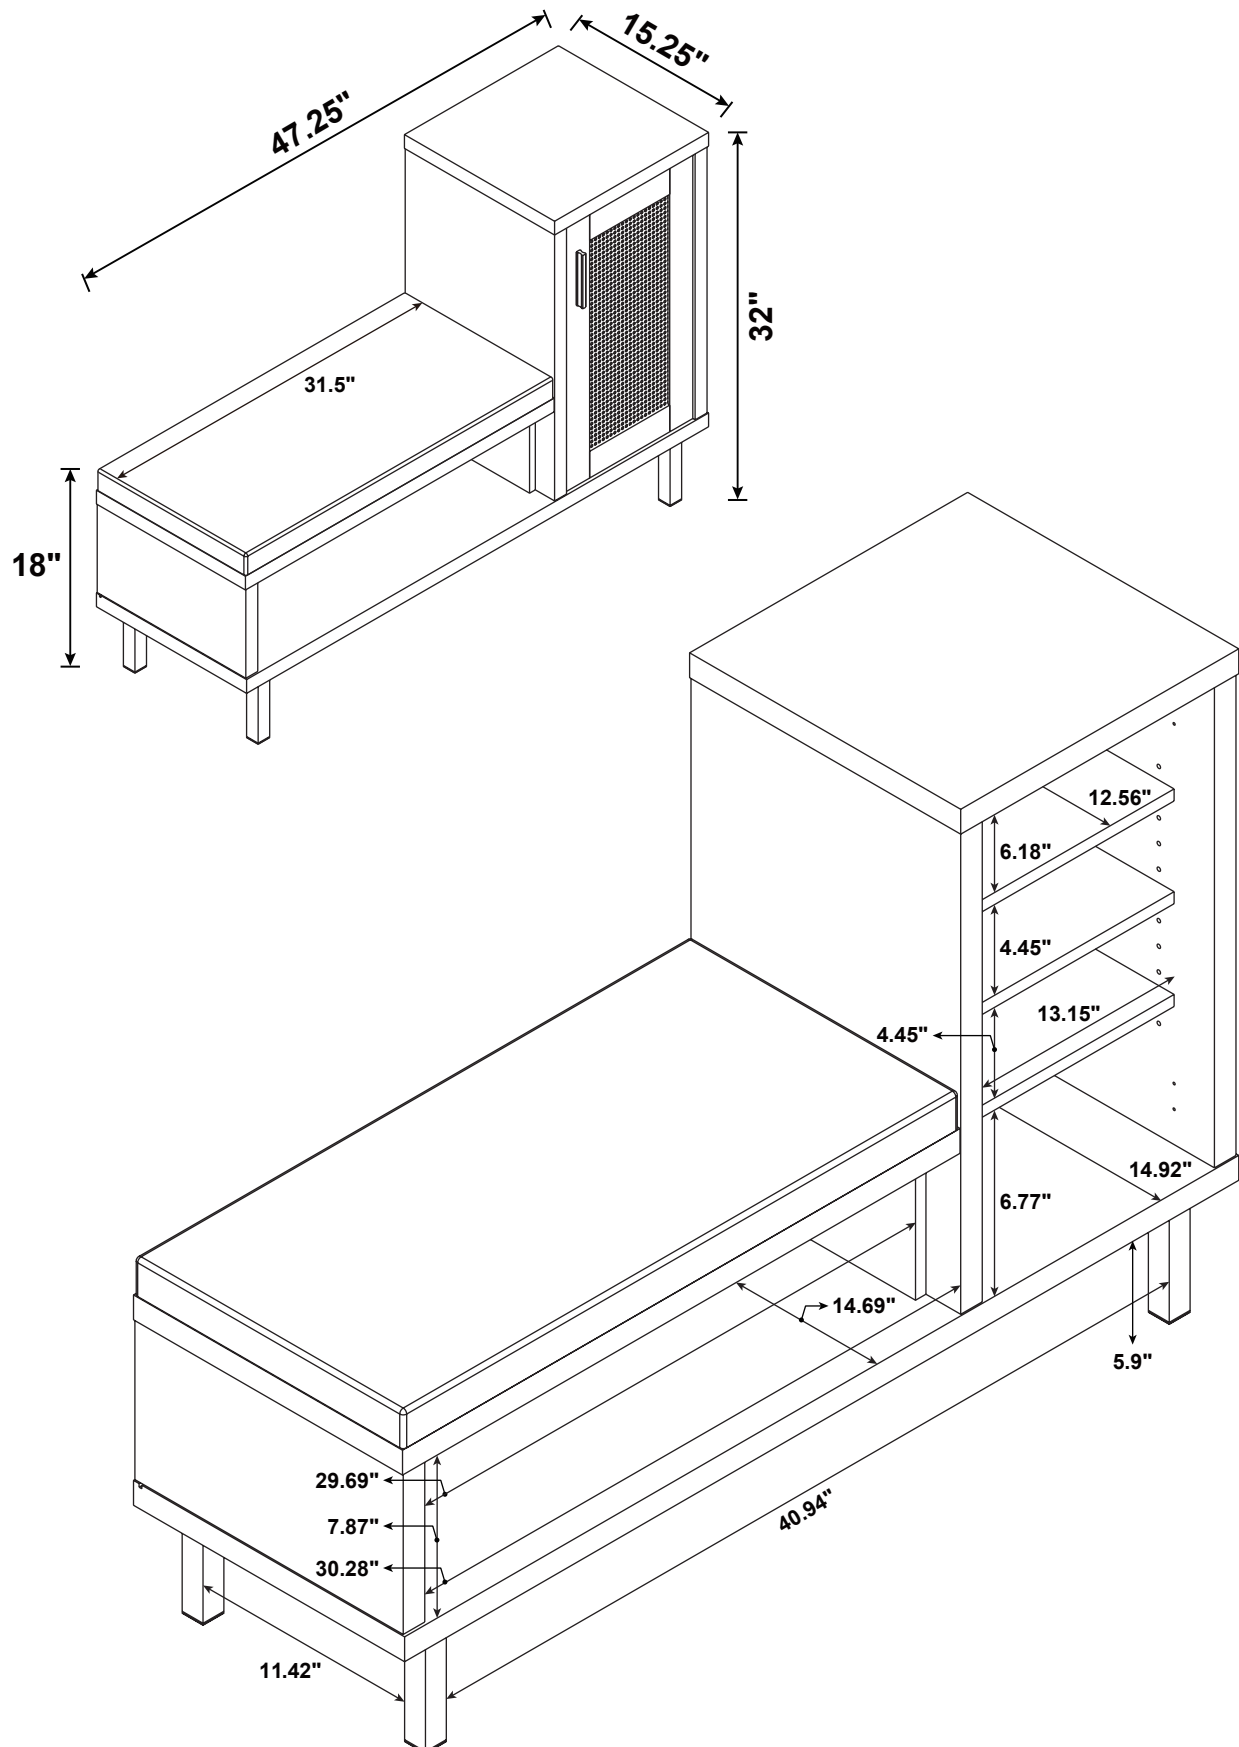 

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

 
WARNING

Injury may result from tipping furniture.
 This restraint may protect against tipping furniture.
 Do not allow children to climb on furniture.
 This restraint is not a substitute for proper adult supervision.
 Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

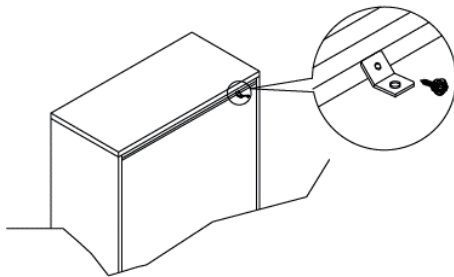

STEP 2

 Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

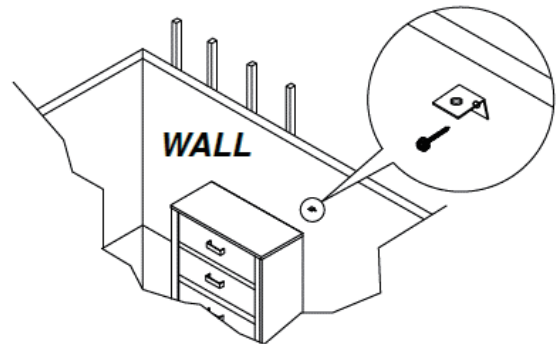

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

