

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

708222
TV STAND

ITEM:708222

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.















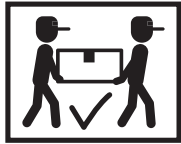


ASSEMBLY TIME

60 MINUTES

MAX TV SIZE : 65"

               PARTS IDENTIFICATION

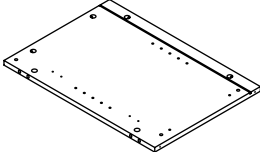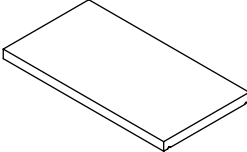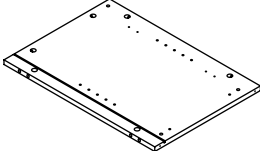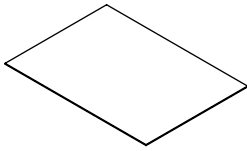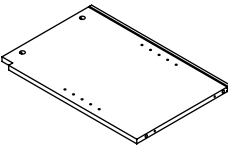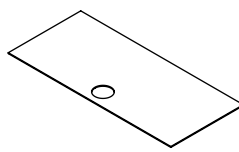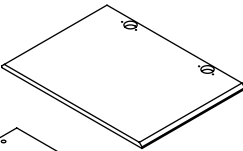
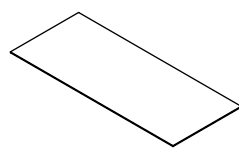
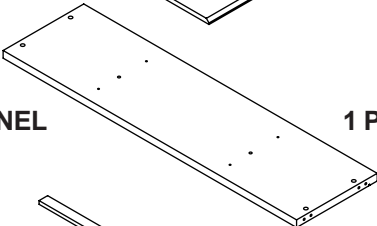

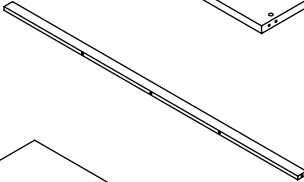

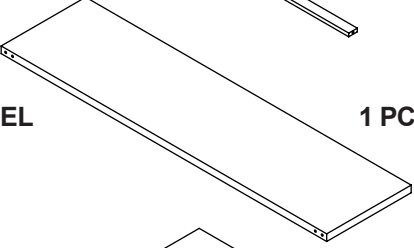
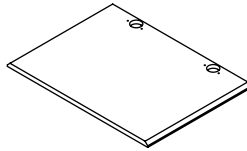

A	LEFT SIDE PANEL		1 PC	I	LARGE ADJUSTABLE SHELF		1 PC
B	RIGHT SIDE PANEL		1 PC	J	BACK SIDE PANEL		2 PCS
C	DIVIDER PANEL		2 PCS	K	BACK MIDDLE UPPER PANEL		1 PC
D	RIGHT DOOR		1 PC	L	BACK MIDDLE LOWER PANEL		1 PC
E	BOTTOM PANEL		1 PC	M	MOLDING BOARD 1		2 PCS
F	UPPER DECORATIVE STRIP		1 PC	N	MOLDING BOARD 2		2 PCS
G	TOP PANEL		1 PC	O	LEFT DOOR		1 PC
H	ADJUSTABLE SHELF		2 PCS				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:708222

         HARDWARE IDENTIFICATION**Z**


NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	PLASTIC COVER Ø 52mm		1 PC
2	WOODEN DOWEL Ø8 x 30mm		33 PCS	9	HINGE Ø35mm SR		4 PCS
3	CAM BOLT Ø7 x 35.5mm SR		24 PCS	10	HINGE SCREW Ø4x15mm SR		16 PCS
4	CAM LOCK Ø15 x 12mm SR		24 PCS	11	FOOT Ø35xH19mm		2 PCS
5	BOLT Ø9.5 x 55mm SR		4 PCS	12	BACK PANEL SUPPORT		6 PCS
6	PLASTIC FEET Ø15mm		4 PCS	13	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
7	PIN FOR ADJUSTABLE SHELF Ø4.9 x 15mm SR		12 PCS	14	STICKER Ø20mm		4 PCS

Z8, Z9, Z11 not included in blister packaging.**NOTE:**


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **708222**

 STEP 1


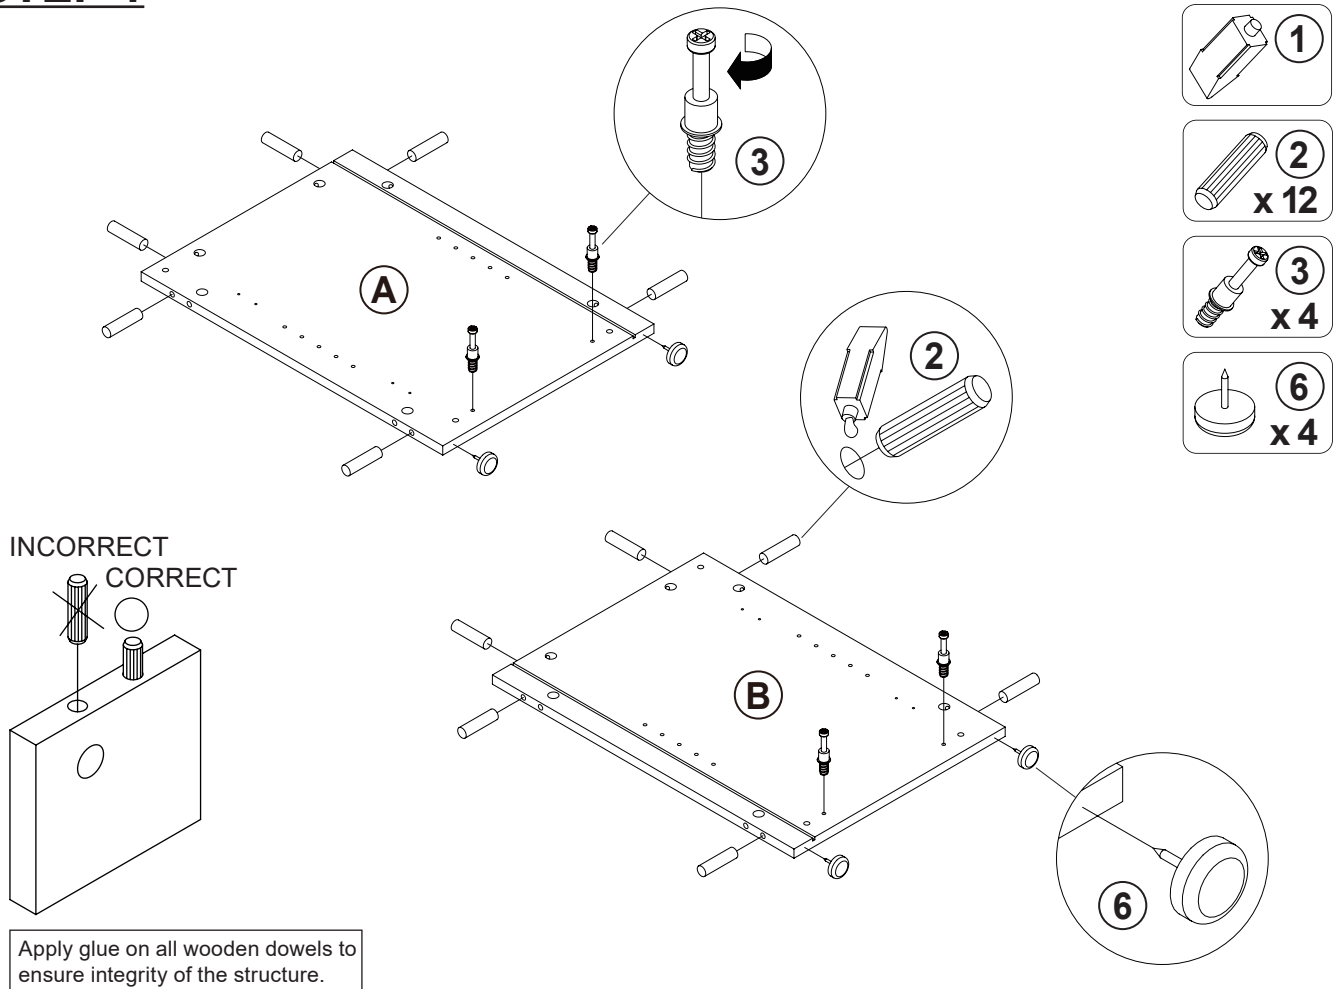


 STEP 2

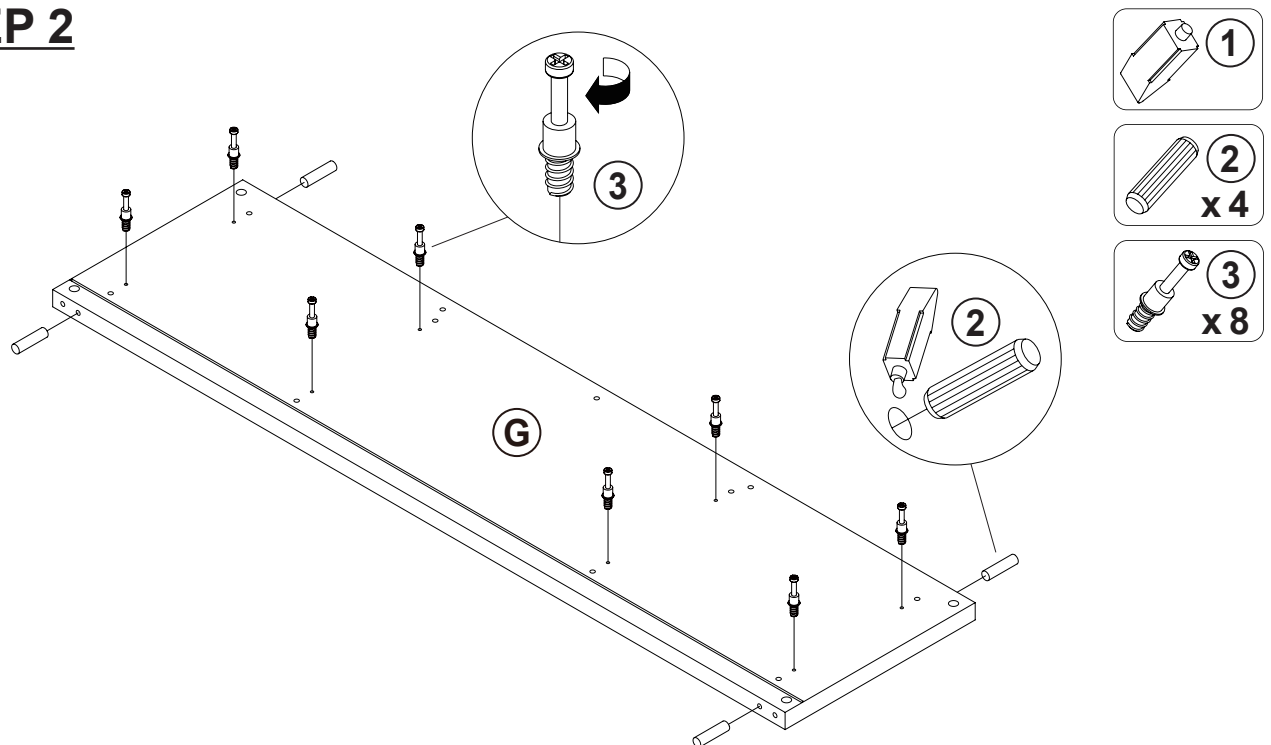


ITEM: **708222**

 
 
STEP 3



x 2

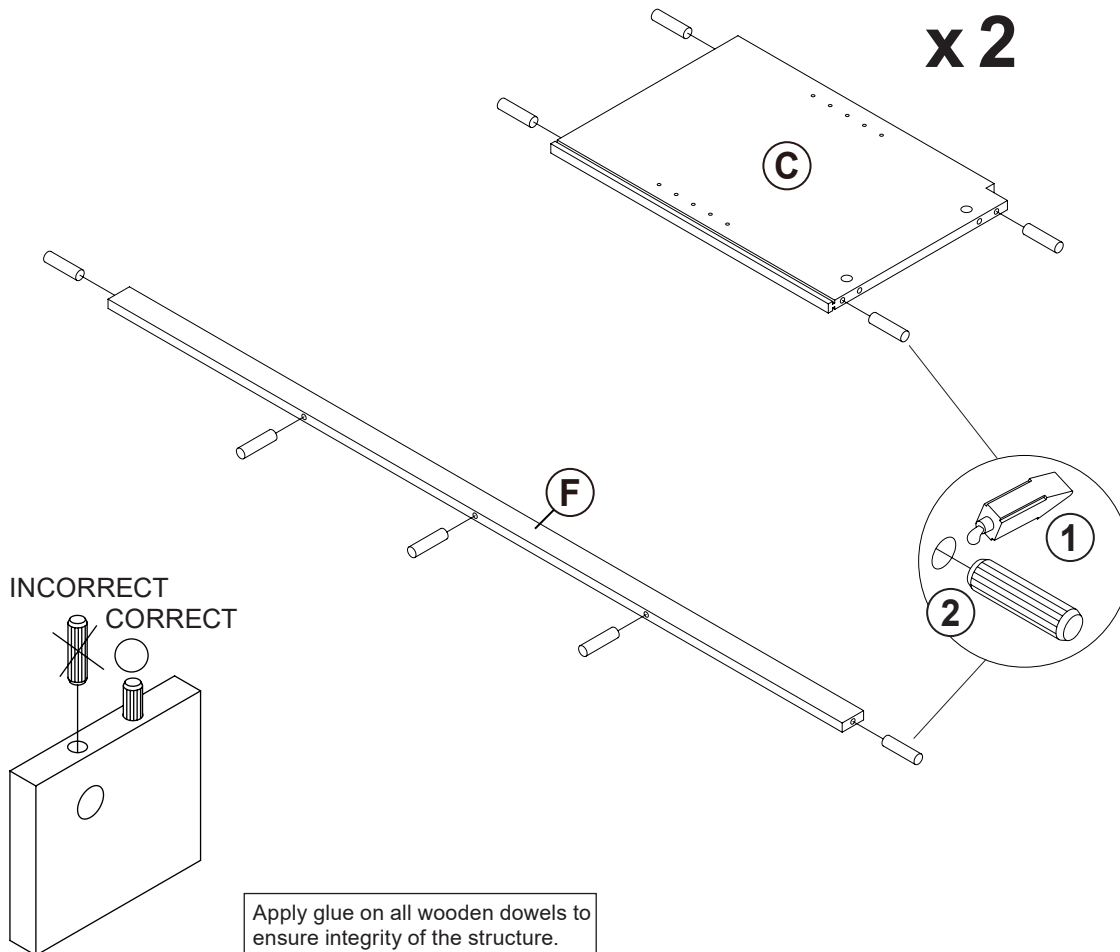 



 
 
STEP 4

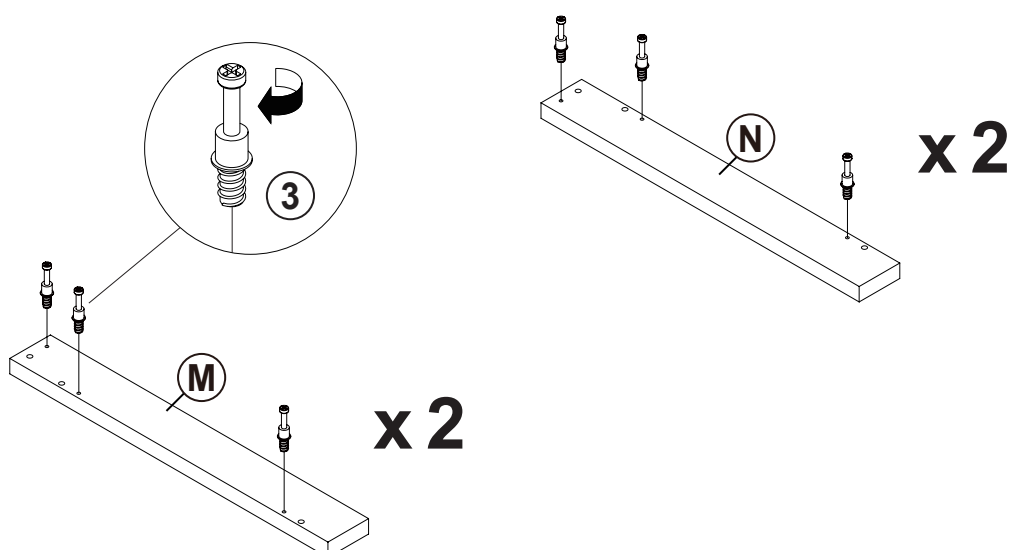



ITEM: **708222**

STEP 5

    COASTER
FINE FURNITURE

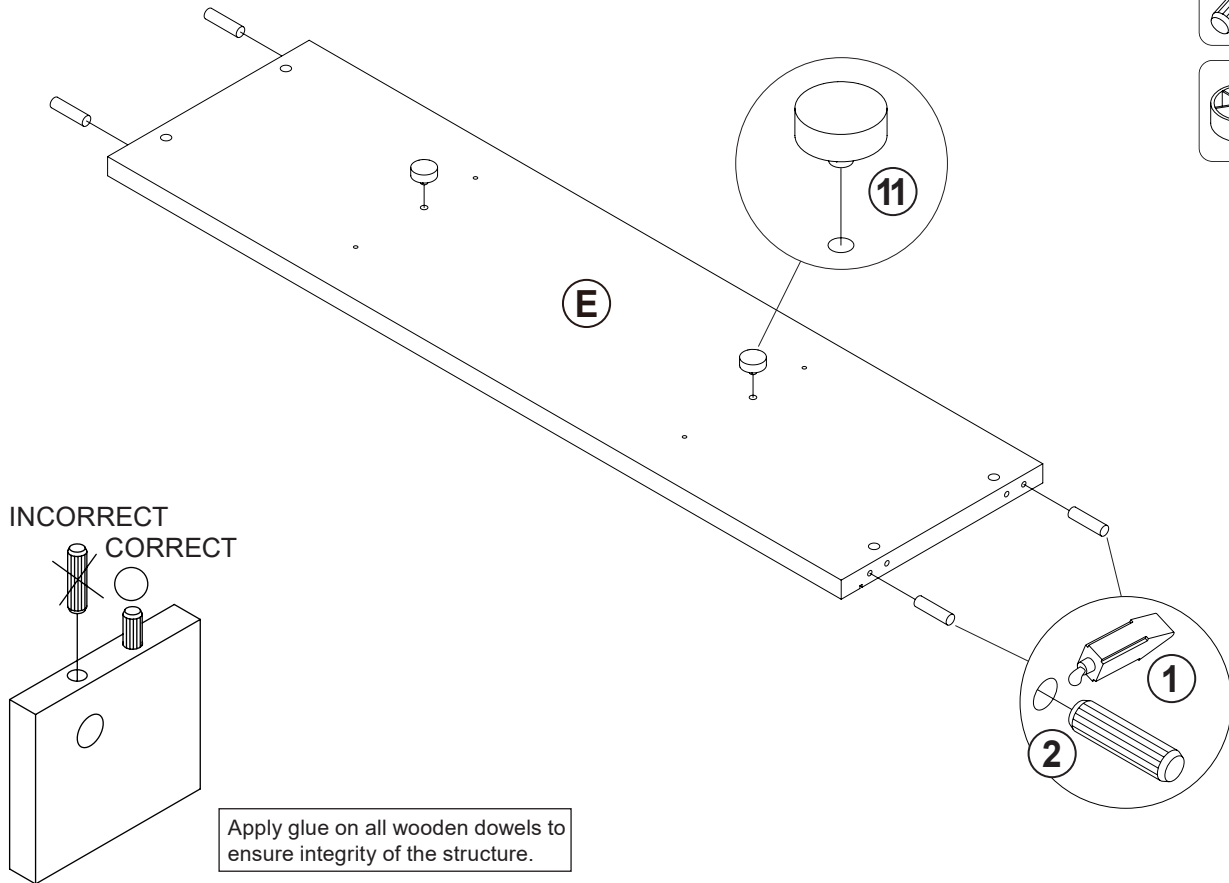

 
 
STEP 6

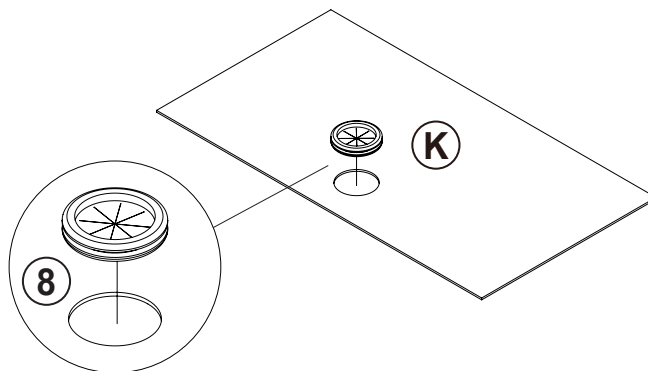




ITEM: **708222**

COASTER
FINE FURNITURE

  STEP 7

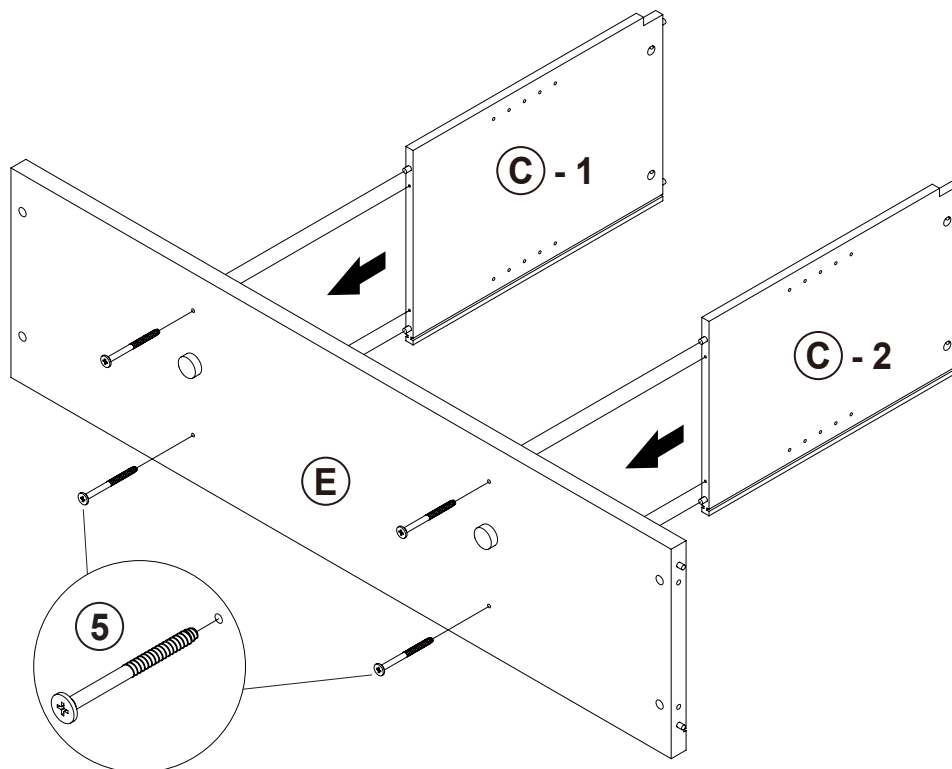

   
STEP 8

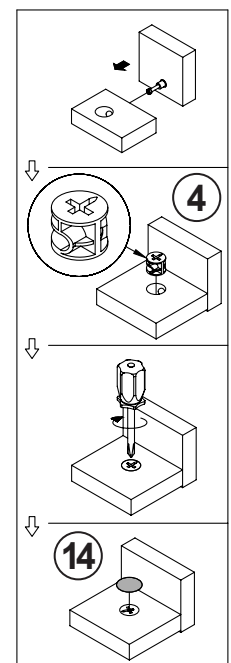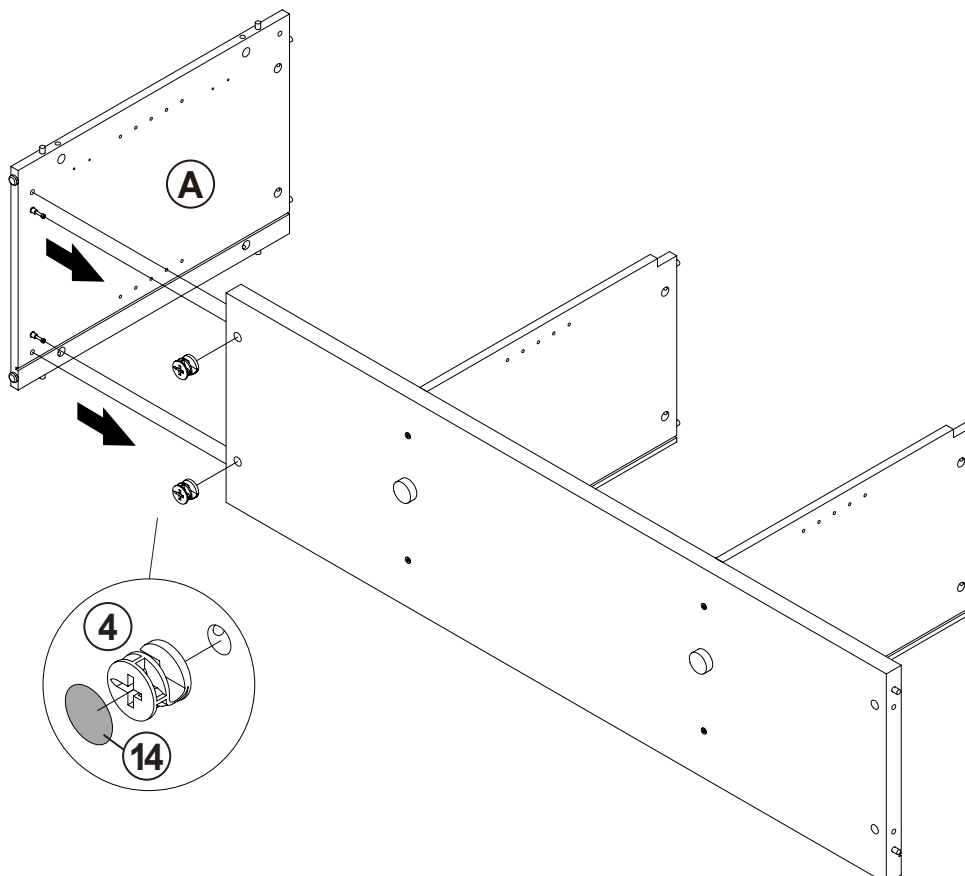


ITEM: **708222**

STEP 9

 COASTER
FINE FURNITURE

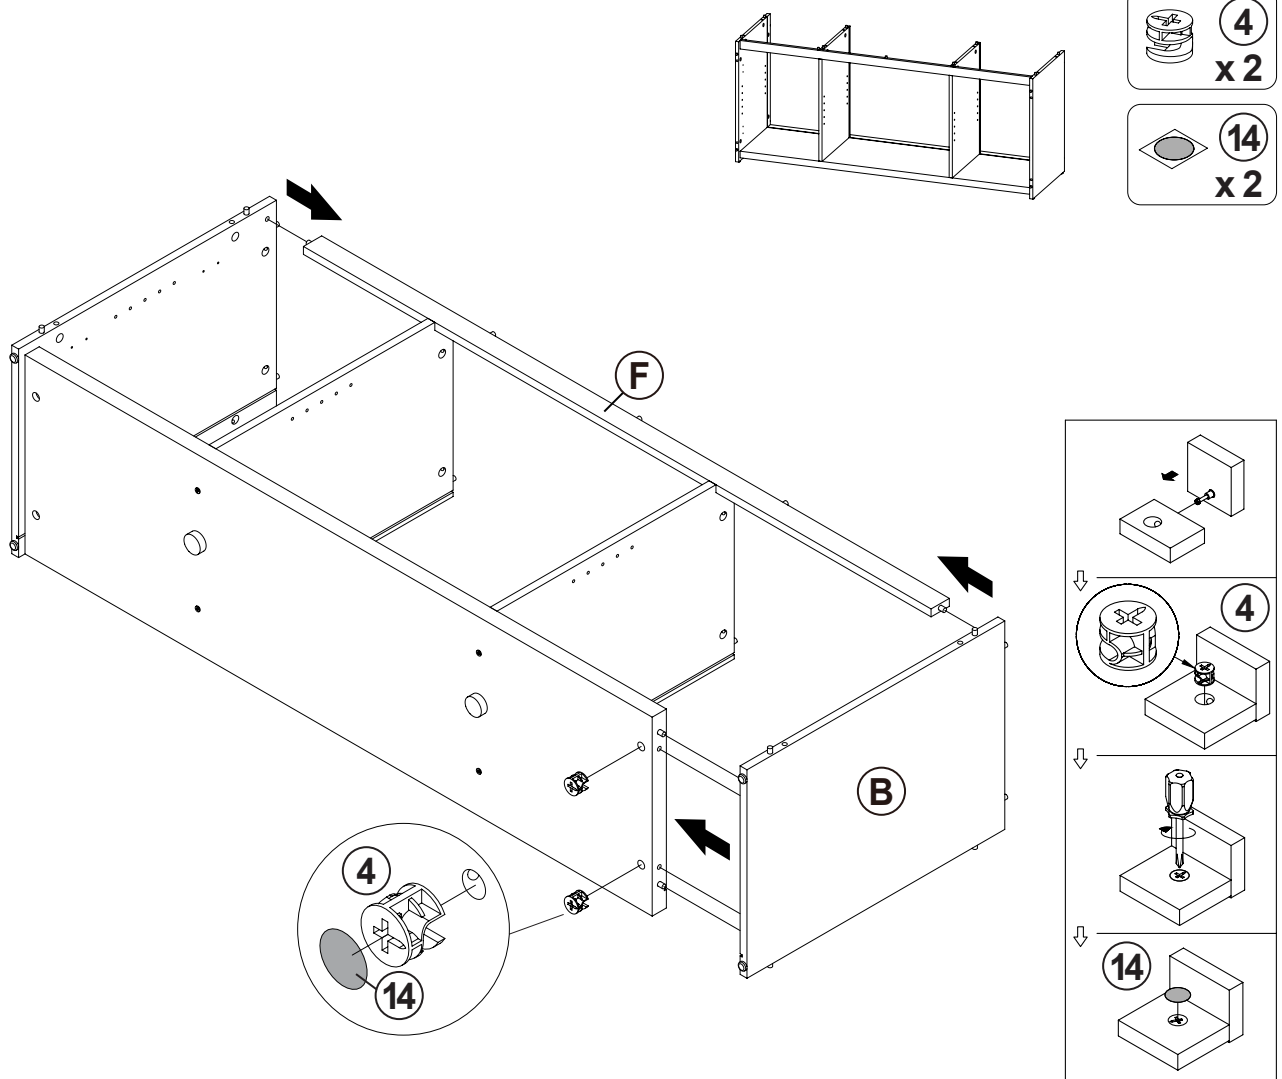



 
STEP 10

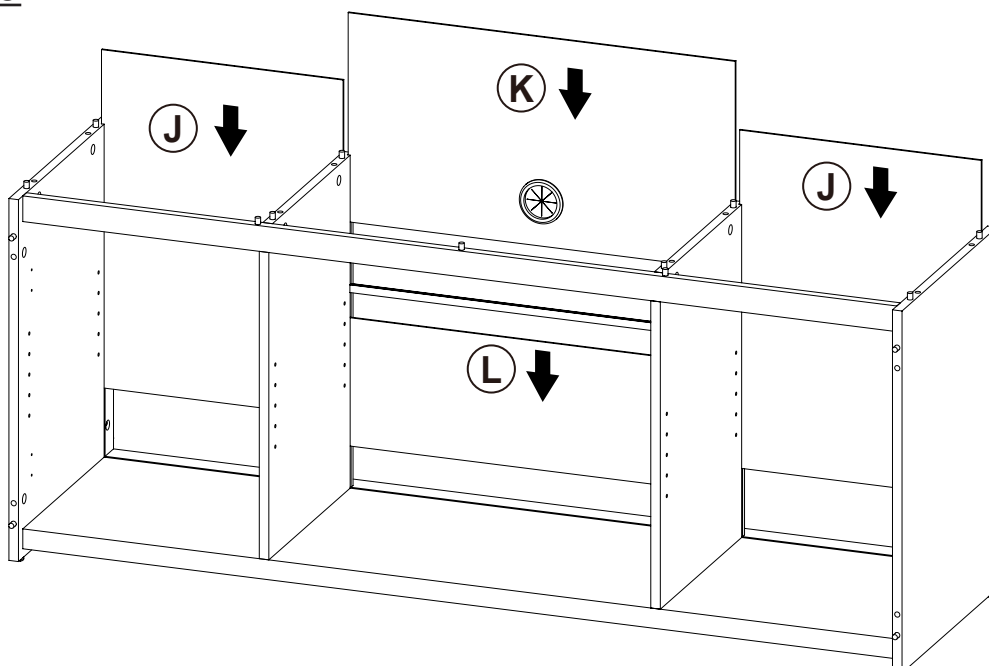



ITEM: **708222**

COASTER
FINE FURNITURE

   STEP 11

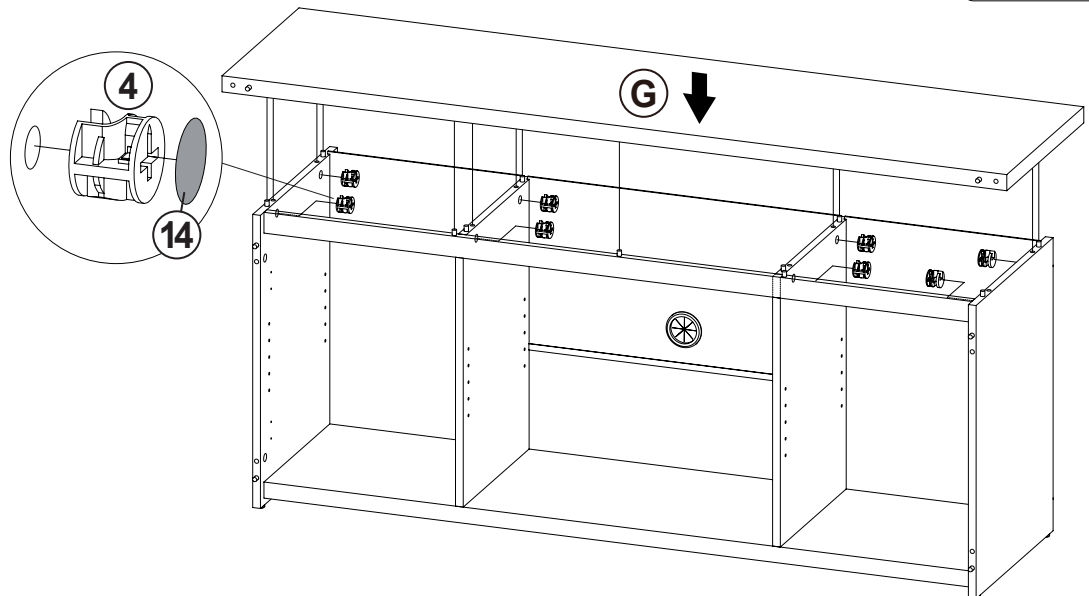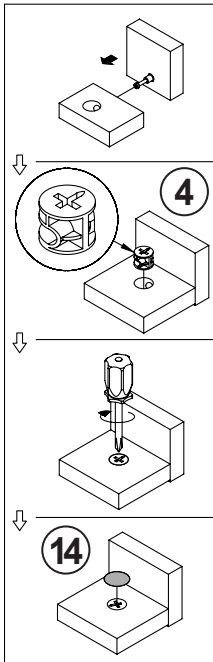



 
 
STEP 12

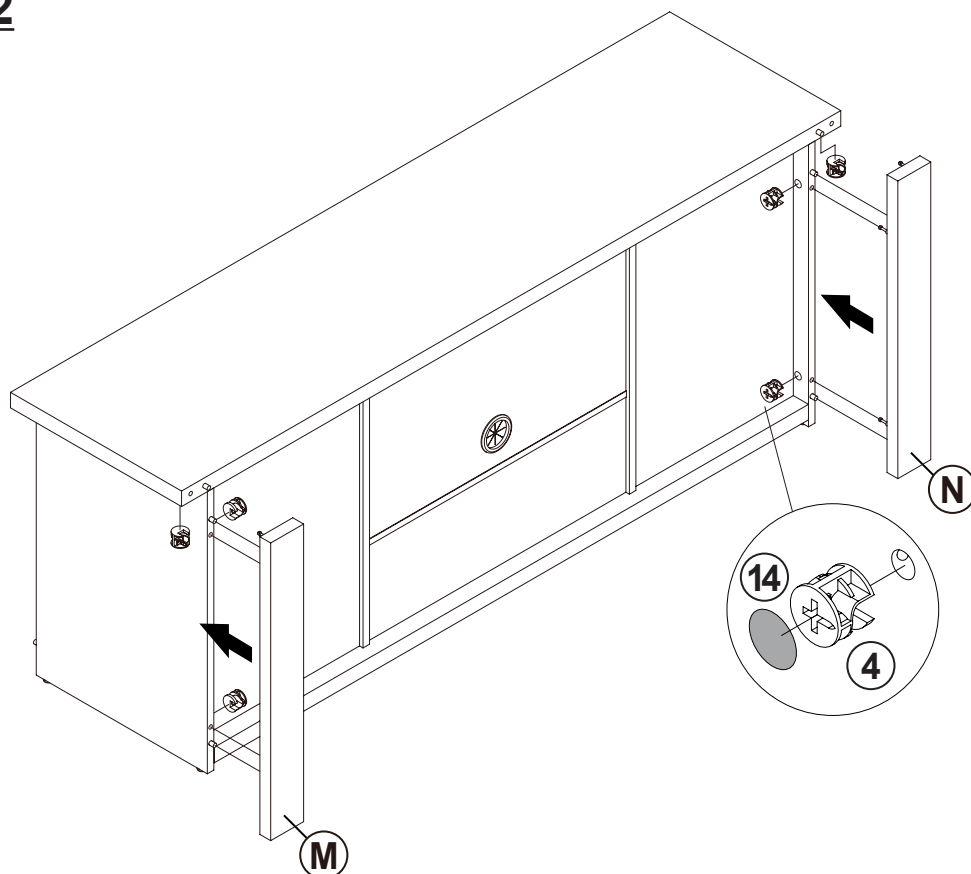




ITEM: **708222**

COASTER
FINE FURNITURE

    STEP 13

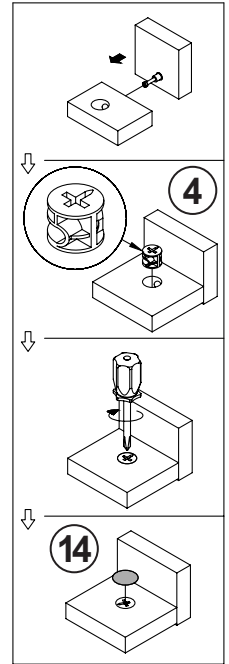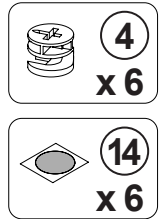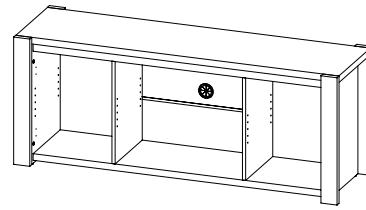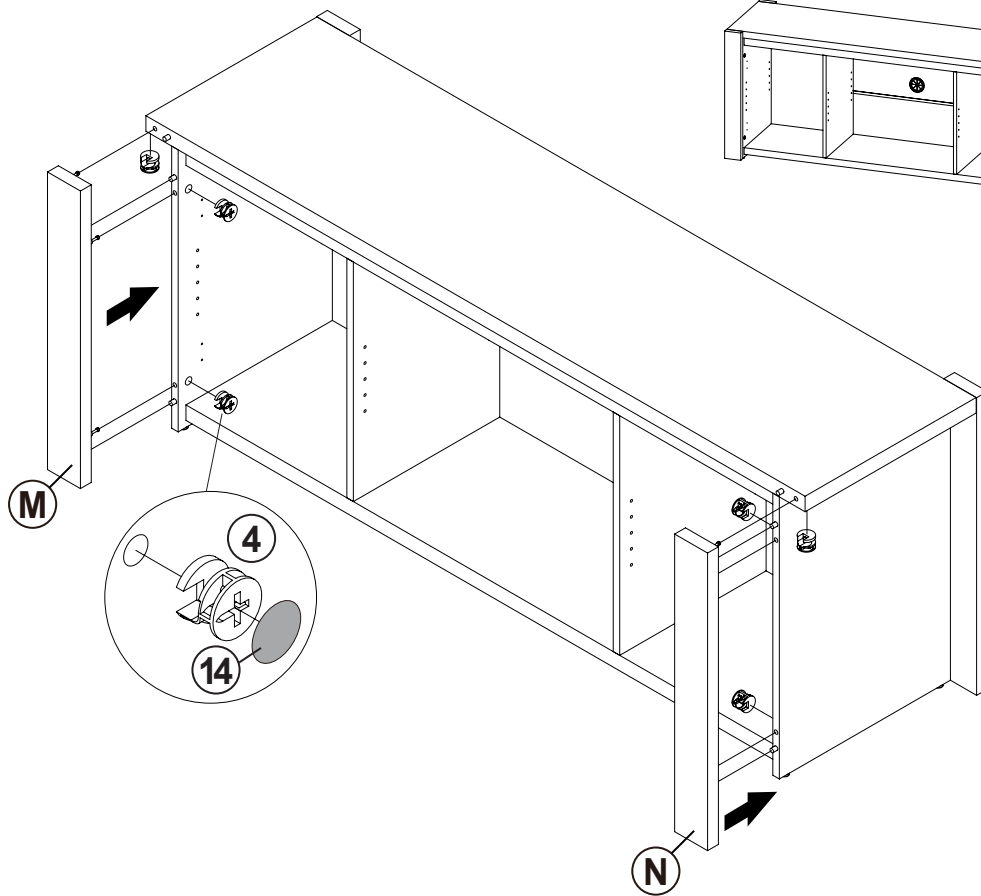


   STEP 14

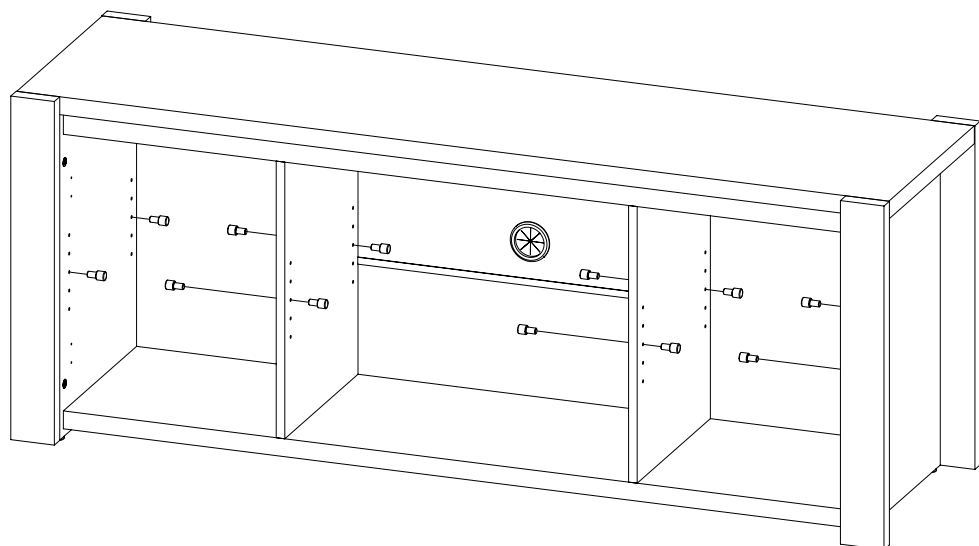
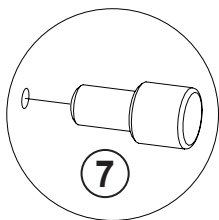



ITEM: **708222**

 STEP 15

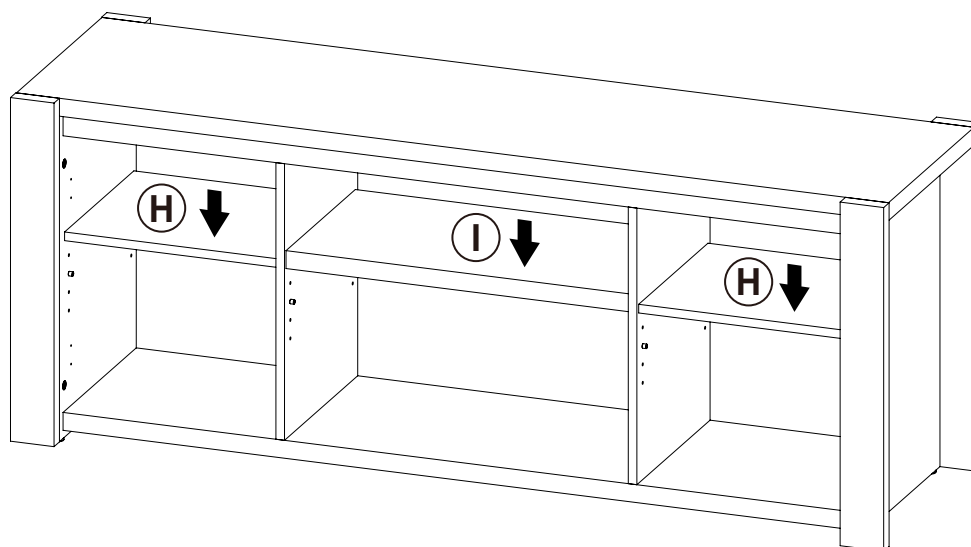

  
 
STEP 16

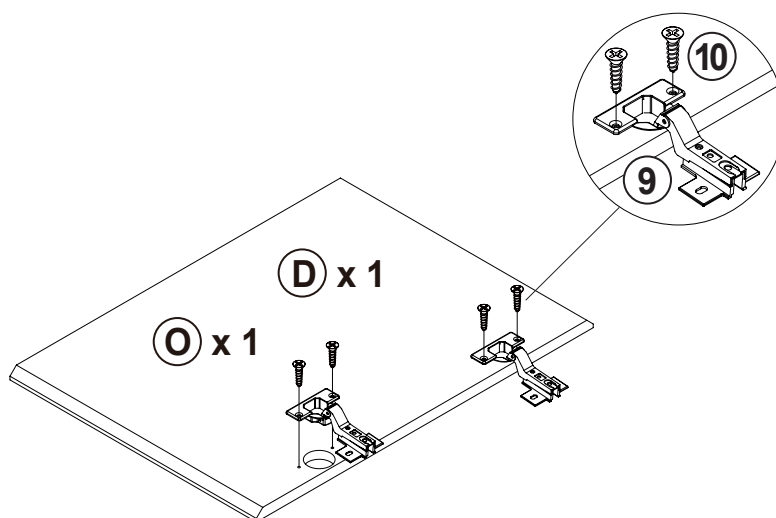




ITEM: **708222**

STEP 17

  COASTER
FINE FURNITURE

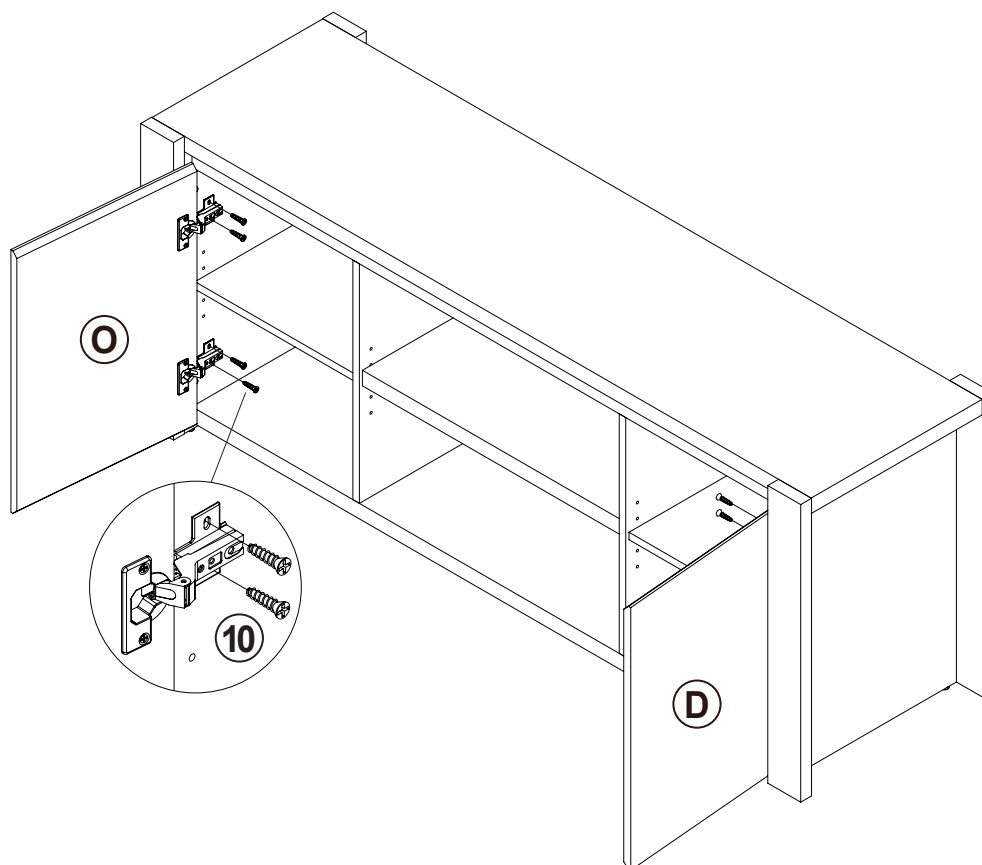

 
 
 
STEP 18

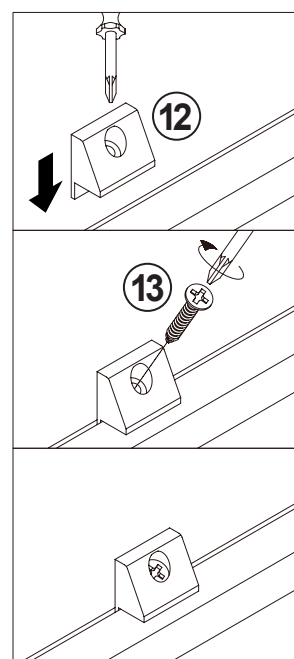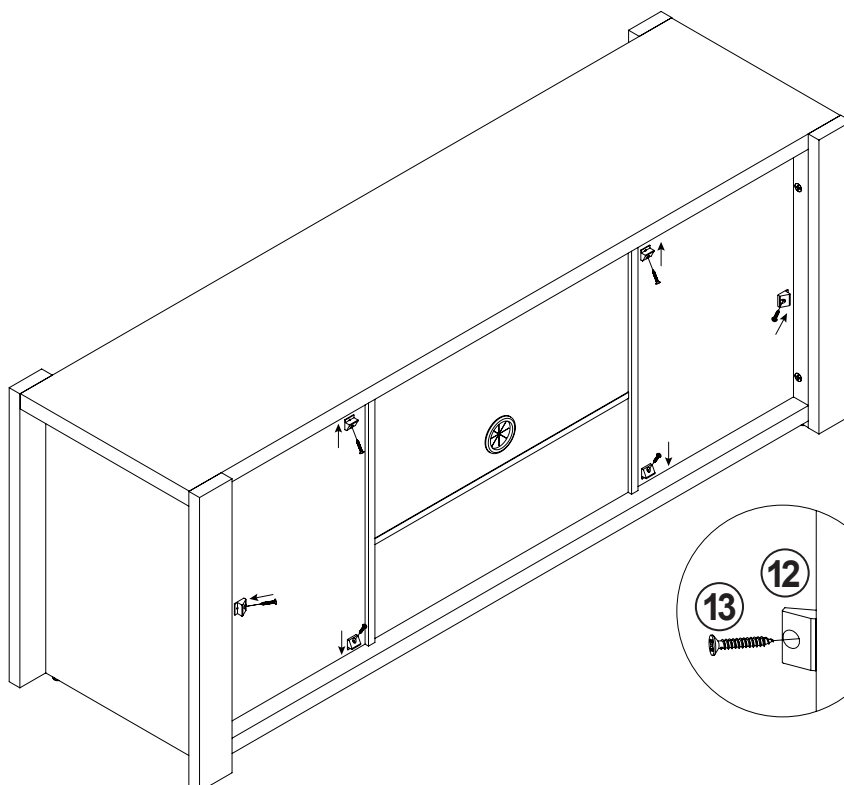

ITEM: **708222**

STEP 19

   COMPLETE

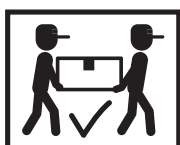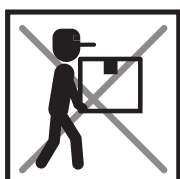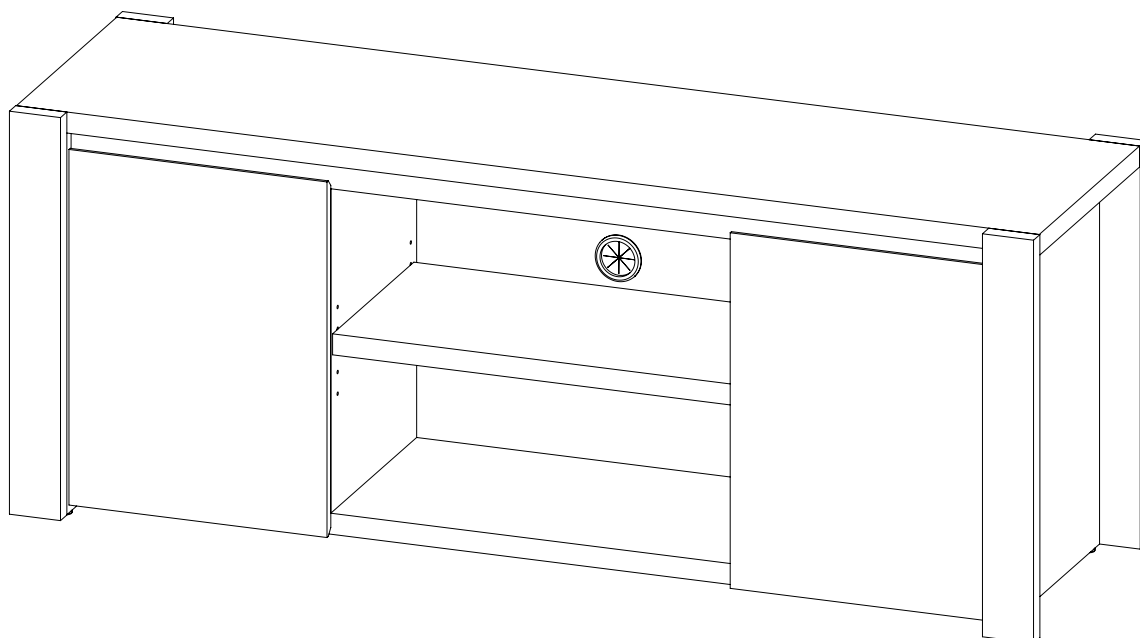

ITEM: 708222

