





ASSEMBLY INSTRUCTION

ITEM: (E2150) SS741-PHZL1-080 Crosby Zero Gravity PWR Recliner w/ PWR HeadPrest

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process .

NO .	DESCRIP TION	SKETCH	QTY
A	Seat		1PC
B	Back Cushion		1PC
C	Power cord		1PC

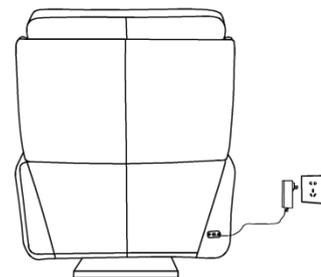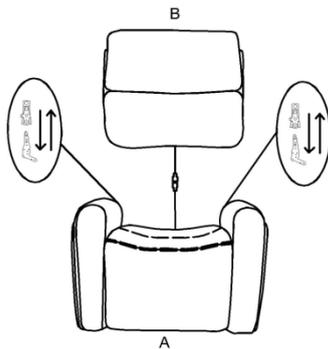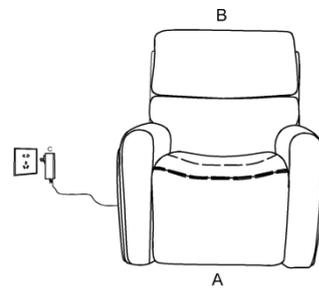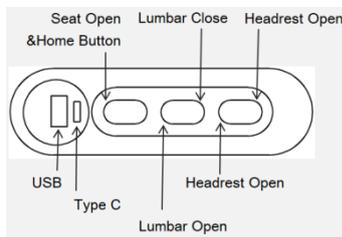

STEP 1 - Lock your KD back as sofa.
Connect the wire on back cushion and seat cushion; the headrest wire

STEP 2 - Connect the connector from motor to the power cord and transformer

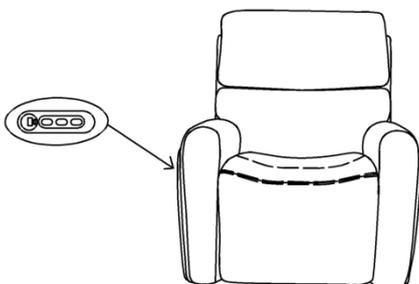

STEP 3 - Use the hand controller to enjoy your Hooker Furnishings.

CAUTION

Do not allow children to play on this mechanism furniture or operate the mechanism. Leg rest folds down on closing so that child could possibly be injured. Always leave in an upright and closed position and keep hands feet clear of mechanism. Only the occupant should operate it.