

Specs

Play:5 Audio



Six Class-D digital amplifiers perfectly tuned to match the six dedicated speaker drivers and the acoustic architecture.



Three tweeters create the crispest and clearest high-frequency response.



Three mid-woofers ensure you'll hear the faithful playback of mid-range vocal frequencies plus deep, rich bass—without distortion, even at high volumes.

Phased speaker array (three drivers on top and three on the bottom) creates a wide stereo soundstage that directs the sound left, right, and center.



Audio line-in. An auto-detecting 3.5 mm connection.



Adjustable bass and treble controls let you customize your sound by individual room or groups of rooms.

Sub Audio



Two Class-D digital amplifiers perfectly tuned to match the two dedicated speaker drivers and the acoustic architecture.



Two force-canceling speaker drivers positioned face-to-face for deeper, richer sound and zero cabinet buzz or rattle.



Dual acoustic ports carefully tuned to enhance Sub performance.



Frequency response: Plays down to 25 Hz.



Automatic equalization. Audio settings adjust to perfectly balance Sub and the paired Sonos speaker or component to optimize sound quality.



Adjustable volume controls let you customize your sound.

Play:5 Physical



Dimensions - H x W x D
8.03 x 14.33 x 6.06 in. (203 x 364 x 154 mm).



Weight
14 lbs. (6.36 kg).



Product finish
White or black matte enclosure with graphite grille.



Touch-interface controls & lights
Capacitive touch controls for volume up/down, previous/next track, and play/pause.
LED indicates Sonos component status and mute status.

Sub Physical



Dimensions - H x W x D
15.3 x 15.8 x 6.2 in. (389 x 402 x 158 mm).



Weight
36.3 lbs. (16 kg).



Product finish
Premium white gloss; premium black gloss.



Side panel buttons & lights
Join household button.
LED indicates Sub status.

Power & Networking



Power supply

Auto-switching 100-240 V, 50-60 Hz AC universal input.



WiFi, not Bluetooth

Connects to your home WiFi network with any 802.11b/g, 2.4 GHz broadcast-capable router for uninterrupted wireless streaming.



Ethernet port

One 10/100 Mbps Ethernet port. Wire directly to your router to operate your Sonos if WiFi is unstable, or use the Ethernet port to provide Internet accessibility to non-wireless devices if you're using Boost setup.

Contents



2 each of Sonos Play:5, power cord, Ethernet cable, Sonos QuickStart Guide, and Legal/Warranty information.



Sonos Sub, power cord, Sonos QuickStart Guide, and Legal/Warranty information.