

FP-G1/FP-G2/FP-G3/FP-G4

Decorator Style Faceplates

Installation Guide



Description


The Crestron® decorator style faceplates provide a clean finish, with no visible screws, for Crestron keypads.

Installation


After the keypad has been installed, install the FP-G1, FP-G2, FP-G3, or FP-G4.

1. Install the back plate over the keypad.
2. Place the cover over the back plate. The cover snaps into place.


Installing the FP-G1

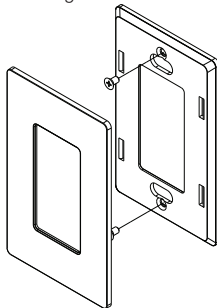


Installing the FP-G2

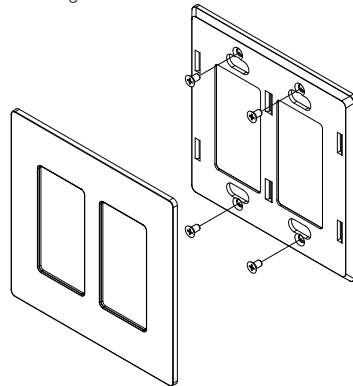

Installing the FP-G3

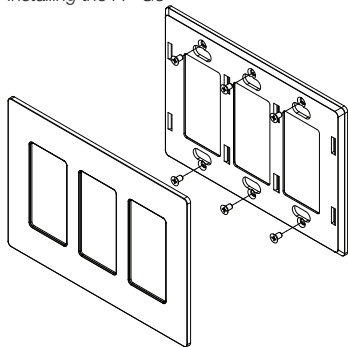

Installing the FP-G4

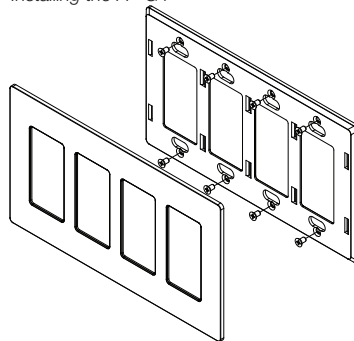

As of the date of manufacture, the device has been tested and found to comply with specifications for CE marking.



Product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed at patents.crestron.com.

Certain Crestron products contain open source software. For specific information, please visit www.crestron.com/opensource.

Crestron and the Crestron logo are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities

claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

This document was written by the Technical Publications department at Crestron.

©2016 Crestron Electronics, Inc.

Crestron Electronics, Inc.

15 Volvo Drive Rockleigh, NJ 07647

Tel: 888.CRESTRON

Fax: 201.767.7576

www.crestron.com

**Installation Guide - DOC. 7445A
(2034888)**

11.16

Specifications subject to
change without notice.