

CVAZER178C

Assembly Instructions

CAUTION:

This lamp is partially assembled in the factory by qualified craftsmen. Some assembly is required before use. Please follow the assembly instructions carefully.

WARNING! - TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR PERSONAL INJURY:

- Turn off/unplug lamp and allow to cool before replacing bulb.
- Do not touch bulb when fixture is turned on.
- Do not look directly at lighted bulb.
- Keep materials that burn easily away from lighted bulb.

Assembly:

- 1) Take the parts out of the mounting package.
Screw (B) to (A).
- 2) Screw part (C) to part (B): insert (F) into part (B); move (G) down and screw tightly; adjust bend (C) to the same direction as the base, and then tighten screw (H) until bend (C) can not turn.
- 3) Install the lampshade (D), screw (E).

Use only the bulb type and wattage indicated on the wattage label located near the socket.

WARNING:

Never exceed maximum wattage indicated, as it may cause fire.

Important Safety Instructions:

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature. This plug can be used in polarized outlets only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

CLEANING:


Use only soft cloth to dust and clean fixture. Never use chemicals or abrasive cleaners as it may damage finish.

COMPONENTS


A & B	D	1ps
C		1ps
E		1ps

ASSEMBLING STEPS

Step1

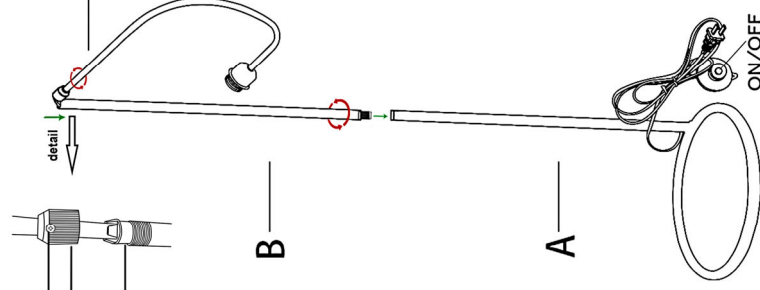

Step 2

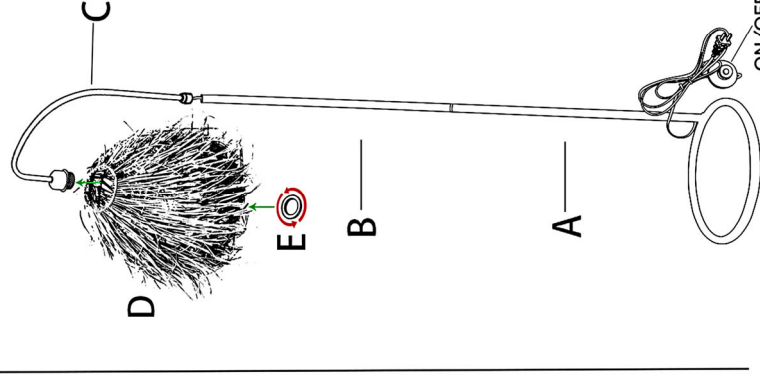

Result

