INSTALLATION INSTRUCTIONS


SLM-324 Interface Bracket

SLM-324 Interface Brackets are designed for use with Chief® Series Projector Mounts. See the specific installation instructions provided with the mount for additional installation information.

Unpack carton and verify kit contents. If any listed parts are missing, immediately contact a Chief Customer Service representative.

WARNING: IMPROPER INSTALLATION CAN LEAD TO EQUIPMENT FALLING CAUSING SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT substitute hardware. Use only hardware supplied by manufacturer!

- (1) Interface Bracket
- (1) All-Points Security Kit
- (1) 5/32" Security Hex Key
- (6) Screw, Phillips Pan Head, Machine, M6 x 30mm
- (2) Screw, Phillips Flat Head, Machine, M6 x 30mm
- (6) Washer, M6
- (6) Spacer, .680 x .390 x .625"

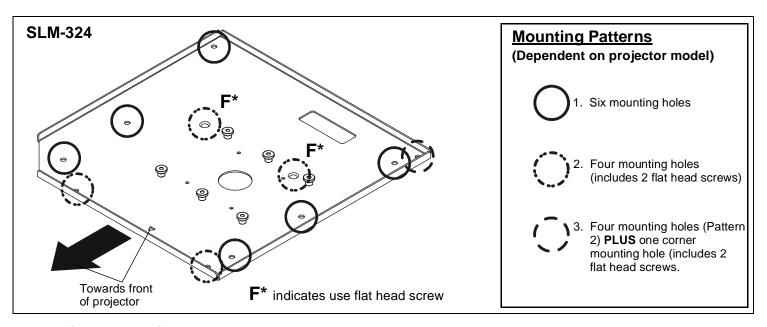

Installation Instructions

WARNING: OVER TIGHTENING OF SCREWS CAN DAMAGE PARTS AND CAN LEAD TO SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT over tighten screws when installing interface brackets.

- 1. Turn projector upside down on a flat surface.
- 2. Place spacers over threaded inserts in bottom of the projector, according to the required mounting pattern.
- 3. Place the interface bracket onto the spacers, aligning the mounting holes in the bracket with the spacers and threaded inserts in the bottom of the projector and ensuring that triangle in bracket points towards front of projector.
- 4. Position M6 x 30mm pan head screws with M6 flat washers, and/or flat head mounting screws WITHOUT washers, into the bracket mounting holes, through spacers, and into threaded inserts.
- 5. Tighten all fasteners at this time, securing the bracket to the projector.

NOTE: Security screws can be substituted when mounting Interface bracket to projector by using the parts and installation instructions in the All-Points Security Kit.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.

Milestone AV Technologies, and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

