

ASSEMBLY INSTRUCTION FOR

DRESSER

B-16670-5-DR

Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.





 
1.We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.

2.Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.







3.Please do not over tighten screws or bolts.

4.Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PARTS LIST

NO.	PART DESCRIPTION	CODE	Q'TY
A	 Dresser		1
B	 Leg	PB-16670-5-DRLEGF	2
C	 LHF Back Leg	PB-16670-5-DRBLEGL	1
D	 RHF Back Leg	PB-16670-5-DRBLEGR	1
E	 Slat Support Leg	PB-16670-5-DRSPL	1

HARDWARE LIST

NO.	HARDWARE DESC	CODE	Q'TY
1	 Allen Bolt (Ø5/16" *2")	PB-16670-CGHW	8
2	 Spring Washer (Ø5/16")*Ø13		8
3	 Flat Washer (Ø5/16")*Ø19		8
4	 Allen Wrench (M4)		1
5	 Anti - Tip Kit Hardware - Metal (Set)	P-A TKNSU-M	1
 SCREW-DRIVER (NOT PROVIDED)			

⚠ Only tighten all bolts when all bolts aligned with bolt inserts


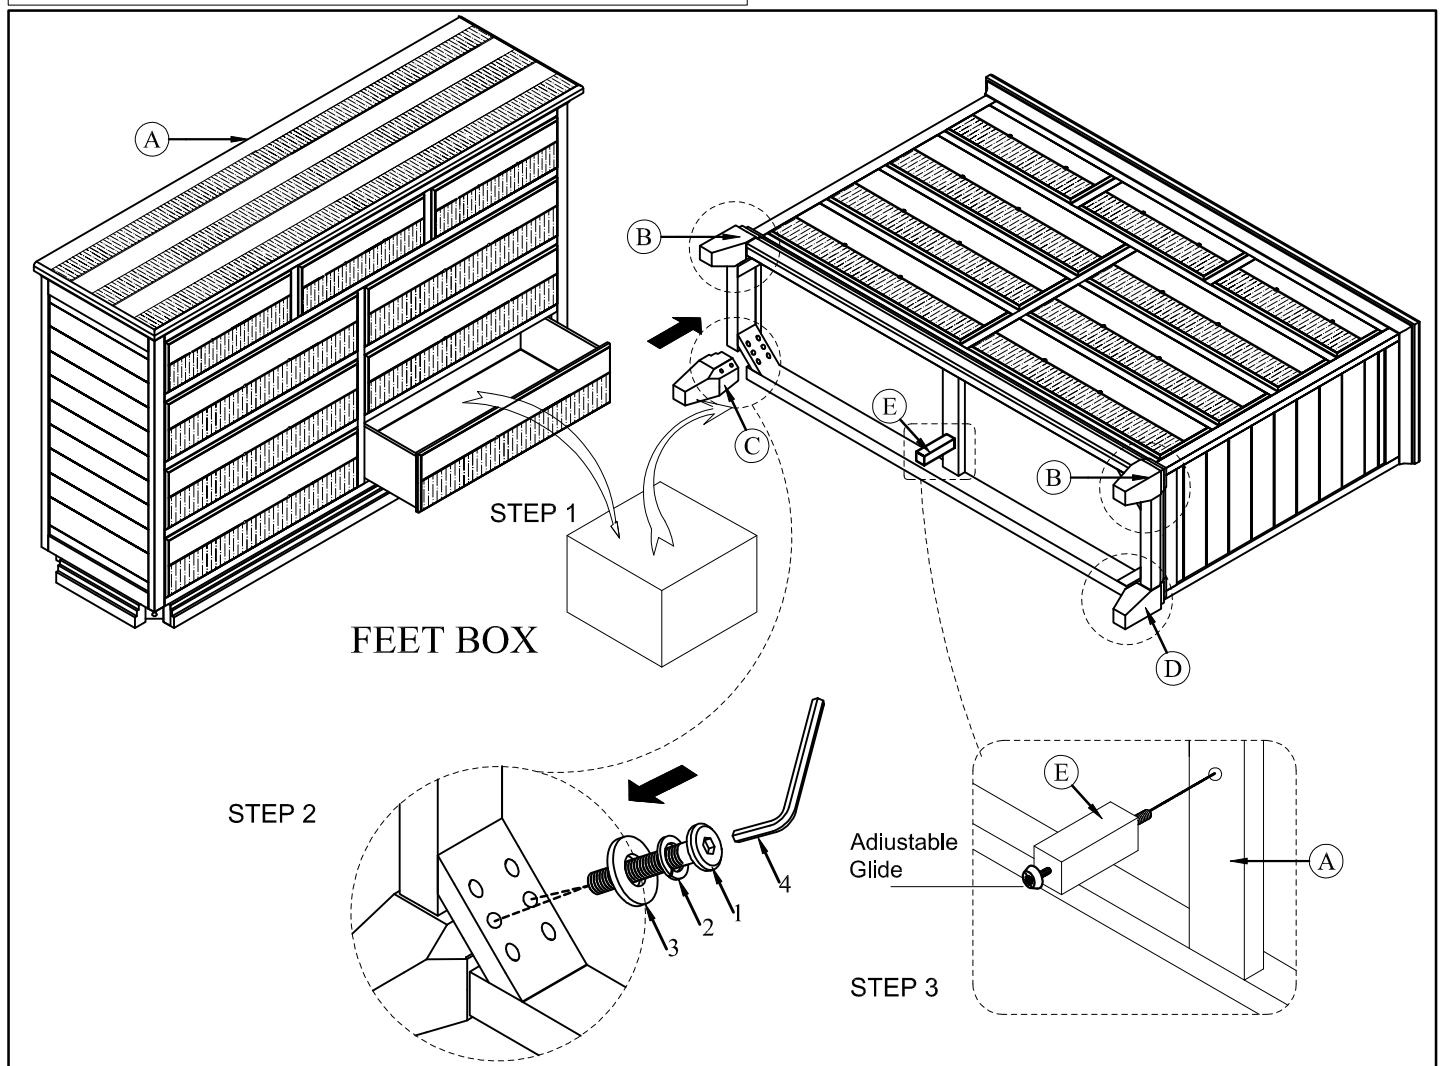


ASSEMBLY INSTRUCTION FOR


DRESSER

B-16670-5-DR

STEP 4

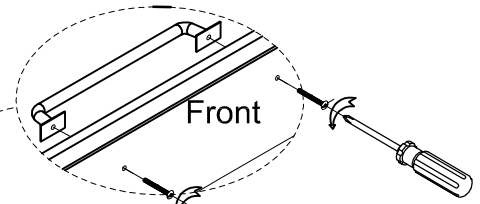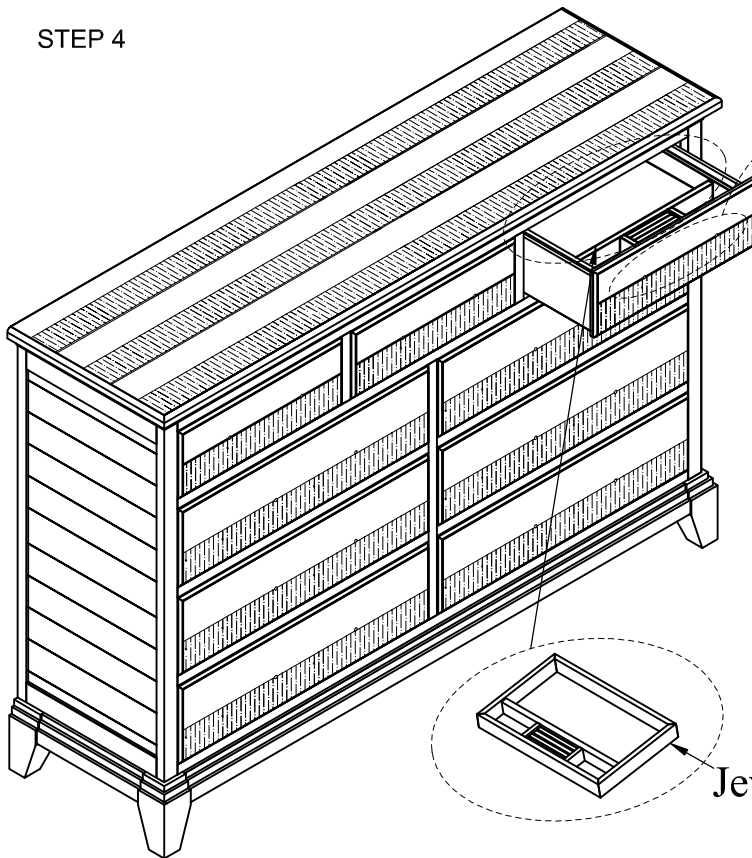


Remove Handle from
inside drawer

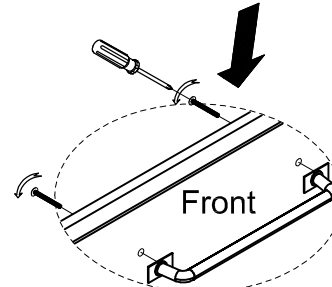

Reattach Handle to
outside of drawer


Jewelry Tray

STEP 5

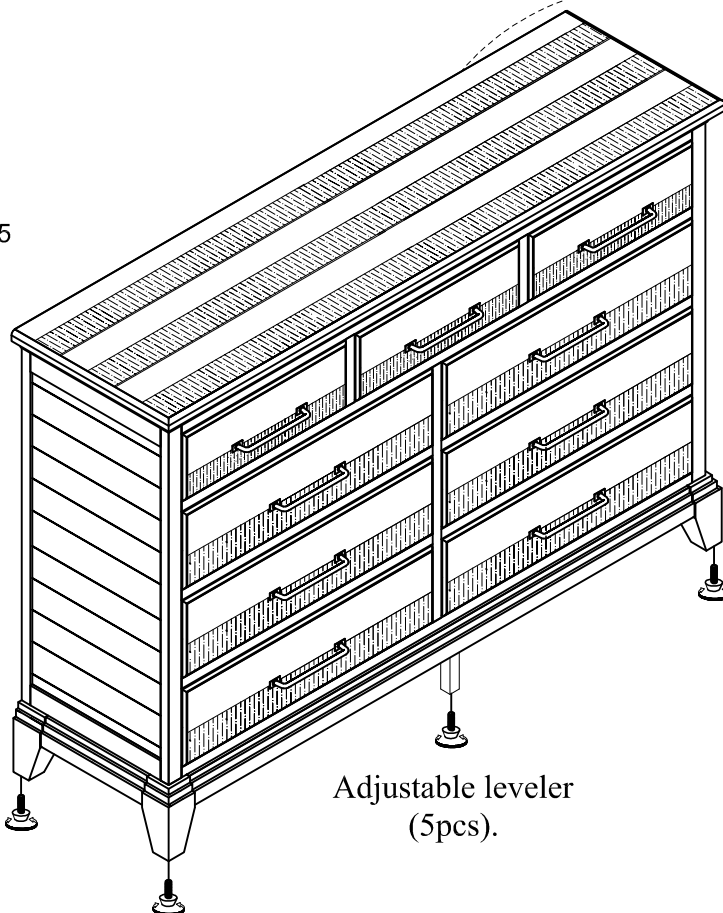

Adjustable leveler
(5pcs).

REMARK: TIPPING HARDWARE
ATTACHED TO THE BACK PANEL

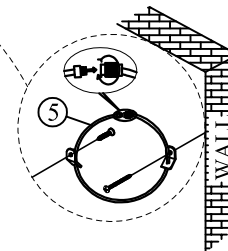

COMPLETED