

ASSEMBLY INSTRUCTIONS







TANGO COLLECTION

U396-13P1 GLIDER RECLINER W/PWR FR

Thank you for being our valued customer. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all items and compare them with the parts list below.


CAUTION: Read the instructions carefully before assembly.

1. We recommend that you assemble this product with the assistance of another person to eliminate damage to the product during assembly.
2. When you want to reposition the product, please always "LIFT & MOVE."
3. Please clear all electrical cords from any possible cord pinching to avoid cord damage.
4. We recommend using a surge protector to protect the electrical component from power surges and spikes.

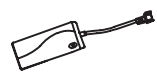PARTS LIST			
NO.	DESCRIPTION	SKETCH	QTY
A	Seat		1PC
B	Backrest		1PC
C	LSF Wing		1PC
D	RSF Wing		1PC
E	Transformer		1PC
F	Cable		1PC

Step 1

Cut the white zip ties with scissors.

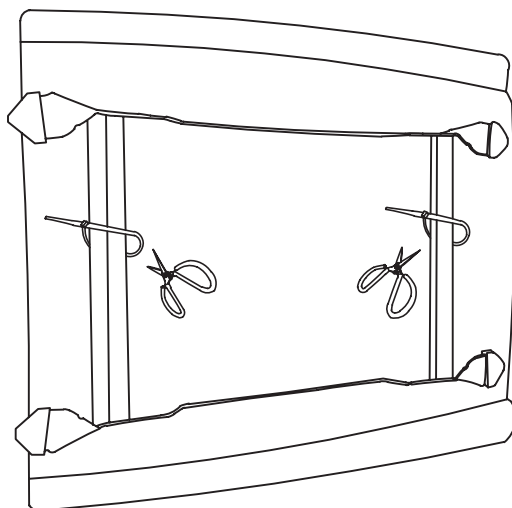


ASSEMBLY INSTRUCTIONS

TANGO COLLECTION

U396-13P1 GLIDER RECLINER W/PWR FR


Step 2

Attach Back Rest (B) to the Seat (A). Please make sure the metal brackets are inserted all the way and secured into position.

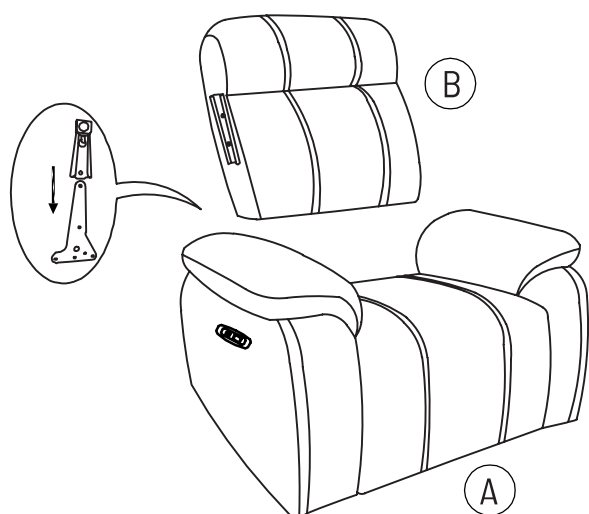

Step 3

Please align and insert the LSF Wing (C) and RSF Wing (D) to the Back Rest (B). Please make sure the wings are inserted all the way and secured into position.

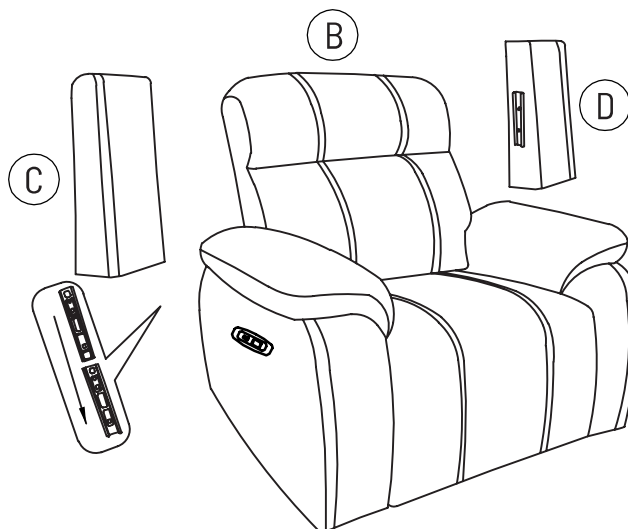

Step 4-Congratulations!

Connect Transformer (E) and Cable (F), check to make sure cords are clear of any obstructions, not trapped under any furniture and are clear of any floor heat registers. Then your product is ready for you to enjoy.

