



Primo™


7267

Model # D470101870SHCS

ASSEMBLY INSTRUCTIONS NOTICE DE MONTAGE


**Place tracking label here
Placez l'étiquette de garantie ici**

- ** Please keep these instructions and have the product model # and part # available when requesting a service.
- ** Veuillez conserver ce notice de montage et avoir en main le numéro du modèle et de la pièce pour fin de service.

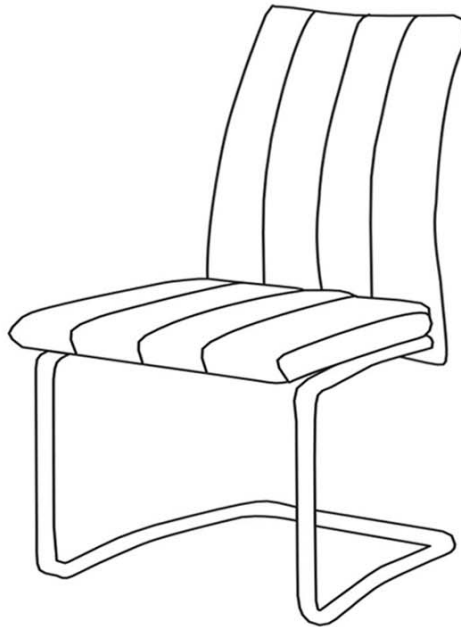

IMPORTANT NOTE

 Do not use a power tool to assemble this product as it could damage the thread of the hardware and affect the solidity/durability of the product.




NOTE IMPORTANTE


Ne pas utiliser d'outil électrique pour assembler ce produit car cela pourra endommager le filet des quincailleries et par le fait même affecter la solidité/durabilité du produit.

Model # D470101870SHCS

27646-01-7267-00002	27646-01-7267-00003	27646-01-7267-00004
A  1X	B  1X	C  1X
27646-01-7267-00001		
D  4X	E  4X	F  4X
		G  1X

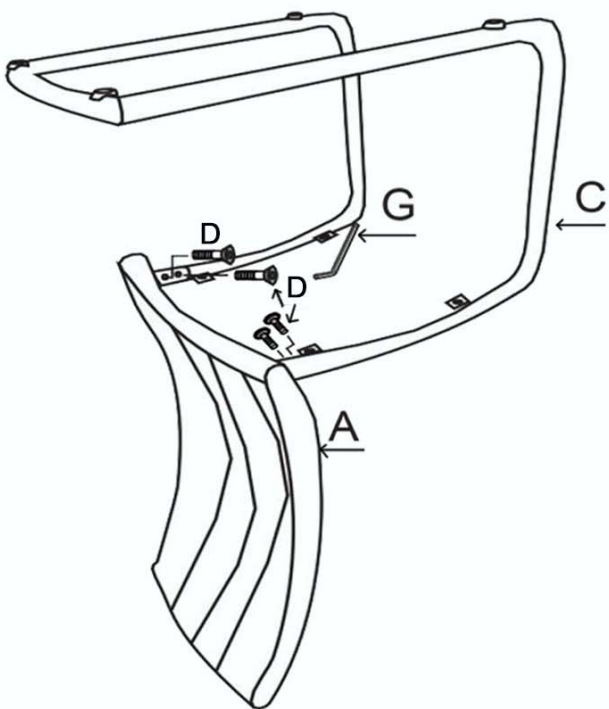

Step / Étape 1

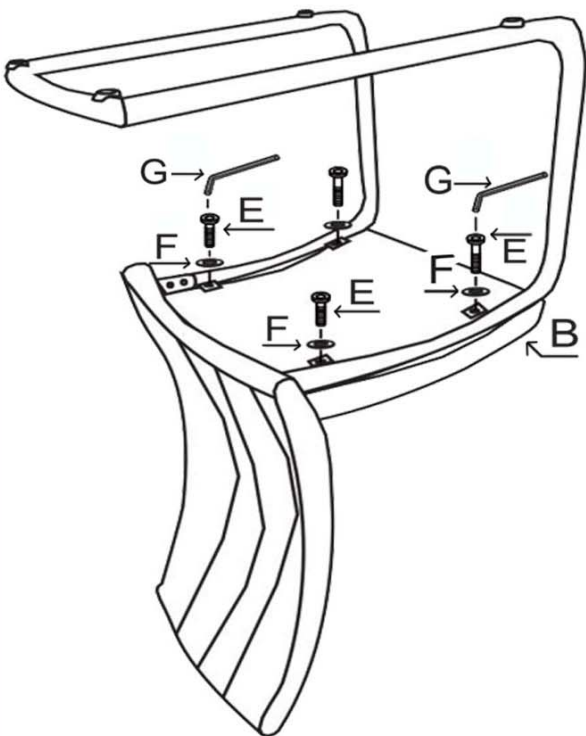

Step / Étape 2

Completely Assembled
Assemblage Completé

