

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

720223 *TV STAND*

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME



MAX TV SIZE: 85"

PARTS IDENTIFICATION

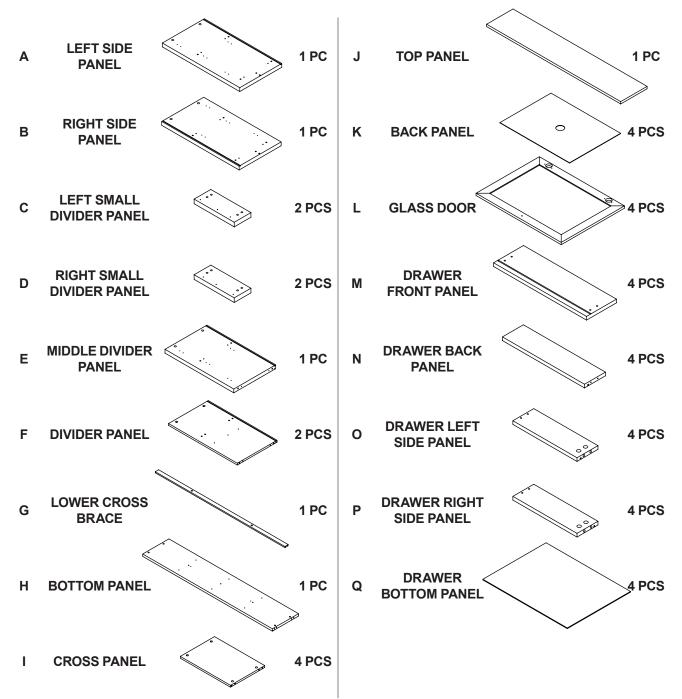

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	11	HANDLE		4 PCS
2	WOODEN DOWEL Ø8 x 30mm		35 PCS	12	HANDLE BOLT BLK		4 PCS
3	CAM BOLT Ø7 x 35.5mm SR		40 PCS	13	HINGE Ø35mm SR		8 PCS
4	CAM LOCK Ø15 x 12mm SR		48 PCS	14	HINGE SCREW Ø4x15mm SR		32 PCS
5	SCREW Ø 4.3x35mm SR	attitute (A	32 PCS	15	PLASTIC COVER Ø 52mm		4 PCS
6	PLASTIC FEET Ø15m		5 PCS	16	BACK PANEL SUPPORT		6 PCS
7	BOLT Ø9.5x55mm SR		6 PCS	17	BACK PANEL SUPPORT SCREW Ø3 x 19mm SR		6 PCS
8	WOODEN DOWEL Ø8 x 50mm		4 PCS	18	CAM BOLT Ø7x63mm SR		4 PCS
9	RAIL L = 300mm BLK	CL DE CRESTA DL	4 PCS	19	STICKER-BK Ø20mm		2 PCS
10	SCREW Ø3x10mm BLK		48 PCS	20	STICKER Ø20mm		6 PCS


Z9, Z11, Z13, Z15 not included in blister packaging.


NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


STEP 1 COASTER FINE FURNITURE 2 x4 3 x8 6 x4


6

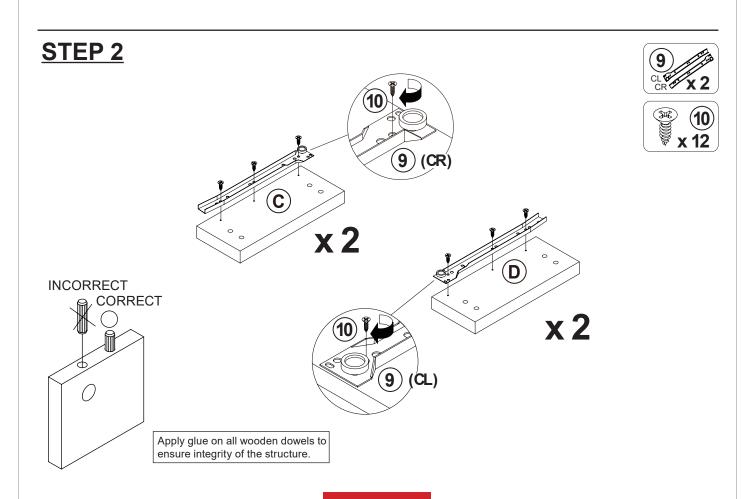

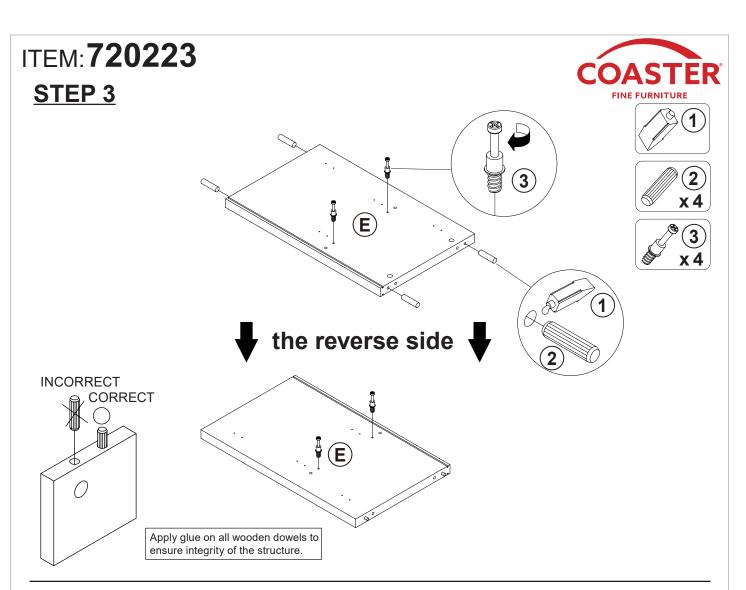

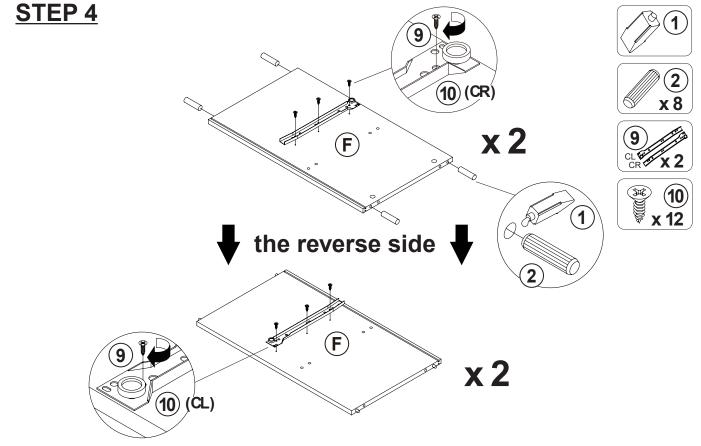

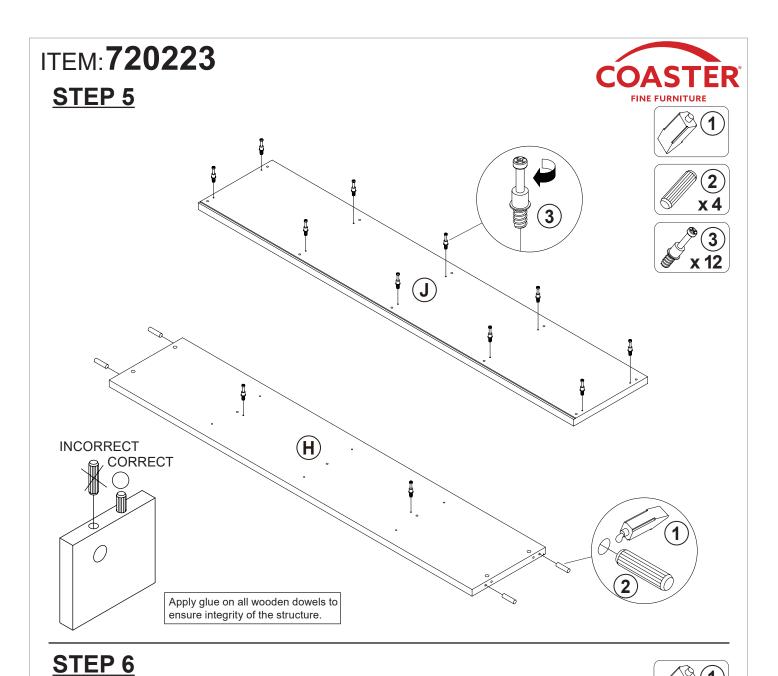

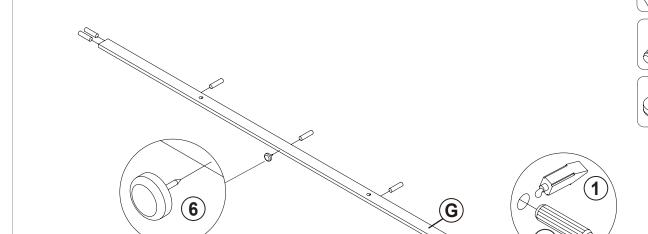












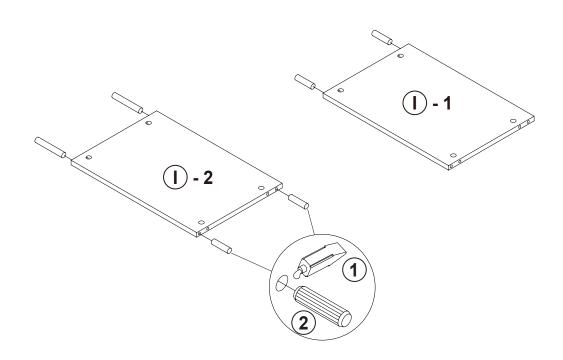


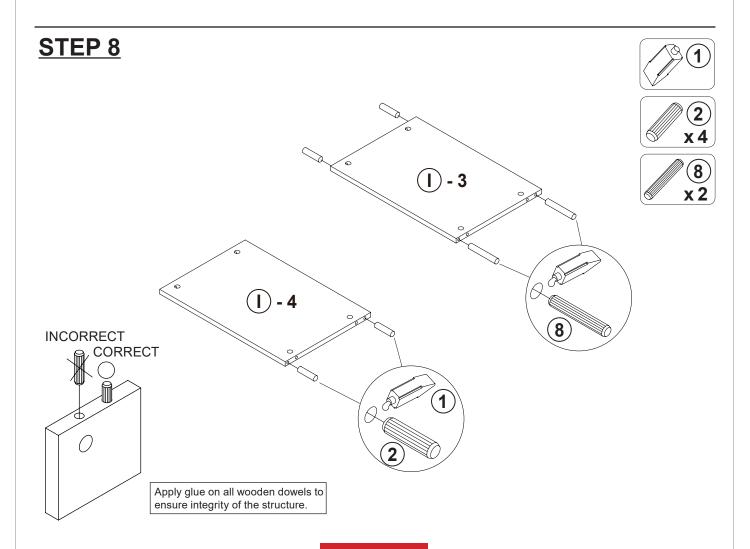







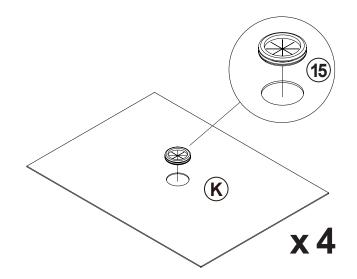

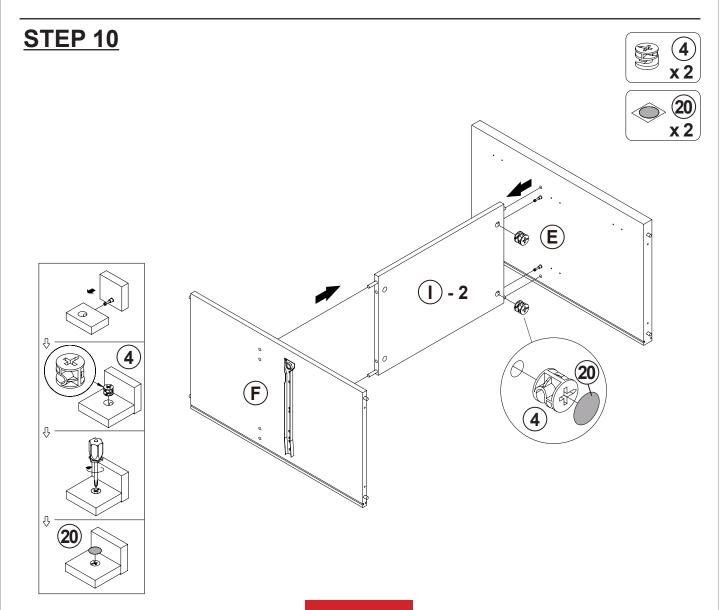




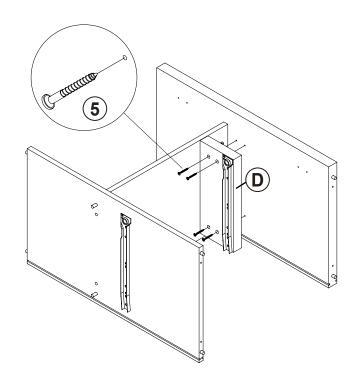


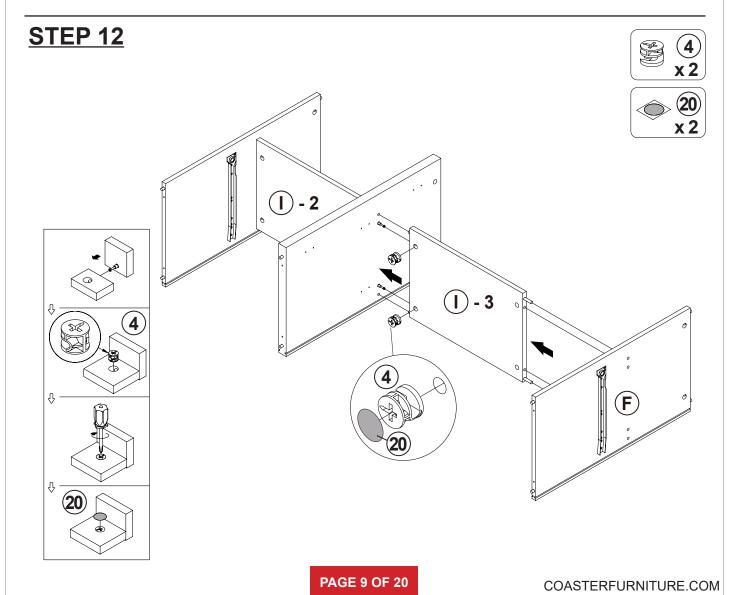







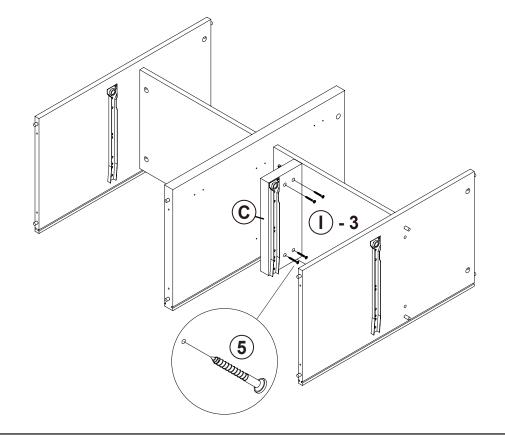


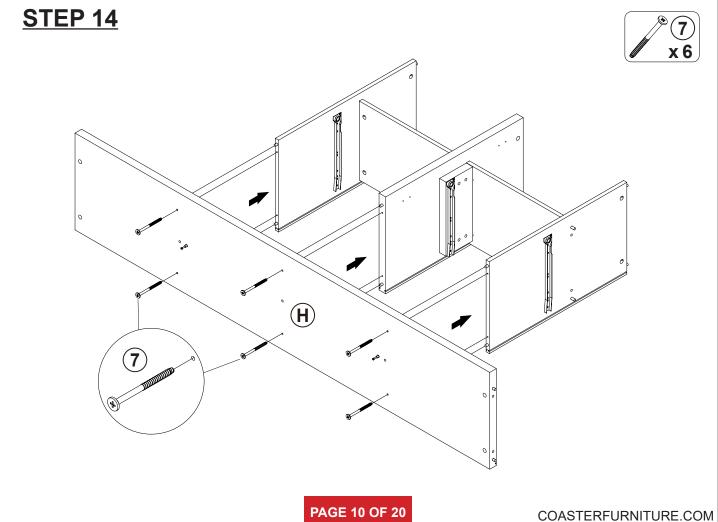




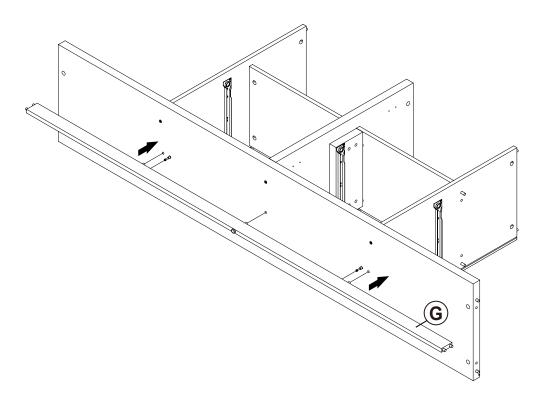

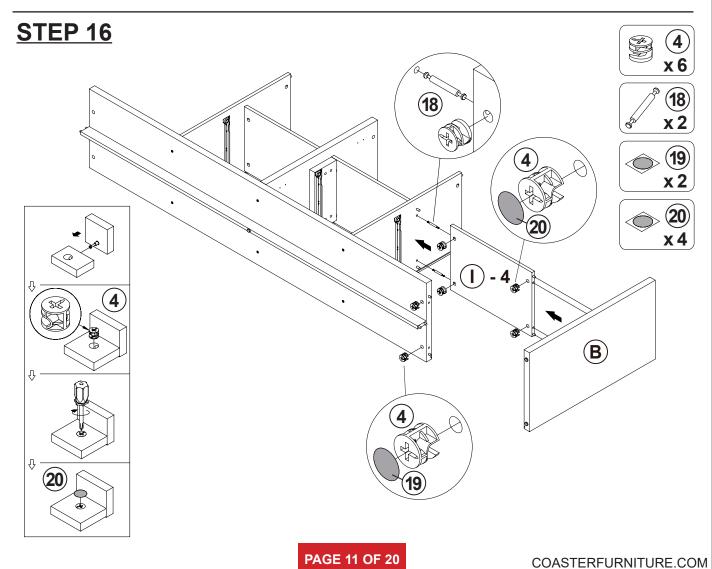

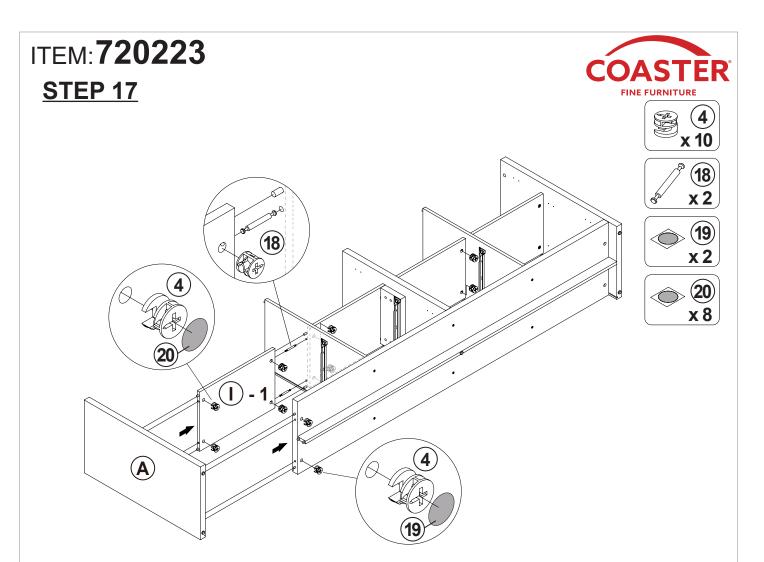



STEP 18

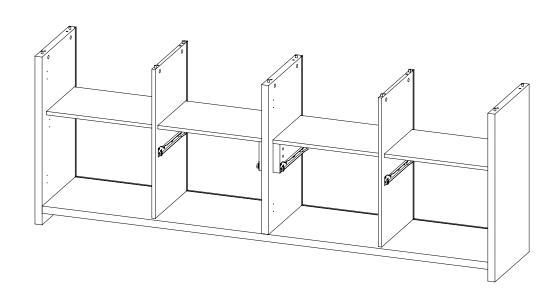







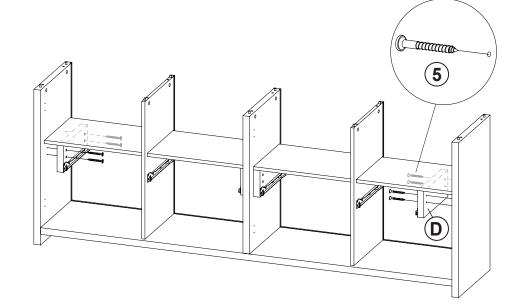

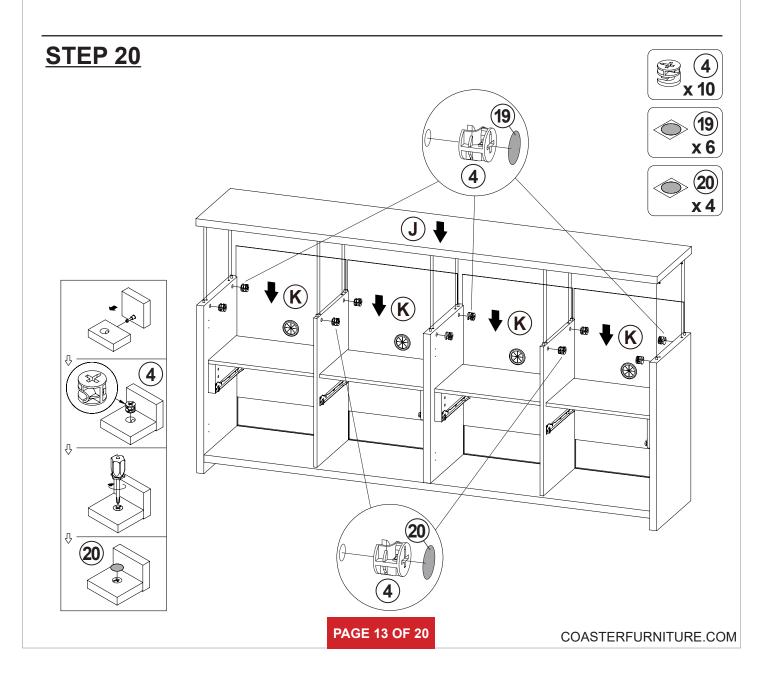


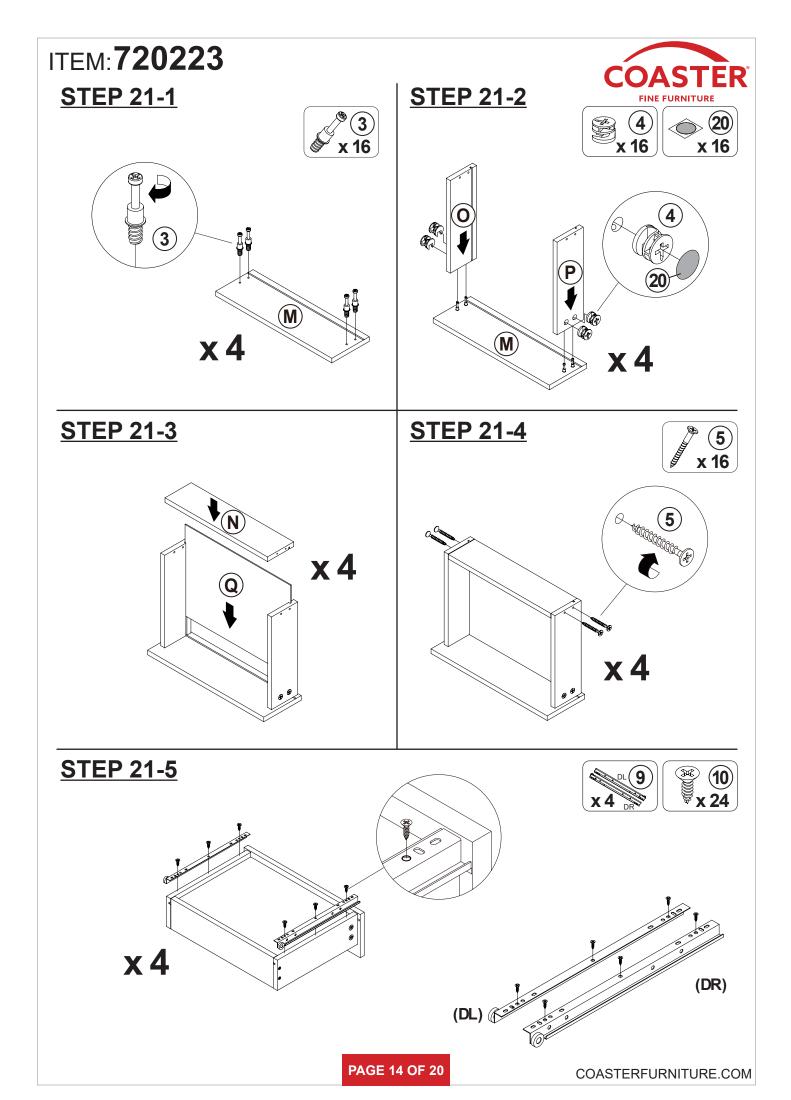



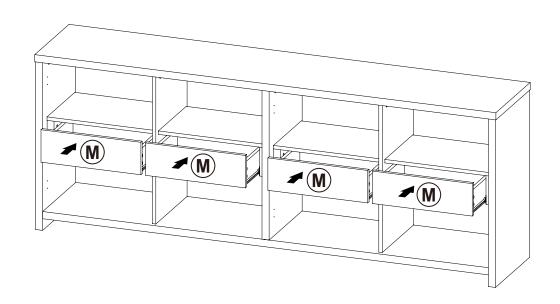

STEP 23

 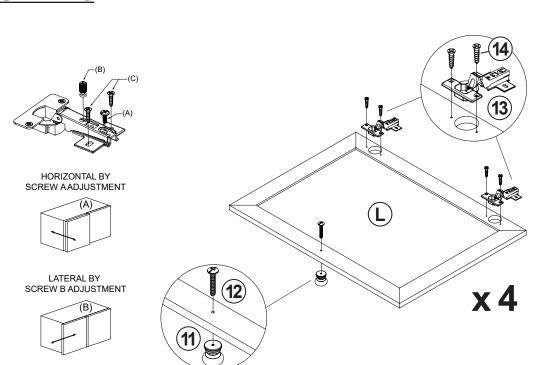















STEP 24






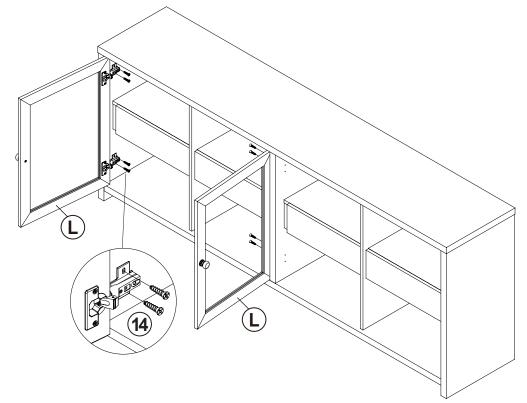

STEP 25



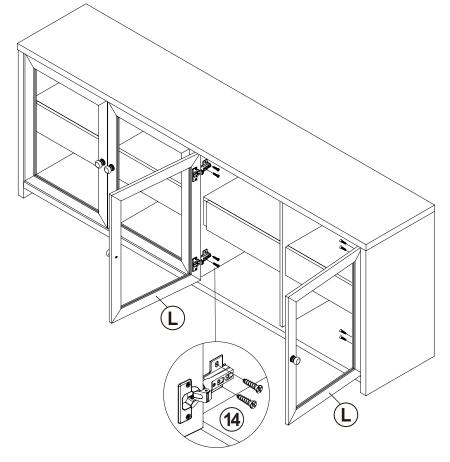

ITEM: **720223** COASTER FINE FURNITURE **STEP 26** 19 x 2 19 **STEP 27** 16 x 6 17 16) **17**)


PAGE 17 OF 20

COASTERFURNITURE.COM

STEP 28

COMPLETE




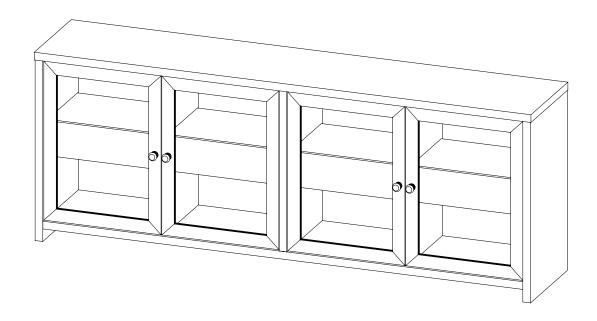








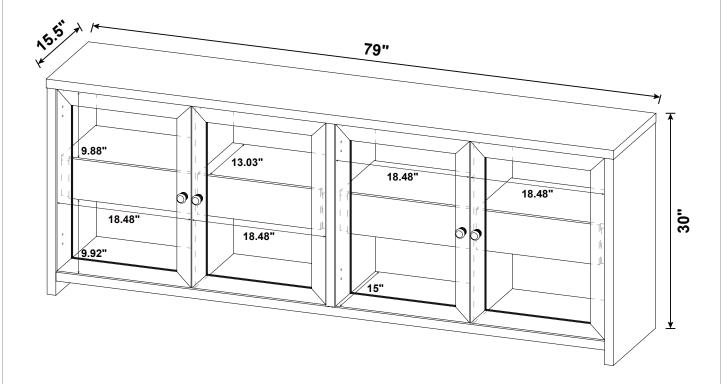

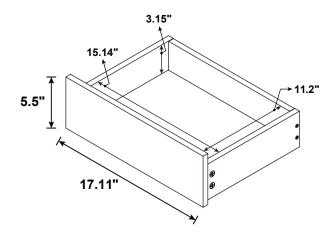

Note: Dimension tolerance ±5%



ANTI-TIPPING INSTALLMENT INSTRUCTIONS FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.

This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.


This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


STEP 1

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

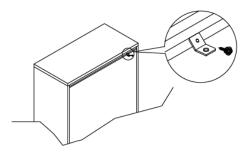

STEP 2

Locate the wood stud on the wall, and secure the other bracket, 2 inches below the back of the unit.

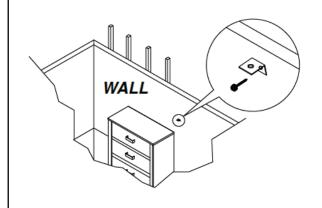

STEP 3

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end, and drag it through, until the slack is removed. Ensure that the strap is securely laced and locked.

