

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

DINING TABLE

REVISION 0: 08/16/2024

PAGE 1 OF 5

COASTERFURNITURE.COM



 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME 35 MINUTES

PARTS IDENTIFICATION

B1: TOP

 A TOP



B2: BASE

B BASE FRAME



z HARDWARE IDENTIFICATION

1	SHORT BOLT (1/4" x 15mm SR)	6PCS	4	CAP (13 x 38mm BLK)	12PCS
2	LONG BOLT (1/4" x 18mm SR)	12PCS	5	COVER	12PCS
3	WASHER (1/4")	12PCS	6	ALLEN WRENCH (4mm)	1PC


Hardware pack is located in 108121B2




STEP 1


Do not tighten until each step is completed or instructed.

Assemble x6 4

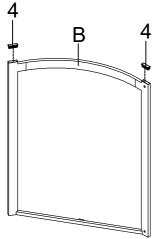

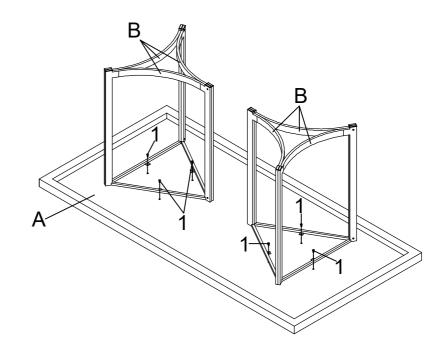

STEP 2

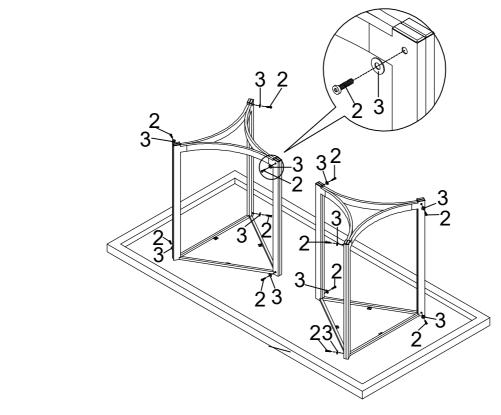


PAGE 3 OF 5


COASTERFURNITURE.COM



STEP 3

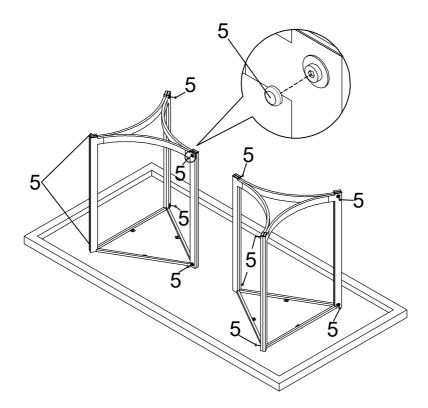

STEP 4 COMPLETE

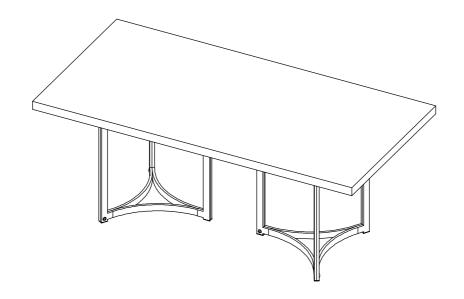


PAGE 4 OF 5





Product Size: 1830 X 965 X 762 H (MM)

Product Size: 72" X 38" X 30"

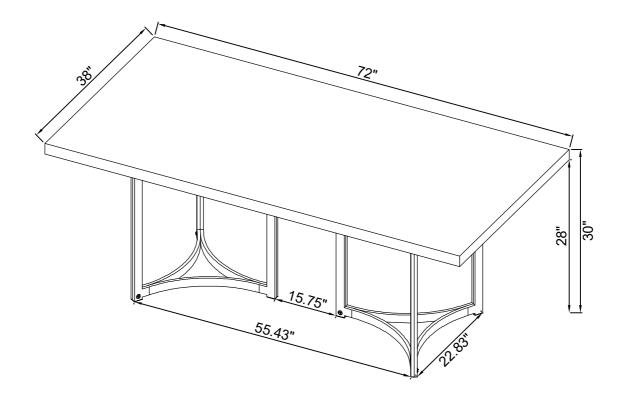

Note: Dimension tolerance ±5%