

Setup Guide

Téléviseur
Televisor digital a color con pantalla de cristal líquido

5-065-339-01(1)



EN	Setup Guide
FR	Manuel de configuration
ES	Guía de configuración

Sony Customer Support

U.S.A.:
<https://www.sony.com/tvsupport>
Canada:
<https://www.sony.ca/support>
U.S.A. Canada
1.800.222.SONY (7669) 1.877.899.SONY (7669)
Please Do Not Return the Product to the Store

Service à la clientèle Sony

Canada :
<https://www.sony.ca/support>
États-Unis :
<https://www.sony.com/tvsupport>
Canada États-Unis
1.877.899.SONY (7669) 1.800.222.SONY (7669)
Ne retournez pas le produit au magasin

Lea este manual antes de usar el producto




Centro de Asistencia de Sony

<https://esupport.sony.com/ES/LA/>
Llame al número telefónico que aparece en su póliza de garantía.
Por favor no devuelva el producto a la tienda donde adquirió el producto.



BRAVIA

K-55S20CM2 / 55S20M2


1

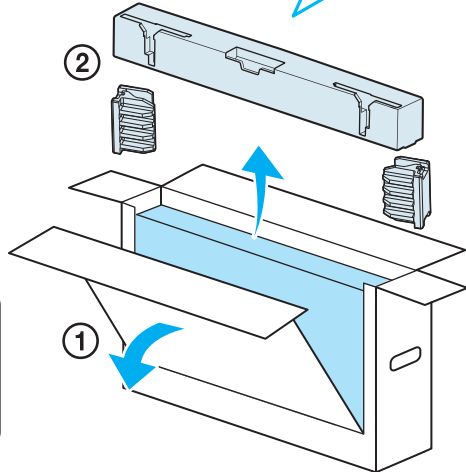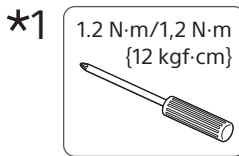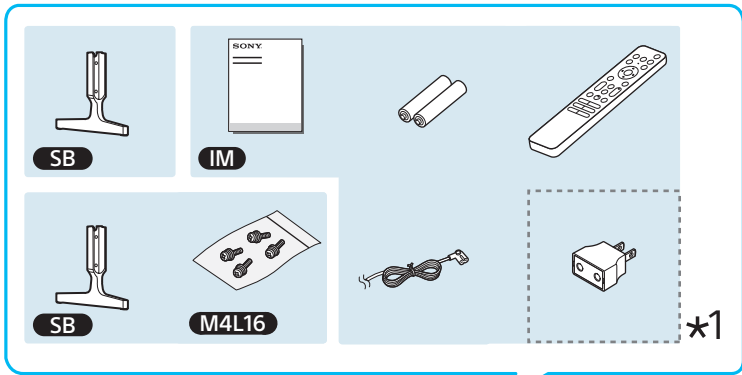


2

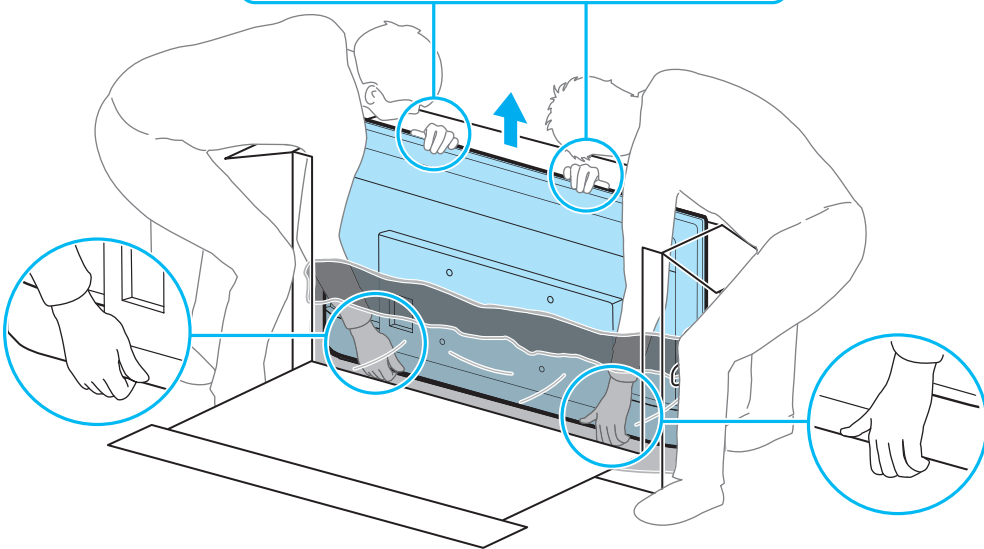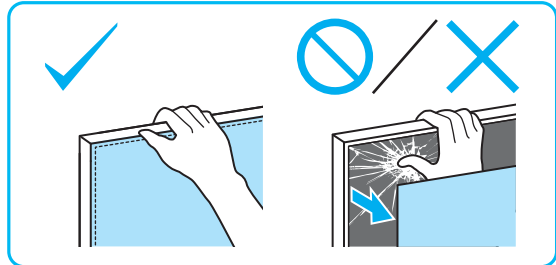


3

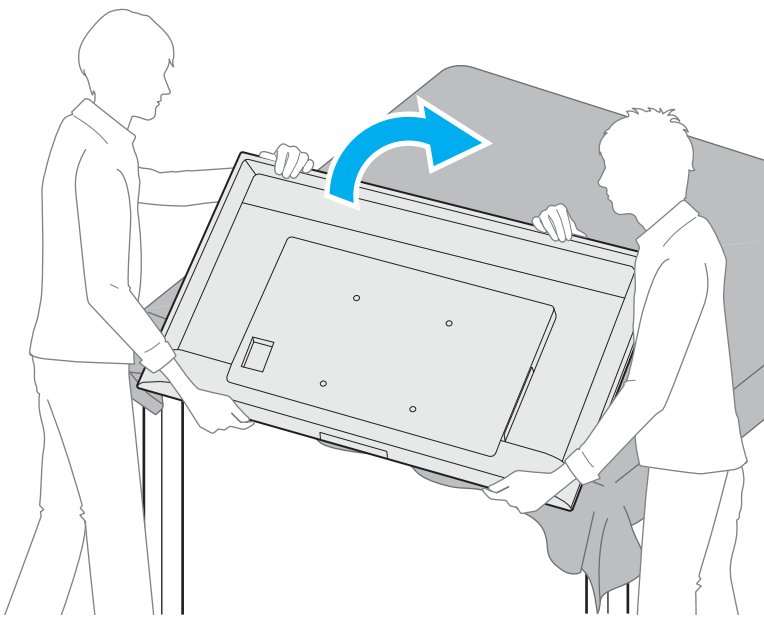


4

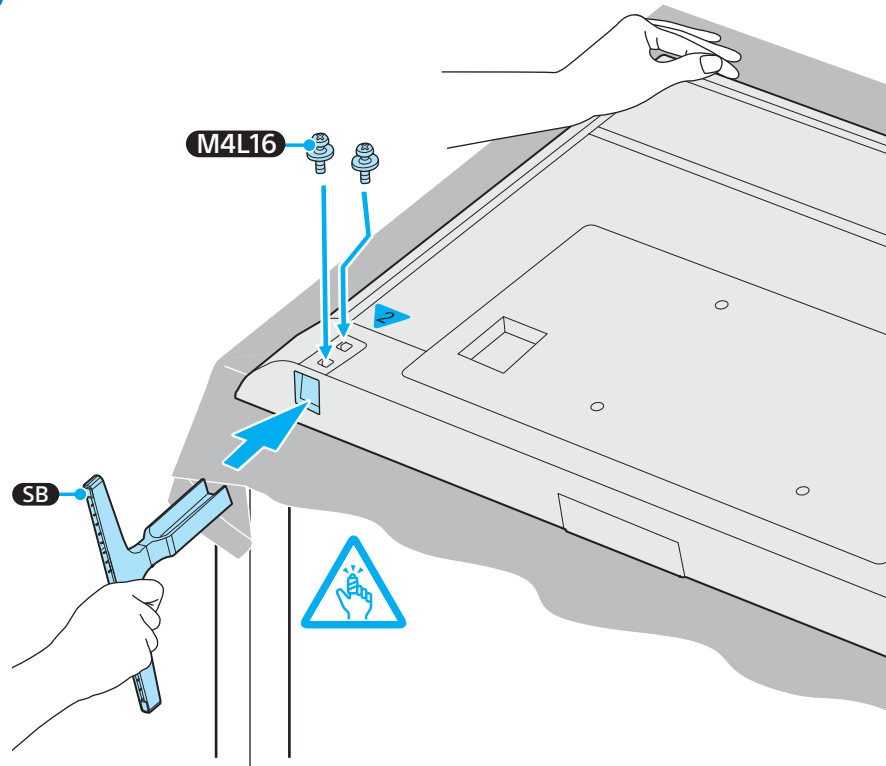

5

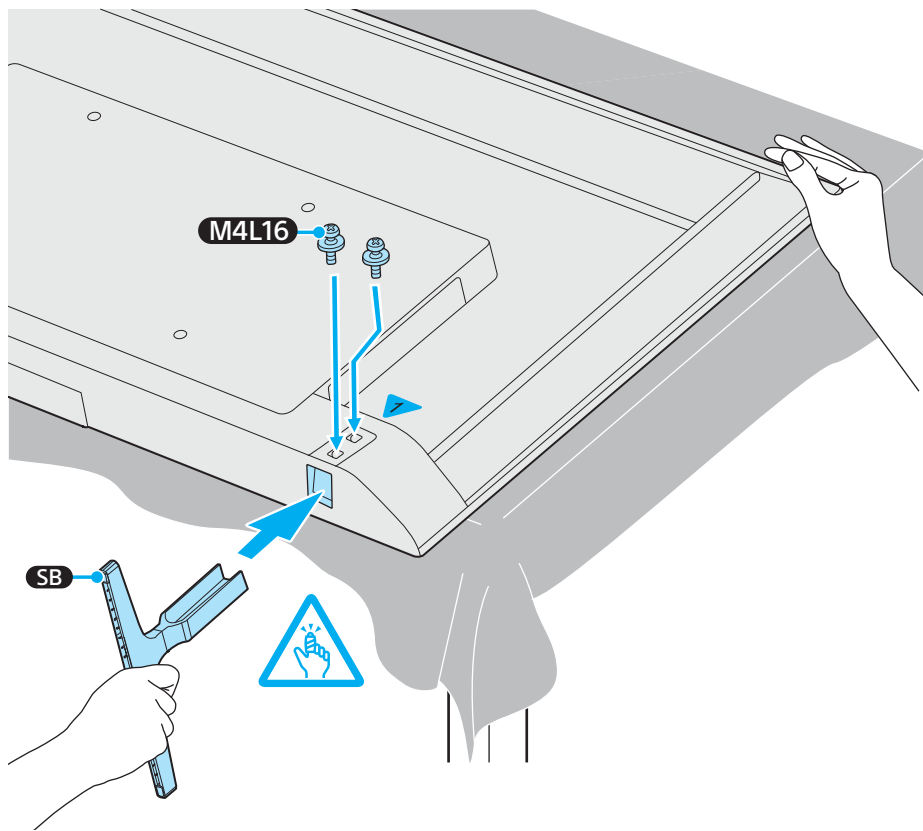


6

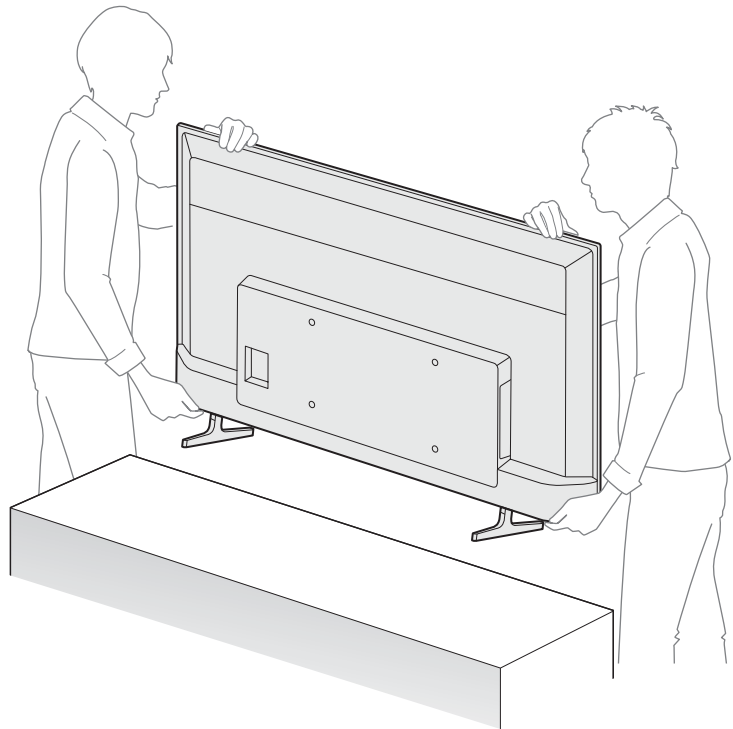


*1 Only for limited region/country/model. / Uniquement pour certaines régions/pays/modèles. / Solo para regiones/países/modelos limitados.



7

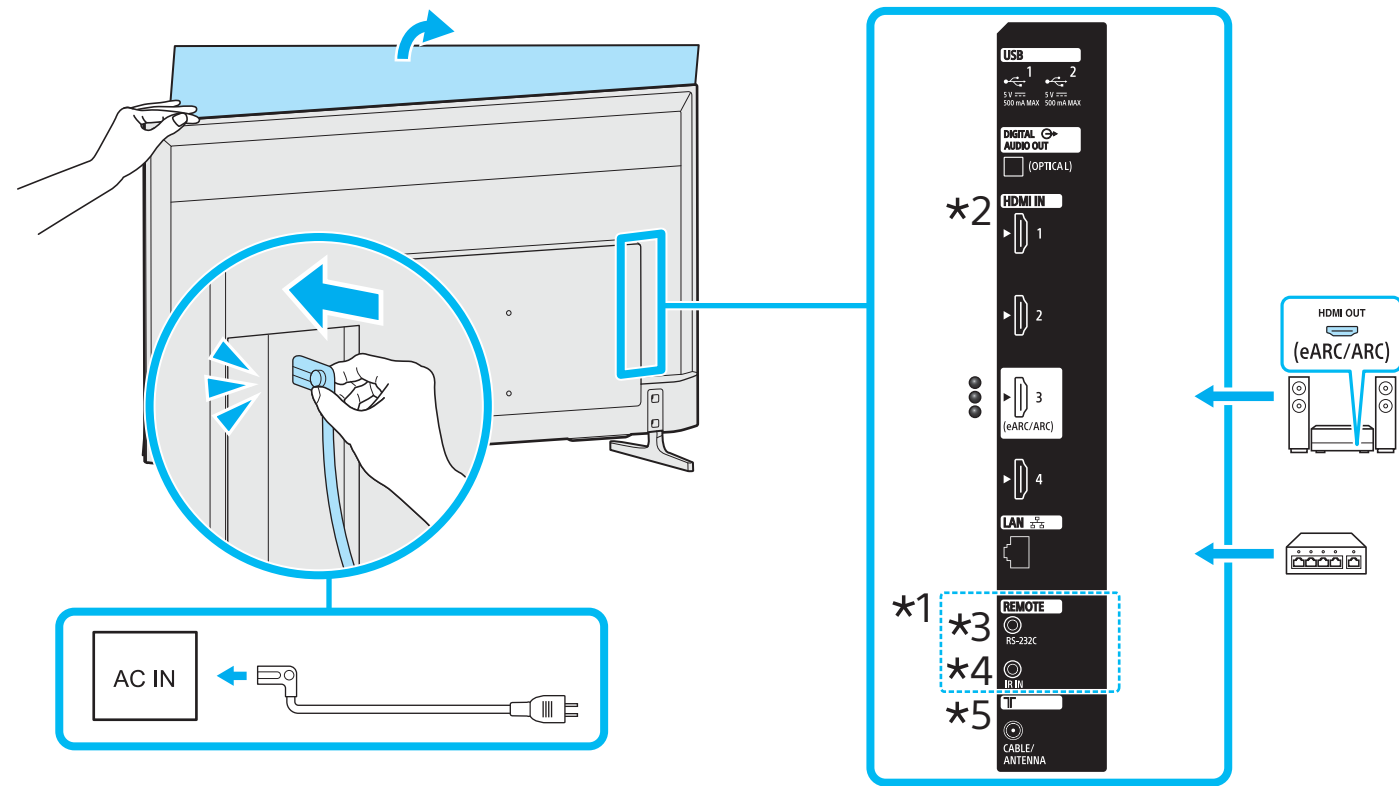

8

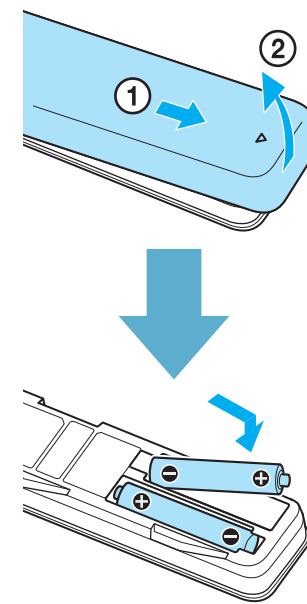

9

