

Assembly Instruction for FULL BED UB-12820-3-FH / FFR / NS / LC / BC

CAUTION: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST			
NO.	PART DESC	CODE	Q'TY
A	FULL BED HEADBOARD		1
B	LSF HEADBOARD LEG	PUB-12820-3-HBLEG1	1
C	RSF HEADBOARD LEG	PUB-12820-3-HBLEG2	1
D	BOTTOM STRETCHER	PUB-12820-FBSTR	1
E	FULL BED FOOTBOARD		1
F	SIDE RAIL		2
G	FULL BED SLATS	PUB-12820-FBSLT	1 SET
H	NIGHTSTAND WITH SPEAKER		1
I	SEAT		1
J	LIGHT BULB WITH ACCESSORIES COMPLETE	PUB-12820-BULB	1
K	ADAPTER CORD	PUB-12820-ADT	1

PART LIST			
NO.	PART DESC	CODE	Q'TY
L	PLASTIC LEG	PUB-12820-LEG	4
M	LOUNGER CHAIR		1
N	SIDE BOOKCASE		1
O	SLAT SUPPORT LEG WITH LEVELER	PUB-12820-BDSPL	4

HARDWARE LIST				
NO.	HARDWARE DESC		CODE	Q'TY
1		BOLT Ø5/16" x 2"	PUB-12820-KBHW	6
2		LOCK WASHER Ø5/16"		6
3		FLAT WASHER Ø5/16"		6
4		ALLEN KEY M4		1
5		SCREW Ø4X1-1/8"		8


 Only tighten all bolts when all bolts aligned with bolt inserts.

Step:1

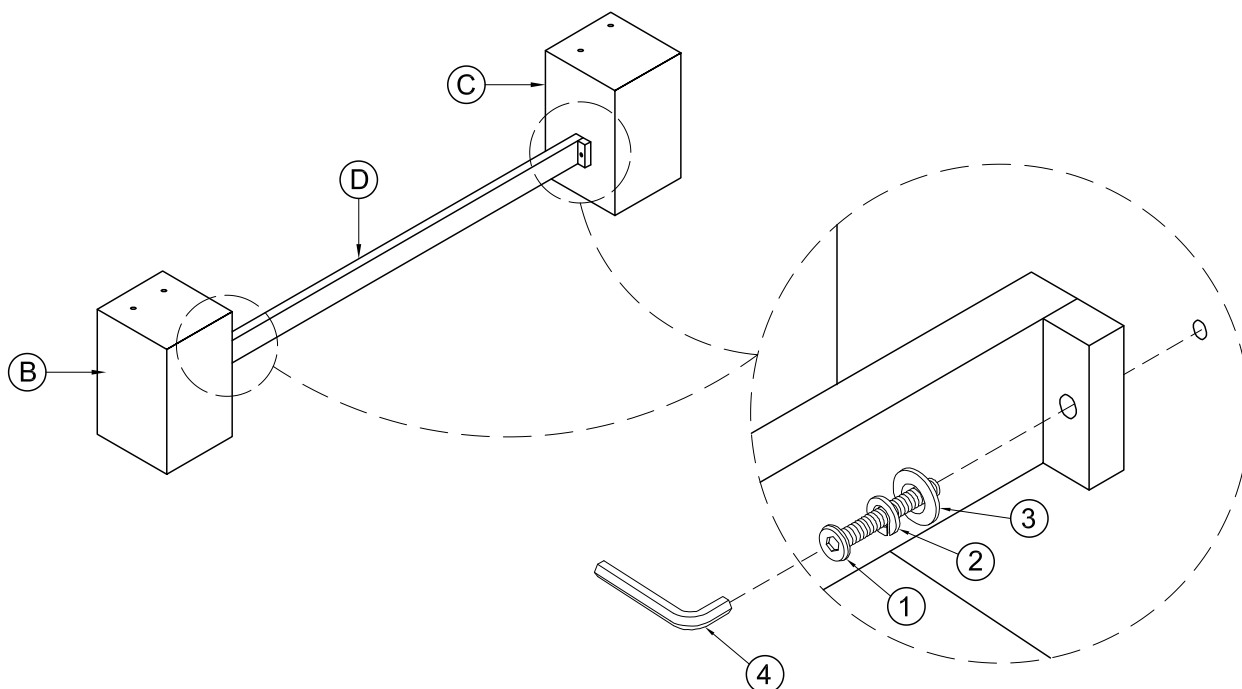


Assembly Instruction for
FULL BED
UB-12820-3-FH / FFR / NS / LC / BC

Step:2

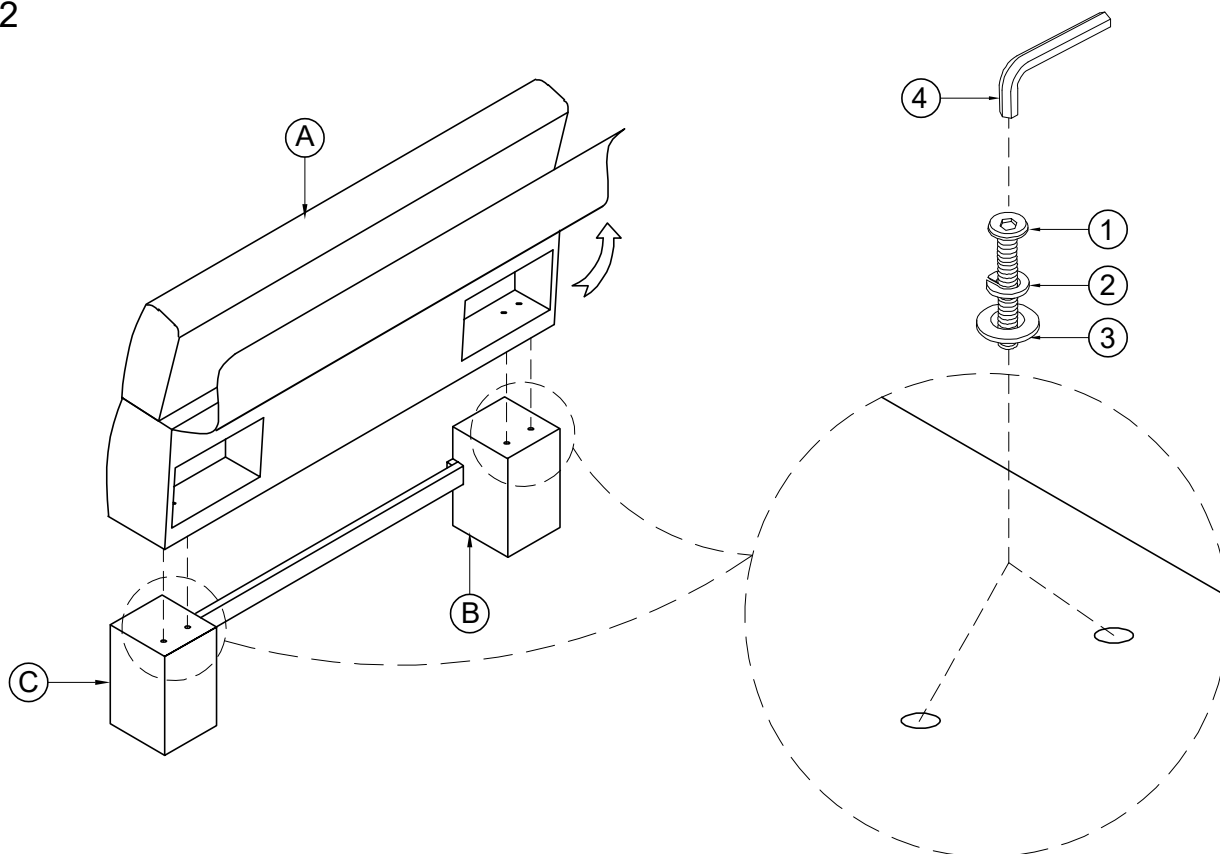


Step:3

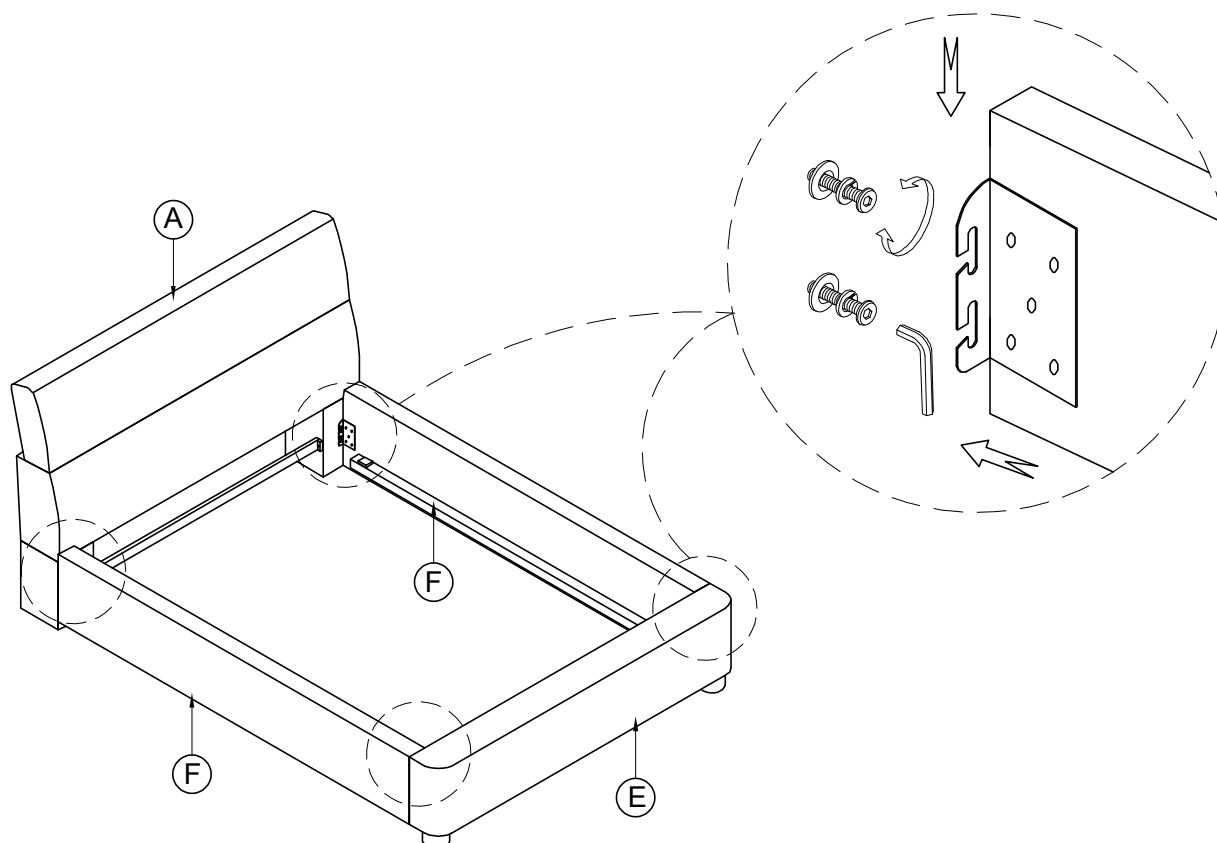


Assembly Instruction for
FULL BED
UB-12820-3-FH / FFR / NS / LC / BC

Step:4

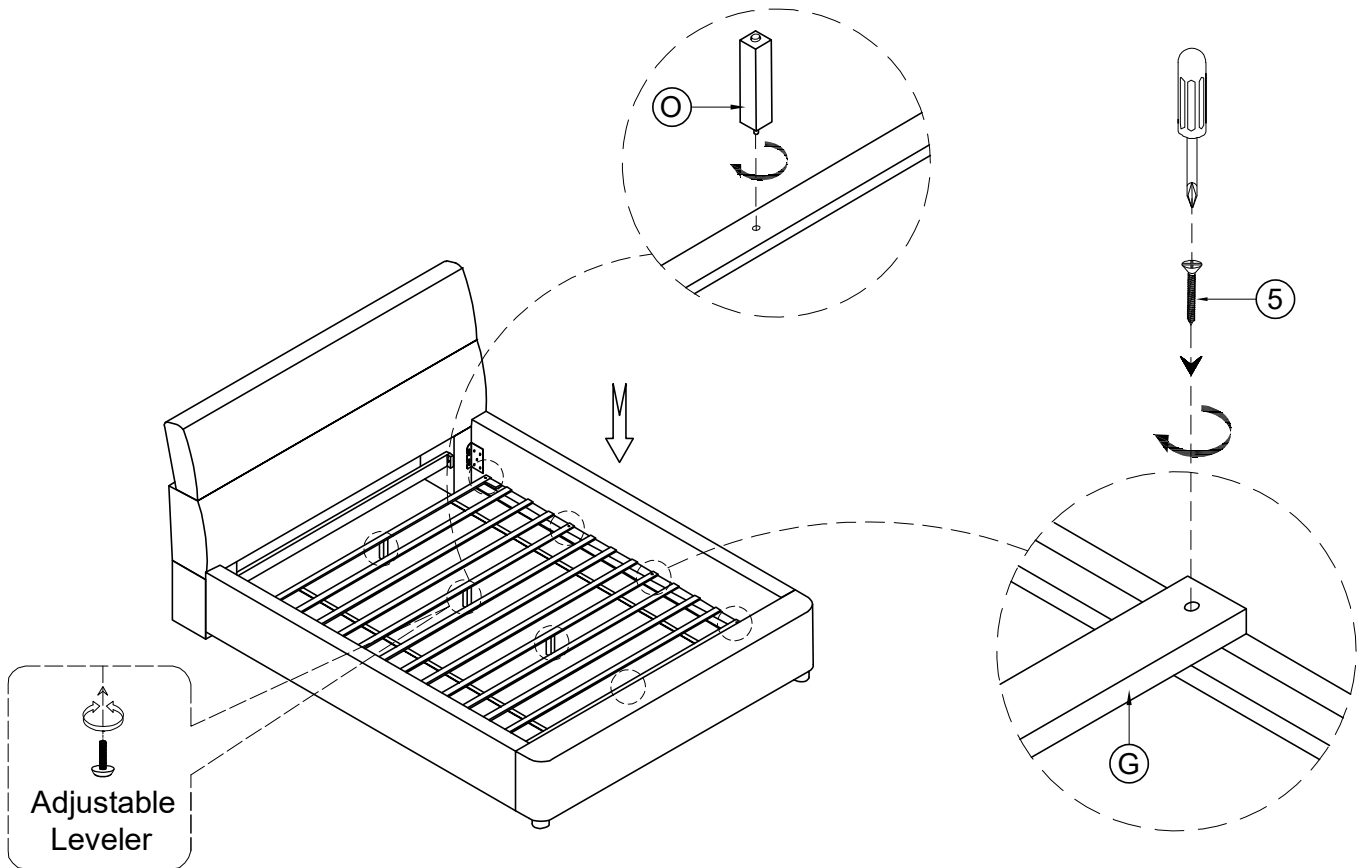


Step:5

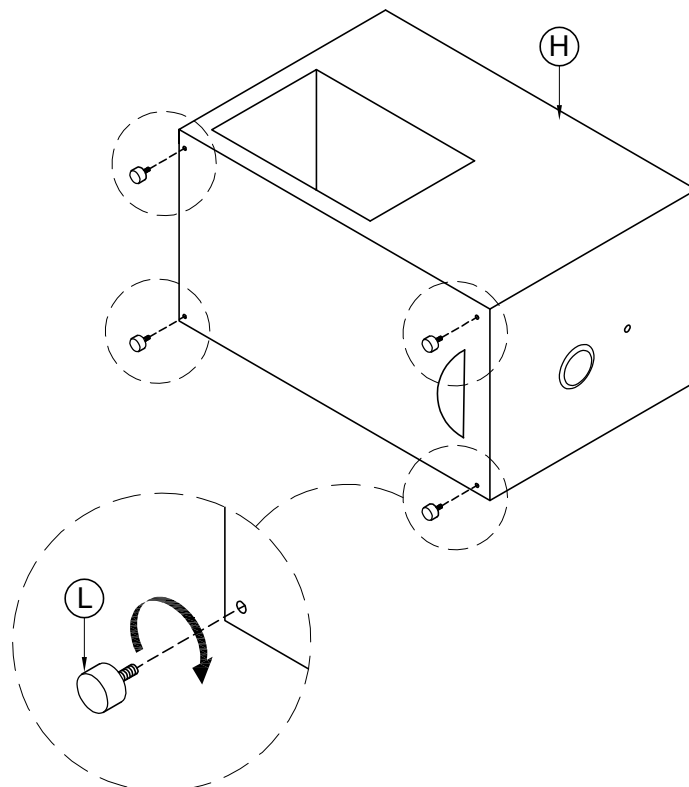


Assembly Instruction for
FULL BED
UB-12820-3-FH / FFR / NS / LC / BC

Step:6

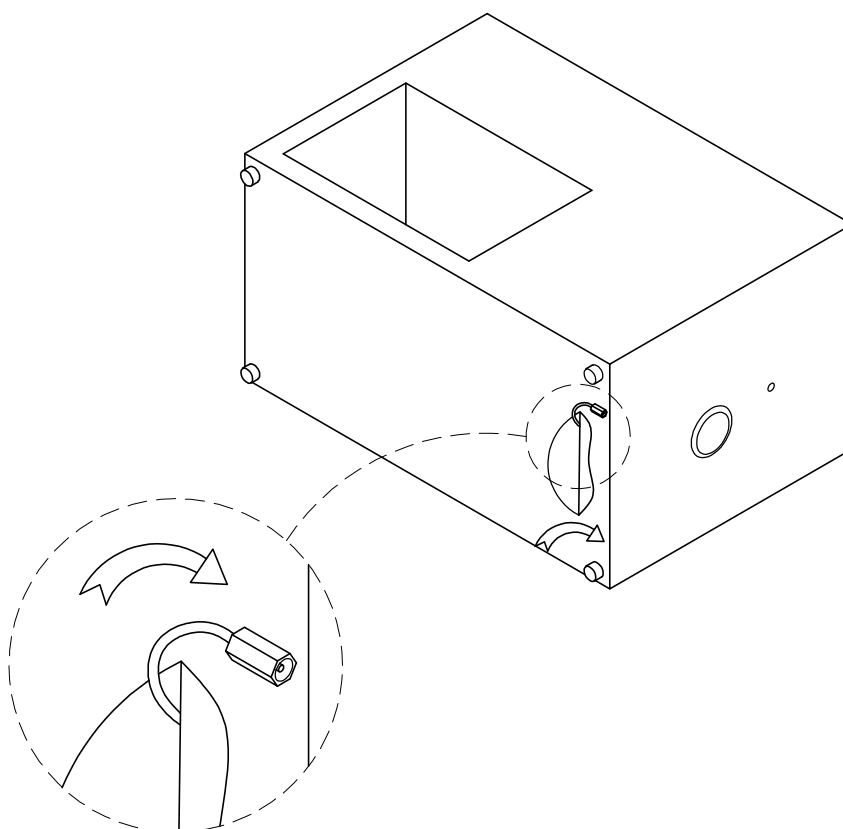

Step:7

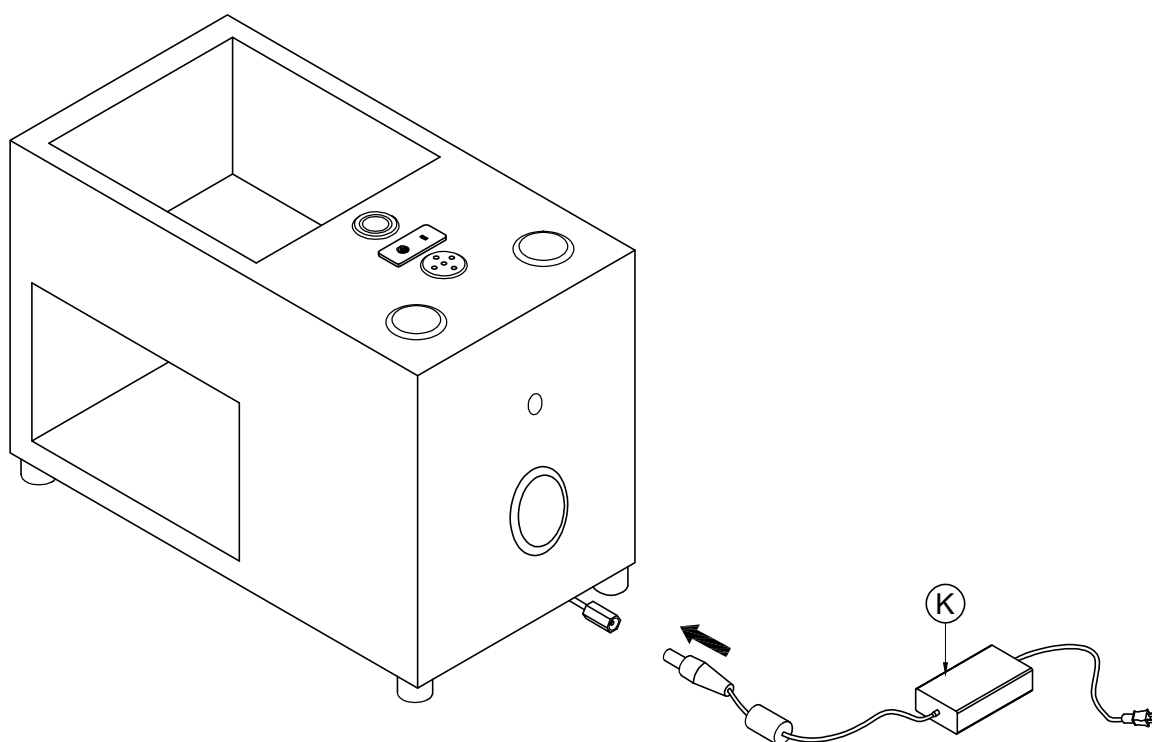

**Assembly Instruction for
FULL BED
UB-12820-3-FH / FFR / NS / LC / BC**

Step:8


Connect the led light into position and put the seat into position. Connect to the Speaker via the bluetooth.

*** FUNCTIONS AND OPERATION OF CONTROL PANEL
THE NIGHTSTAND WITH SPEAKER**


Number	Icon	Function
1		To turn on/off the unit; to play/stop
2		To decrease the volume
3		To increase the volume
4		Touch to return to the previous track; hold to fast rewind through the current track
5		Touch to jump to the next track; hold to fast forward through the current track

*** BASIC OPERATION:**

1. When power on,  the power button will be red;
 2. Press  power button for 2 seconds, the other buttons will change from no light to having blue lights and  the power button will be red and flashing. This indicates the unit is searching in the Bluetooth mode;
 3. The Remo Bluetooth device name is eMoMo, code is 0000. When paring with the Bluetooth device,  the power button red light will be off, the blue light will be on and a signal sound will be made to indicate a successful paring to the Bluetooth device;
 4. Touch  slightly to play or pause the audio file;
 5. Touch  power button for 2 seconds again to turn off the unit.
- The method of quick disconnect bluetooth: Touch & hold ON/OFF button for 2 seconds.

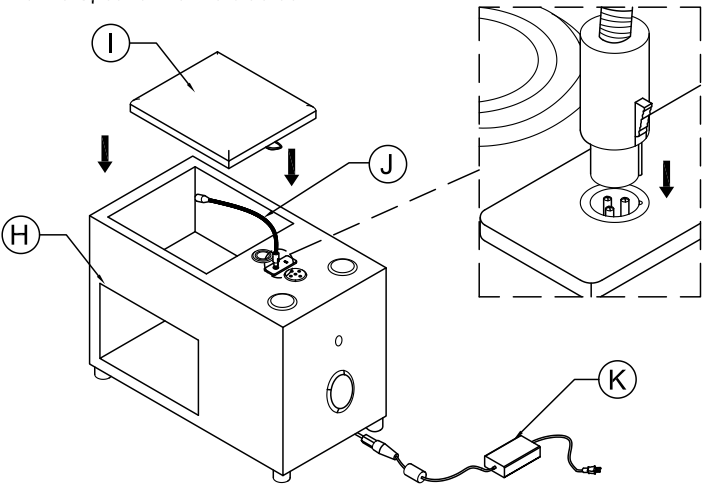


Step:9

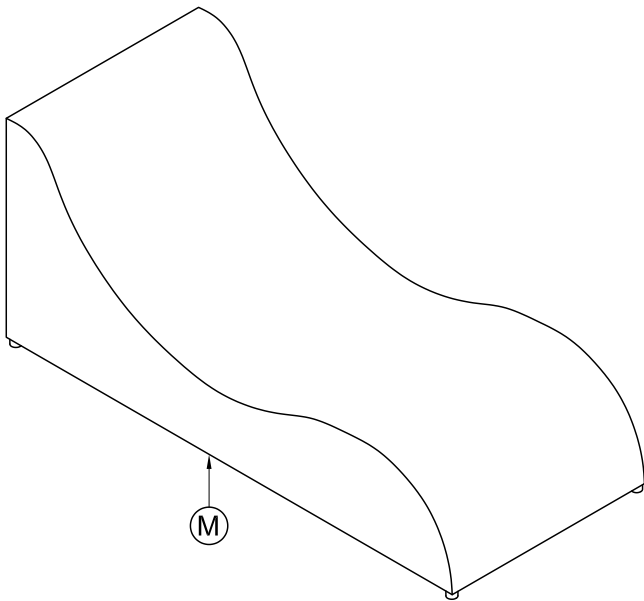

**Assembly Instruction for
FULL BED
UB-12820-3-FH / FFR / NS / LC / BC**

Step:10

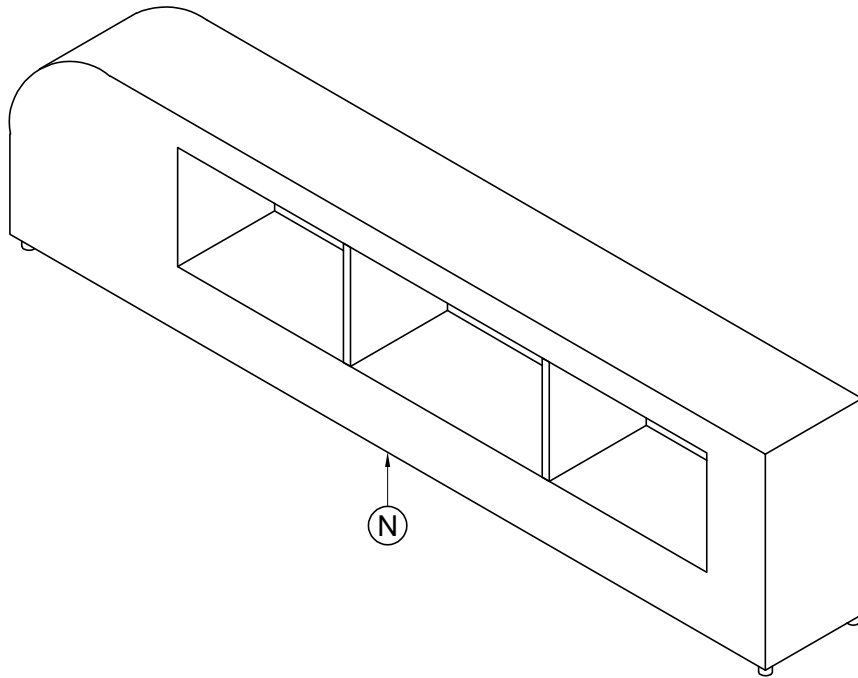

COMPLETED

