

PROCEDURE FOR SWITCHING DIRECTION OF DOOR SWING ON PERLICK C-SERIES, 15 INCH, AND SIGNATURE SERIES CABINETS



SW