

 







Assembly Instruction For

P3 Power Glider Recliner W/Heat Massage, Music, Ipad holder W/wireless charger, USB

U-16650-11430/11431/11432-11900-105PPP


Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST				
NO.	Part Picture	Part Description	Code	QTY
A		Recliner Body		1pc
B		Recliner Back		1pc
C		RAF Wing		1pc
D		LAF Wing		1pc
E		phone holder with charger	PU-16650-IPAD	1pc
F		Adapter cord	PU-16650-ADT1	1pc
G		Adapter cord	PU-16650-ADT2	1pc
H		Power cable		1pc


Assembly Instruction For P3 Power Glider Recliner W/Heat Massage, Music, Ipad holder W/wireless charger, USB U-16650-11430/11431/11432-11900-105PPP

STEP:1

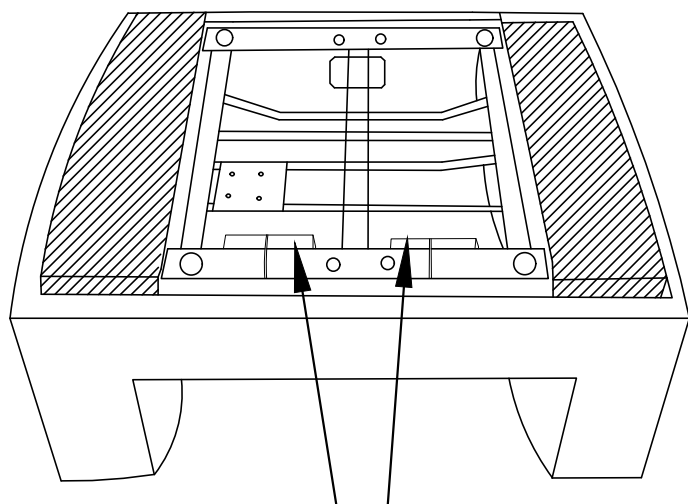


the power cord here.

STEP:2

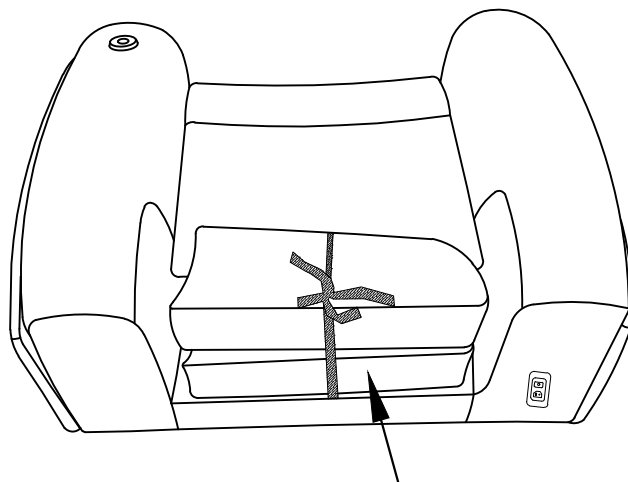


remove KD(C&D)wings
which are secured with
ropes at the back of the
chair.

STEP:3

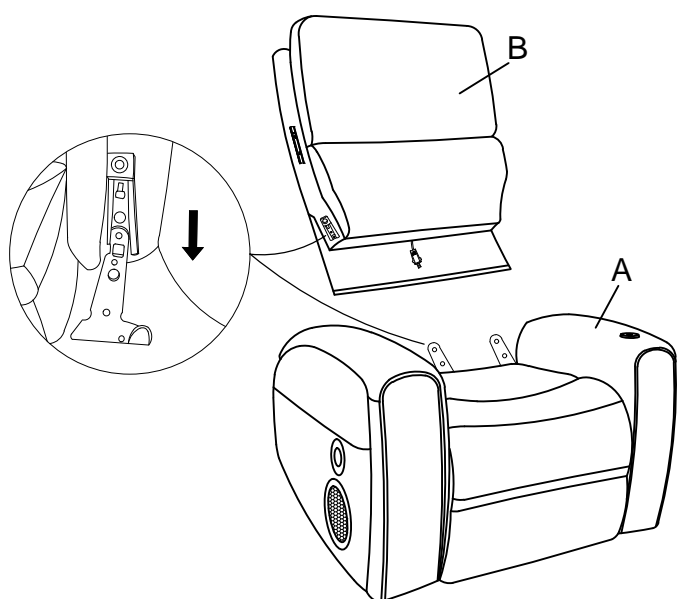


STEP:4

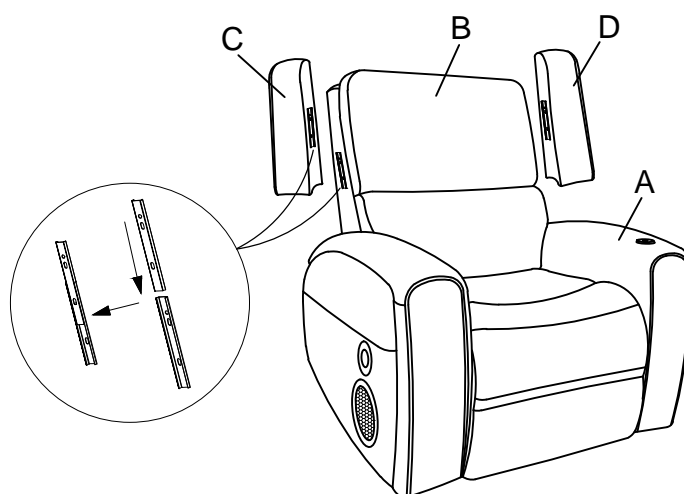


Assembly Instruction For **P3 Power Glider Recliner W/Heat Massage,** **Music, Ipad holder W/wireless charger, USB** **U-16650-11430/11431/11432-11900-105PPP**


STEP:5

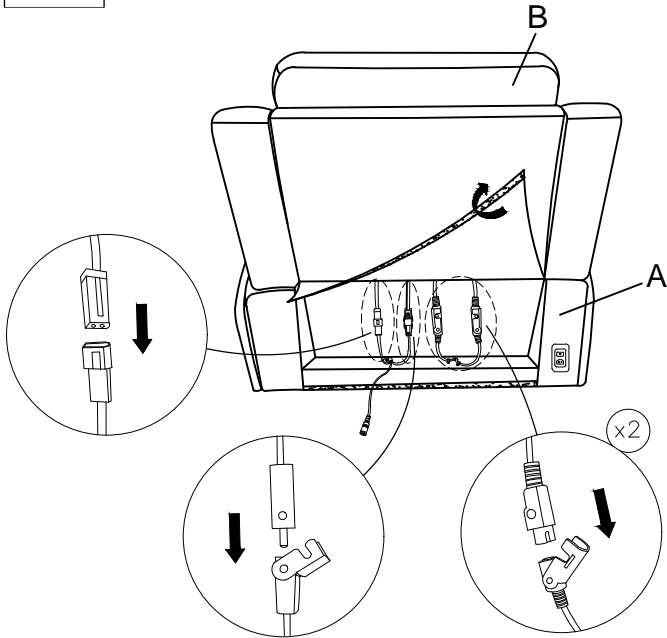


STEP:6

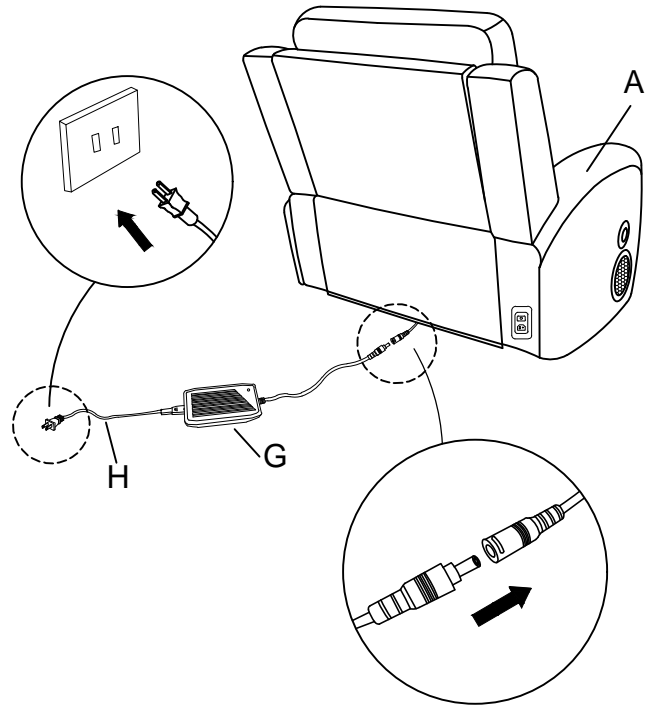

STEP:7

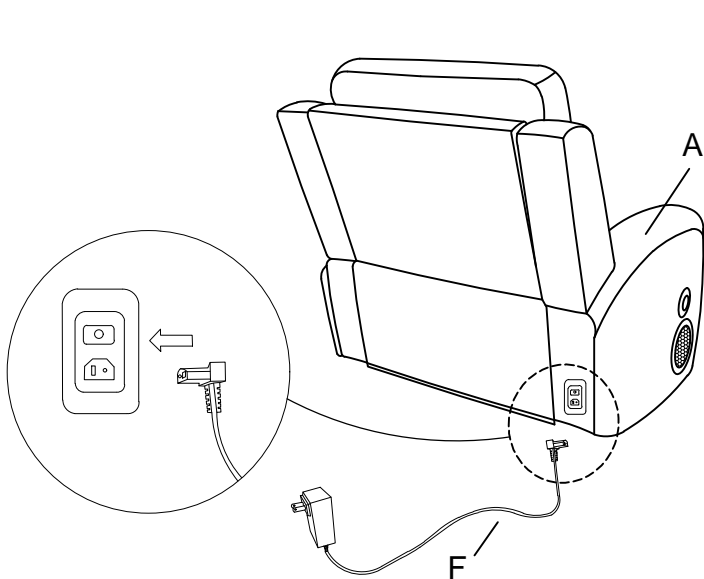


STEP:8

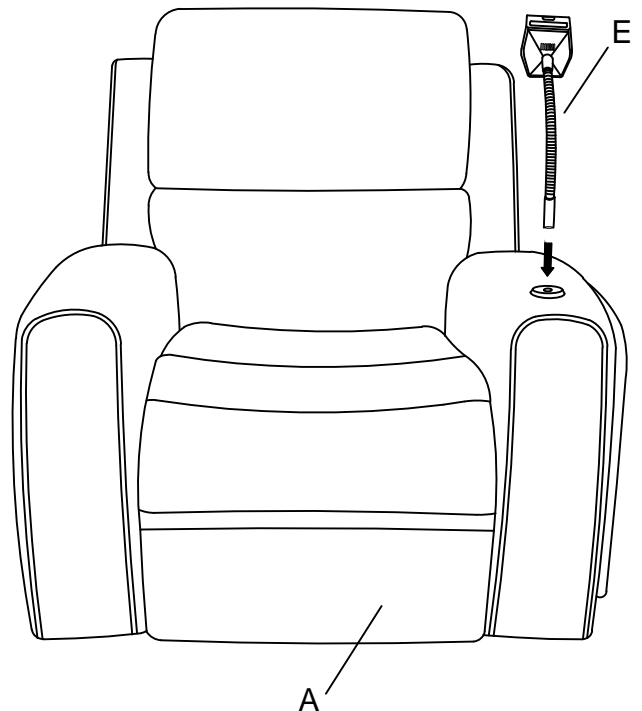


Assembly Instruction For **P3 Power Glider Recliner W/Heat Massage,** **Music, Ipad holder W/wireless charger, USB** **U-16650-11430/11431/11432-11900-105PPP**

STEP:9

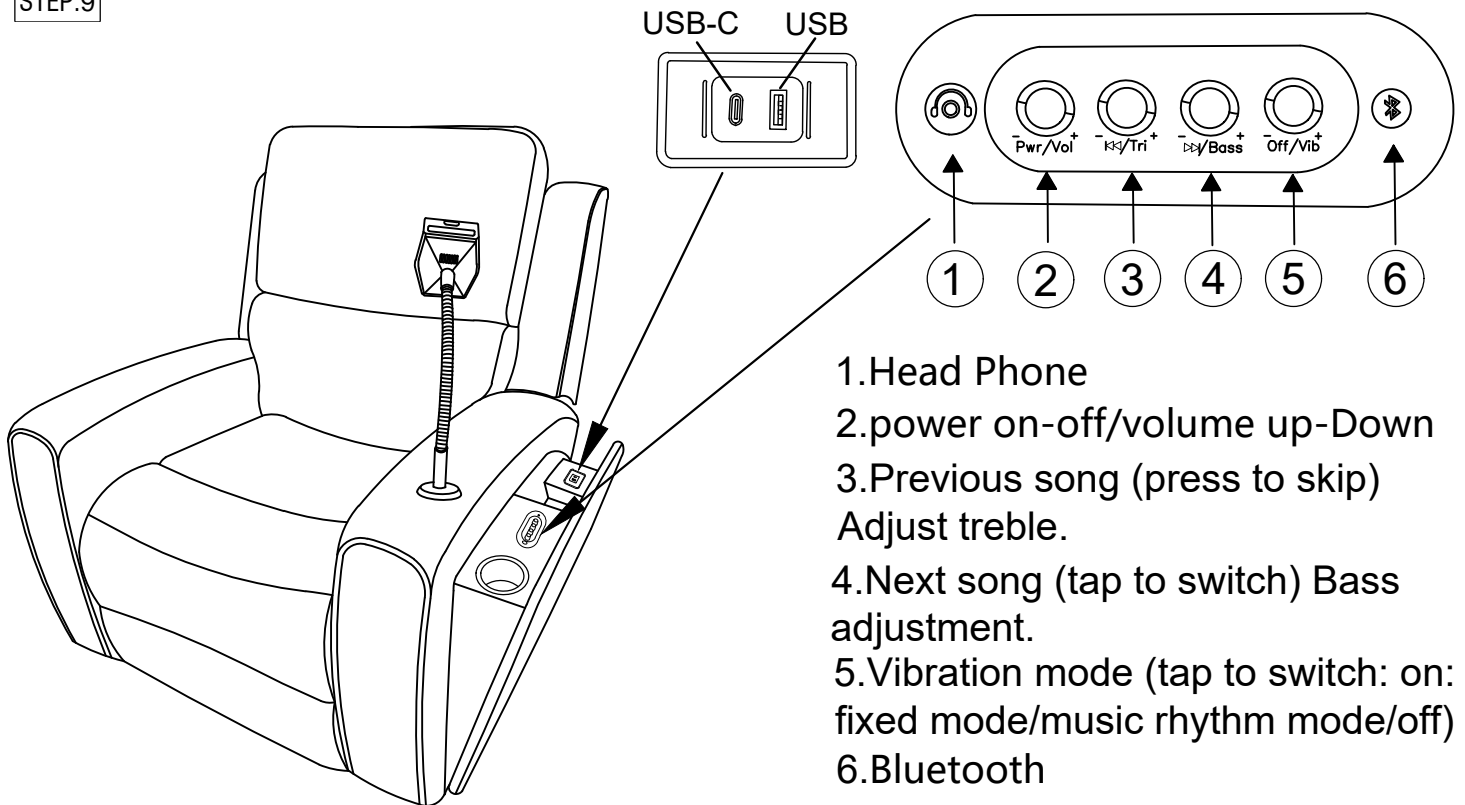

STEP:10

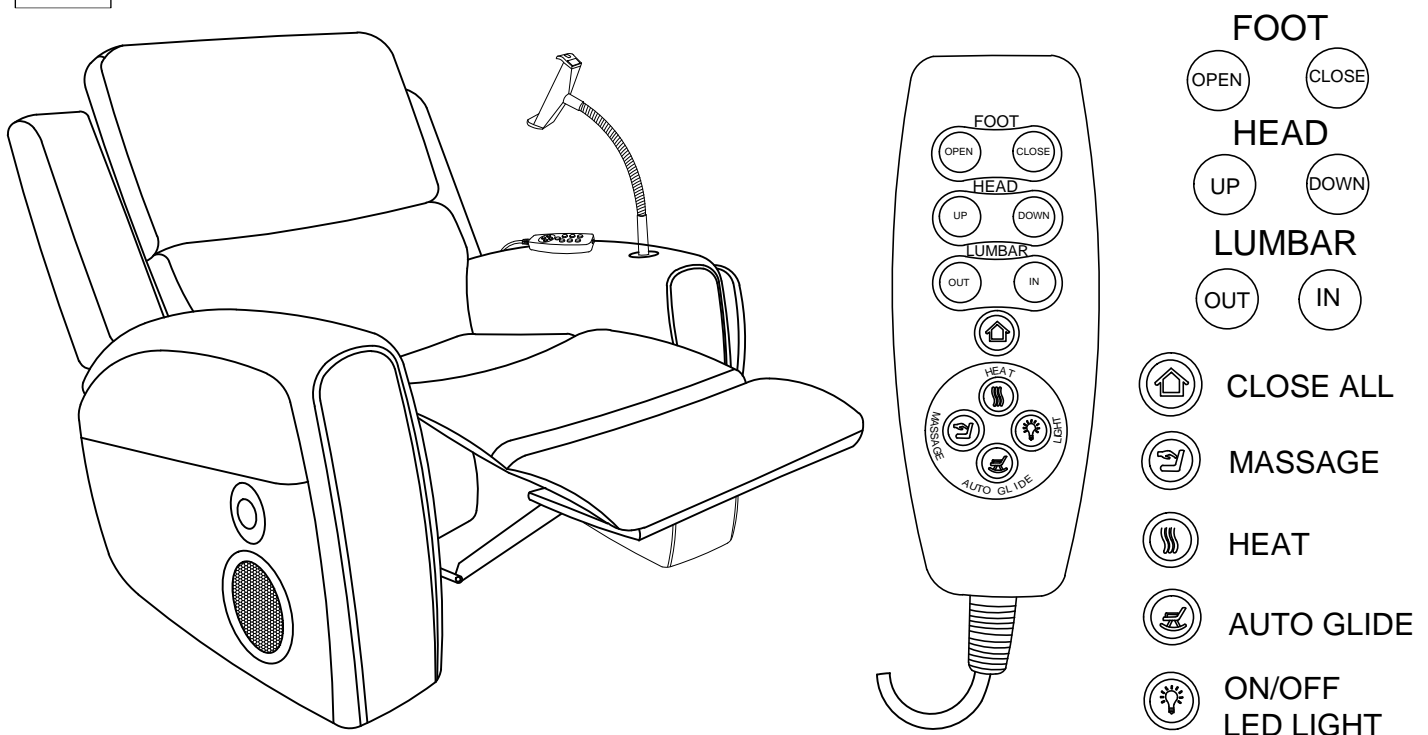

ASSEMBLY COMPLETED

49902231