


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

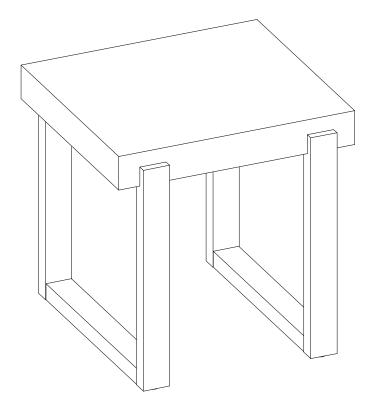

Fine Furniture for every stage of life

753397 End Table

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

Remove hardware from box and sort by size.
 Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
 This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

PARTS INDENTIFICATION


No	DESCRIPTION & FIGURE	QTY
А	TOP	1pc
В	LEG 1	2pcs
С	LEG 2	2pcs
D	LEG SUPPORT	2pcs


HARDWARE PACKAGE:


No	DESCRIPTION	FIGURE	QTY
1	CAM BOLT	(C)	8pcs
2	COM LOCK		8pcs
3	BOLT	(d) (M8x30mm	8pcs
4	WASHER	Ø20xØ8x1.2mm	8pcs
5	ALLEN KEY (5mm)		1pc



STEP 1

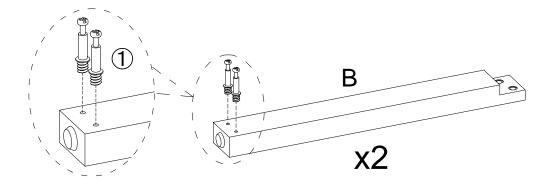


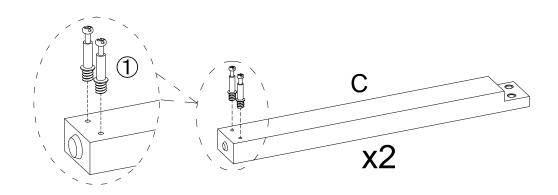

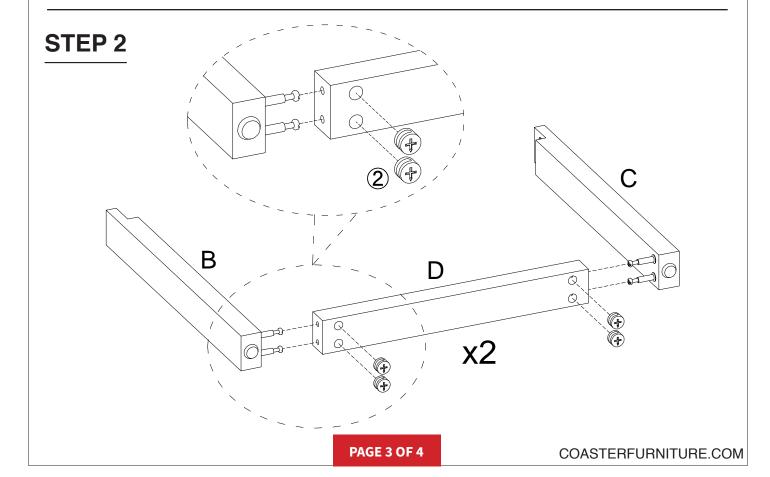


STEP 3



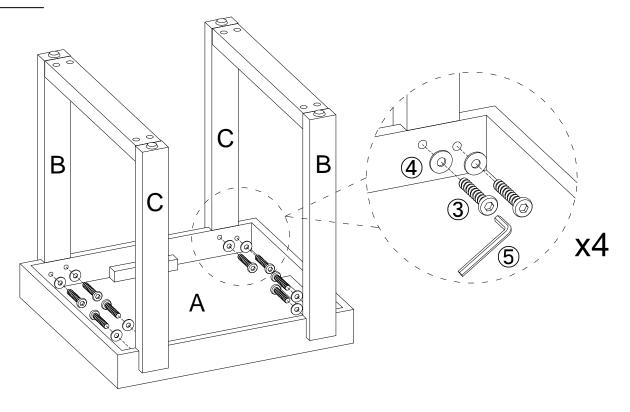


STEP 4 COMPLETE

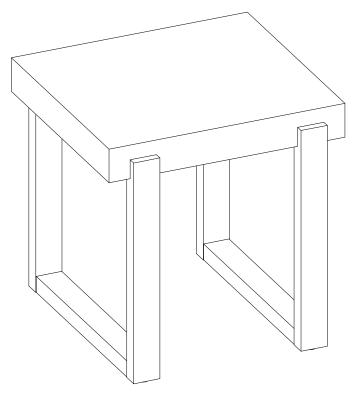

COASTERFURNITURE.COM



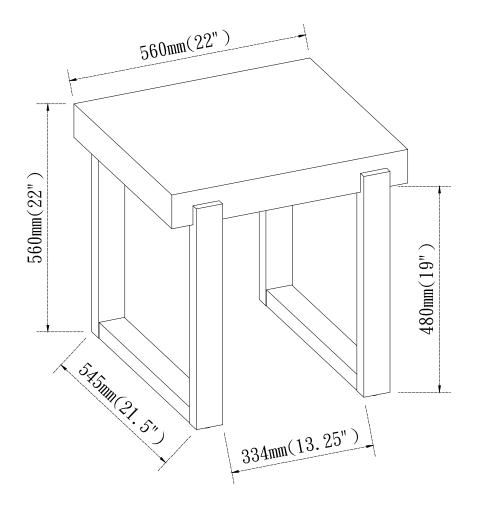

Note:Dimension tolerance ± 5%