




ELECTRIC WALL OVEN

MODELS:

JJW3430LM00 (Floating Glass Black)


CONTROL PANEL PARTS

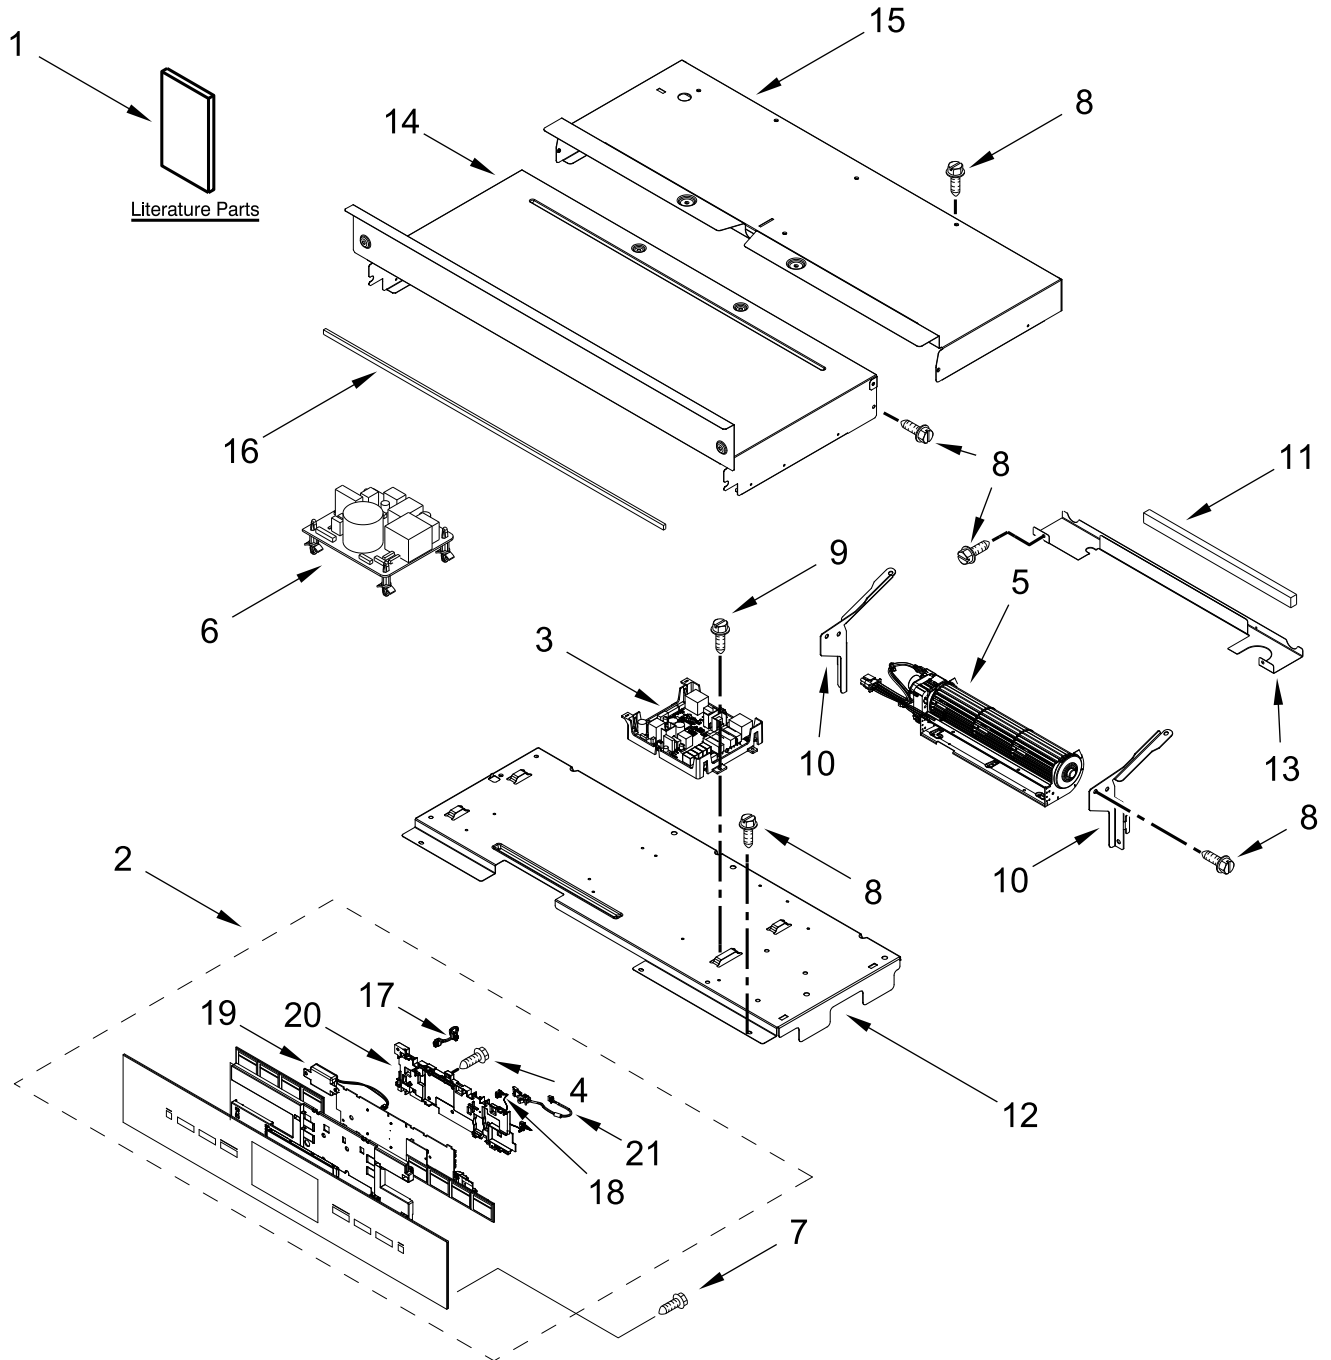

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	10	W10655463	Bracket, Blower (Left)	21	W10575307	Jumper Harness, Power Supply
	W11340513	Owner's Manual		W10655462	Bracket, Blower (Right)			FOLLOWING PARTS NOT ILLUSTRATED
	W11423731	Quick Start Guide						
	W11405740	Tech Sheet	11	4451758	Block, Foam		W11408879	Harness, Main
2		Assembly, Control Panel	12	W11179509	Tray, Electronic		W11249914	Harness, Signal
	W11301917	Black	13	W11166802	Divider, Chassis Back		W11264646	Harness, Door Latch
3	W11250487	Appliance Manager, Copernicus	14	W11168600	Cover, Chassis Top Front (30")		W10562910	Harness, EOL
4	W10489172	Screw	15	W11223325	Cover, 30 IN Chassis Top Back		W11409842	Antenna
5	W11397930	Blower	16	W10728475	Gasket, Rubber		4450800	Screw, Grounding
6	W10260060	Board, Power Supply	17	W10566973	Harness, Keypad (Left To Center)		W10487999	Clip, Harness
7	W11339492	Screw (Black)	18	W10524350	Harness, Keypad (Right To Center)		W11132988	Strap, Lead Ground
8	7101P426-60	Screw	19	W10568405	Assembly, Speaker		4448664	Clamp, Conduit
9	7101P434-60	Screw	20	W10668510	Housing		W10655464	Bracket, Harness
							W11547720	Bag, Hardware


OVEN PARTS

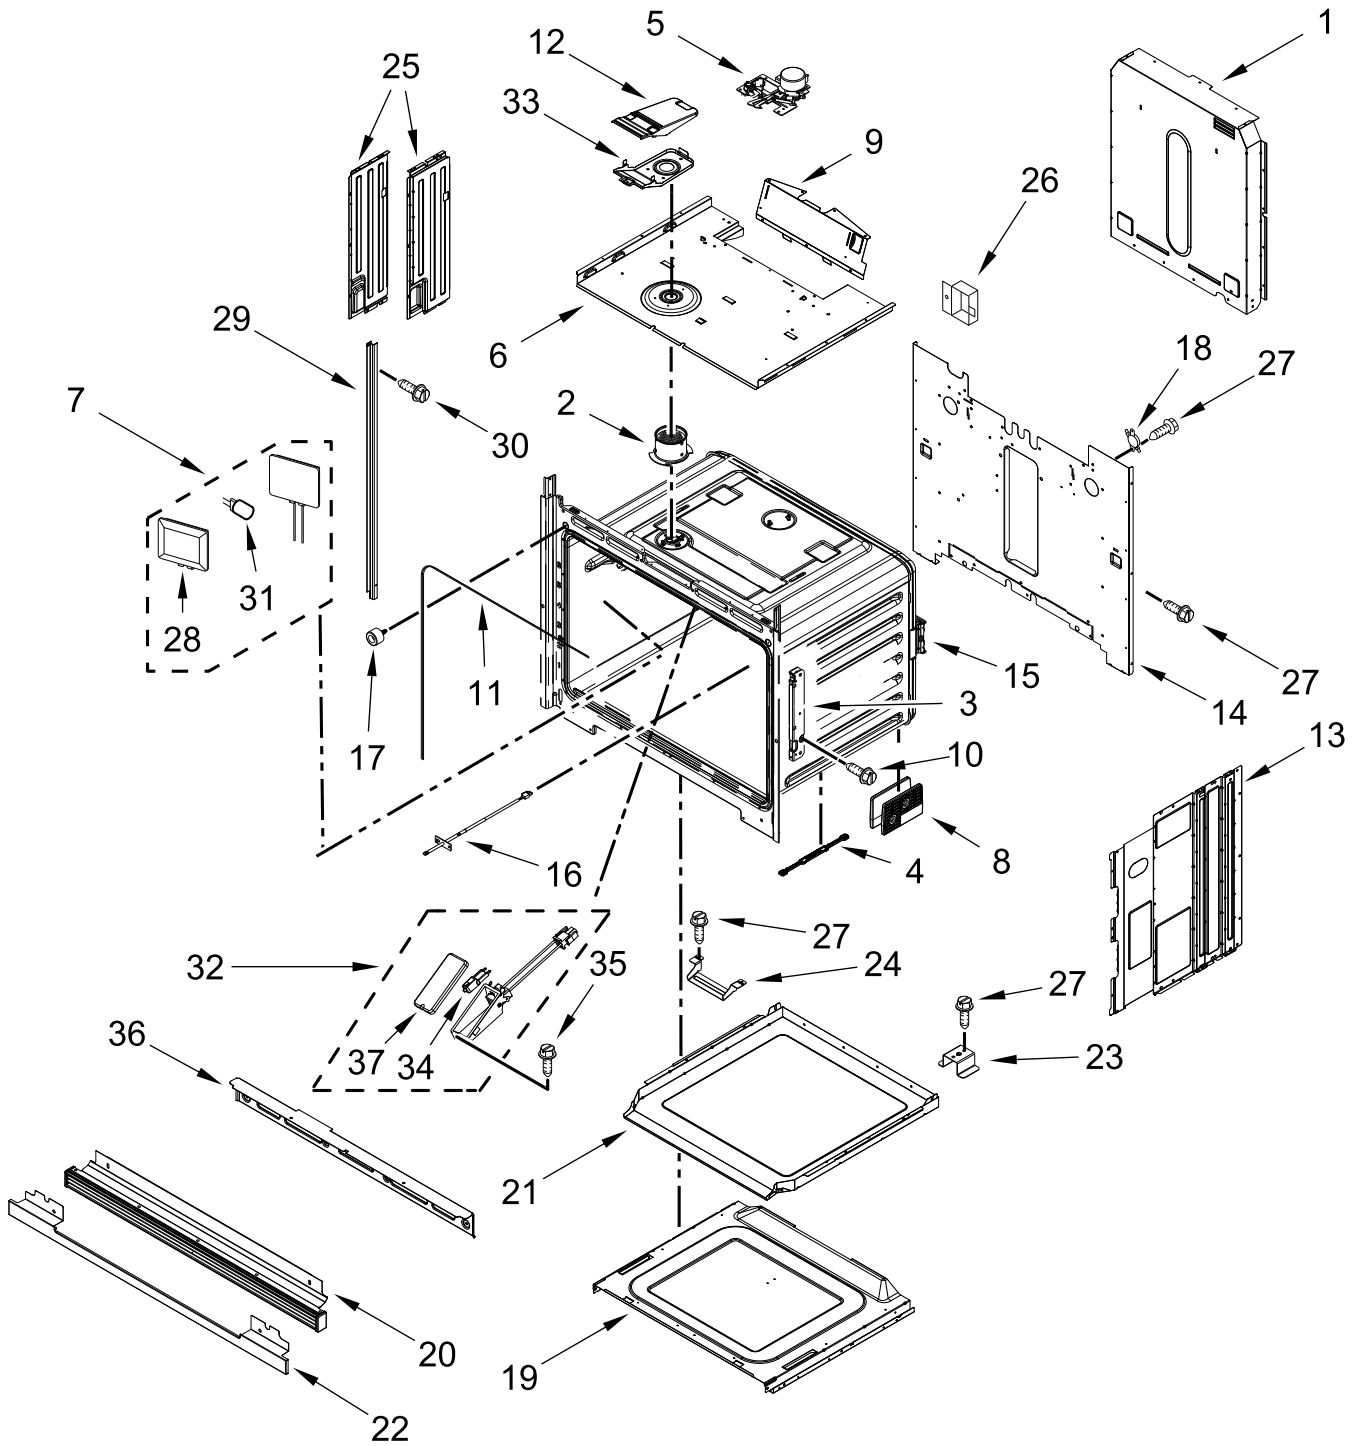

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11165250	Duct, Chassis Back	16	W11346074	Probe, Sensor	29		Cover, Side Trim
2	W11085298	Tube, Vent	17	W11166315	Bumper and Screw		W11235463	Black (Left)
3	W11239070	Receiver, Hinge (Left)	18	4449751	Thermostat (TOD)		W11235462	Black (Right)
	W11239072	Receiver, Hinge (Right)	19	W11135103	Base, Chassis	30	W11404000	Screw
4	W11558603	Spacer, Base	20		Assembly, Bottom Vent	31	W10472384	Bulb, Light
5	W11132456	Latch, Motorized		W11369884	Black	32	W11284709	Assembly, Light (Top)
6	W11168071	Top, Chassis	21	W11244446	Duct, Bottom Chassis	33	W11256423	Base, Vent Exhaust
7	W11205574	Assembly, Oven Light	22		Trim, Bottom Vent	34	W10169757	Bulb, Light
8	W11245118	Foot, Base		W11356753	Black	35	W11249635	Screw
9	W10904163	Deflector, Blower	23	W11135135	Support, Air Channel	36	W11334857	Vent, Top 30 IN
10	W10254050	Screw	24	W11390667	Spacer, Chassis Bottom Duct	37	W10169756	Lens, Light
11	W11262567	Gasket						FOLLOWING PARTS NOT ILLUSTRATED
12	W11256424	Cover, Vent Exhaust	25	W11167419	Cover, Suction (Left)		W11188284	Insulation, Wrap
13	W11165274	Side, Chassis		W11186675	Cover, Suction (Right)		W11244449	Insulation, Top Back
14		Back, Chassis (Not Serviced)	26	8285593	Cover, Connector			
			27	7101P426-60	Screw			
15		Liner, Oven (Not Serviceable)	28	W10472386	Lens, Light			


OVEN DOOR PARTS

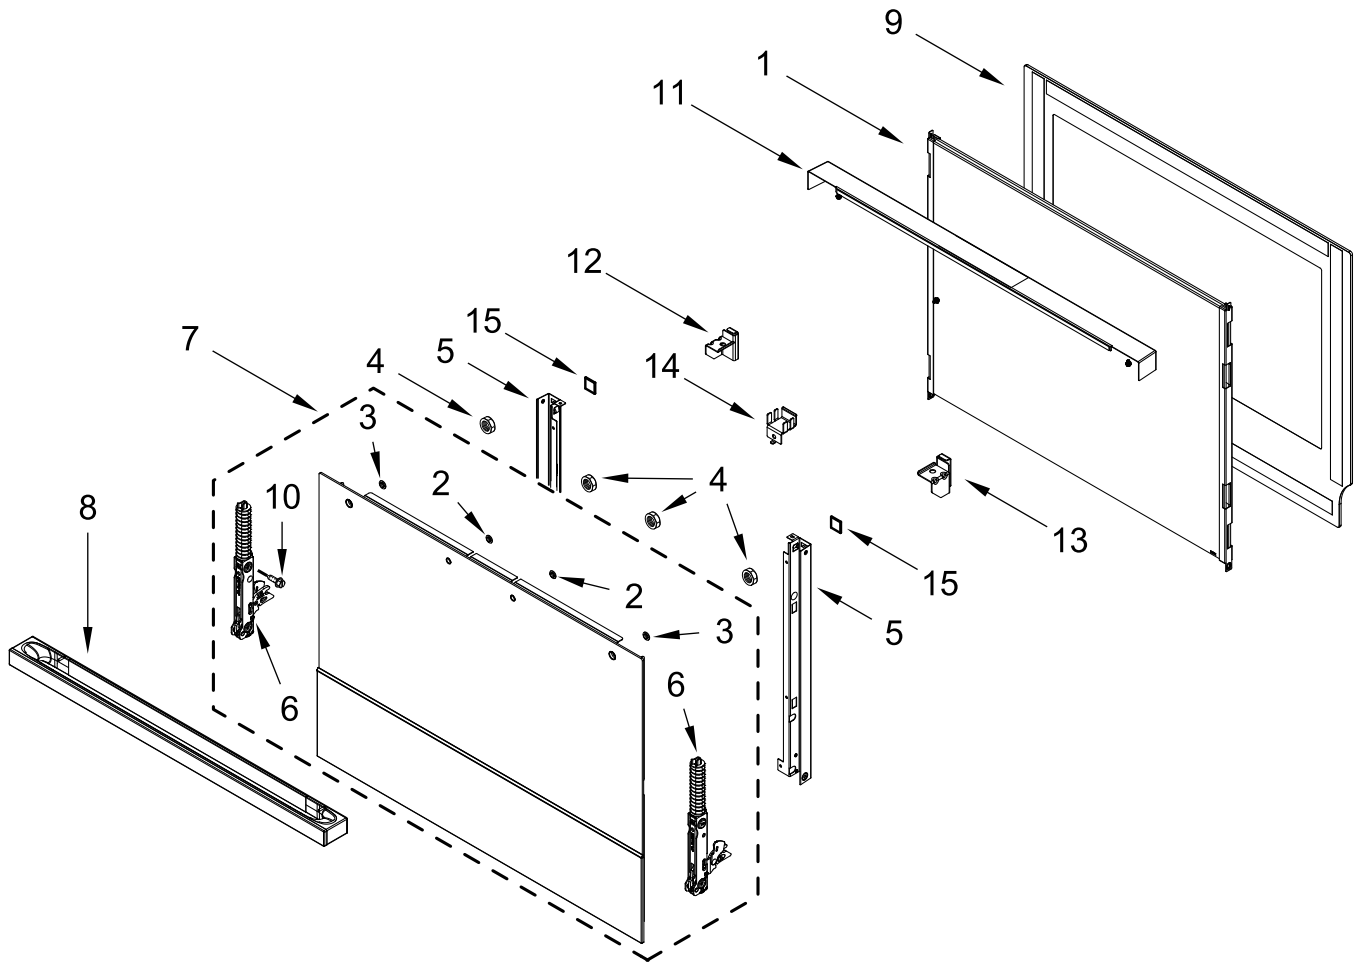

OVEN DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11304273	Air Divider Assembly	7		Door Assembly (Includes Hinges)	11	W11428090	Top Vent Trim Assembly
2	W11132942	Spacer, Handle		W11303867	Stainless	12	W11302803	Bracket, Glass (Left)
3	W10319024	Washer, Door			Assembly, Handle	13	W11302802	Bracket, Glass (Right)
4	W11317741	Nut	8			14	W11302954	Bracket, Glass reinforcement
5	W11302773	Rail, Door (Left)		W11411894	Stainless			
	W11302780	Rail, Door (Right)	9	W11260091	Glass Cavity Assembly	15	W10517428	Spacer, Vent
6	W11111221	Hinge, Door (Left)	10	3196183	Screw			
	W11111222	Hinge, Door (Right)						

INTERNAL OVEN PARTS

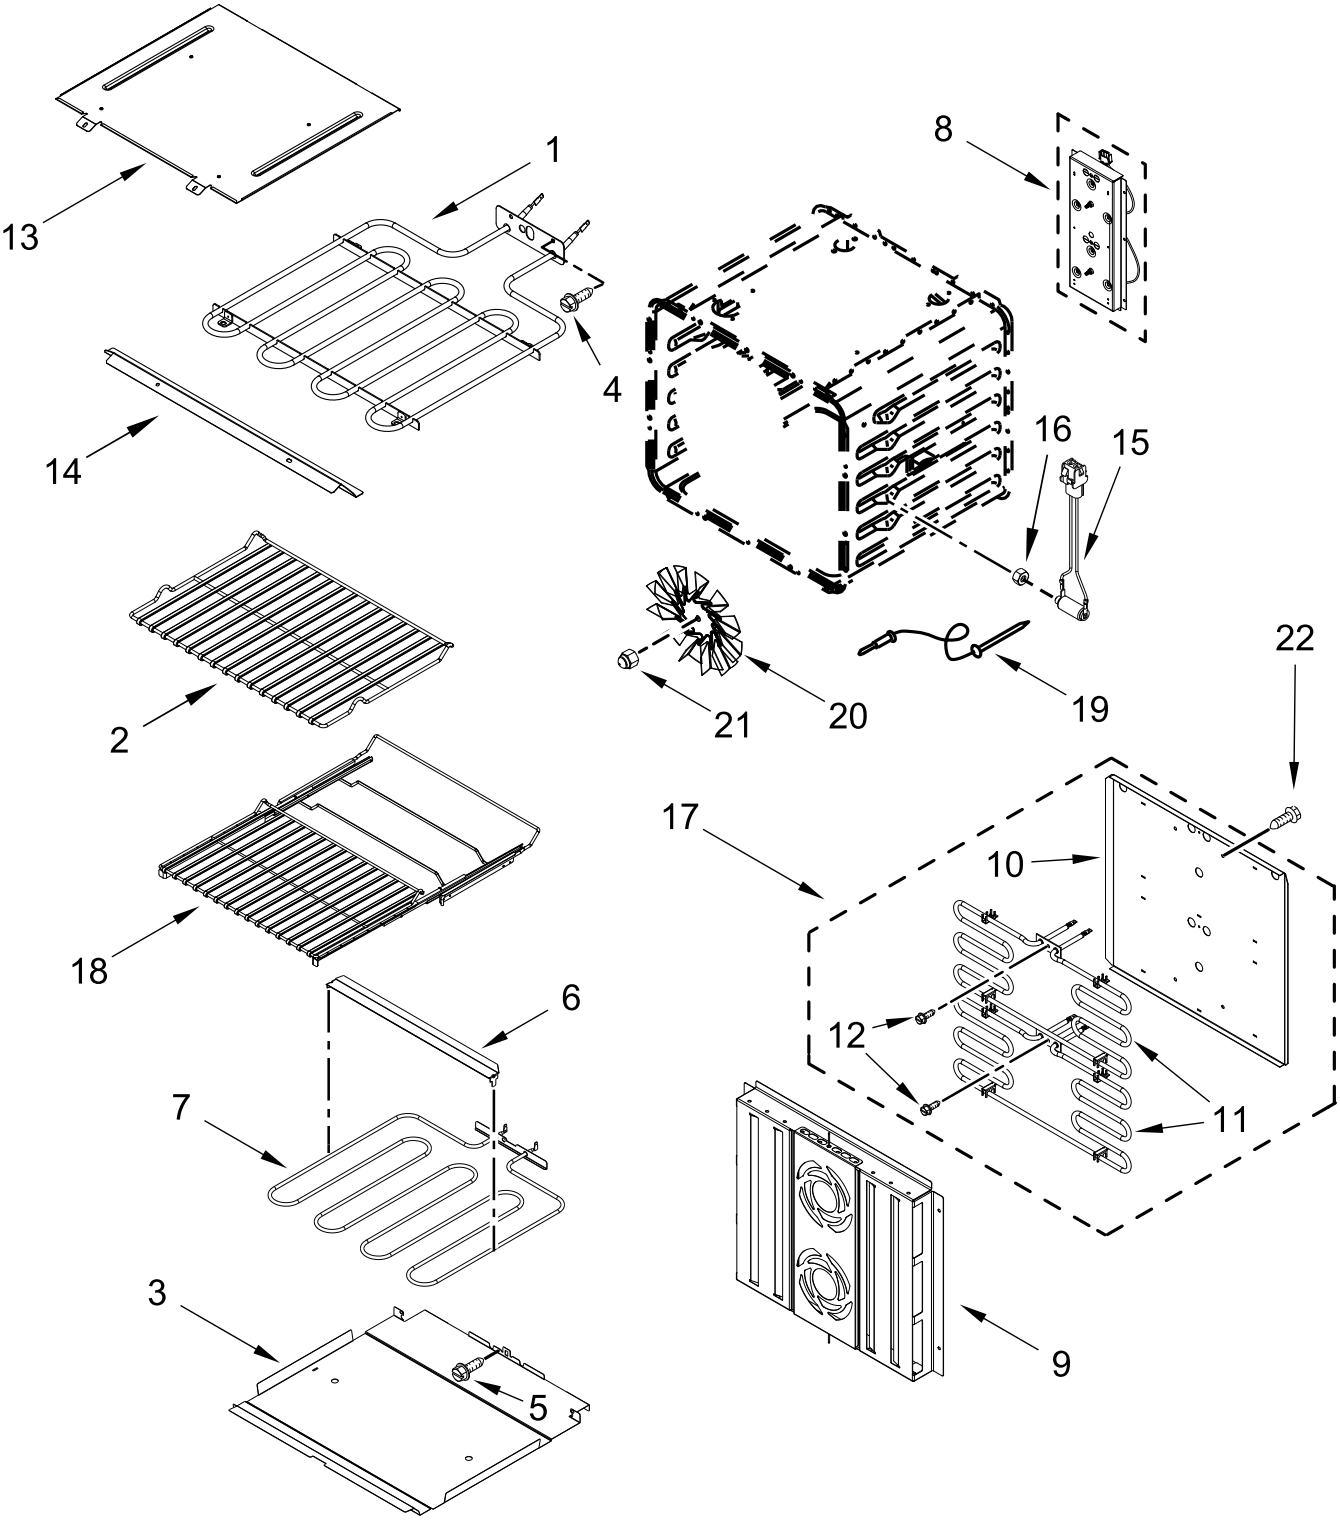

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238159	Element, Broil	9	W11313747	Assembly, Baffle	17	W10854021	Assembly, Convection Element
2	W11242906	Rack, Oven	10	W10853277	Shield, Convection	18	W11256305	Rack, Sliding
3	W10318198	Tray, Hidden Bake	11	W10663735	Element, Convection	19	9755542	Probe, Temperature
4	7101P434-60	Screw	12	W10236129	Screw	20	W10803141	Blade, Convection Fan
5	7101P426-60	Screw	13	W11235537	Reflector, Broil	21	W11433702	Nut, Acorn (LH)
6	W10282957	Crossbar, Hidden Bake Tray	14	W10588737	Shield, Broil Front		W10803140	Nut, Acorn (RH)
7	W11292248	Element, Bake	15	W11252826	Jack, Meat Probe	22	W10739592	Screw
8	W11200176	Assembly, Convection Motor	16	W11033111	Nut, Locking			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	285006	Black
	350938	Gray Primer
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
	W10123240	Rack, Broiler Pan and Roasting
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning