HOCKER[®] ASSEMBLY INSTRUCTION

ITEM: SS645-PHZL1-070 Twain Zero Gravity PWR Recliner w/PWR Headrest and Lumbar SS645-PHZL1-080 Twain Zero Gravity PWR Recliner w/PWR Headrest and Lumbar

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment. Read all instruction and study the drawing carefully before starting the assembly process.

CAUTION: Make sure to read the instructions below before assembling your triple power recliner. We suggest two people be used in the assembly of your triple power recliner.



Do Not plug the power cord into a power outlet until your furniture is fully assembled and in placed. Notes:

1) To help prevent shock and or damage to your product only plug the power cord into a grounded outlet.

2) Read the operating instructions carefully before operating your furniture.

F HOOKER OPERATING INSTRUCTION

ITEM: SS645-PHZL1-070 Twain Zero Gravity PWR Recliner w/PWR Headrest and Lumbar SS645-PHZL1-080 Twain Zero Gravity PWR Recliner w/PWR Headrest and Lumbar

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment. Read all instruction and study the drawing carefully before starting the assembly process.

CAUTION:Read the important instructions below before operating your power mechanized equipment Do not allow children to play on or operate this power mechanized equipment



Care should always be taken to assure there is nothing in the path of the mechanism before and during operation.

To recline: Sit on the furniture, and press the front of the button closest to the footrest to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the back side of the button closest to the footrest.

To adjust headrest: Press the front of the button closest to the backrest to smoothly raise and adjust the headrest to any position. To lower the headrest and return it to its original position, press the back side of the button closest to the backrest.

To adjust lumbar support: Press the front of the center button to smoothly raise and adjust the lumbar support to any position. To lower the lumbar support and return it to its original position, press the back side of the center button.

To close all: To simultaneously return the headrest, footrest, and lumbar support to their original positions, press and hold the back side of the button closest to the footrest.

IMPORTANT NOTE

H

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.

Customer Service

If you have any questions regarding the use of this unit or find that your unit needs service, please contact your retailer.