

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

215653
Dresser

ITEM: **215653**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A


NIGHTSTAND

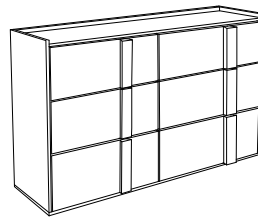

1PC

B

 
LEG WITH LABEL B



2PCS

C

 
LEG WITH LABEL C



2PCS

D

 CENTER SUPPORT LEG WITH
LAVELLER



1PC

HARDWARE IDENTIFICATION

1

FLAT HEAD SCREW
(M4 x 28mm - RBW)



16PCS

2

WOOD DOWEL
(M6 x 30mm)



2PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **215653**

ASSEMBLY INSTRUCTIONS




STEP 1

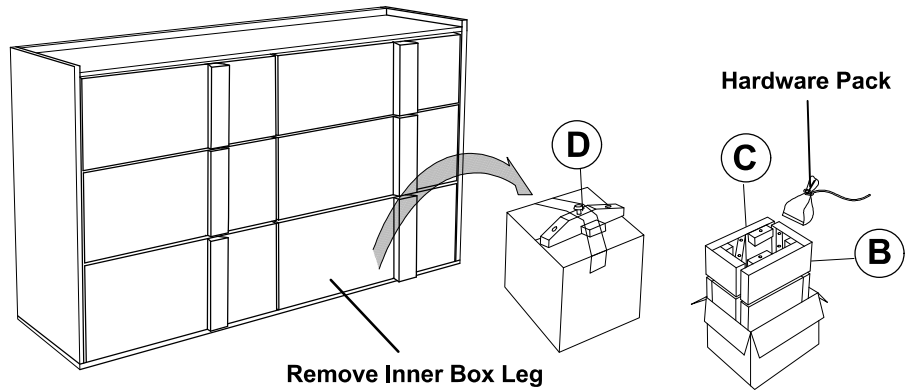

Remove Inner Box Leg

STEP 2

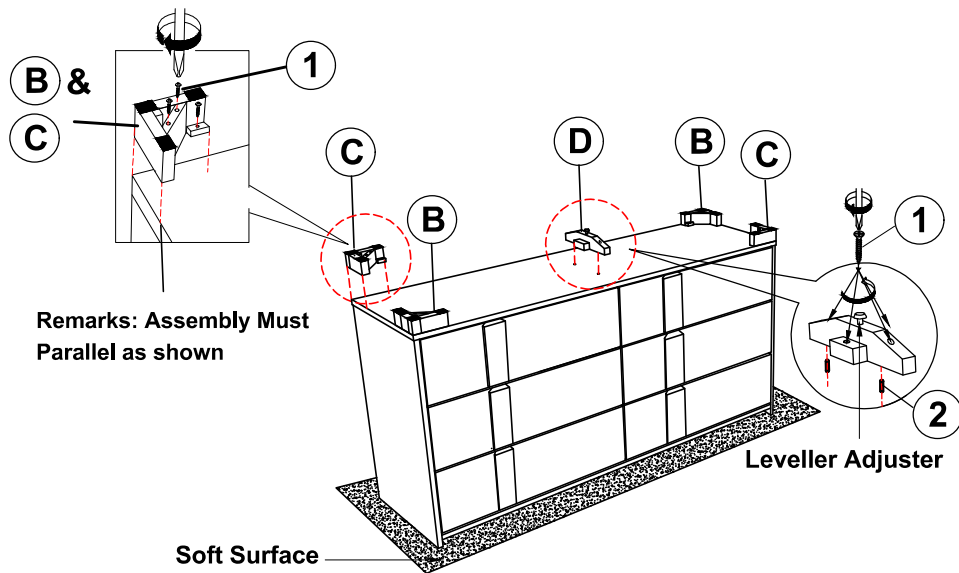


Remarks: Assembly Must Parallel as shown

Leveller Adjuster

Soft Surface


STEP 3 COMPLETE

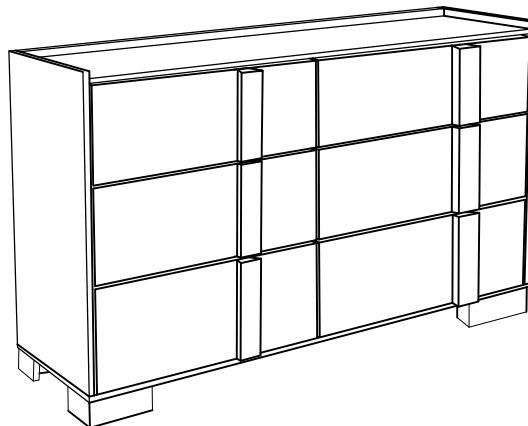

ITEM: **215653**



Inner Size of Drawer : 28.50"W x 11.00"D x 10.50"H x 0.25"T

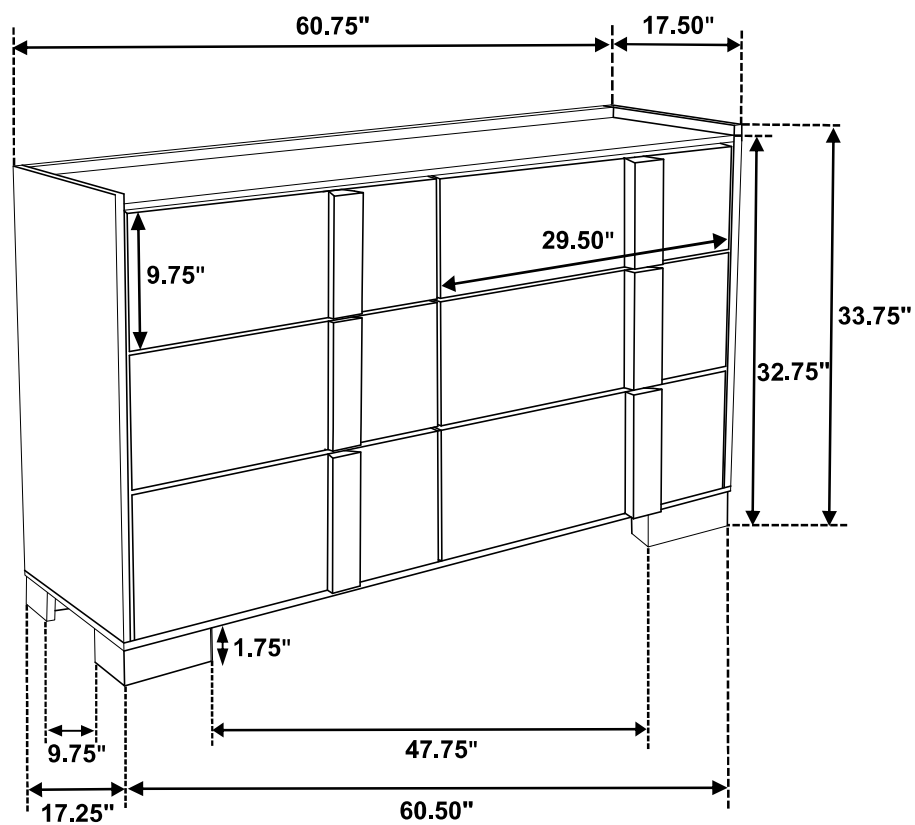

Note : Dimension tolerance $\pm 5\%$