


Quick Guide

Location of the surface elements and controls

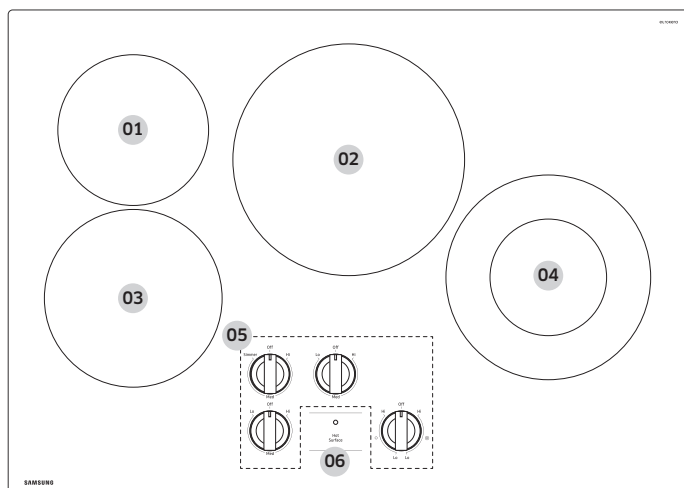

01 Left Rear (6", 1200 W)

02 Center (9", 2500 W)


03 Left Front (7", 1500 W)

04 Right (5"/8", 2000 W)

05 Control Knob

06 Hot Surface indicator


Knob operation

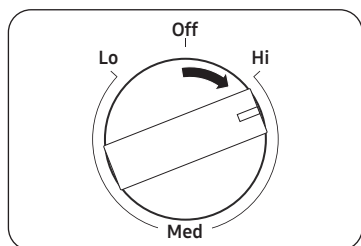

Press and turn the knob to a desired setting.

Guía rápida

Ubicación de los controles y elementos de la superficie

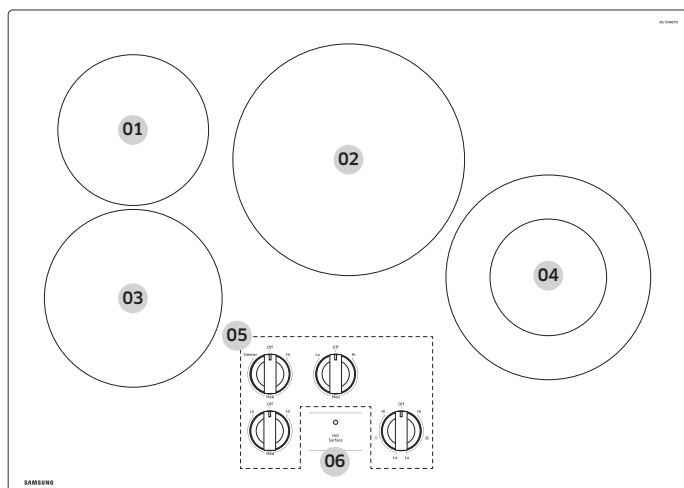

01 Trasero izquierdo (6", 1200 W)

02 Central (9", 2500 W)


03 Delantero izquierdo (7", 1500 W)

04 Derecho (5"/8", 2000 W)

05 Perilla de control

06 Indicador de superficie caliente


Funcionamiento de la perilla

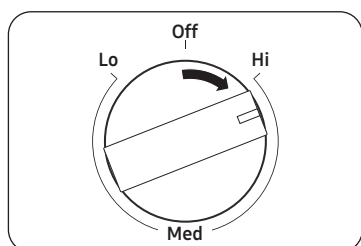

Presione y gire la perilla hasta el ajuste deseado.

Guide sommaire

Emplacement des foyers et des commandes

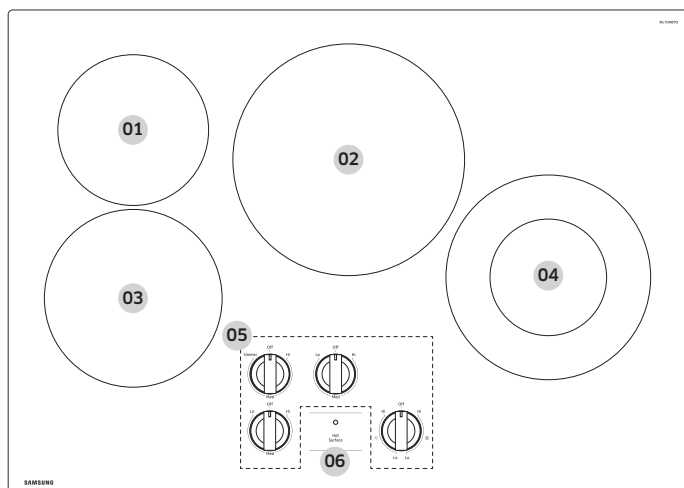

01 Arrière gauche (6", 1200 W)

02 Central (9", 2500 W)


03 Avant gauche (7", 1500 W)

04 Droit (5"/8", 2000 W)

05 Bouton de commande

06 Témoin de surface chaude

Fonctionnement du bouton

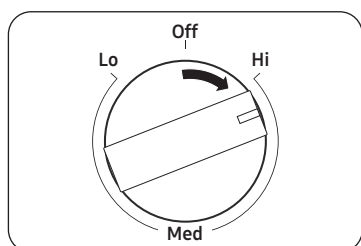

Appuyez sur le bouton et tournez-le sur le réglage souhaité.

SAMSUNG



NZ30FG5332RKAA-00