


ASSEMBLY INSTRUCTIONS

 
MODEL : L2640-10 SAYER CHAIR

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.

CAUTIONS :


1. Check contents against hardware list.
2. Familiarize yourself with the components and hardware by reviewing the Assembly Instructions.
3. Do not over tighten the screws and bolts as it may damage the threads.
4. Keep all hardware parts out of reach of children.
5. Please always "LIFT UP & MOVE" the upholstery whenever you want to reposition it. We recommend that you assemble this product with the assistance of another person to eliminate damage to the product during assembly.

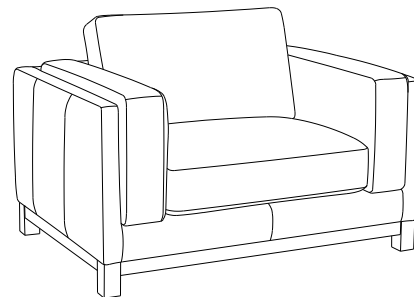


PARTS LIST			
NO	DESCRIPTION	SKETCH	QTY
A	CHAIR		1 PC
B	LEG		4 PCS

HARDWARE LIST		
NO	DESCRIPTION	QTY
1	M8 x 2" JCBB SCREW 	8 PCS
2	SPRING WASHER 	8 PCS
3	FLAT WASHER 	8 PCS
4	ALLEN KEY M5 	1 PC

STEP 1

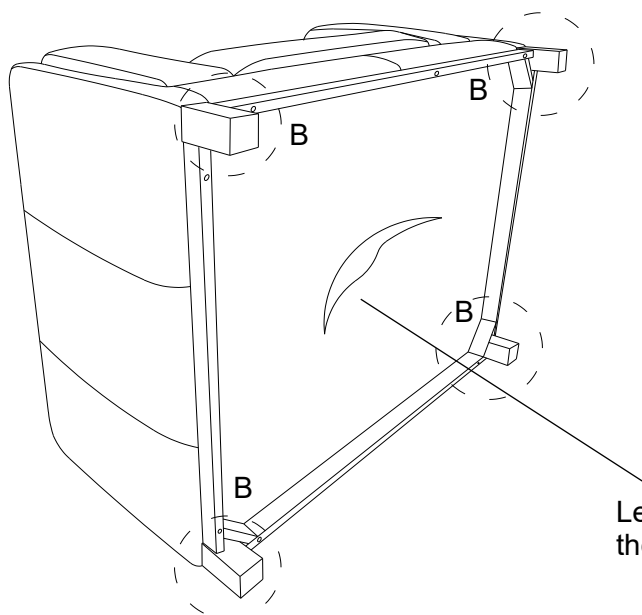

DETAIL B

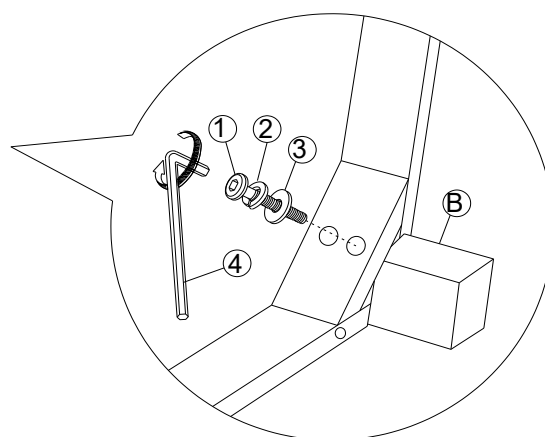

Legs are packed at the bottom of the seat inside the zipper

