

# ASSEMBLY INSTRUCTIONS

FOR #CVAER2037B

**Note:** Please read carefully and save these instructions, as you may need them at a later date.

**IMPORTANT SAFETY INSTRUCTIONS:** This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

**GENERAL:** All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the lamp from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

**1. Gently pull on the lamp cord from the bottom of the Feet to remove excess slack.**

**2. Place Triangle Metal Sheet onto the 3PCS Feet. gently screw the three Metal Caps on.**

**3. Insert the triangular tube into the hole in the middle of the three Feet. The Angle can be adjusted as required. Tighten the Washer and Feet with Nut. Three Feet have same assembly operation.**

**4. Tighten all Metal Caps and Nuts to secure the Lamp body.**

**5. Insert the Harp into the Saddle.**

**6. Place the Shade onto the Harp and tighten with the Finial.**

