


ASSEMBLY INSTRUCTIONS

FES-001 / FES-002 / FES-003 /FES-004

Fes-005 / FES-006 / FES-007 /FES-008

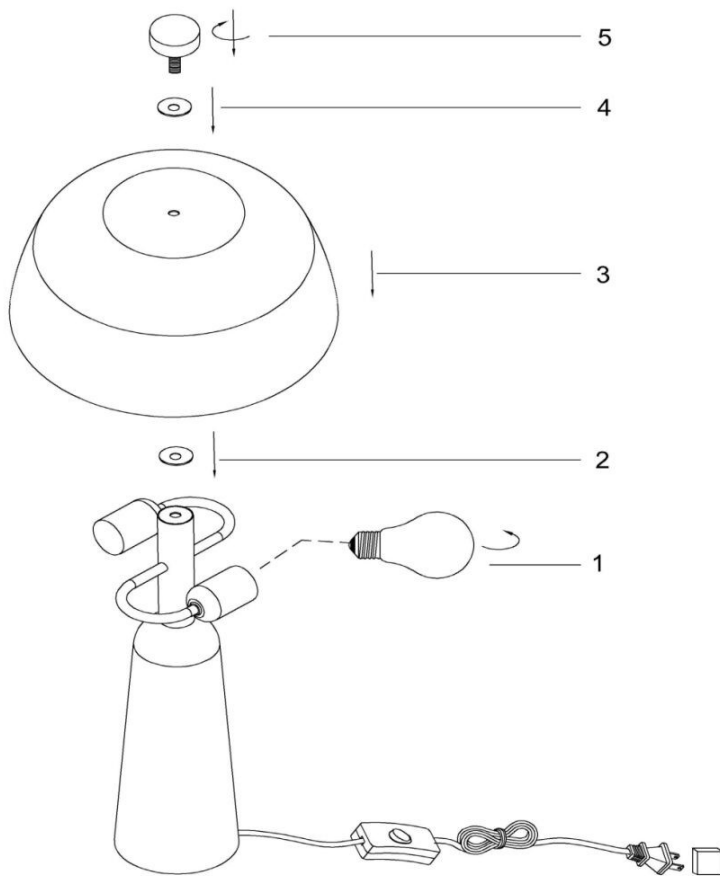

(1) Carefully move out all parts from box and remove all plastic covering from lamp parts.

(2) Put the Washer② onto the top of the tube of Joint box.

(3) Attached the Shade③ to the tupe of lamp bod screw it together with Washer④ and Finial⑤.

(4) Screw the Bulbs① into the Socket.

(Bulb not included. Surya recommends two LED bulb

CAUTION: TO REDUCE RISK OF FIRE,
USE **MAX** 40-WATT TYPE G
LAMP OR USE MAXIMUM 7-WATT
SELF-BALLASTED LAMP OR LAMP ADAPTER,
120V 60Hz AC ONLY MADE IN CHINA E533168

ATTENTION: AFIN DE RÉDUIRE LE RISQUE D'INCENDIE,
UTILISER UNE **MAX** AMPOULE TYPE G DE 40
WATTS OU UTILISER UNE **MAXIMUM** 7 WATTS
AUTOBALLASTÉE LAMPE OU LAMPE ADAPTATEUR
120V 60Hz C.A. SEULEMENT FABRIQUÉ EN CHINE E533168

CAUTION: IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

NOTE : The drawing of the lamp

is for reference only.

Made in China

Dear Customer,

Congratulations on your purchase of this quality lamp. It has been produced under the highest quality standards. Please read carefully the following precautions before using this lamp:

- When unpacking and assembling, be careful not to pull wire with full strength, as an incorrect connection could result.
- Only use the bulb and wattage specified in this instructions or on the label located on the socket.
- Do not attempt to replace bulb while the lamp is plugged into an electrical outlet.
- Do not use outdoors, or near water or other liquids.
- Unplug from outlet before removal of any parts and cleaning.
- Only use soft cloth for cleaning. Do not use any chemical or abrasive cleaners.
- Remove the cellophane cover from shade before use.
- During shipment, the socket cover may have become loose. Before inserting bulb, check to see that the socket cover is in place.