


# Assembly Instructions For more information contact our team: service.ec@foagroup.com

## CM7386Q/F

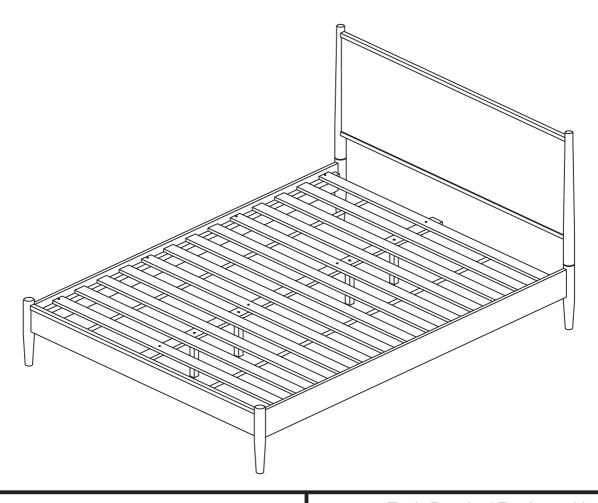

#### ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.


EASY O O O DIFFICULT

# Tools Required For Assembly: Allen Wrench Phillips Screwdriver (Not Included) 2 PERSONS RECOMMENDED



FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY.
PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


#### BASIC ASSEMBLY TECHNIQUES

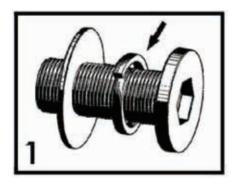


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

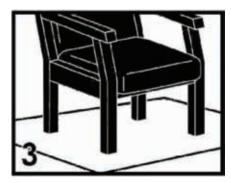


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

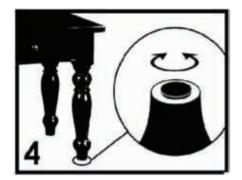

Some furniture comes with height adjusetment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

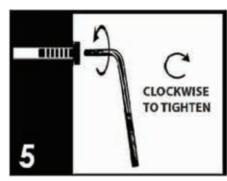

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

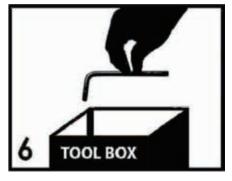


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

FURNITURE OF AMERICA.ALL RIGHTS RESERVED

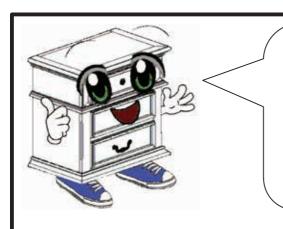


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

#### Parts List



 

#1 x 1pc Headboard



 
#A x 6pcs Bolt Ø1/4" x 1-3/8"



#2 x 2pcs
Headboard Leg (L&R)



#B x 6pcs Lock washer Ø1/4"



#3 x 1pc Footboard



#C x 6pcs
Flat washer Ø1/4"-3/4"



#4 x 2pcs Rail



#D x 1pc Allen wrench M4



#5 x 1Set (13pcs) Bed Slat




#E x 12pcs Screw #5/32"x1-3/16"




#6 x 1pc Center Rail



**#7 x 4pcs** Ø5/16 Support Leg (310x30x30mm)

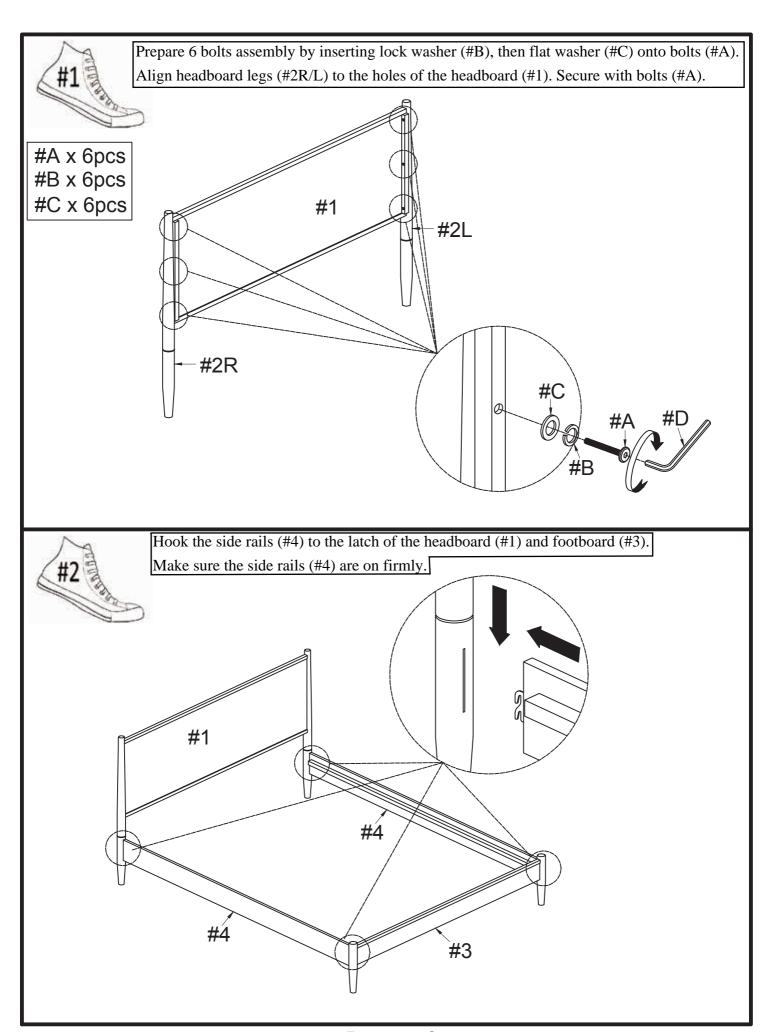

Page 4 of 5

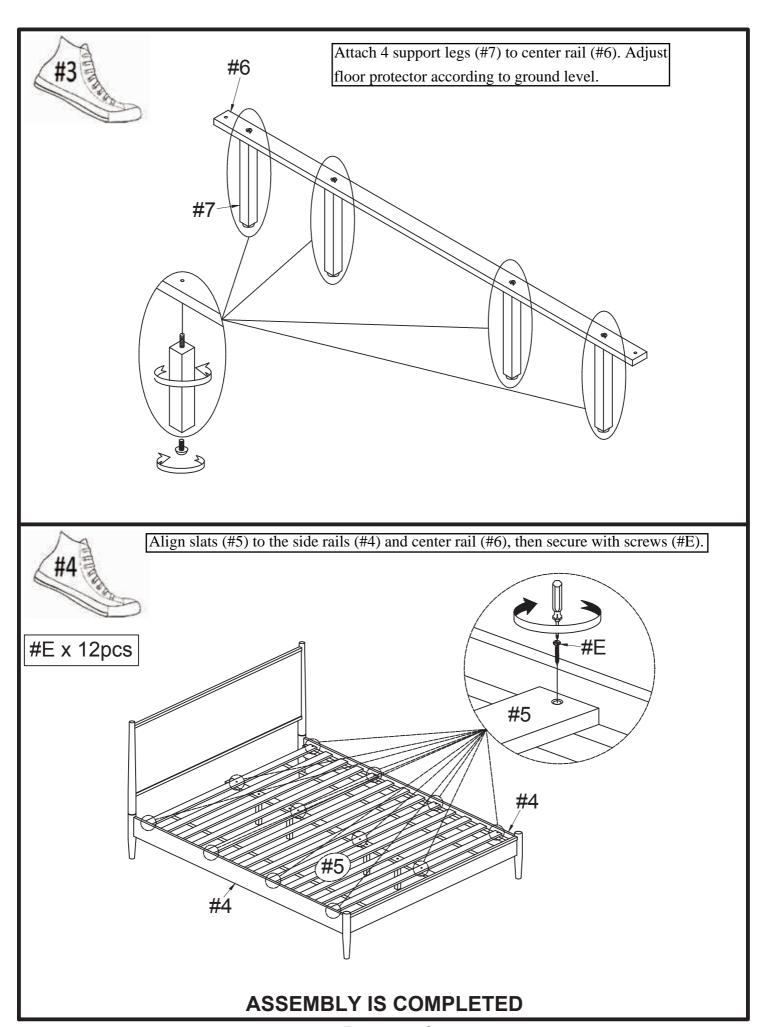


Page 5 of 5



## **Assembly Instructions**

## **CM7386CK**

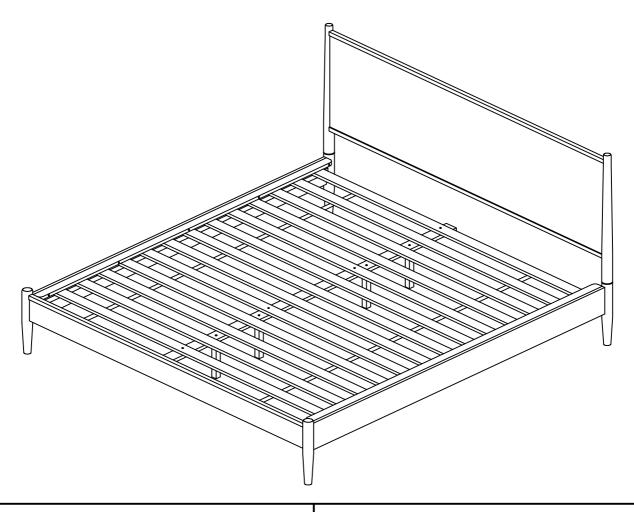

### **ASSEMBLY RATING**

 
The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY OOO O DIFFICULT

Tools Required For Assembly:

Allen Wrench

Phillips Screwdriver






2 PERSONS RECOMMENDED




FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY.
PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


#### BASIC ASSEMBLY TECHNIQUES

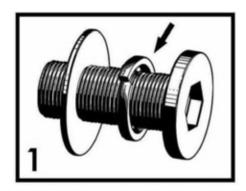


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

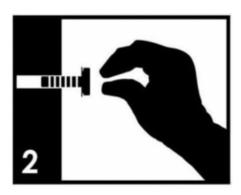


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

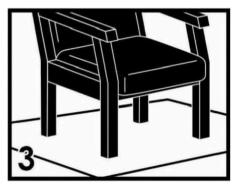


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

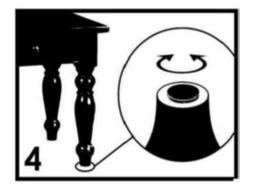

Some furniture comes with height adjusetment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

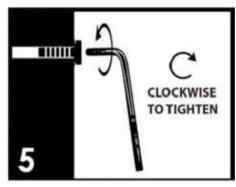

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

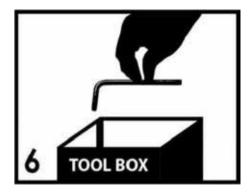


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

FURNITURE OF AMERICA.ALL RIGHTS RESERVED.

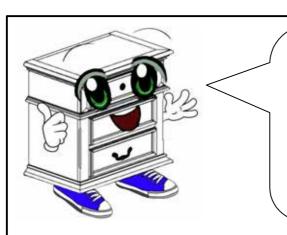


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

#### **Parts List**



 

#1 x 1pc Headboard



 
#A x 16pcs Bolt Ø1/4" x 1-3/8"



#2 x 2pcs
Headboard Leg (L&R)



#B x 16pcs Look washer Ø1/4"



#3 x 1pc Footboard



#C x 6pcs Flat washer Ø1/4"-3/4"



#4 x 2pcs Side Rail



#D x 1pc Allen wrench M4



#5 x 1Set (13pcs) Bed Slat



 
#E x 12pcs Screw 5/32"x1-3/16"




#6 x 1pc Center Rail




#F x 10pcs
Flat washer Ø1/4"-1/2"




#7 x 4pcs  $\emptyset_{\overline{16}}^{5}$ " Support Leg (310x30x30mm)

 


#8 x 2pcs Side Rail Top Panel

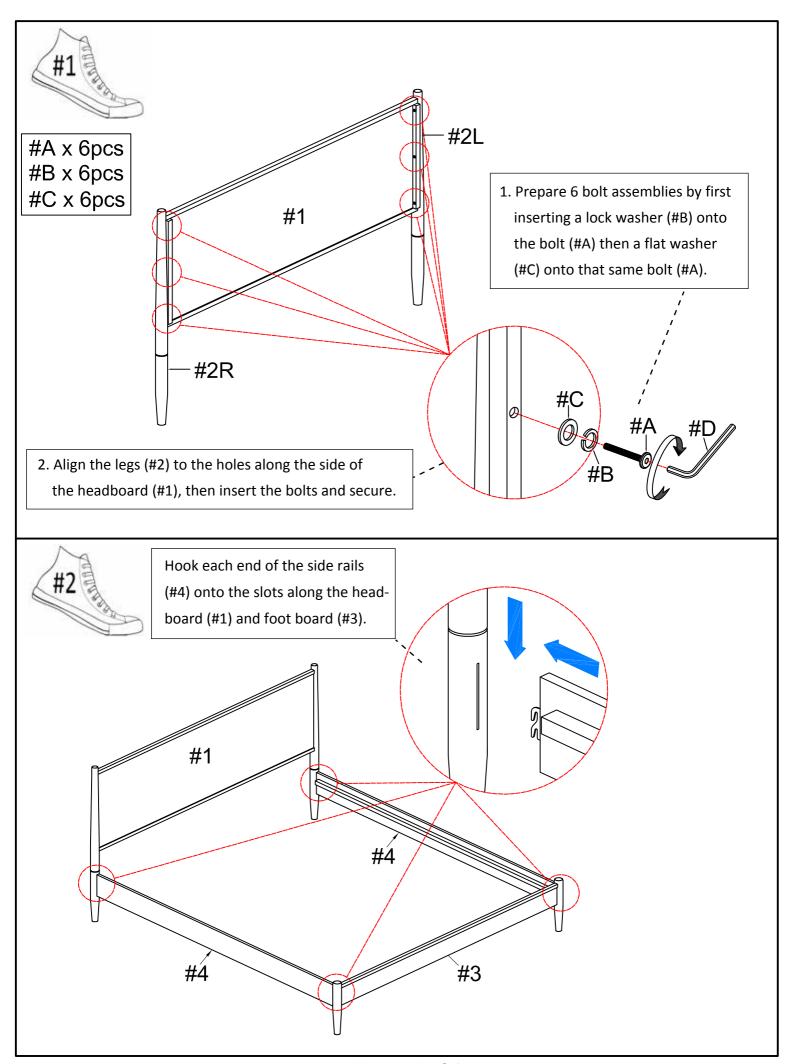

Page 4 of 6

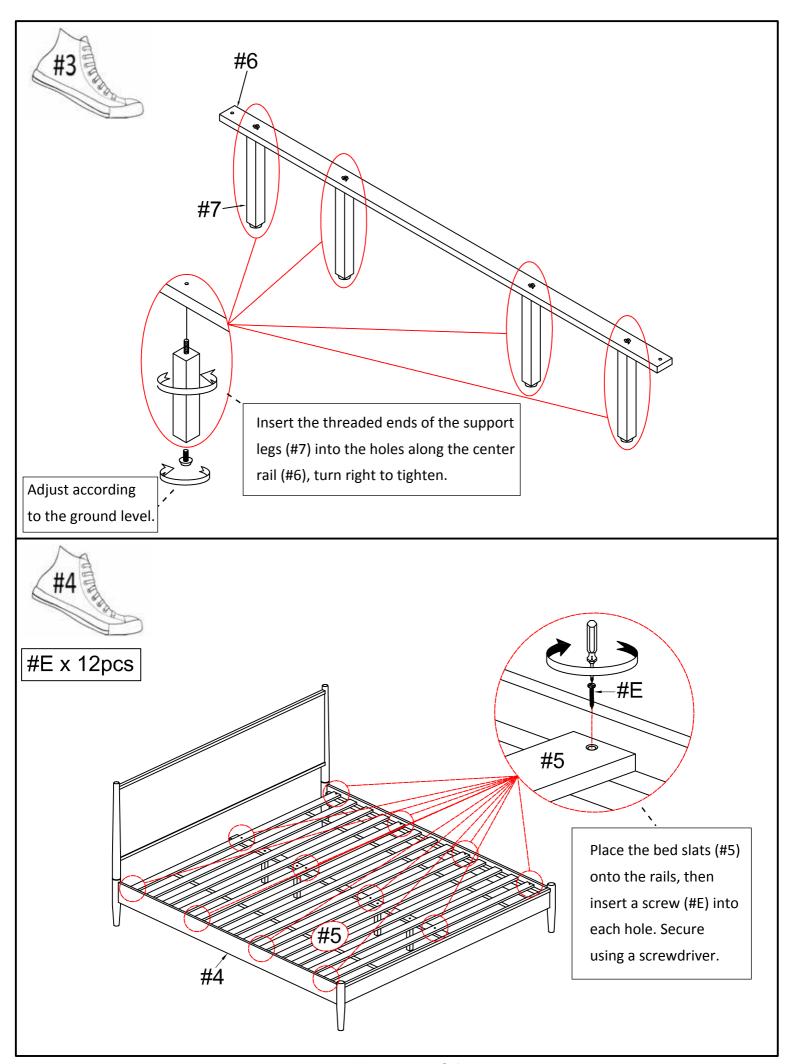

Page 5 of 6

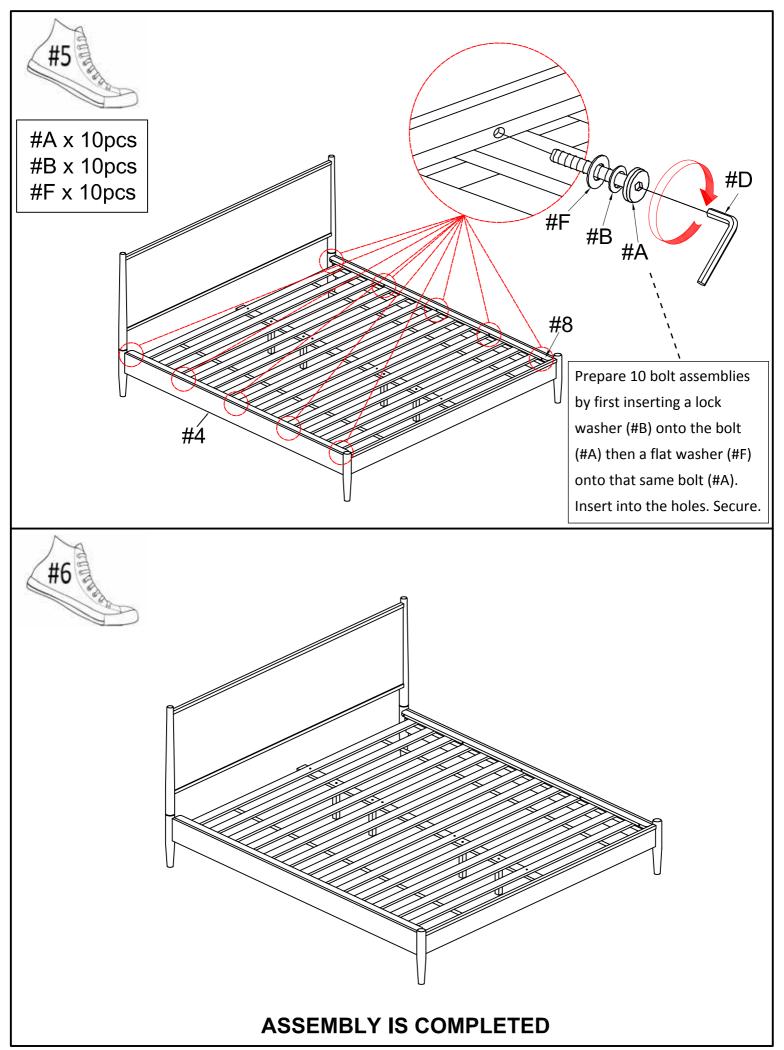


Page 6 of 6



## **Assembly Instructions**

## **CM7386EK**

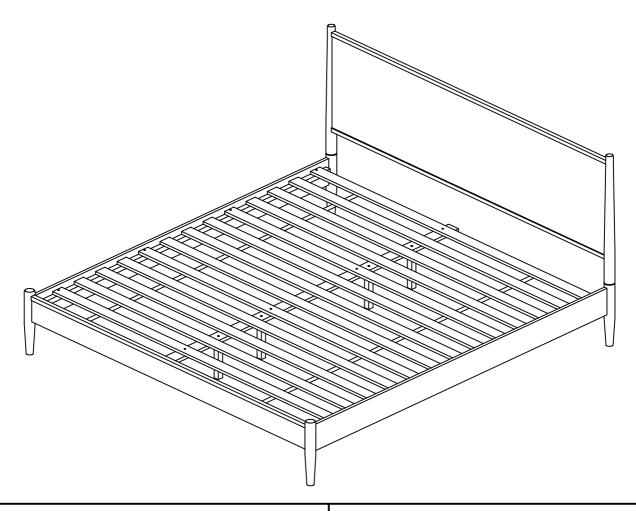

## **ASSEMBLY RATING**

 
The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY O O O DIFFICULT

Tools Required For Assembly:

Allen Wrench

Phillips Screwdriver






2 PERSONS RECOMMENDED




FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY.
PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


#### BASIC ASSEMBLY TECHNIQUES

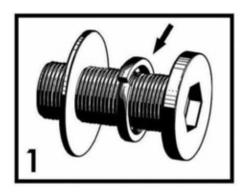


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

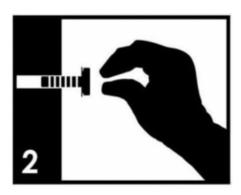


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

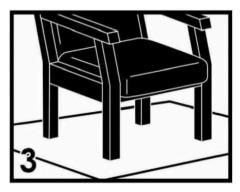


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

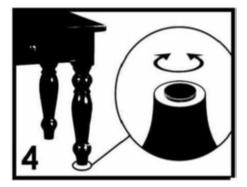

Some furniture comes with height adjusetment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

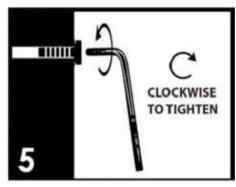

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

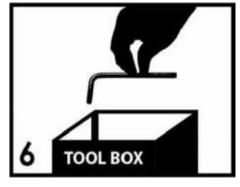


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

FURNITURE OF AMERICA.ALL RIGHTS RESERVED.

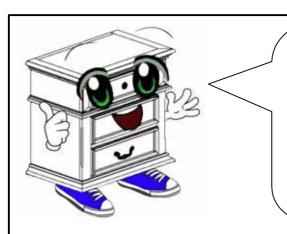


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

#### **Parts List**
 
#### Hardware List



#1 x 1pc Headboard



#A x 6pcs Bolt Ø1/4" x 1-3/8"



#2 x 2pcs Headboard Leg (L&R)



#B x 6pcs Look washer Ø1/4"



#3 x 1pc **Footboard** 



#C x 6pcs Flat washer Ø1/4"-3/4"



#4 x 2pcs Side Rail



#D x 1pc Allen wrench M4



#5 x 1Set (13pcs) **Bed Slat** 




#E x 12pcs Screw 5/32"x1-3/16"




#6 x 1pc Center Rail



#7 x 4pcs  $\emptyset_{16}^{5}$ " Support Leg (310x30x30mm)

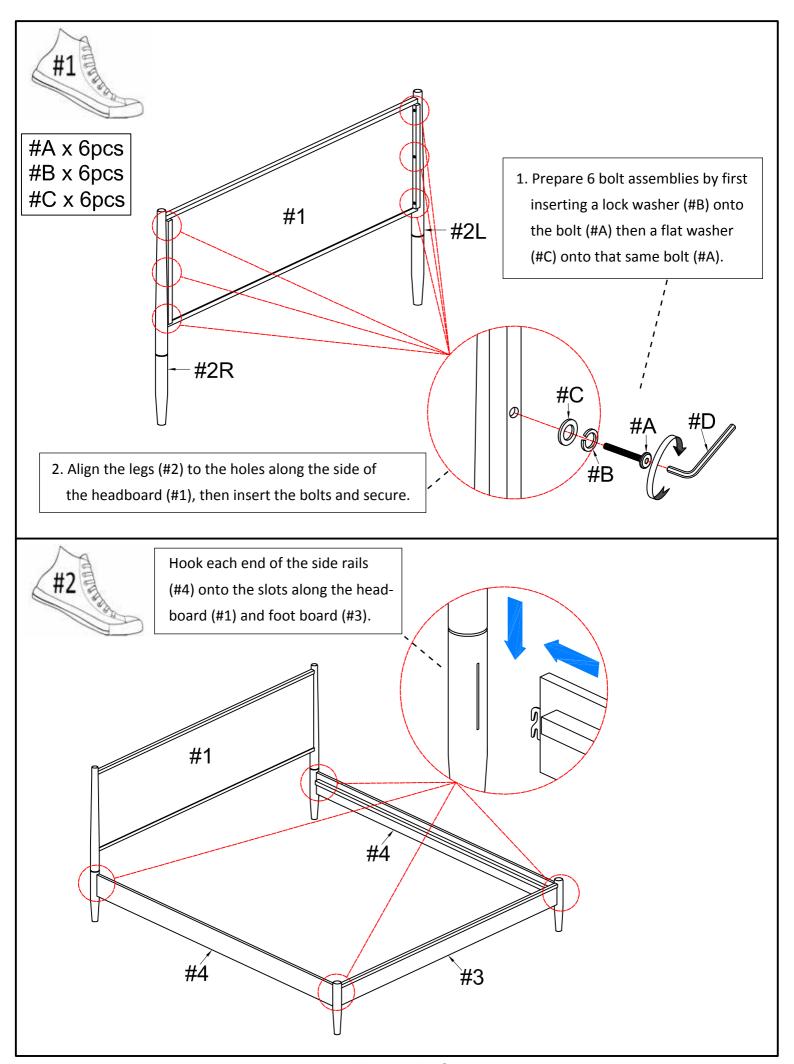

Page 4 of 5

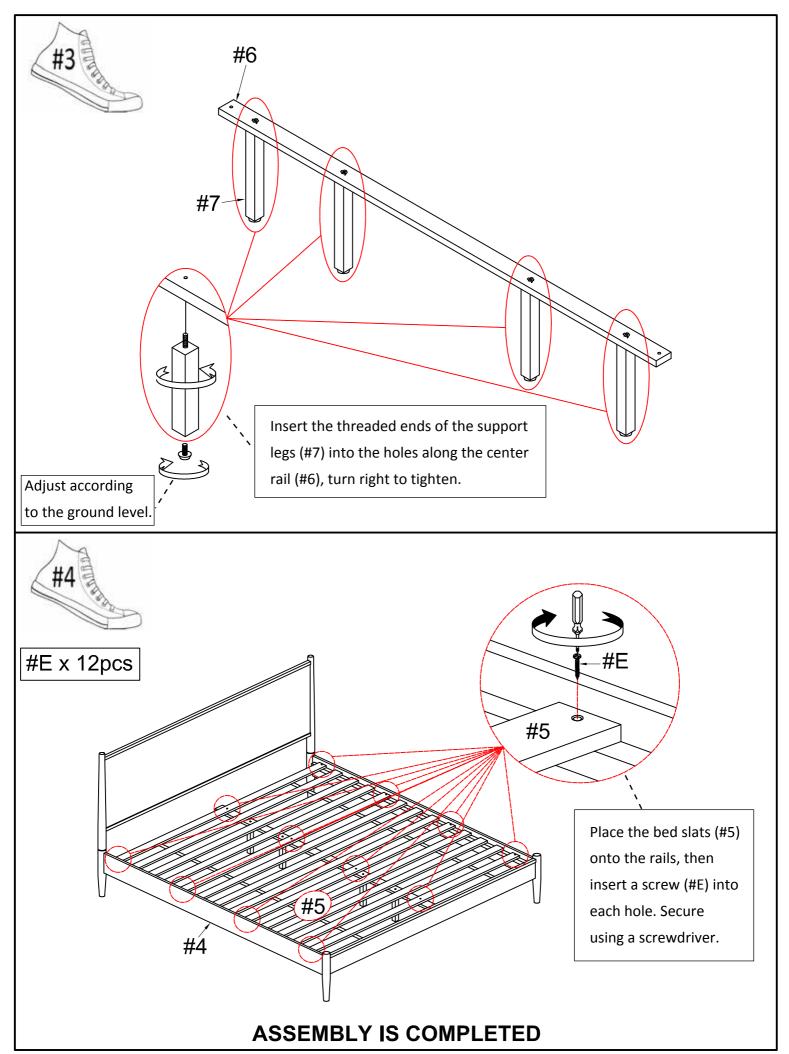


Page 5 of 5



# Assembly Instructions For more information contact our team: service.ec@foagroup.com

## **CM7386T**

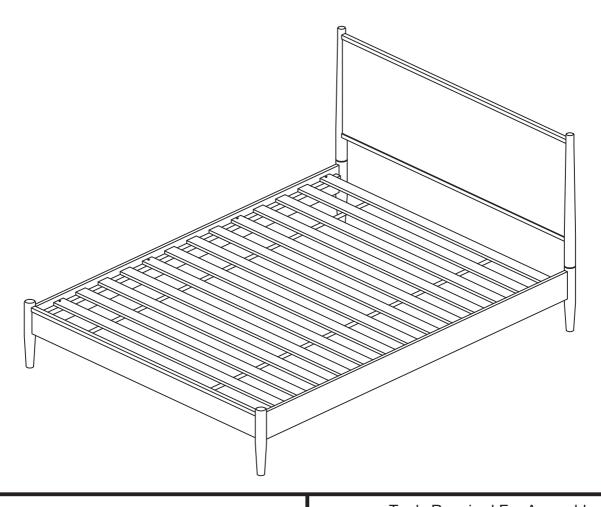

#### ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY O O O DIFFICULT


# Tools Required For Assembly: Allen Wrench Phillips Screwdriver (Not Included) 2 PERSONS RECOMMENDED

Page 1 of 5 Rev: 16-11-23



FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY.
PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


#### BASIC ASSEMBLY TECHNIQUES

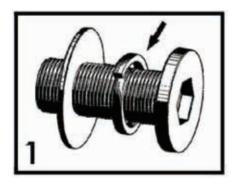


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

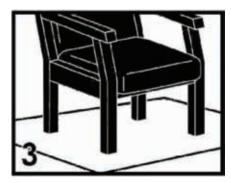


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

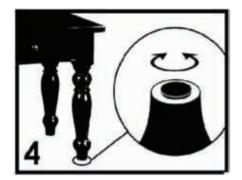

Some furniture comes with height adjusetment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

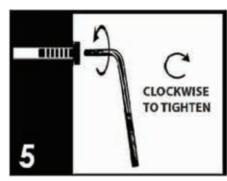

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

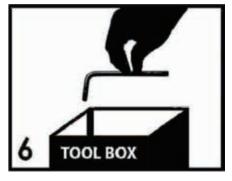


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

FURNITURE OF AMERICA.ALL RIGHTS RESERVED

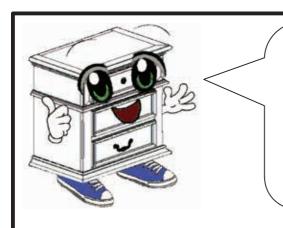


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

### Parts List



 

#1 x 1pc Headboard



 
#A x 6pcs Bolt Ø1/4" x 1-3/8"



#2 x 2pcs
Headboard Leg (L&R)



#B x 6pcs Lock washer Ø1/4"



#3 x 1pc Footboard



 
#C x 6pcs
Flat washer Ø1/4"-3/4"



#4 x 2pcs Rail




#D x 1pc Allen wrench M4




#5 x 1Set (13pcs) Bed Slat



#E x 8pcs Screw #5/32"x1-3/16"

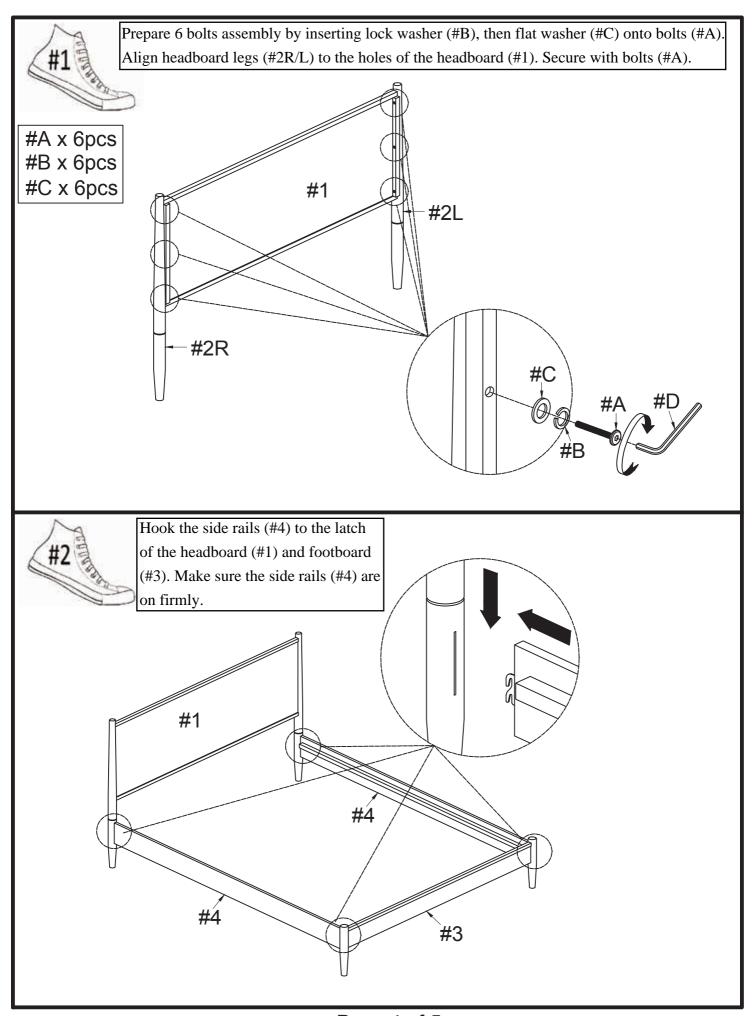

Page 4 of 5

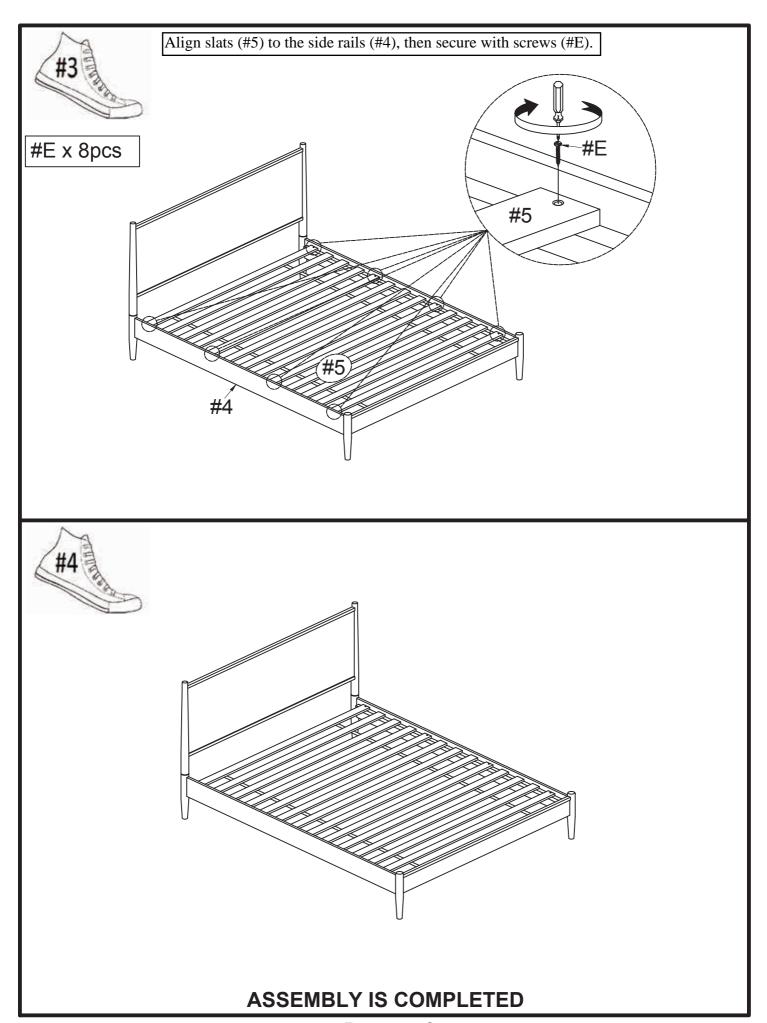

Page 5 of 5