

*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*



Fine Furniture for every stage of life

722823
TV STAND

ITEM:722823

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


ASSEMBLY TIME

60 MINUTES

MAX TV SIZE : 85"

PARTS IDENTIFICATION

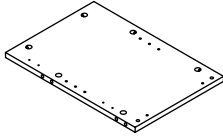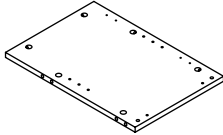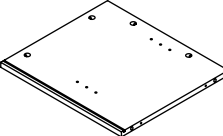

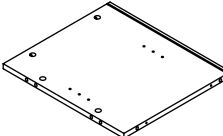





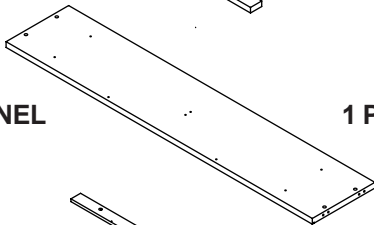
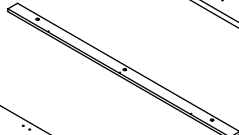
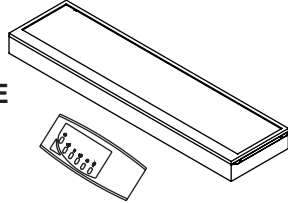
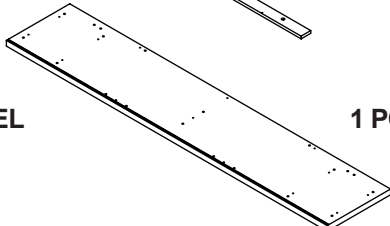
A	LEFT SIDE PANEL		1 PC	J	ADJUSTABLE SHELF		2 PCS
B	RIGHT SIDE PANEL		1 PC	K	MIDDLE BACK PANEL		3 PCS
C	LEFT DIVIDER PANEL		1 PC	L	BACK PANEL		2 PCS
D	RIGHT DIVIDER PANEL		1 PC	M	DOOR		2 PCS
E	LEFT DECORATIVE STRIP		1 PC	N	FRONT LEG		2 PCS
F	RIGHT DECORATIVE STRIP		1 PC	O	BACK LEG		2 PCS
G	BOTTOM PANEL		1 PC	P	MIDDLE LEG		1 PC
H	UPPER DECORATIVE STRIP		1 PC	Q	LED FIREPLACE		1 PC
I	TOP PANEL		1 PC				

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM:722823

            HARDWARE IDENTIFICATION

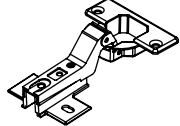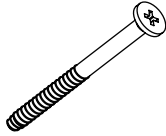Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	DOOR CATCH		2 PCS
2	WOODEN DOWEL Ø8 x 30mm		42 PCS	9	HINGE Ø35mm SR		4 PCS
3	CAM BOLT Ø7 x 35.5mm SR		30 PCS	10	HINGE SCREW Ø4x15mm SR		16 PCS
4	CAM LOCK Ø15 x 12mm SR		30 PCS	11	HANDLE L=120mm BLK		2 PCS
5	BOLT Ø9.5x55mm SR		8 PCS	12	RAIL SCREW Ø 3x15mm BLK		11 PCS
6	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		8 PCS	13	PLASTIC COVER Ø 52mm		2 PCS
7	PLASTIC FEET Ø15m		5 PCS	14	STICKER Ø20mm		5 PCS

 
Z9, Z11, Z13 not included in blister packaging.

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **722823**

STEP 1

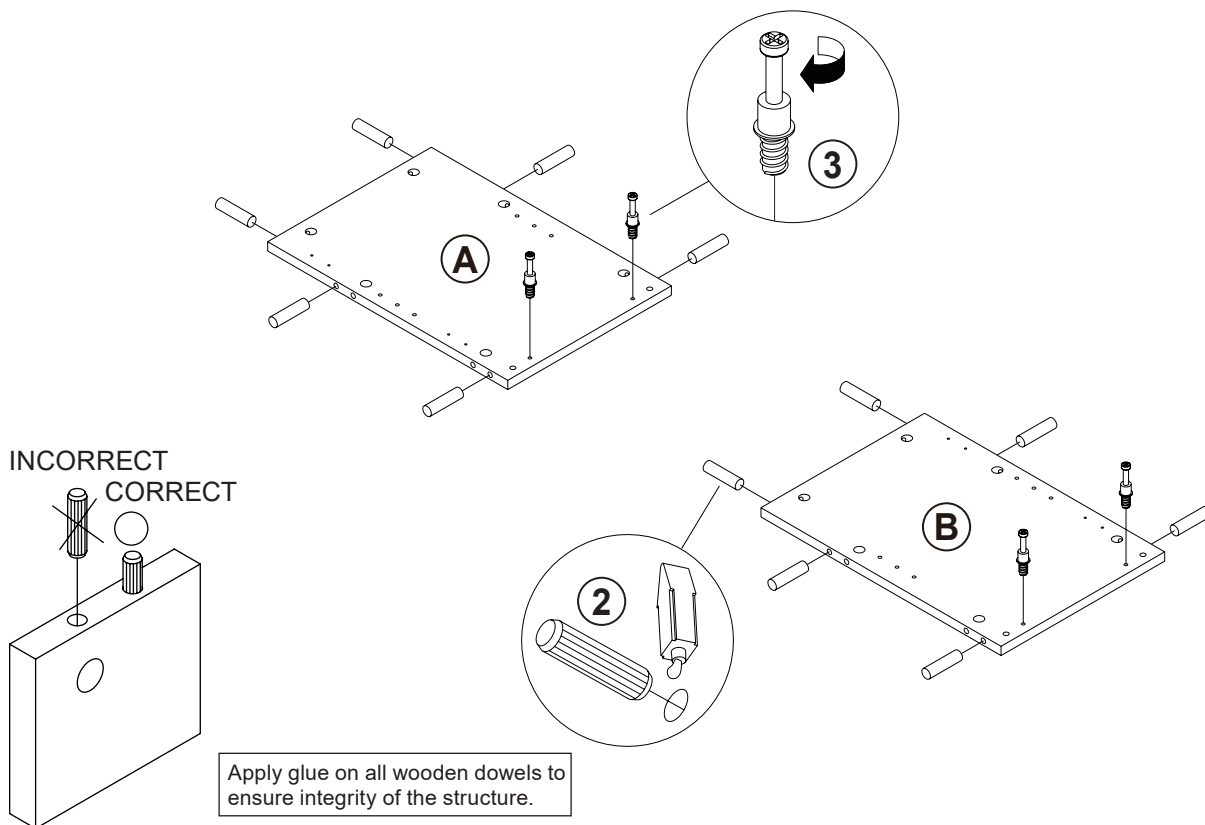


 STEP 2

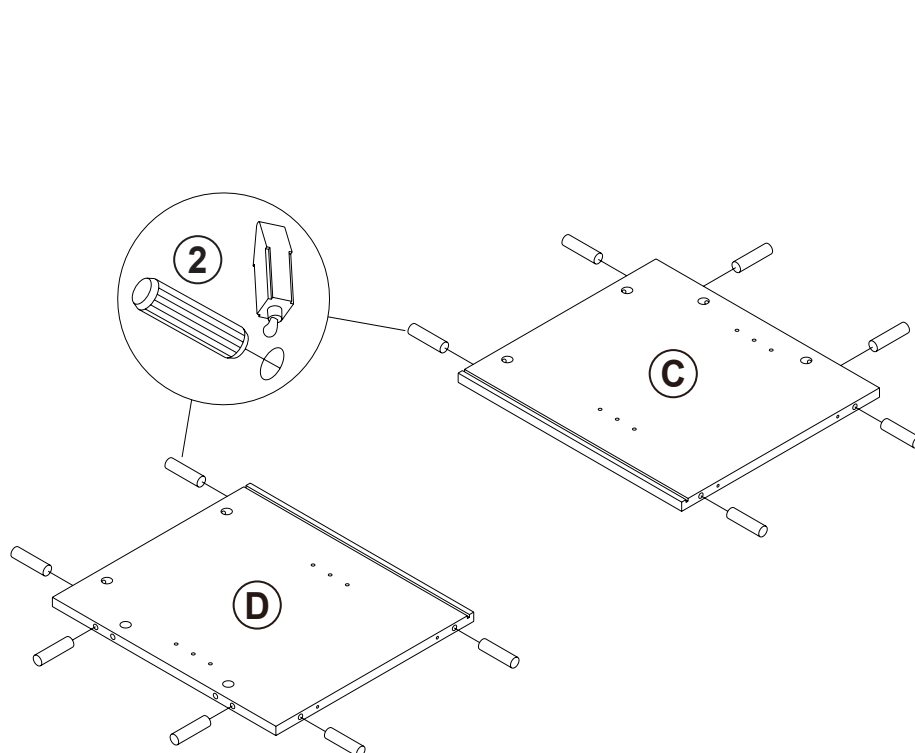


ITEM: **722823**

 STEP 3

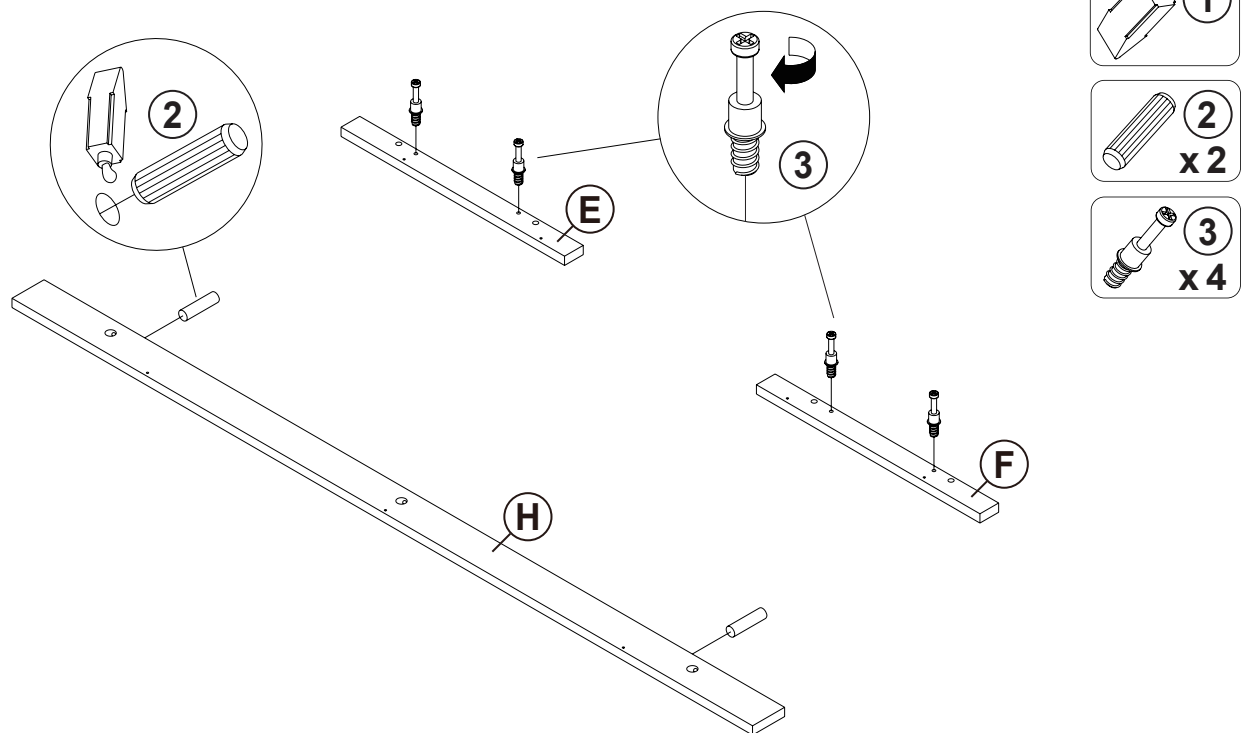


 STEP 4

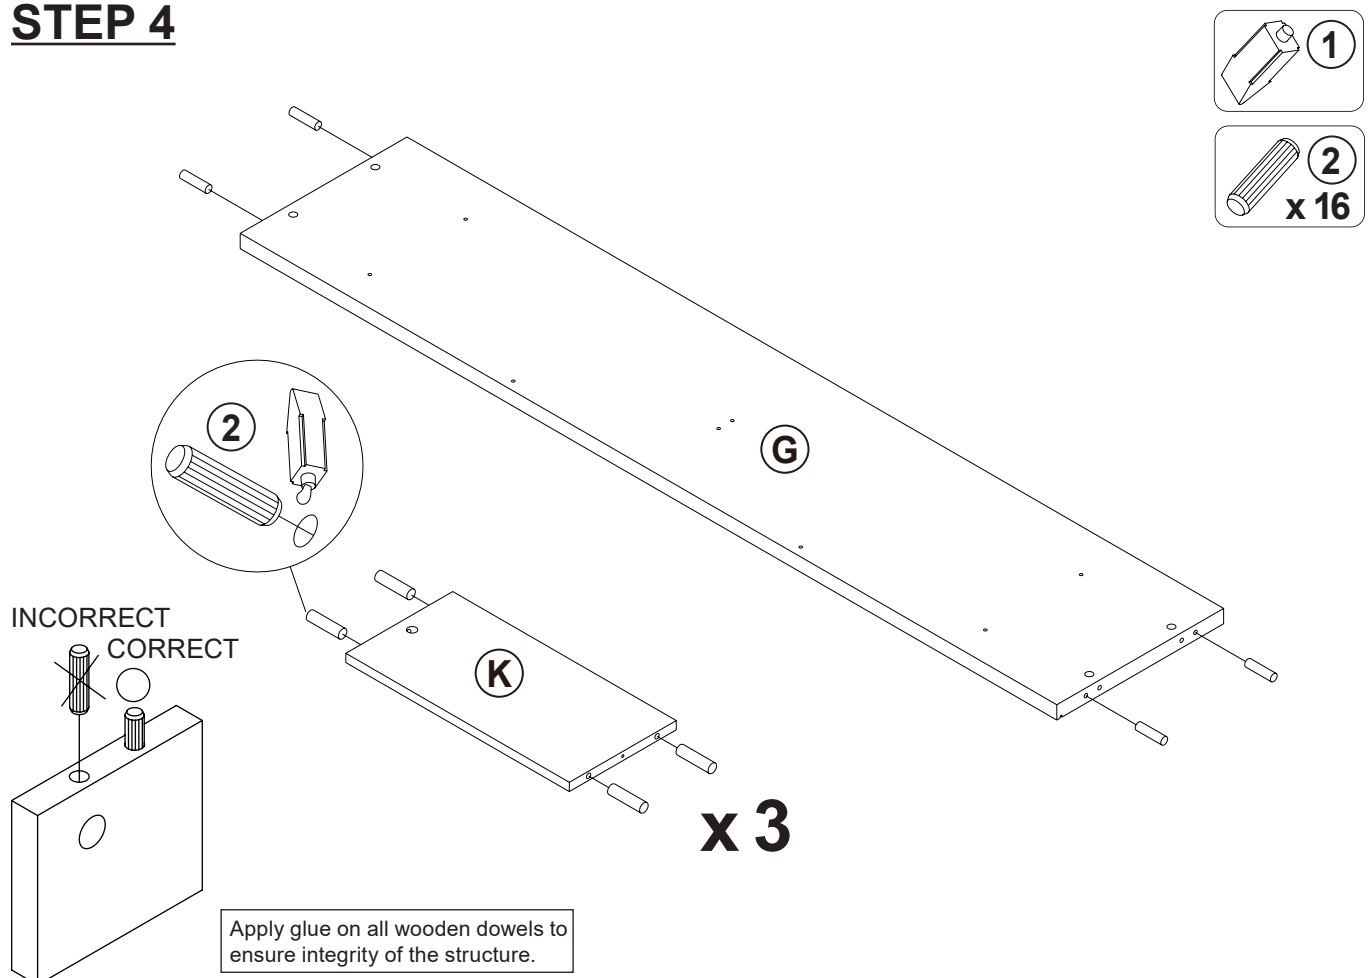


ITEM: **722823**

 STEP 5

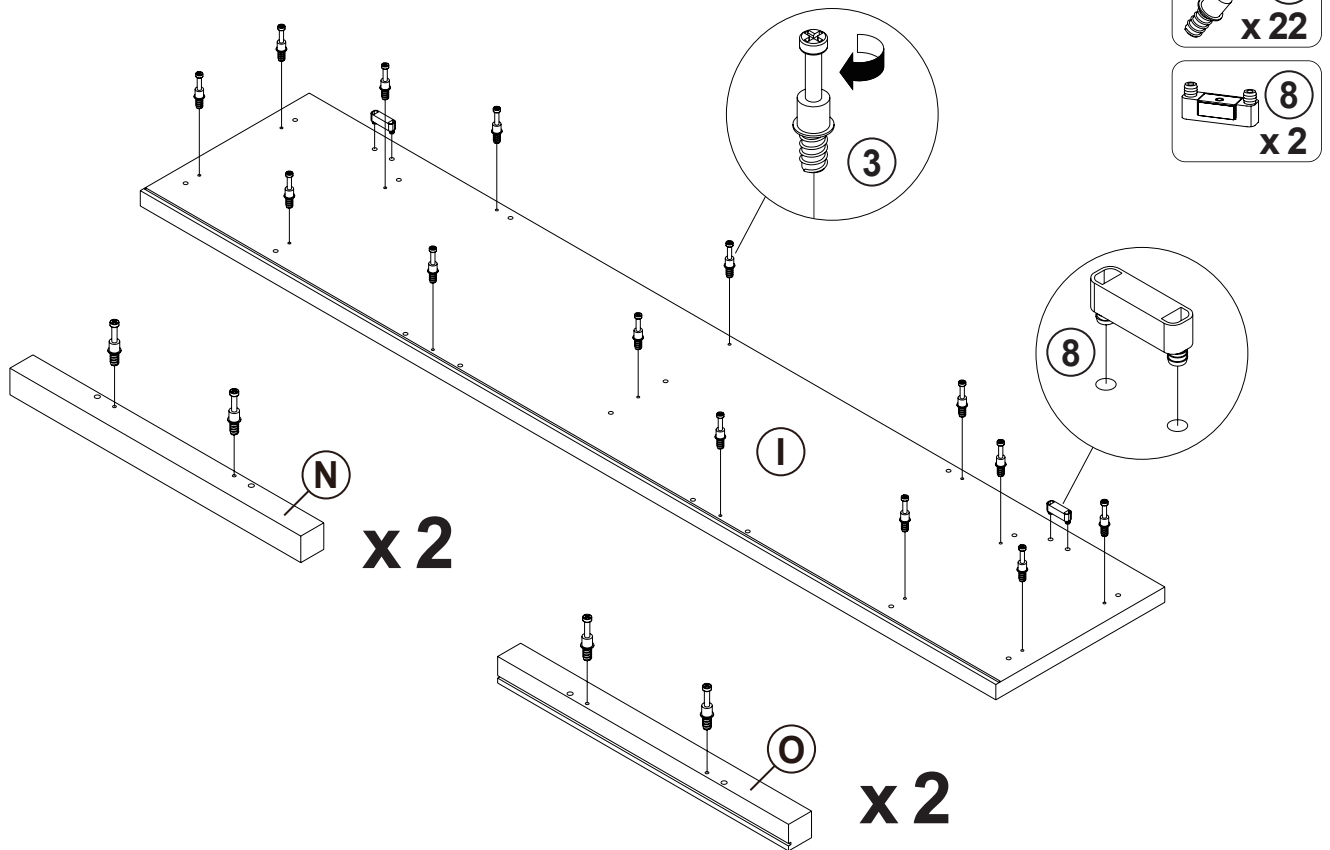


 
STEP 6

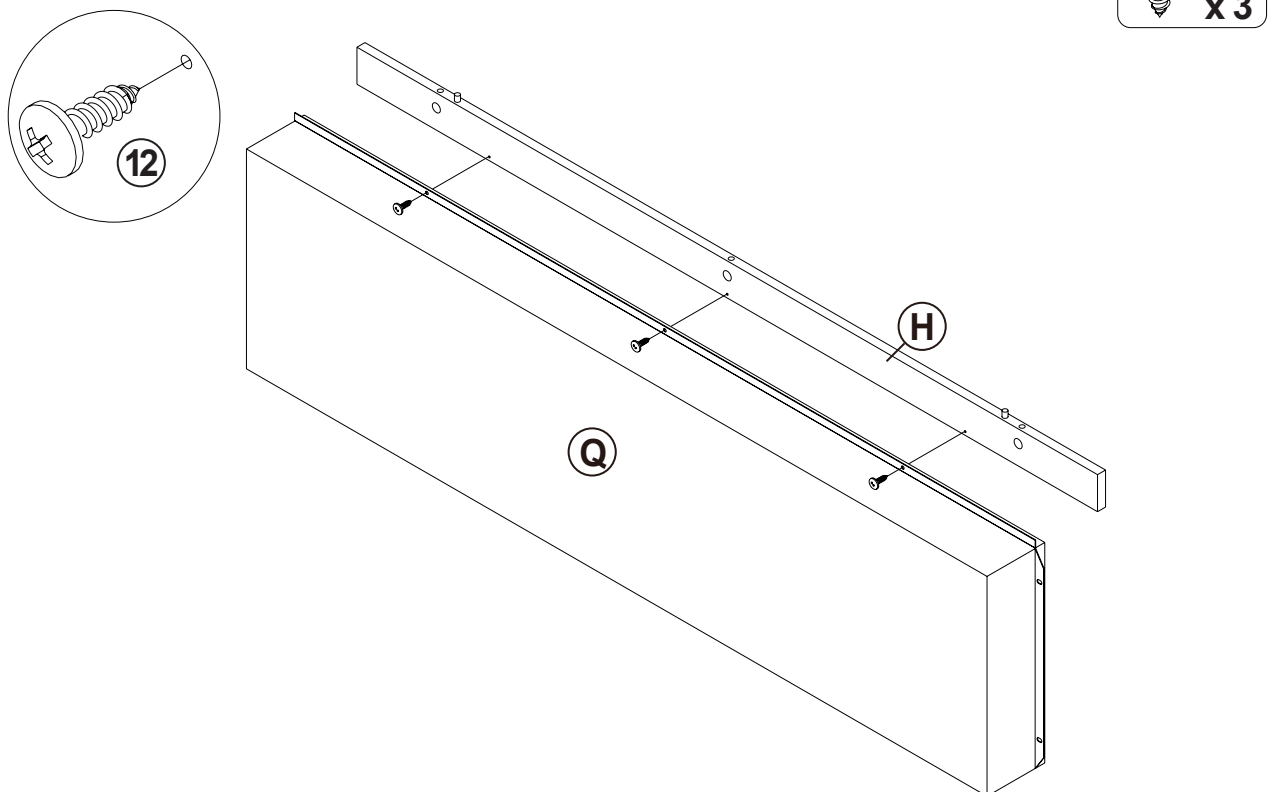




ITEM: **722823**

COASTER
FINE FURNITURE

  STEP 7

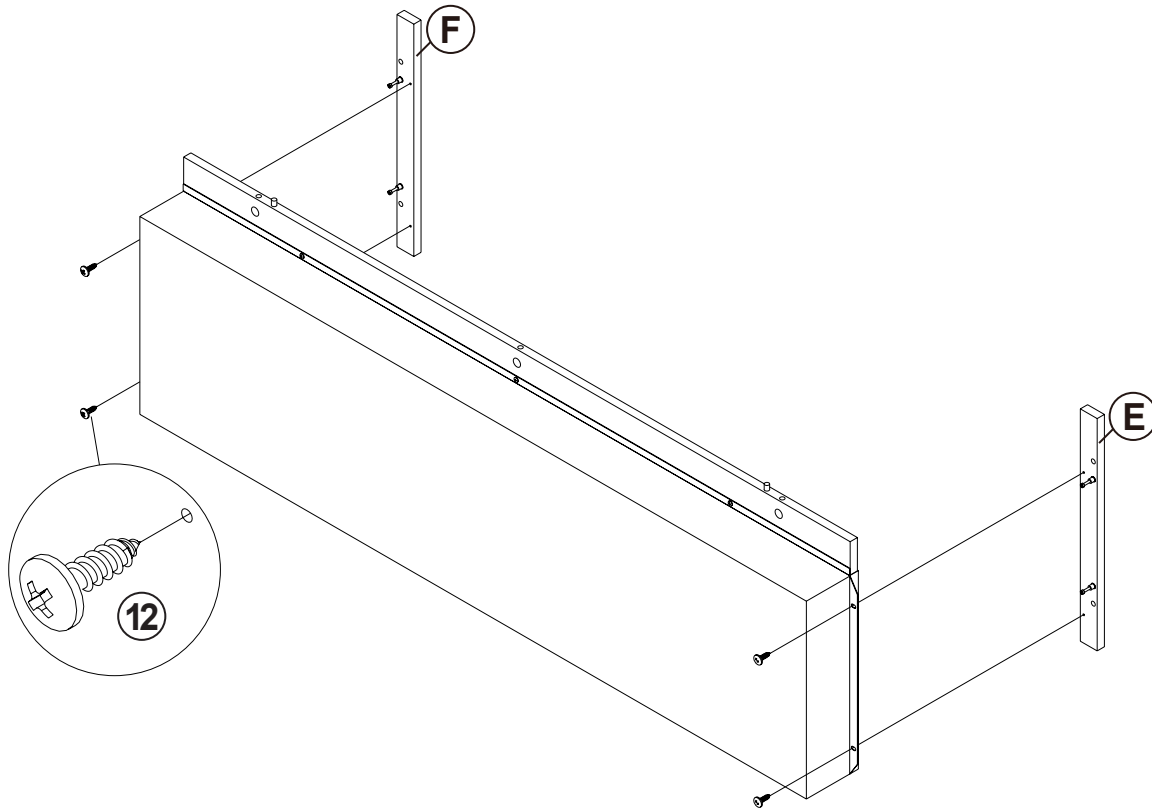

 
 
 
STEP 8

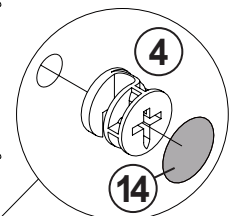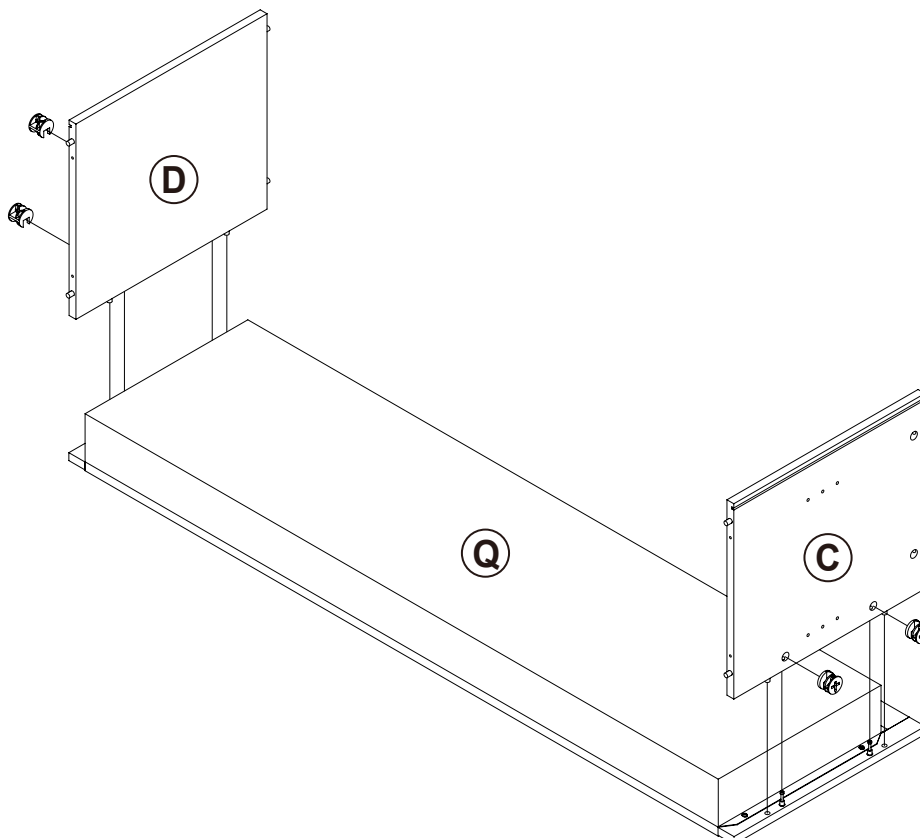



ITEM: **722823**

COASTER
FINE FURNITURE

   STEP 9

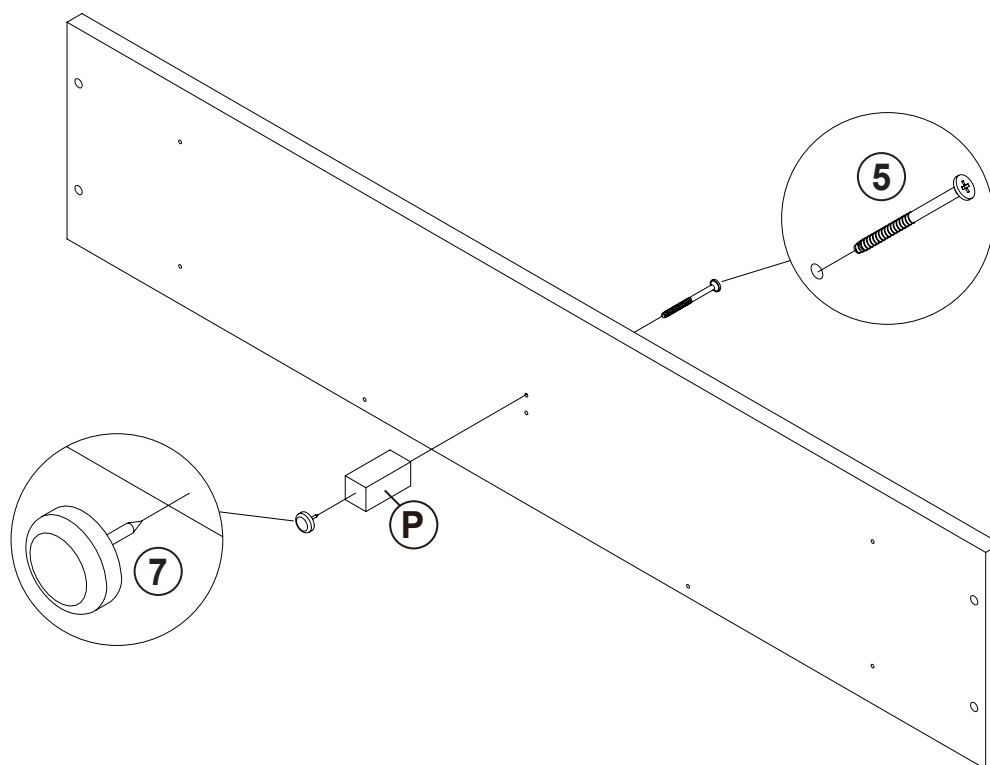


 
 
STEP 10

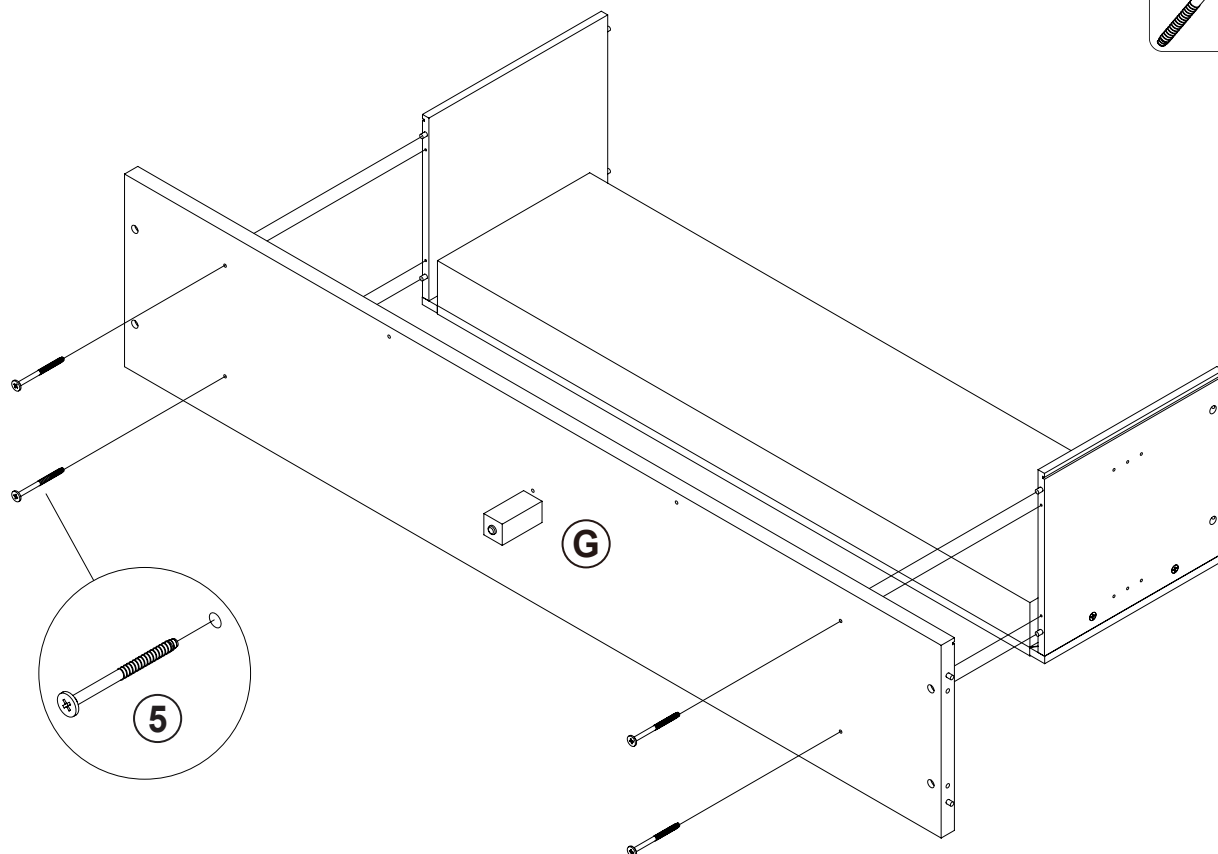




ITEM: **722823**

STEP 11

   COASTER
FINE FURNITURE

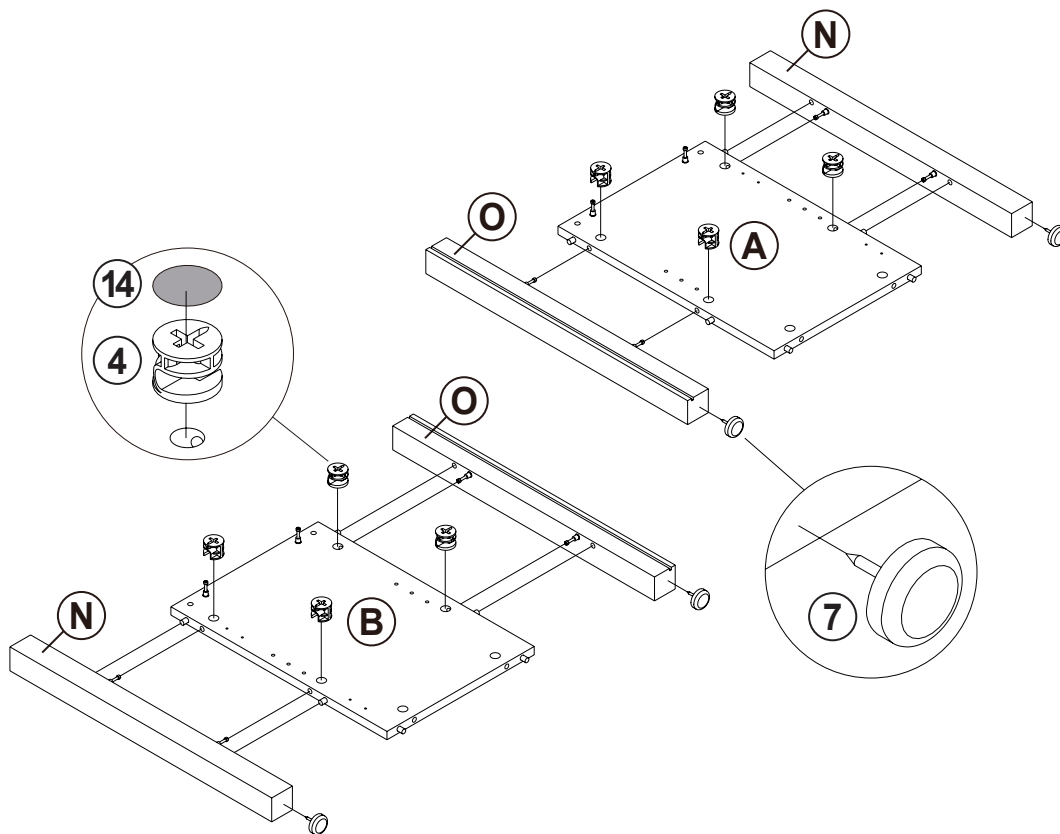

  
 
STEP 12

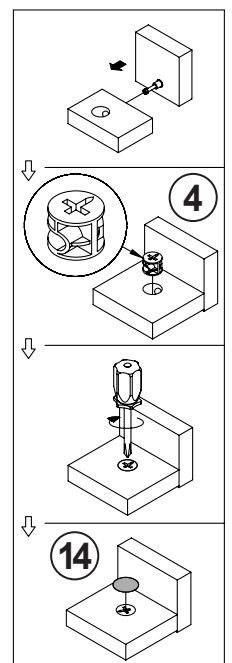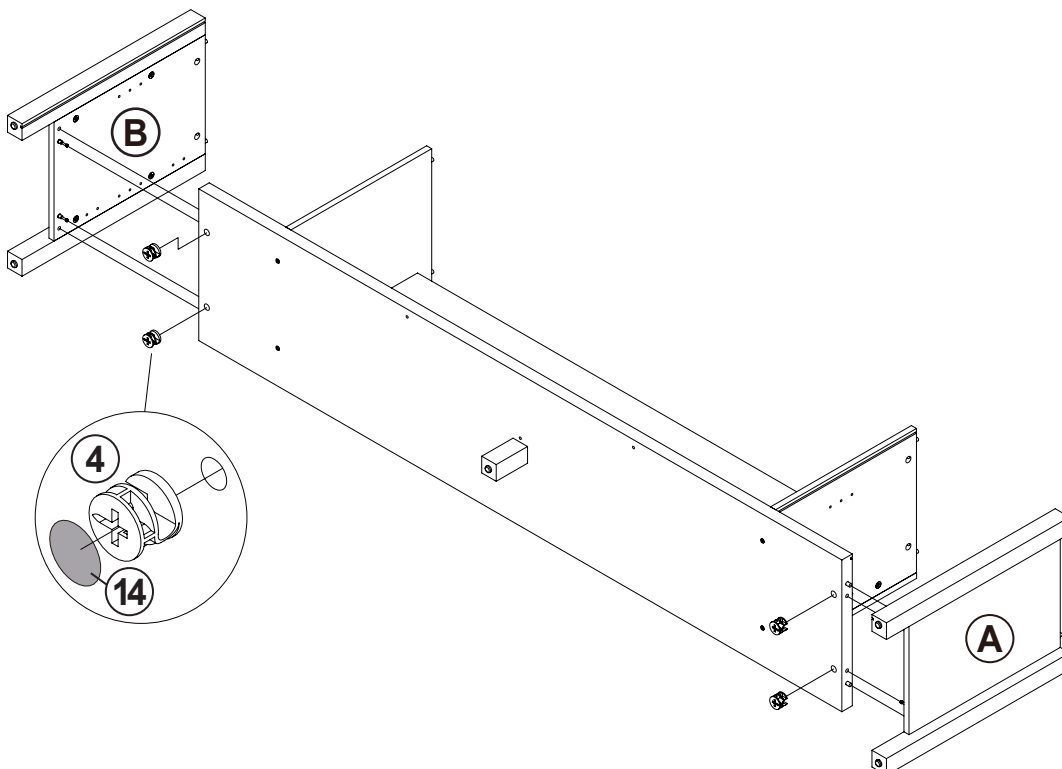



ITEM: **722823**

STEP 13

  COASTER
FINE FURNITURE

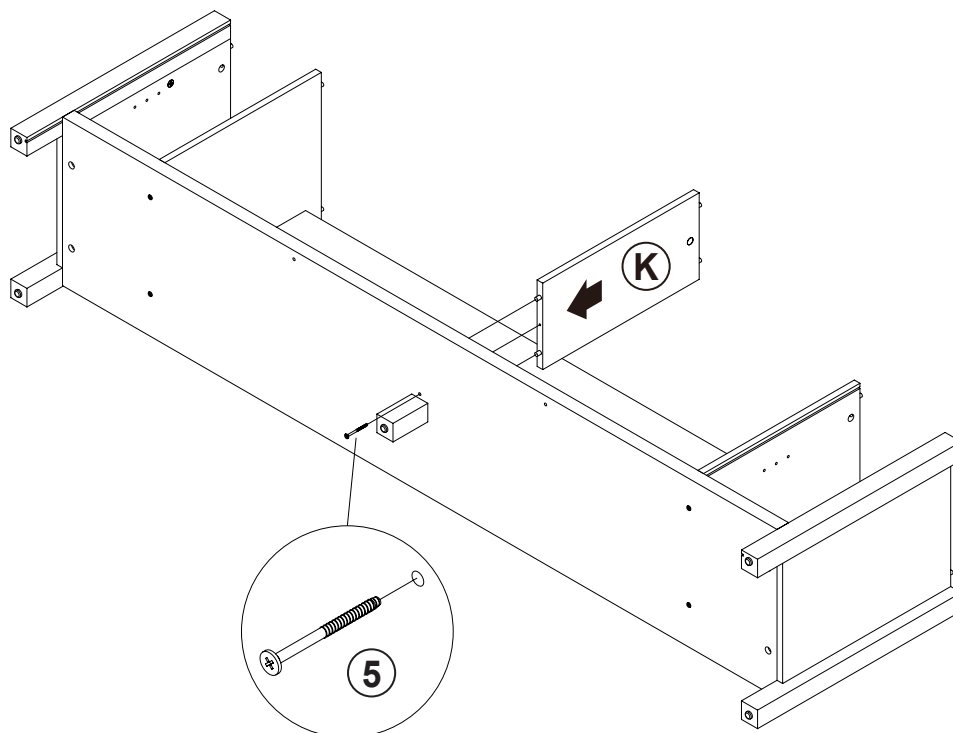

  
STEP 14

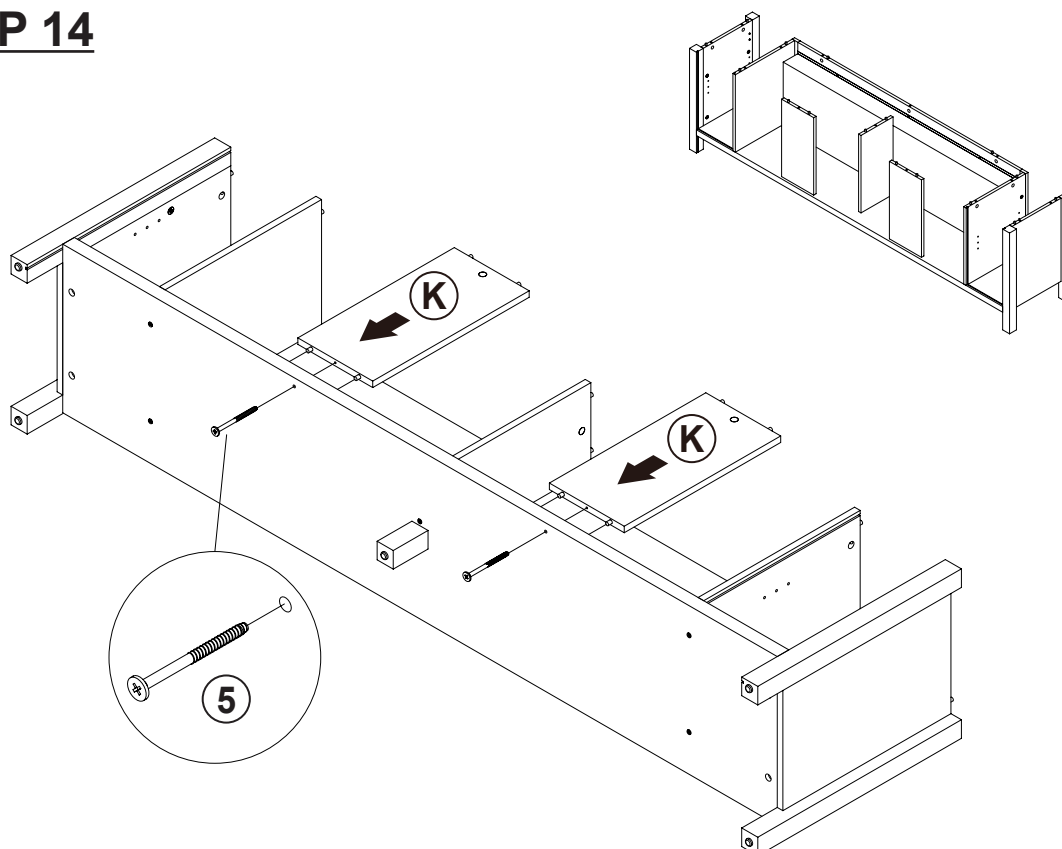


ITEM: **722823**

STEP 15

 COASTER
FINE FURNITURE

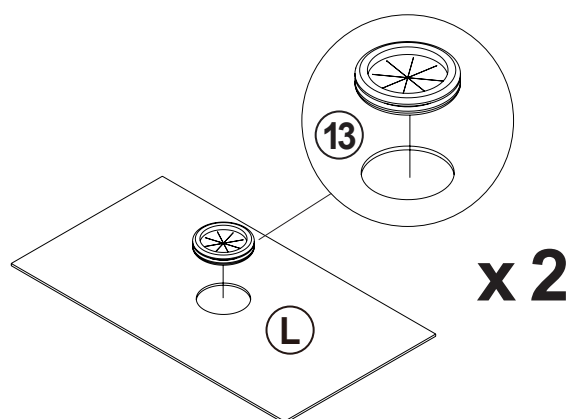

 
STEP 16

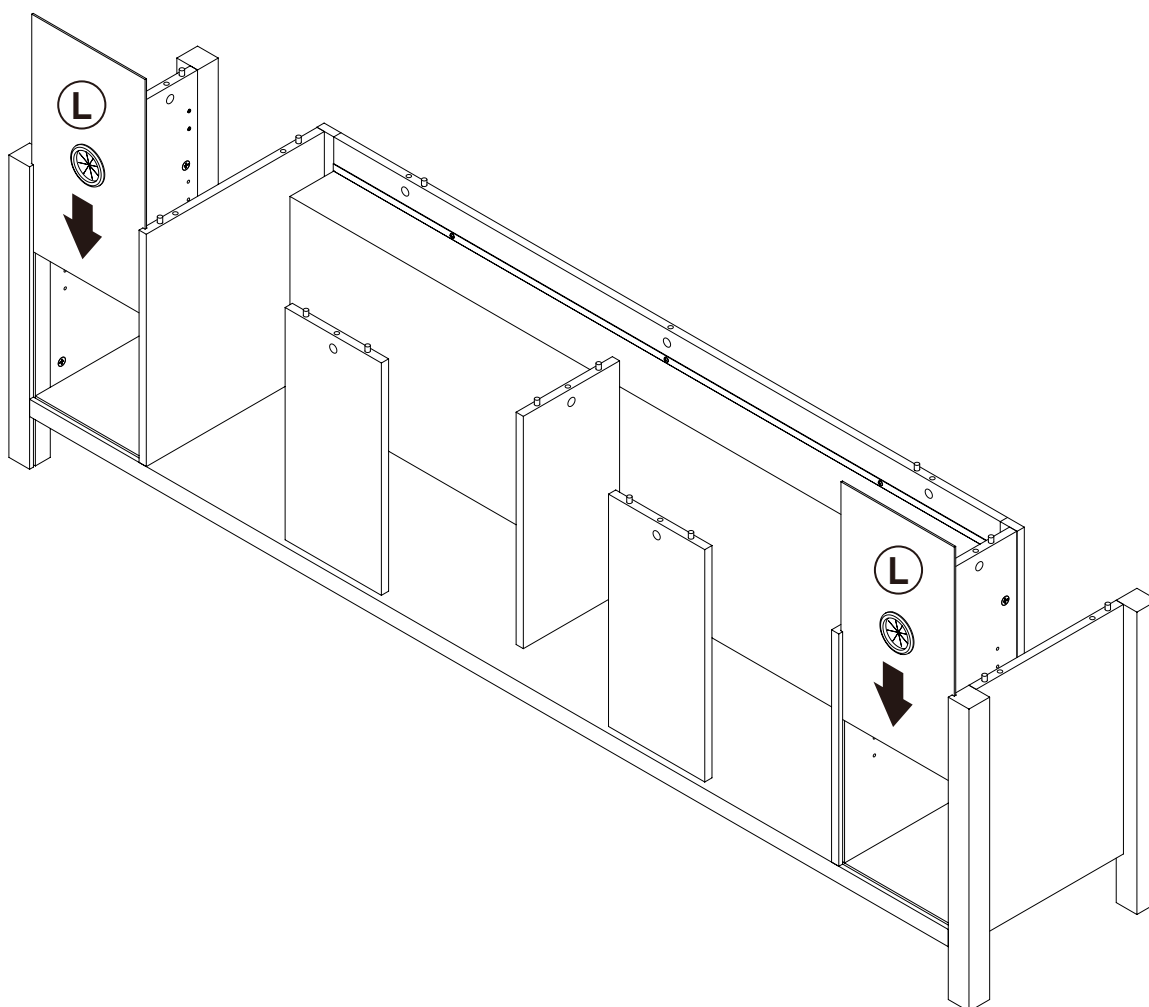

ITEM: **722823**


COASTER
FINE FURNITURE

 STEP 17

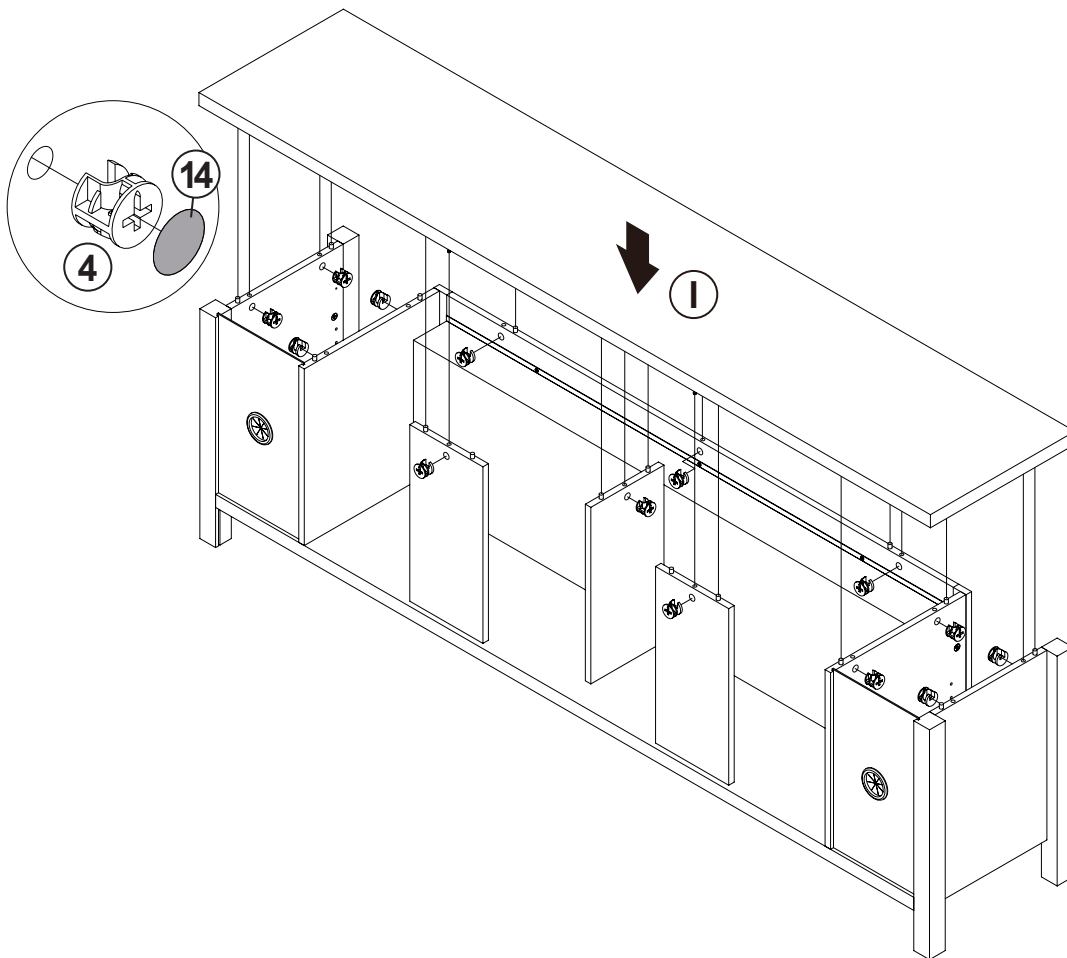


4
x 14

 
14
x 14

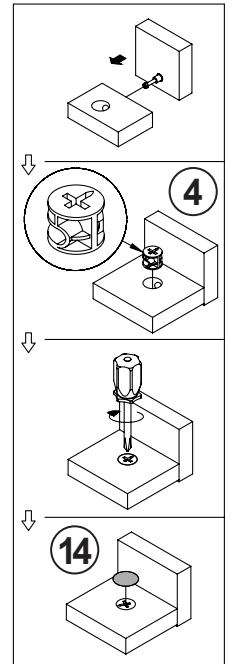

 STEP 18

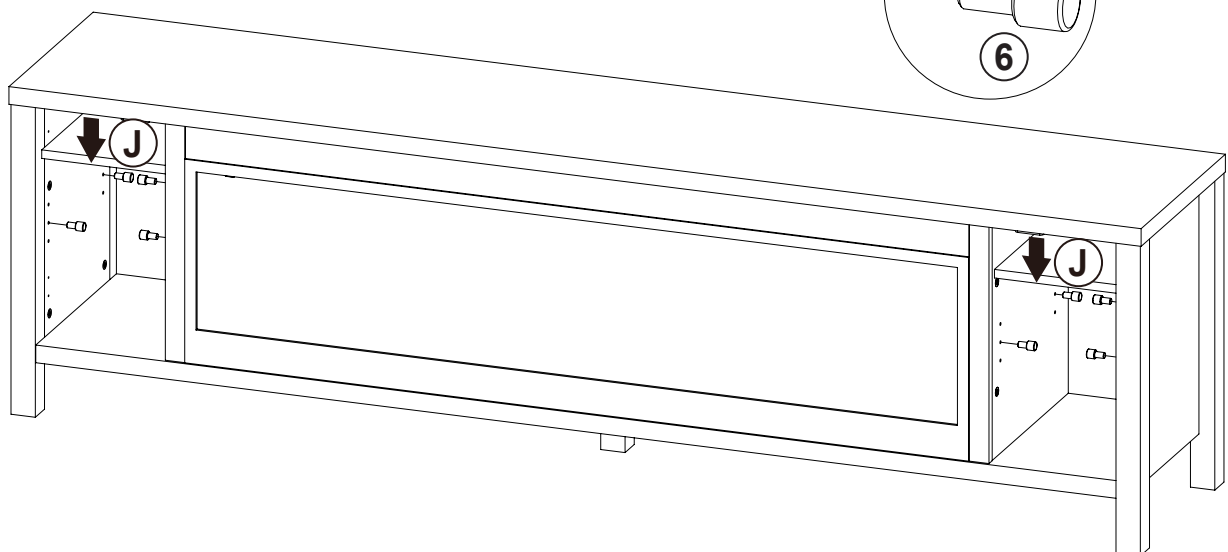


6
x 8




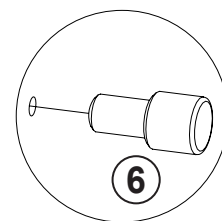 


ITEM: **722823**

 
STEP 19

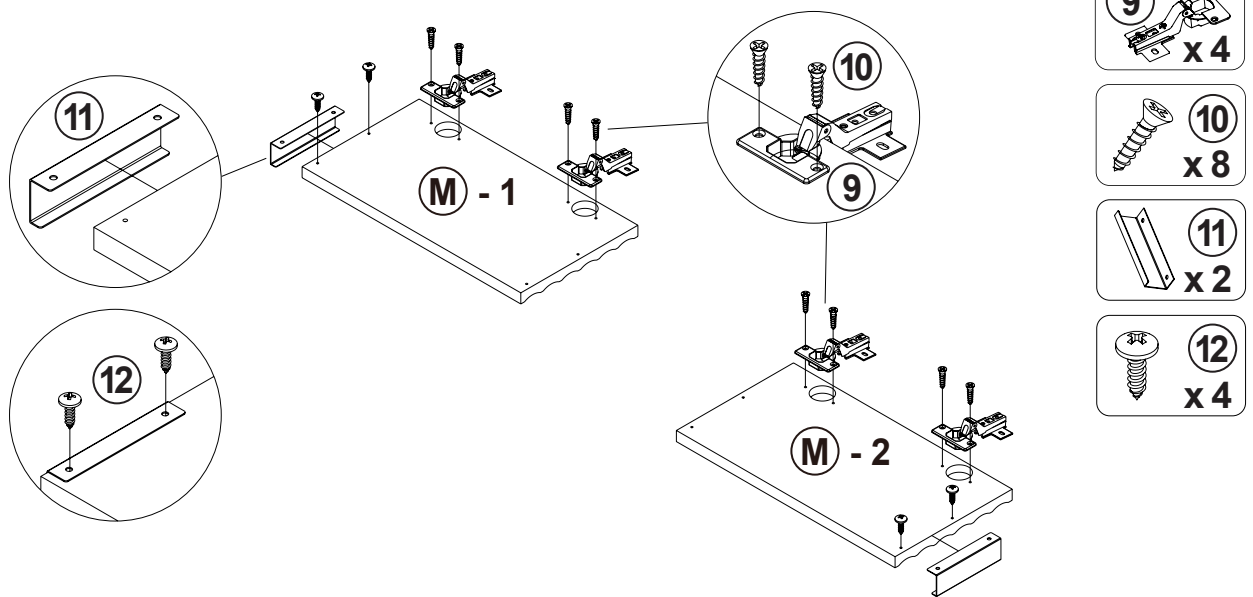

    
STEP 20

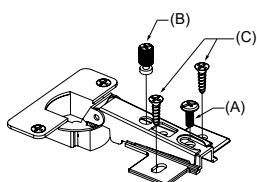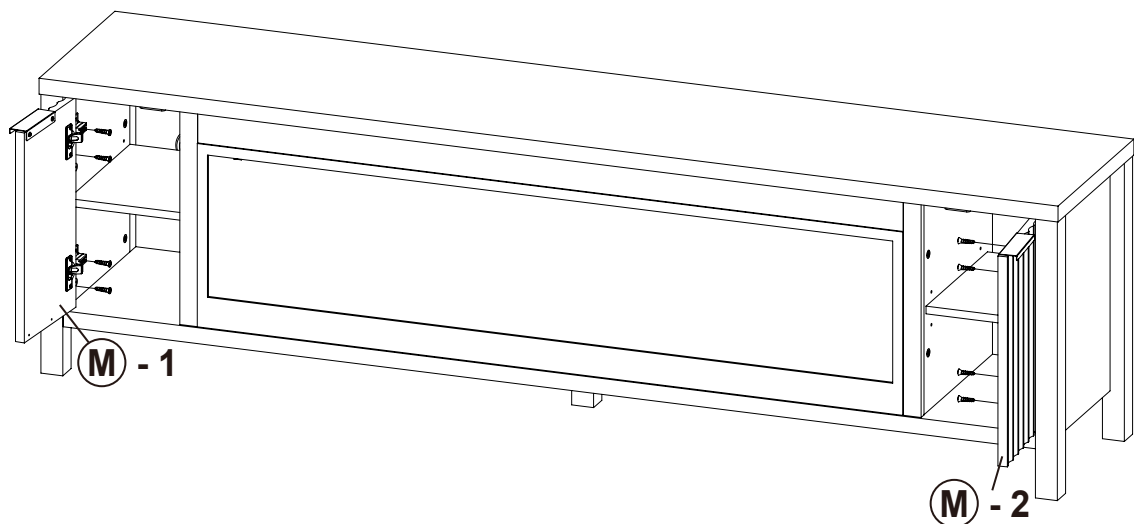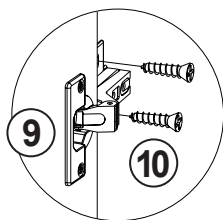


HORIZONTAL BY
SCREW A ADJUSTMENT

 

LATERAL BY
SCREW B ADJUSTMENT

 

VERTICAL BY
SCREW C ADJUSTMENT


 


ITEM: **722823**





STEP 21

  COMPLETE

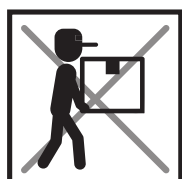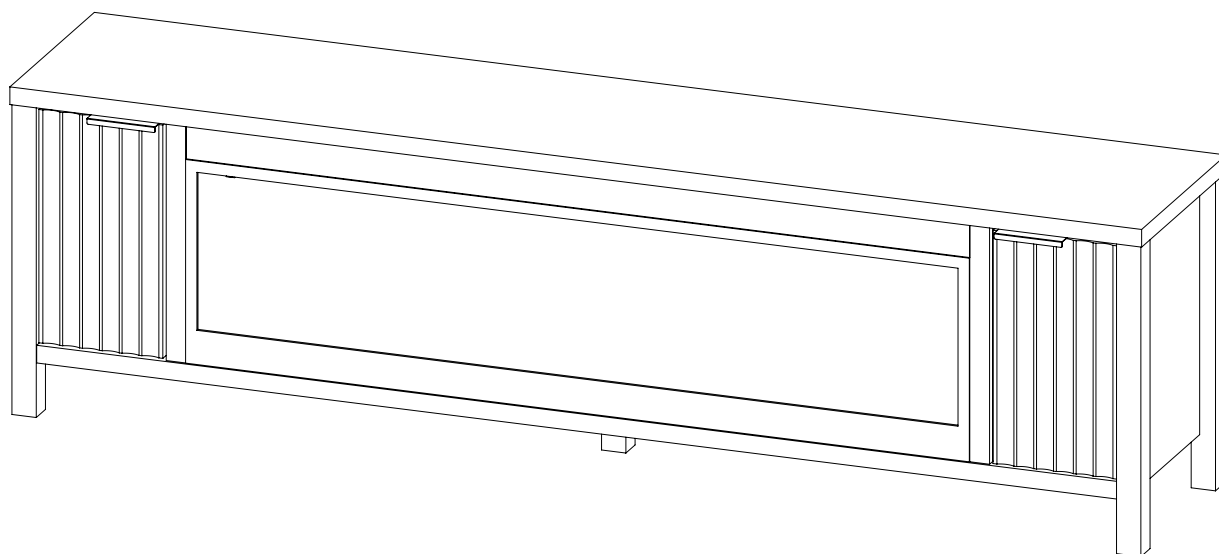

ITEM: 722823

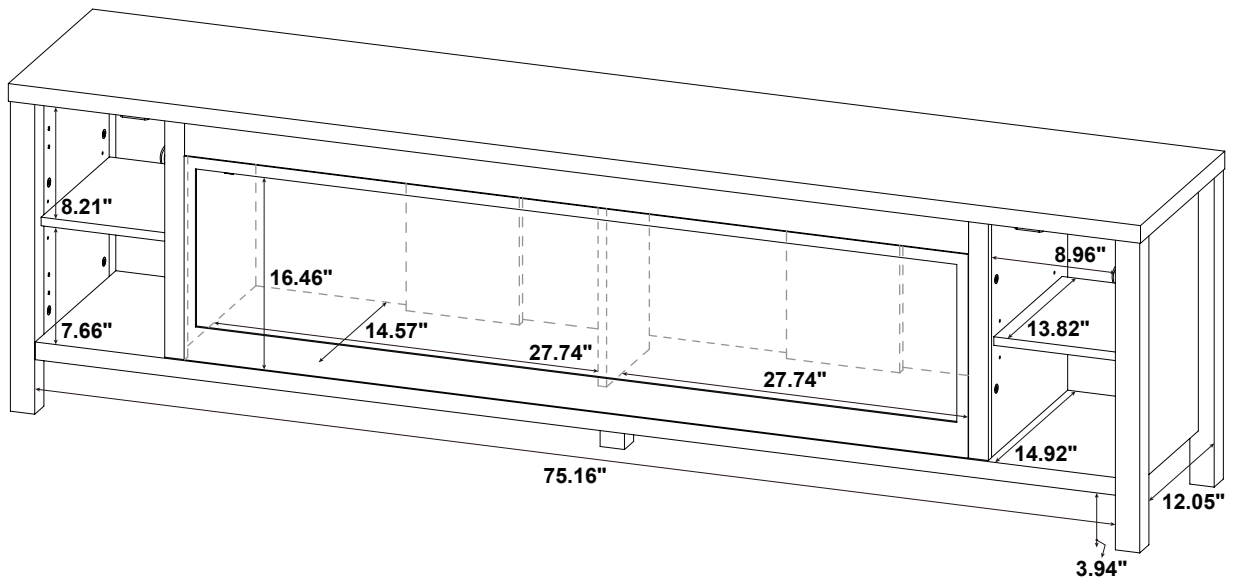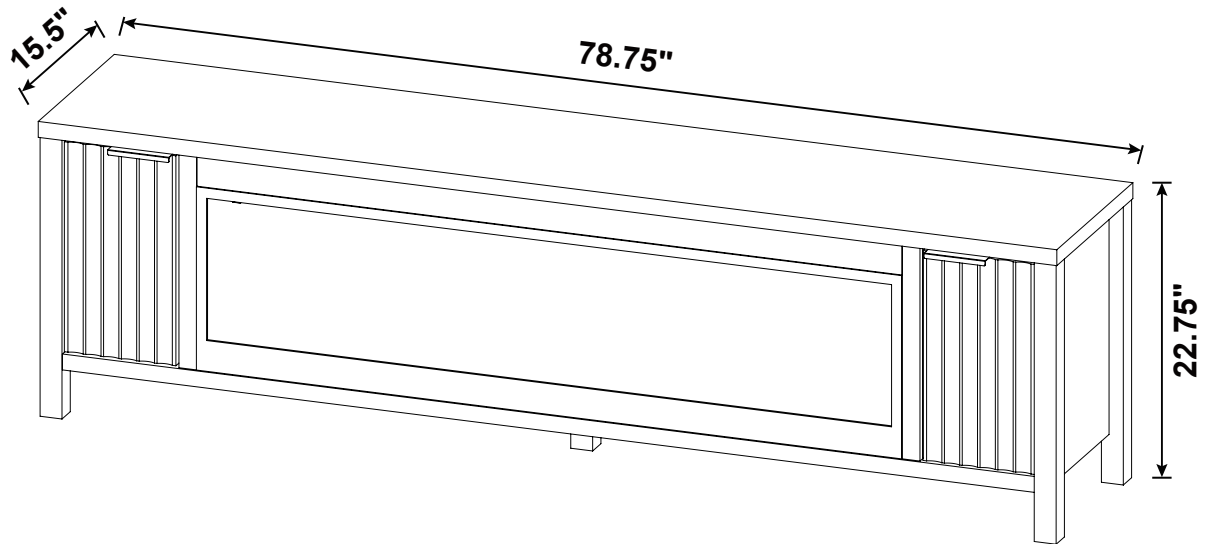  

Note : Dimension tolerance $\pm 5\%$