 
 







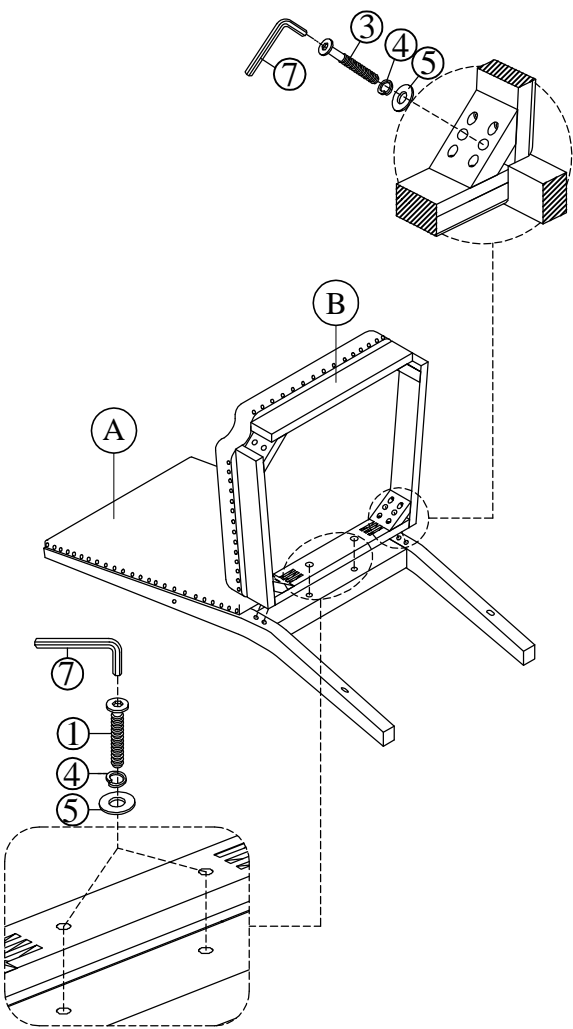
Assembly Instructions  
DINING ARM CHAIR  
DDV100AC

- Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.
1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
  2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
  3. Please do not over tighten screws or bolts.
  4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST FOR DINING SIDE CHAIR			
No.	PART DESC	CODE.	Q'TY
A	Dining Arm Chair - Back Frame with Cushion	PDDV100ACBFR	1
B	Dining Arm Chair - Seat Frame with Cushion	PDDV100ACSEA	1
C	Dining Arm Chair - Front Legs w/ Armrest Left & Right	PDDV100ACLEG	2
D	Dining Arm Chair - Side Stretcher Left & Right	PDDV100ACSTR	2

HARDWARE LIST			
No.	HARDWARE DESC	CODE.	Q'TY
1	 ALLEN BOLT (1/4" x 40mm)	PDDV100ACHW	2
2	 ALLEN BOLT (1/4" x 60mm)		4
3	 ALLEN BOLT (1/4" x 75mm)		4
4	 SPRING WASHER (1/4")		10
5	 FLAT WASHER (1/4")		10
6	 SCREWS/ VIS (M4x38mm)		6
7	 ALLEN KEY (M4)		1

STEP:1



STEP:2

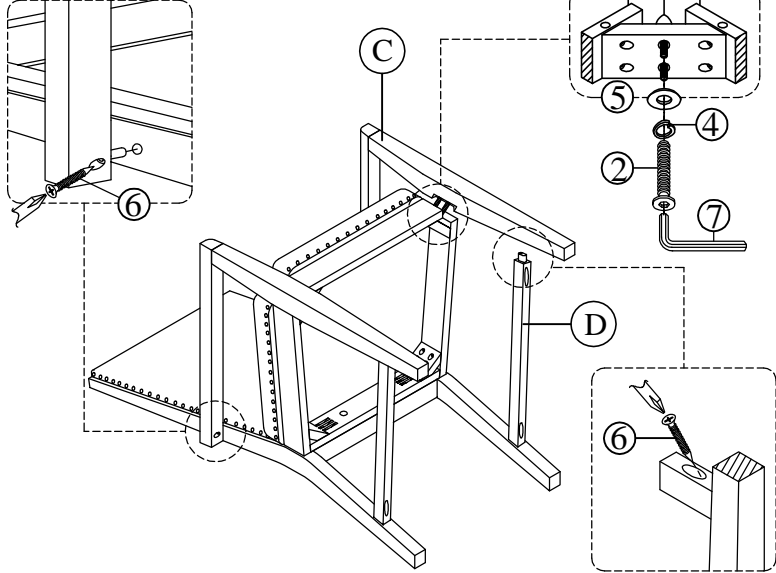

COMPLETED

