

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

722833 *TV STAND*

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.

2. Please check to see that all hardware and parts are present prior to start of assembly.

3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately. 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME



MAX TV SIZE: 85"

PARTS IDENTIFICATION

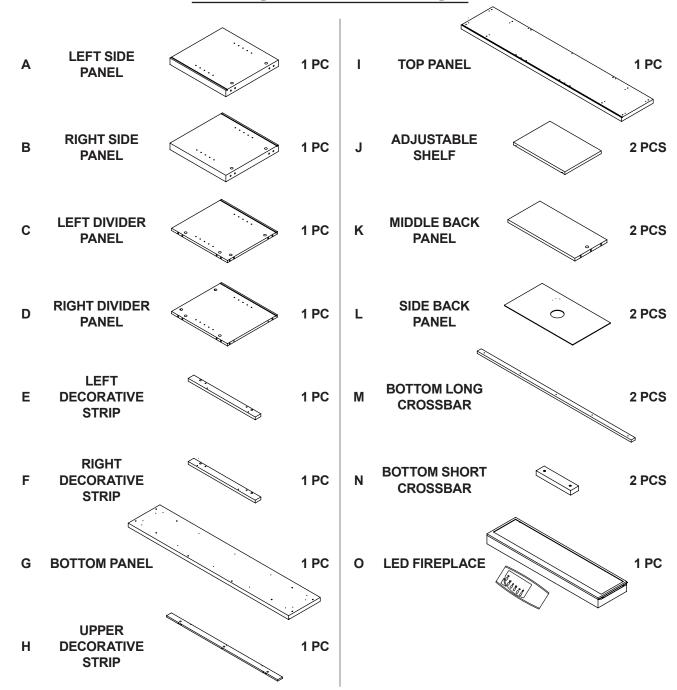

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



HARDWARE IDENTIFICATION

Z							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	6	PIN FOR ADJUSTABLE SHELF Ø4.9x8mm SR		8 PCS
2	WOODEN DOWEL Ø8 x 30mm		30 PCS	7	HANDLE SCREW ø3x15mm BLK		7 PCS
3	CAM BOLT Ø7 x 35.5mm SR		17 PCS	8	PLASTIC COVER Ø 52mm		2 PCS
4	CAM LOCK Ø15 x 12mm SR		17 PCS	9	STICKER Ø20mm		3 PCS
5	SCREW Ø 4.5x42mm SR	AUTHURIA DE	24 PCS				

Z8 not included in blister packaging.

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **722833 STEP 1**









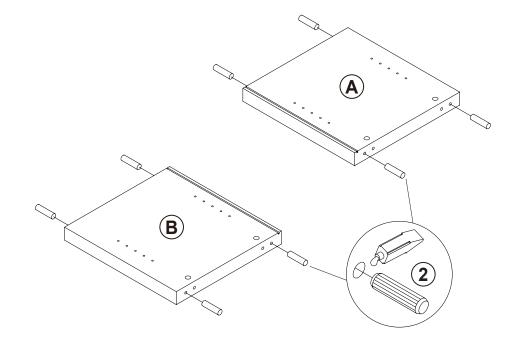

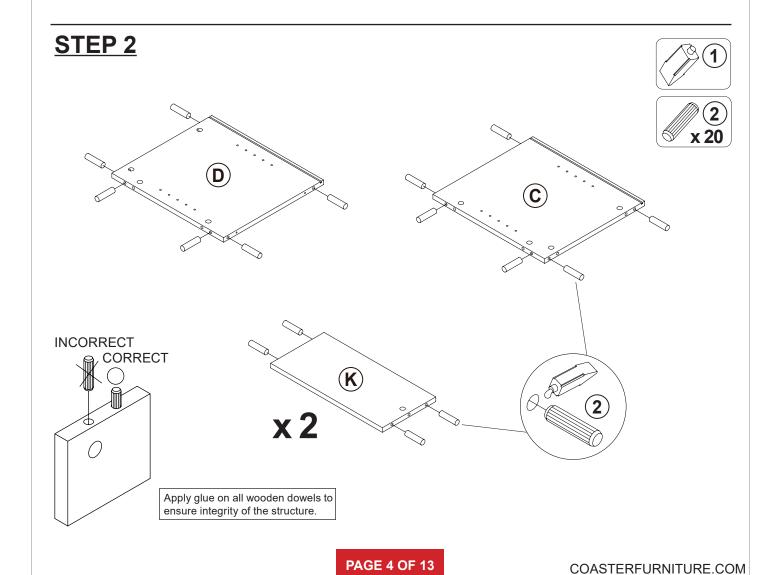

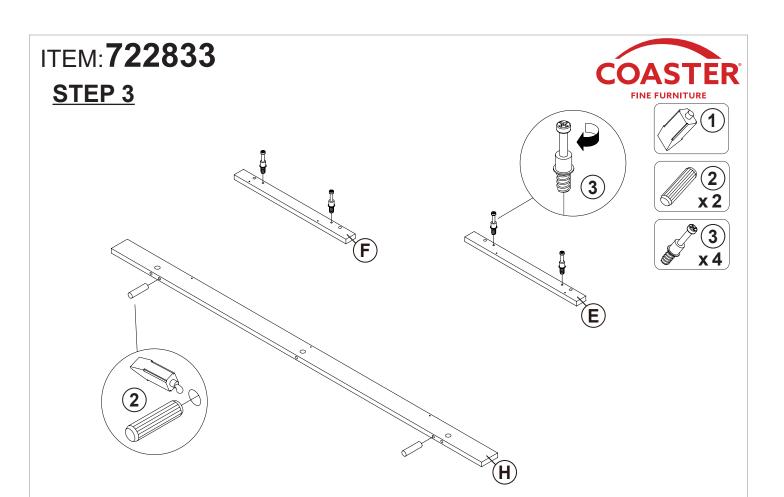

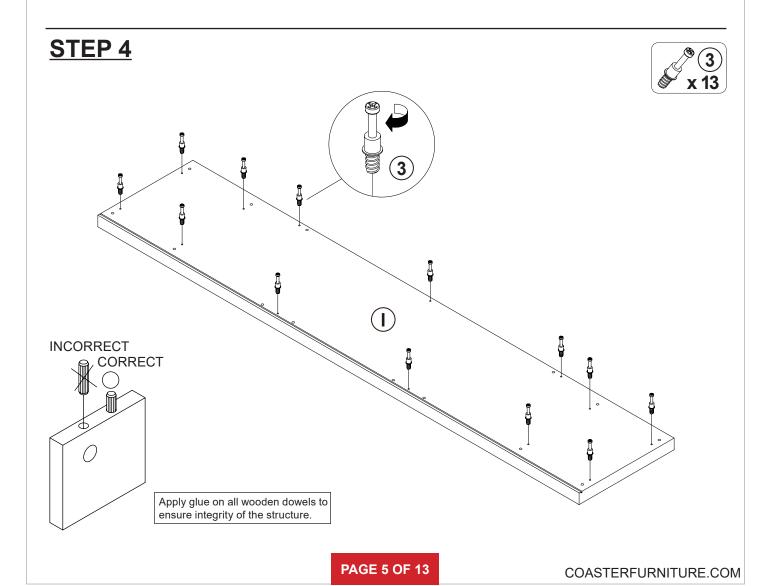


ITEM: **722833 STEP 5**






STEP 6




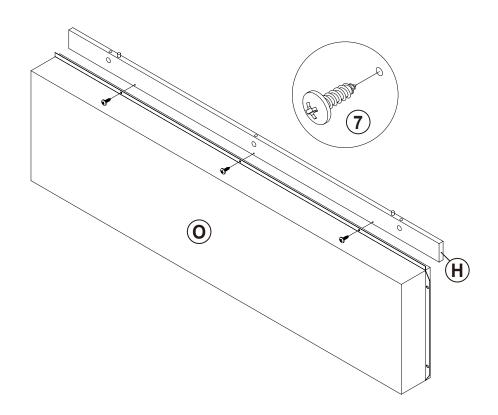


8


x2

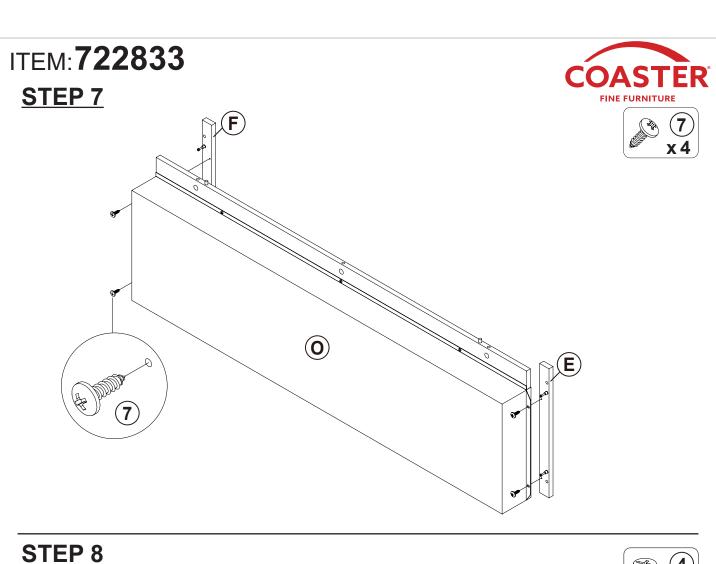


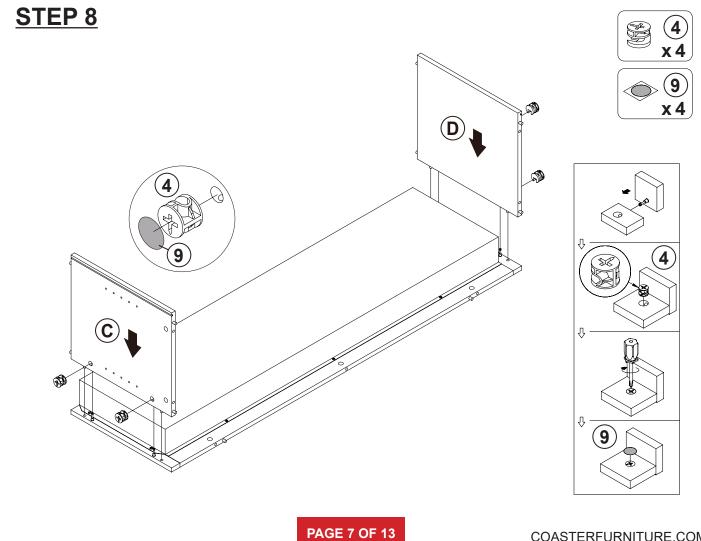

COASTERFURNITURE.COM

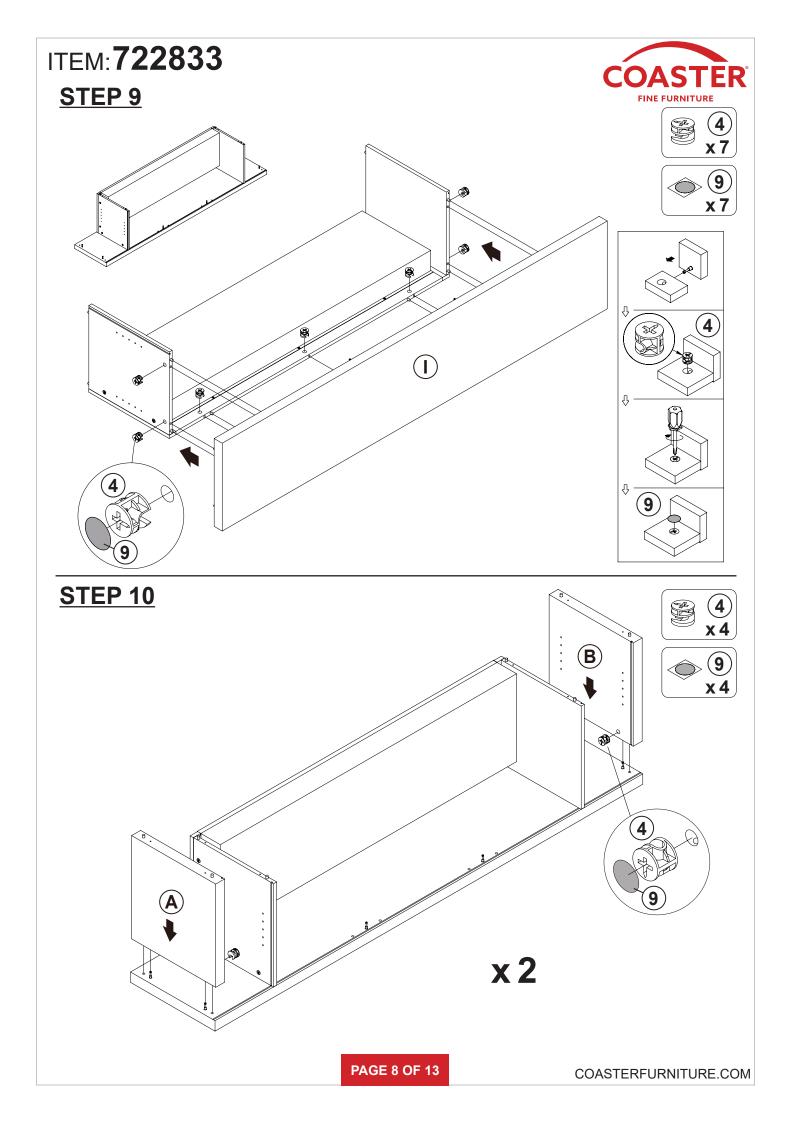


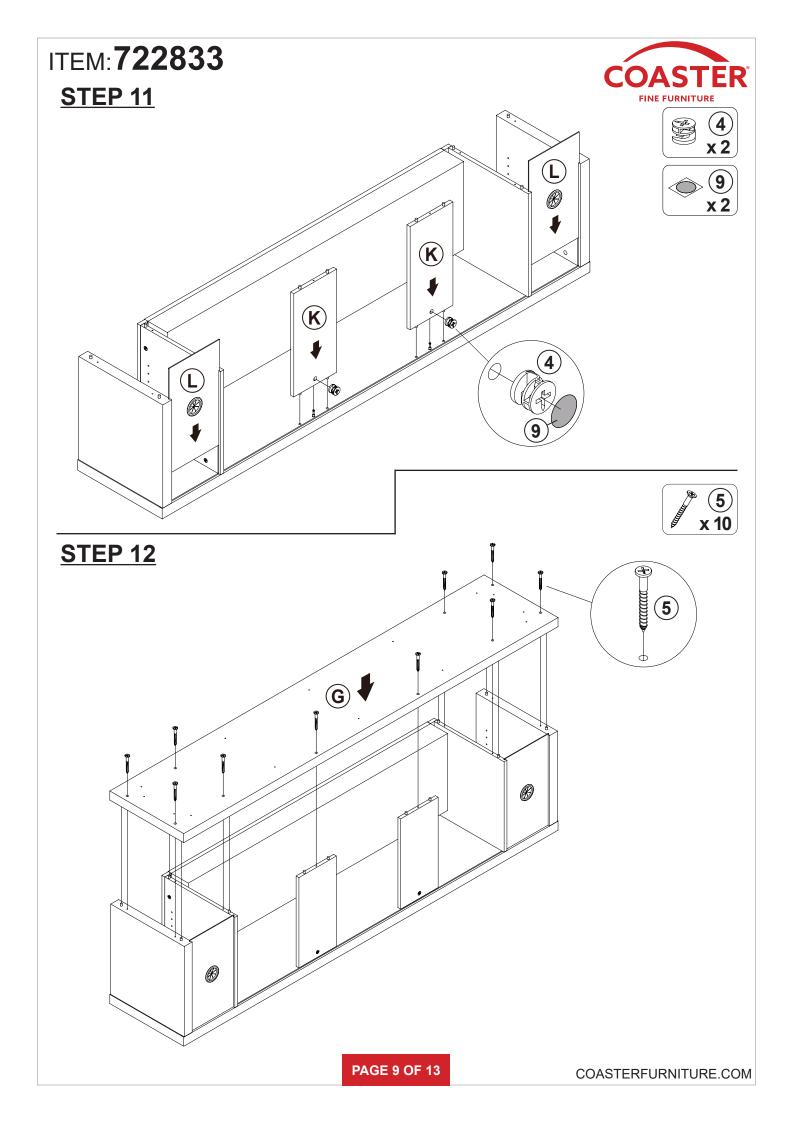

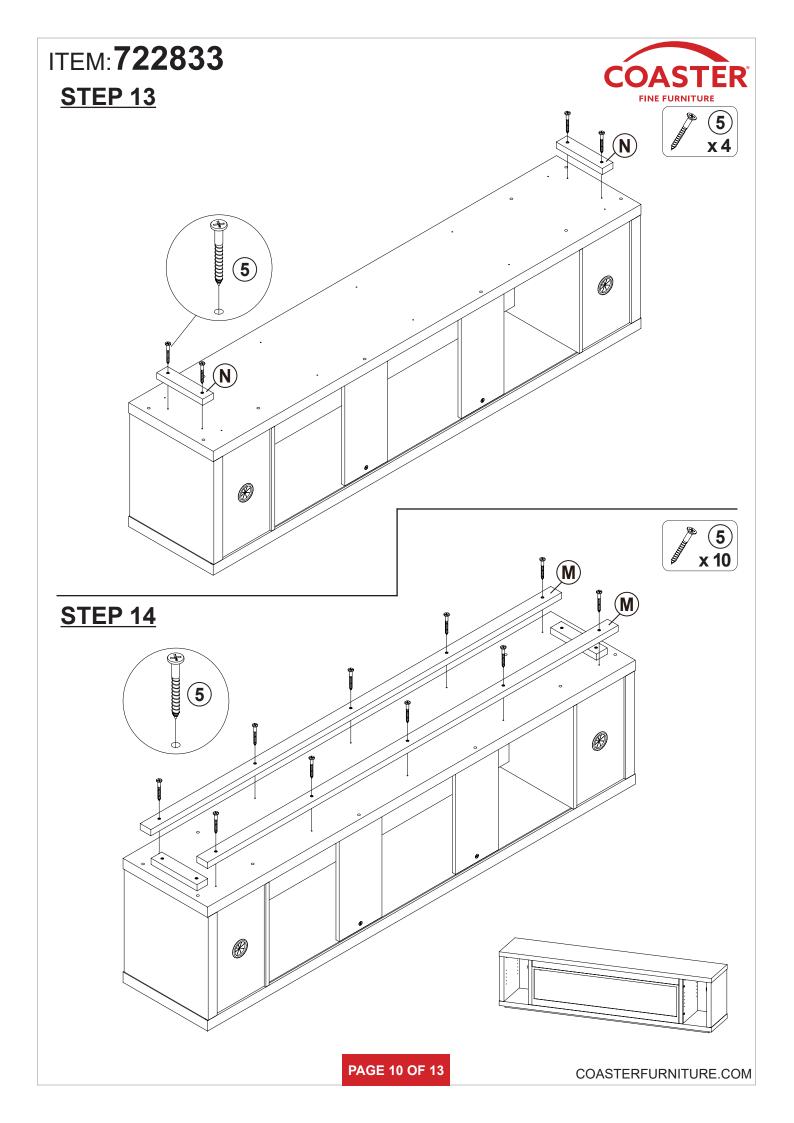


ITEM: **722833 STEP 15**



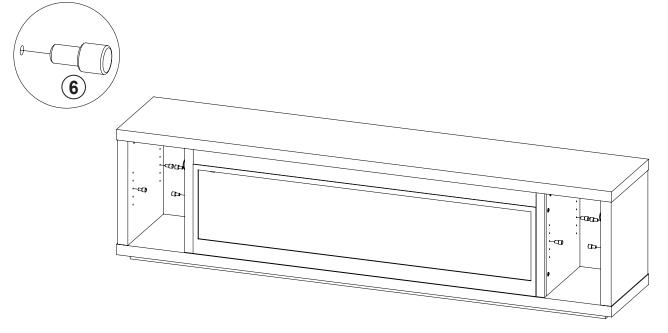


STEP 16

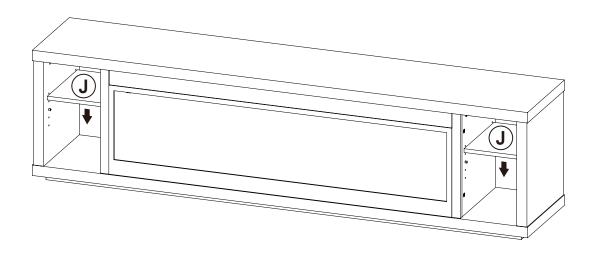

STEP 17

COMPLETE




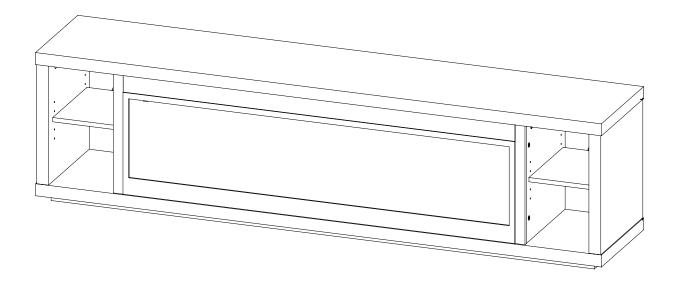







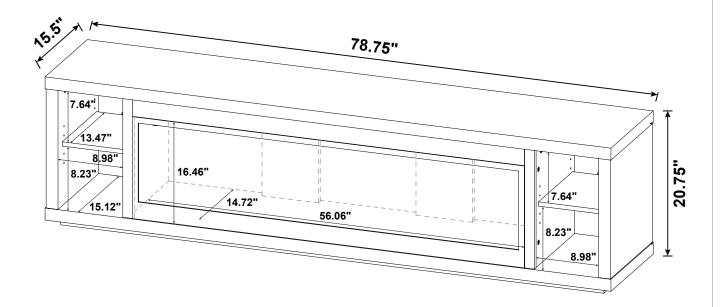

Note: Dimension tolerance ±5%