 
 
 
 
 
 
 
 
 
 
 
 
 



Assembly Instructions

MODEL NO.: N113


STORAGE CABINET

TUN010CL	TUN011KC		TUN025	TUN020SG	TUN005MH	TUN030AG	TUN022DH	TUN016SC				
A 	B 	C 	D 	E 	F 	G 	H 	I 	J 	K 	L 	M 
Cam lock 18Pcs+1Pc(spare)	Kix Cam 18Pcs+1Pc(spare)	Cam Cover 18Pcs+1Pc(spare)	Dowel 16Pcs+1Pc(spare)	Shelf dowel 4Pcs	90mm Metal scallop shape 2set	Adjustable Glide 4 Pcs	Center door hinge 4Pcs	Screw Ø4X16 24Pcs+1Pc(spare)	1set	Screw Ø3.5X12 8Pcs+1Pc(spare)	Keys 1set	Screw Ø4X19 4Pcs+1Pc(spare)

 
STEP1

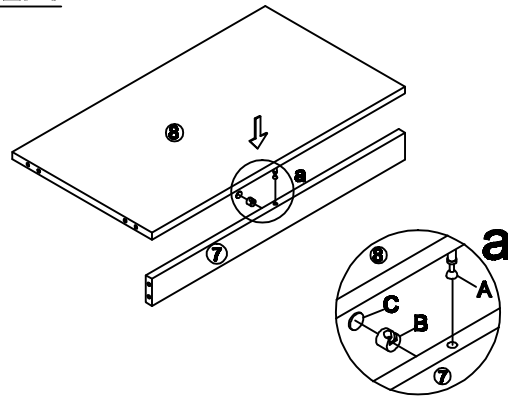

 
STEP2

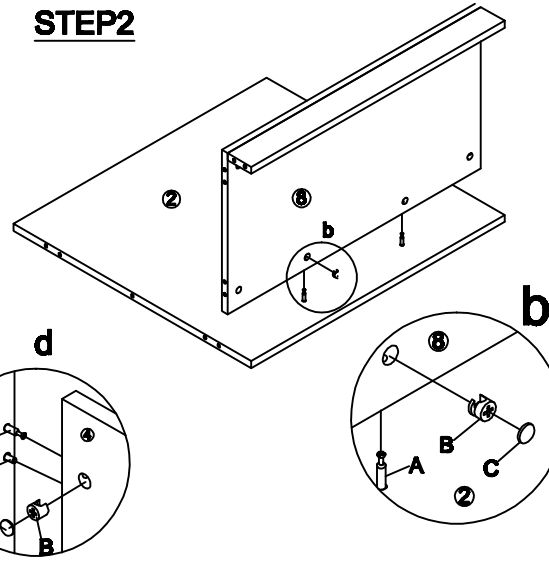



 
STEP3

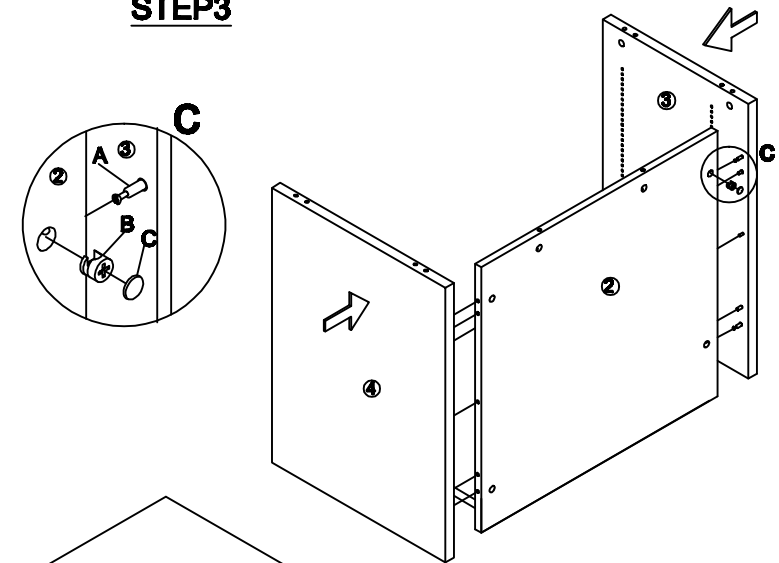

 STEP4

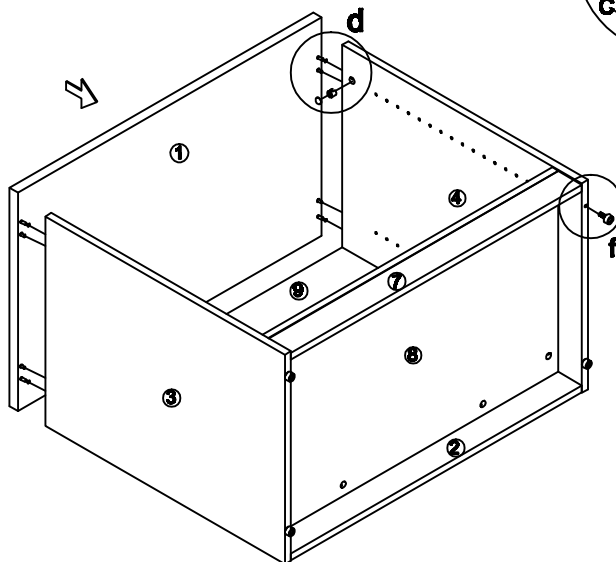

   STEP5

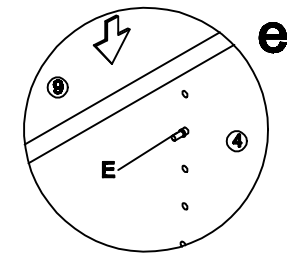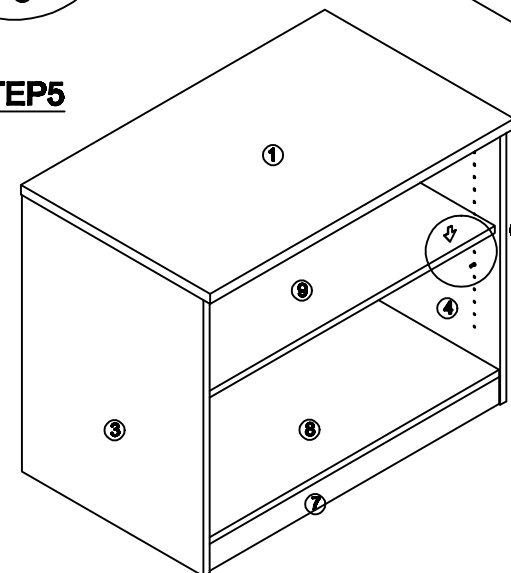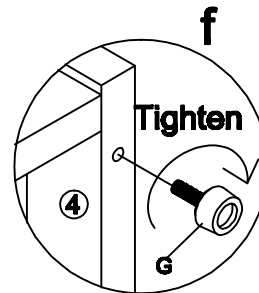


Assembly Instructions


MODEL NO.:N113

STORAGE CABINET

 STEP6

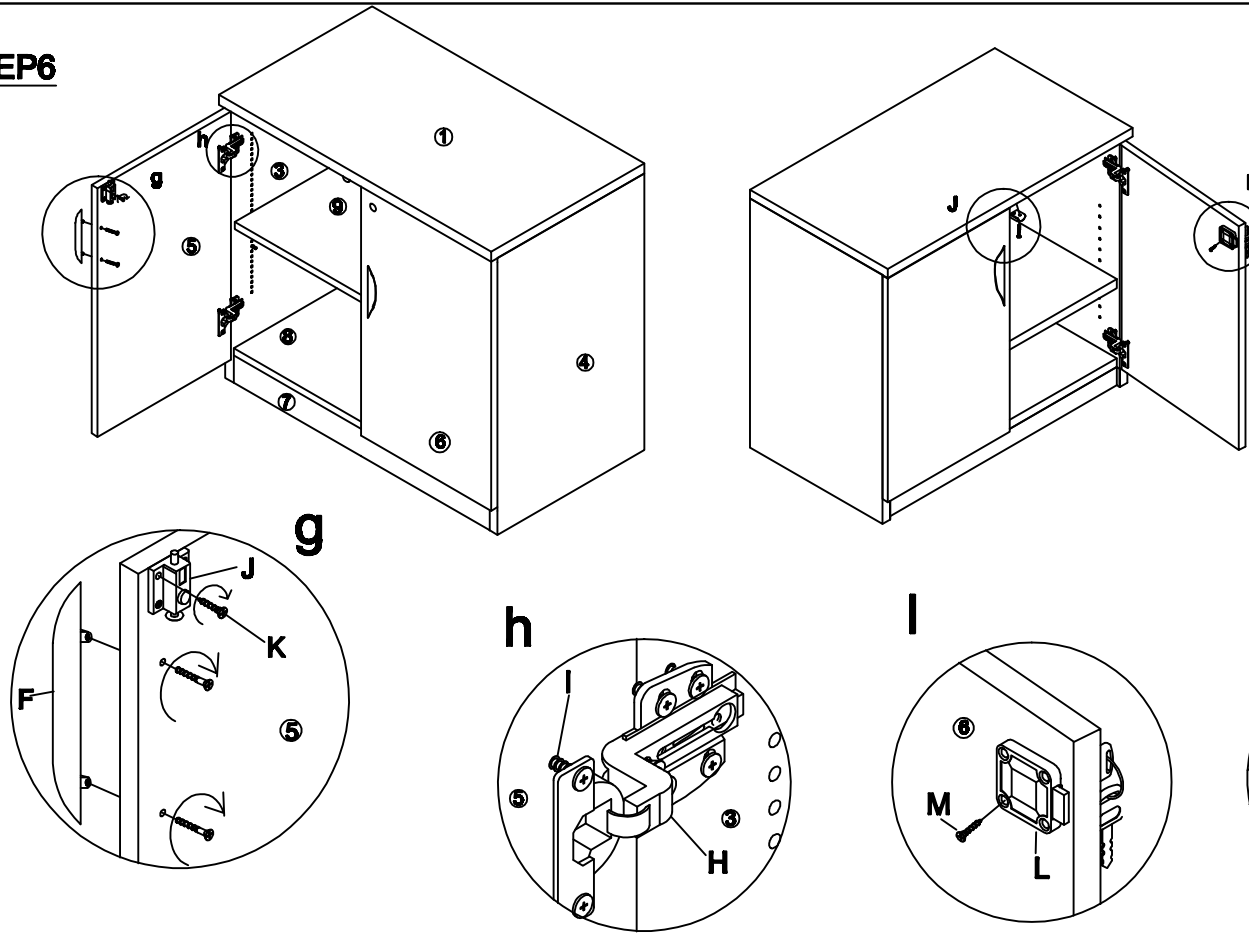


To adjust doors

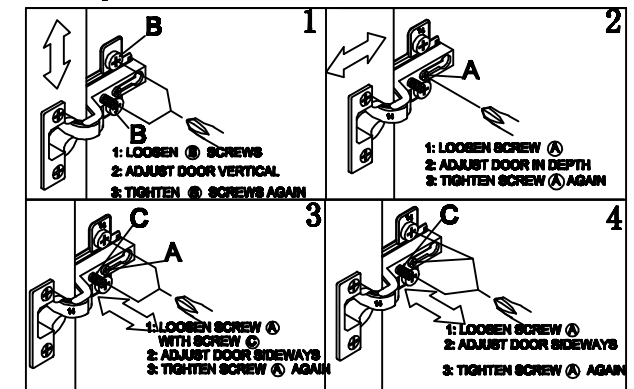 

IMPORTANT:
FUNCTION OF KLIX CAX

1/4 RIGHT
TURN FOR
LOCKING

 MAKE SURE THE ARROW IS
POING UPWARDS BEFORE
INSERTING INTO THE PANELS
HOLE

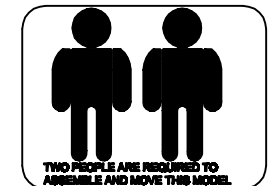

IMPORTANT NOTE

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children