

Item No: B118-14 Description: CHEST

MODEL: B118-14

REVISION: C

Component List			
No	Descriptions	Qty	
A	Side Panel (Left)	1	
В	Side Panel (Right)	1	
С	Left Leg (Front)	1	
D	Left Leg (Back)	1	
Е	Right Leg (Front)	1	
F	Right Leg (Back)	1	
G	Top Horizontal	2	
Н	Apron Panel	2	
I	Top Panel	1	
J	Back Panel	1	
K	Top Drawer Front	1	
L	Top Drawer Side (Left)	1	
M	Top Drawer Side (Right)	1	
N	Top Drawer Back	1	
О	Drawer Bottom Shelf	4	
P	Drawer Bottom support	4	
Q	Bottom Drawer Front	3	
R	Bottom Drawer Side (Left)	3	
S	Bottom Drawer Side (Right)	3	
T	Bottom Drawer Back	3	


Hardware List			
No	Descriptions		Qty
1	Big Camlock Ø15 x 12mm	2	24
2	Small Camlock Ø12 x 10mm	8	12
3	Camlock Screw	O TOTAL	36
4	Wooden Dowel 6mm x 30mm		48
5	PHCB Screw M4 x 16mm	M	18
6	PHCB Screw M4 x 32mm	A STATE OF THE PARTY OF THE PAR	20
7	Truss Head Screw M4 x 15mm		8
8	Handle	0	4

ASSEMBLY TIPS:


- Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

IMPORTANT NOTE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children!
- Tighten screws periodically! With the use of this product bolts and screws may become loose over time!

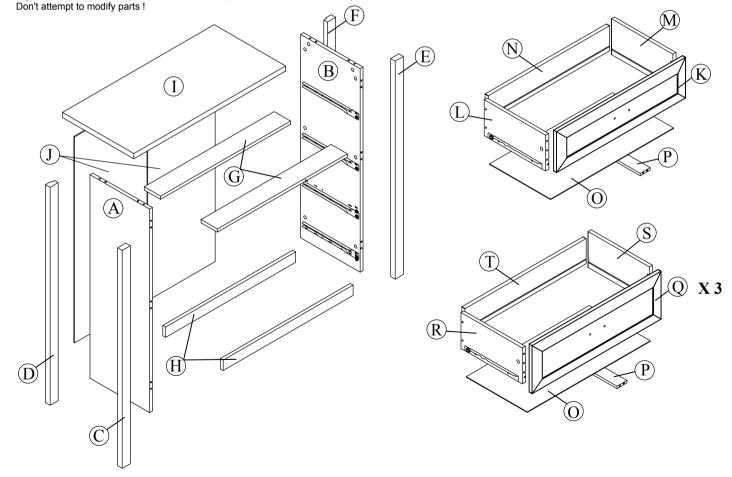




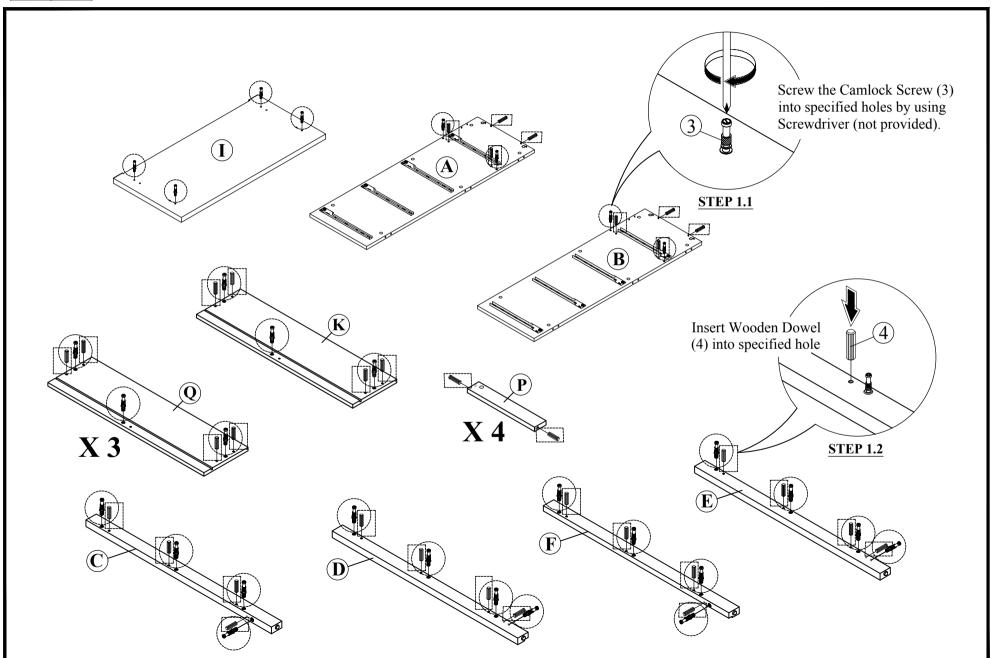




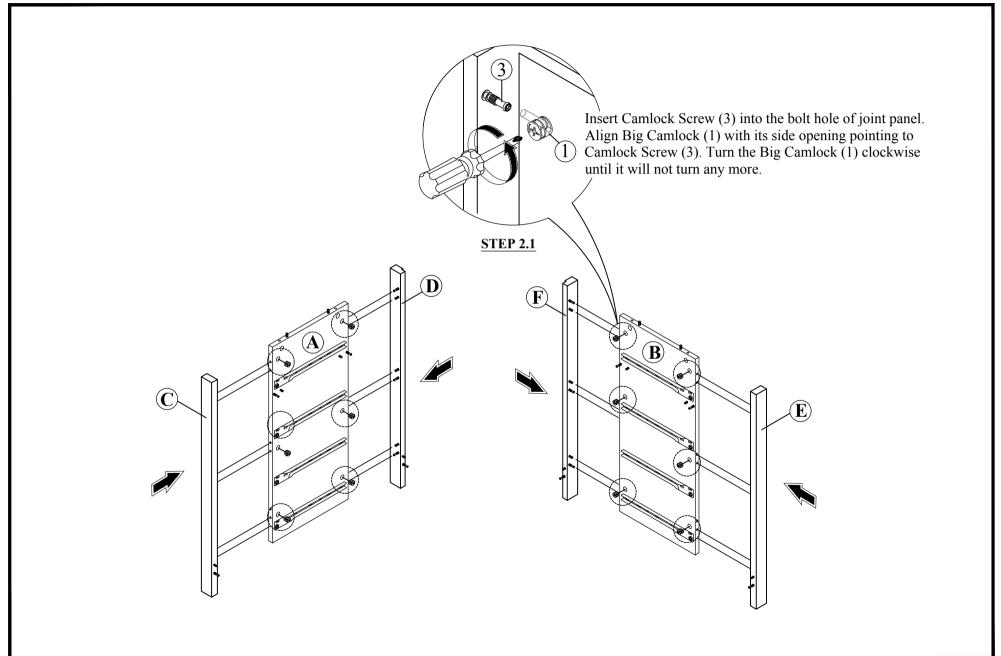




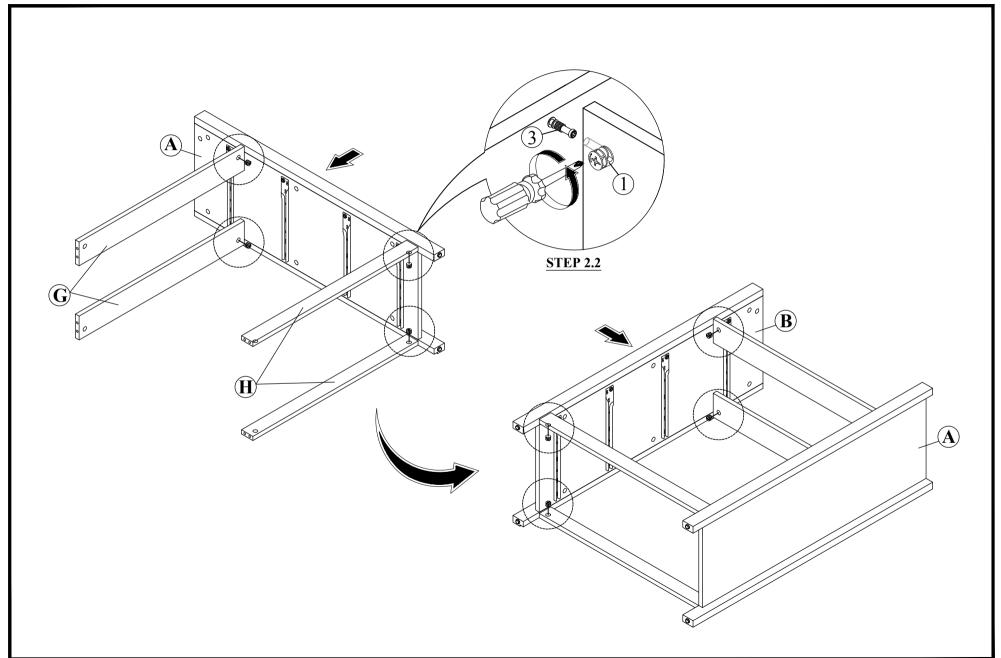



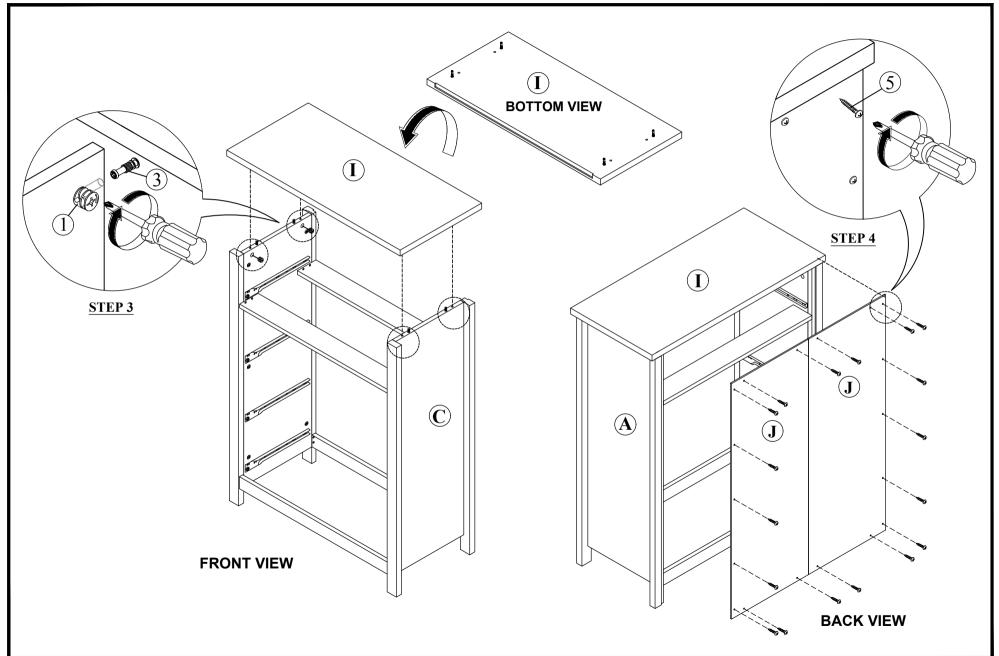



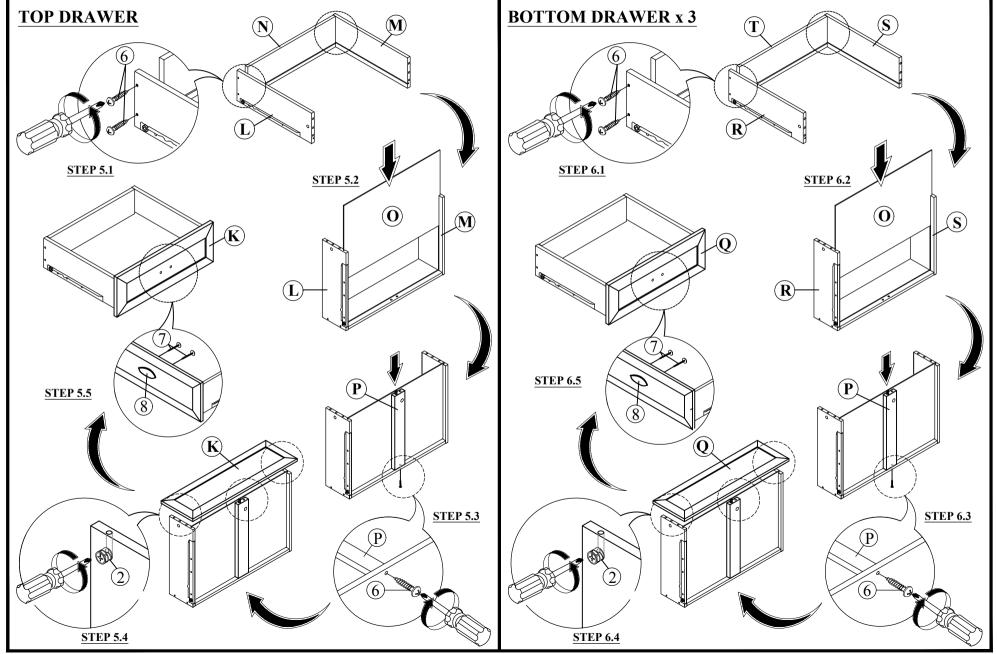

Page 6 of 7



