




UNDERCOUNTER DISHWASHER

MODELS:

KDPE204GPS0 (Stainless)

KDPE204GBS0 (Black Stainless)


DOOR AND PANEL PARTS

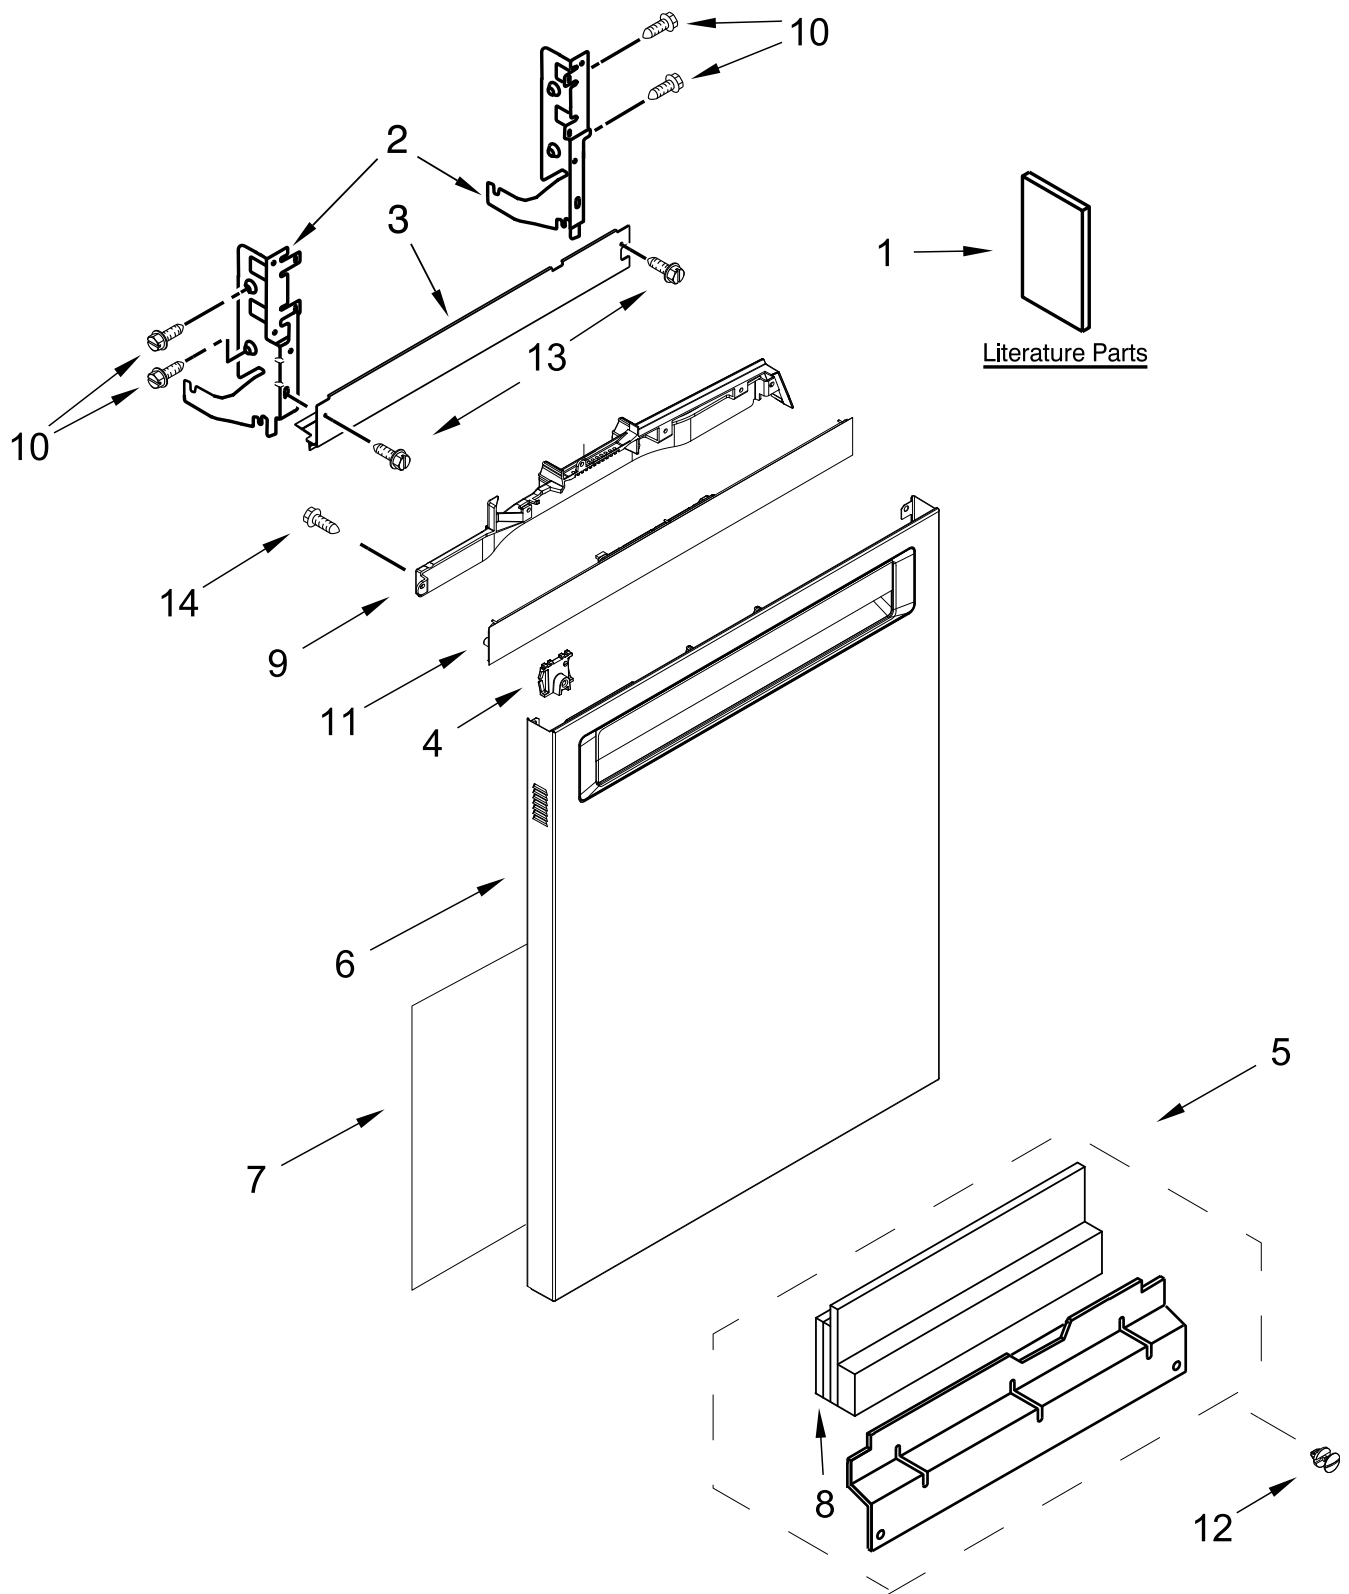

DOOR AND PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10844384	Barrier, Vapor	8	W10518815	Insulation, Four Layer
	W10806906	Installation Instructions	4	W10692757	Barrel Nut, Front Panel	9	W10858705	Cover, Handle Pocket
	W10909170	Energy Guide	5		Access Panel	10	3400071	Screw
	W11040103	Use & Care Guide		W10526114	Black	11	W10858692	Cover, Display Lens
	W10904612	Tech Sheet	6		Panel, Front (Includes Item 4)	12		Fastener
2		Arm, Hinge		W11024140	Stainless		W10503548	Black
	8534854	Left Hand		W10909521	Black Stainless	13	304392	Screw
	8534853	Right Hand	7	W10073520	Insulation, Door	14	W10273971	Screw


CONTROL PANEL AND LATCH PARTS

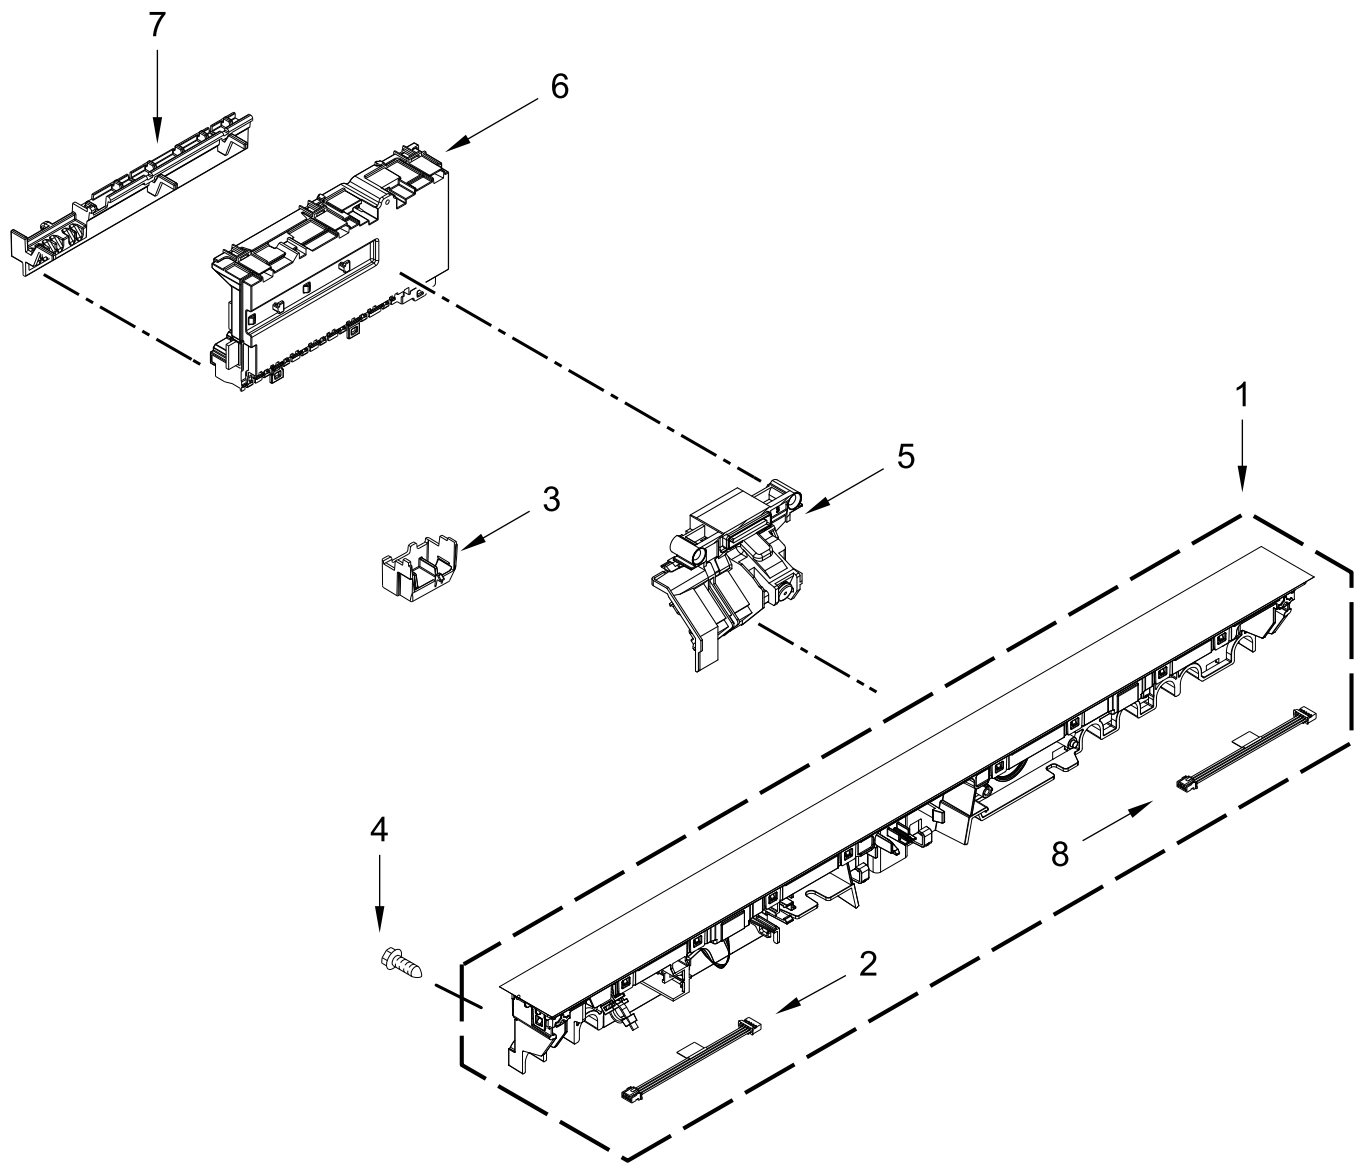

CONTROL PANEL AND LATCH PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console Assembly (Includes Insert)	3	W10825638	Box, Connector	6	W10913971	Control, Electronic
	W10905149	Black	4	W10348408	Screw	7	W10825369	Brace, Connector
2	W10889948	Jumper, 3-Wire	5	W10653840	Latch Assembly (Includes Switch)	8	W10899392	Jumper, 4-Wire

INNER DOOR PARTS

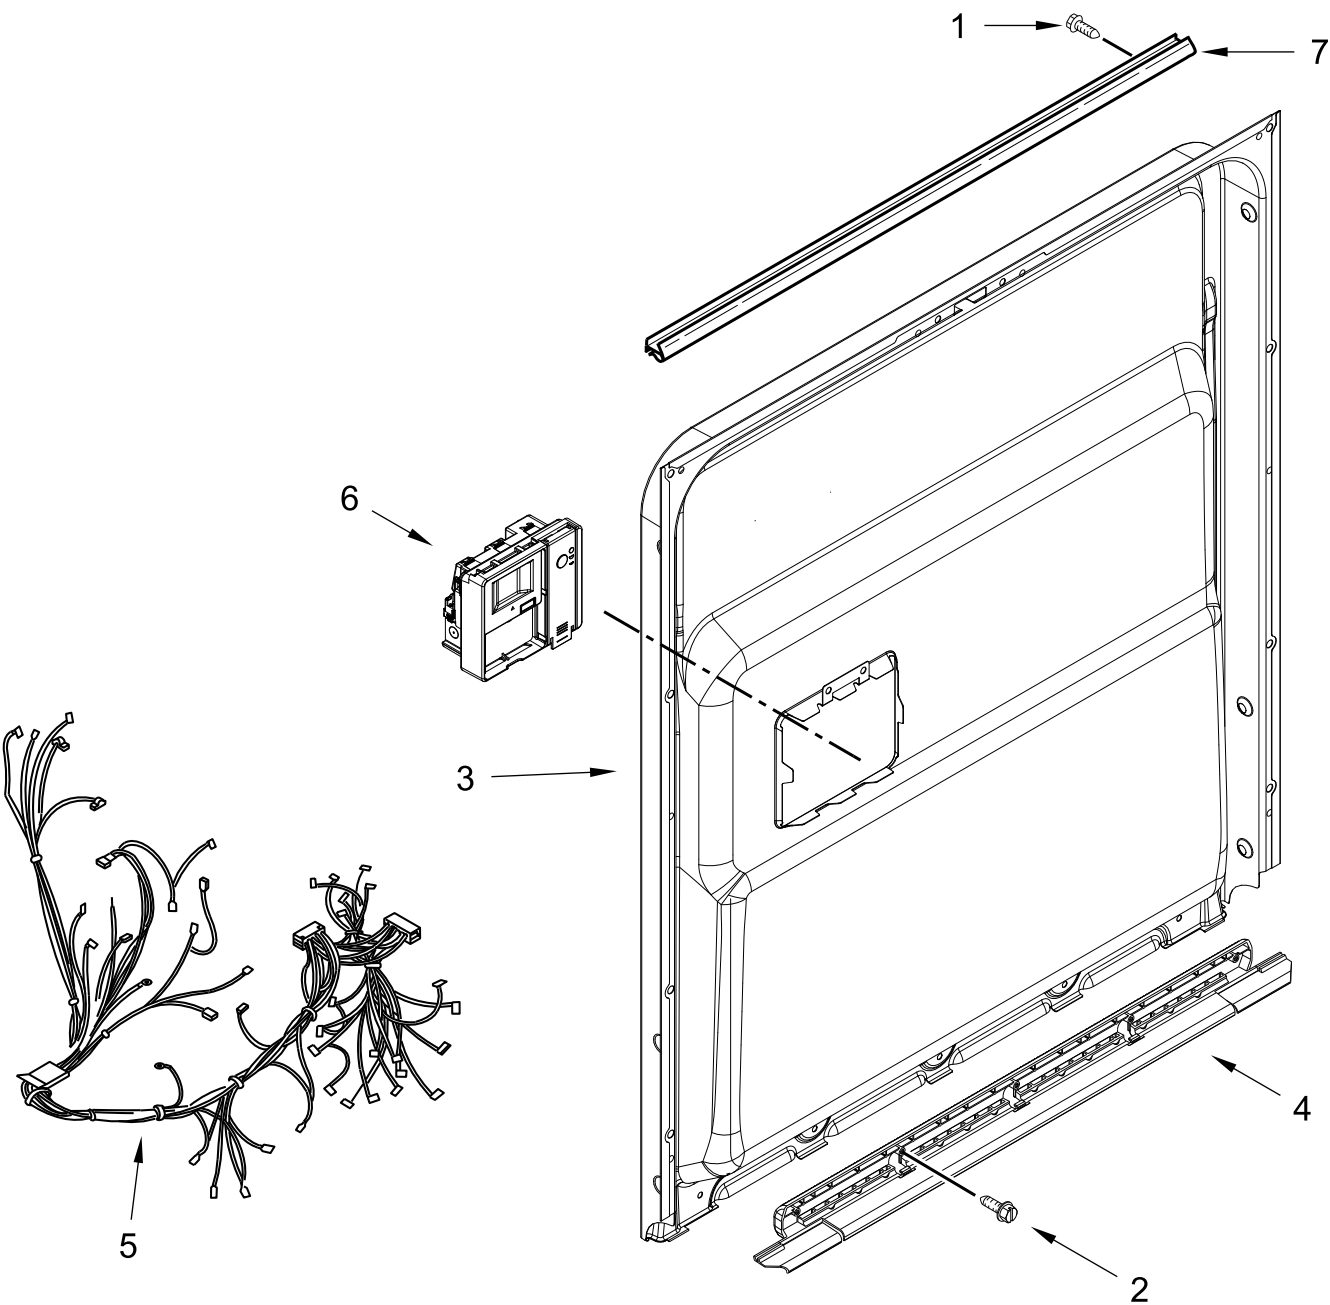


INNER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10348409	Screw
2	8281217	Screw
3	W10712597	Inner Door

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10667473	Seal, Door Bottom
5	W10889942	Wiring Harness

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	W10620296	Dispenser Assembly
7	W11050927	Seal, Console/Door


FILL, DRAIN AND OVERFILL PARTS

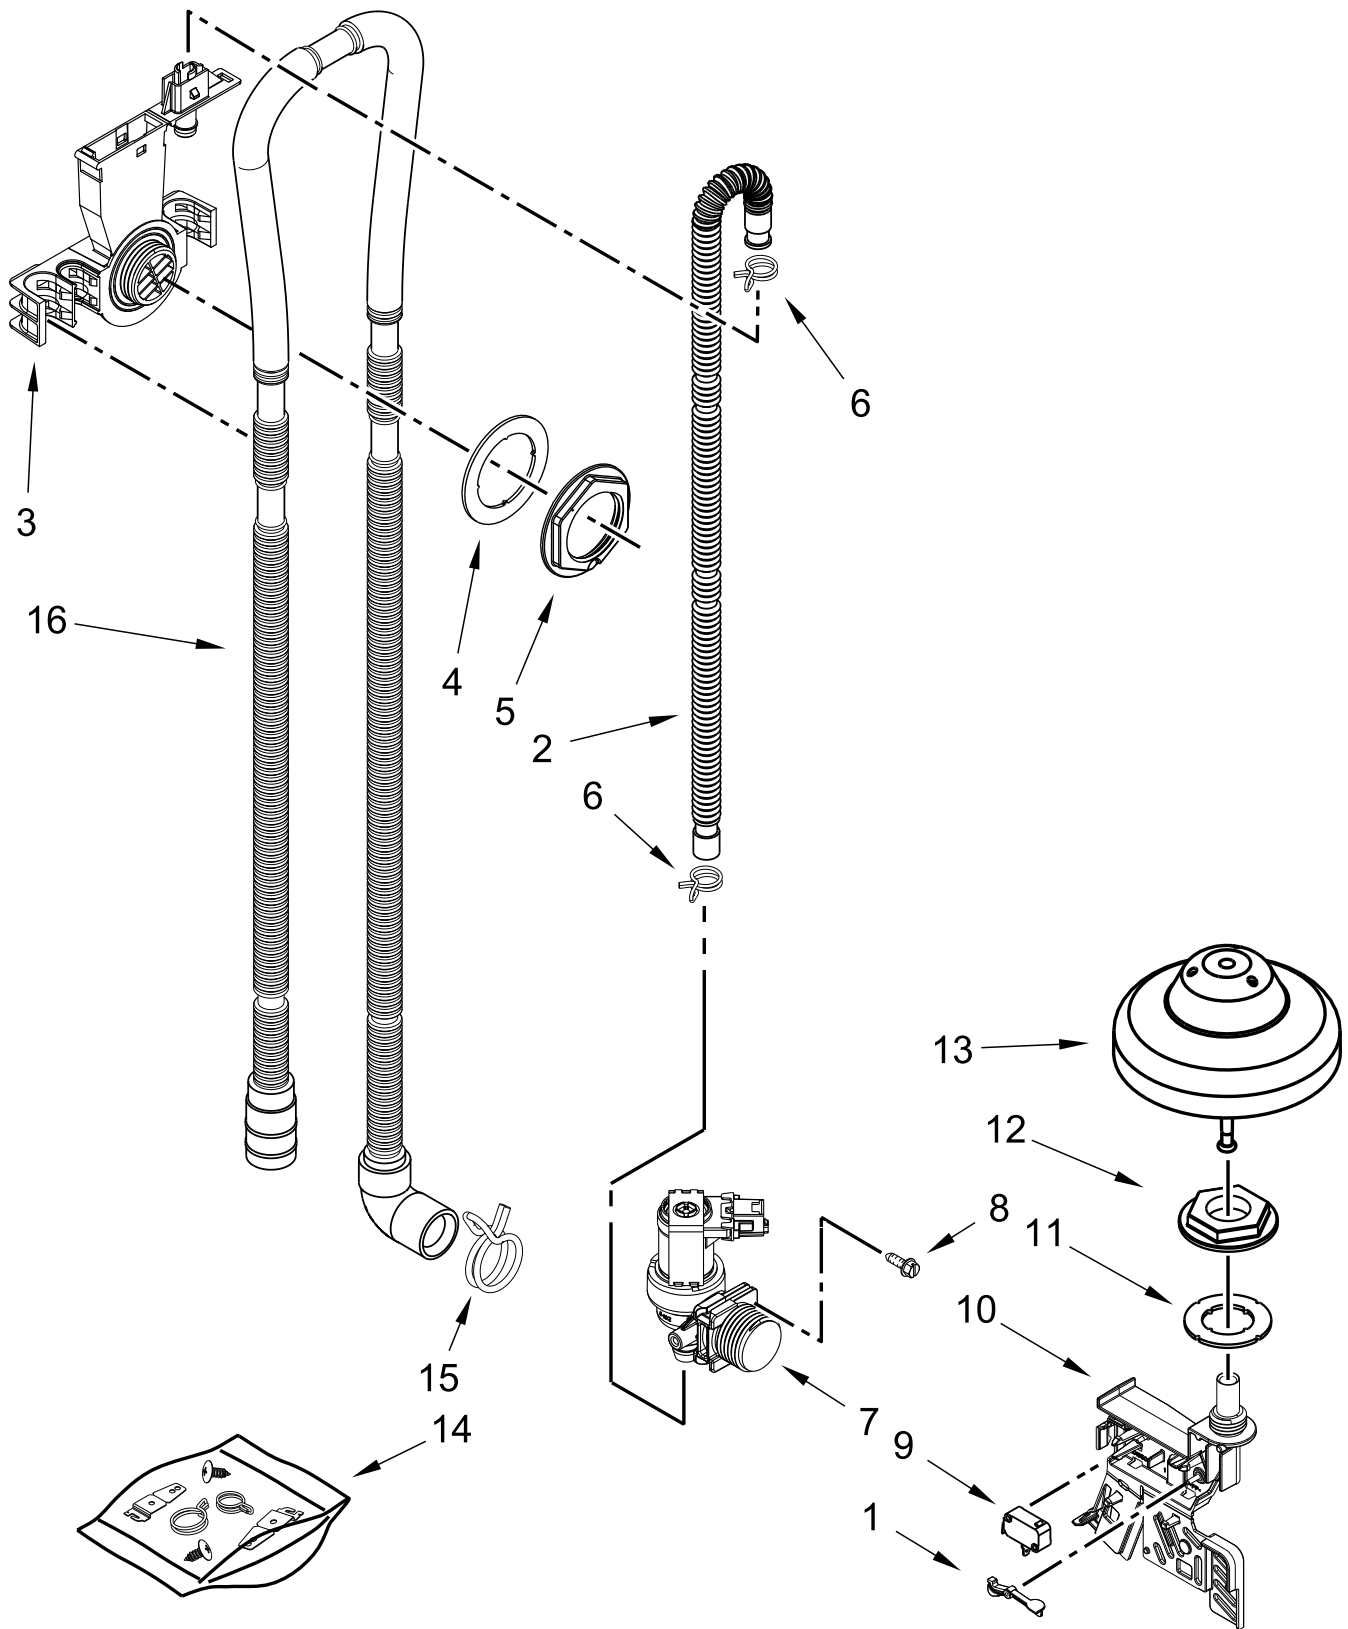

FILL, DRAIN AND OVERFILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10195037	Lever, Overfill Switch	7	W10327250	Fill Valve Assembly	13	W10195036	Float & Retainer Assembly
2	W10769066	Inlet, Hose	8	3390631	Screw	14	W10292152	Miscellaneous Parts Bag (Contains 2 Screws, 2 Clamps, & 2 Brackets)
3	W10195536	Inlet, Water (Also Order Item 4)	9	W10734532	Switch, Overfill Control			
4	8531323	Gasket	10	W10647205	Housing, Overfill (Also Order Item 11)	15	370445	Clamp, Hose
5	W10213825	Nut, Water Inlet (Also Order Item 4)	11	8531743	Gasket, Flat	16	W10545278	Drain loop with check valve assembly
6	371505	Clamp, Hose	12	W10195038	Nut, Standpipe			


TUB AND FRAME PARTS

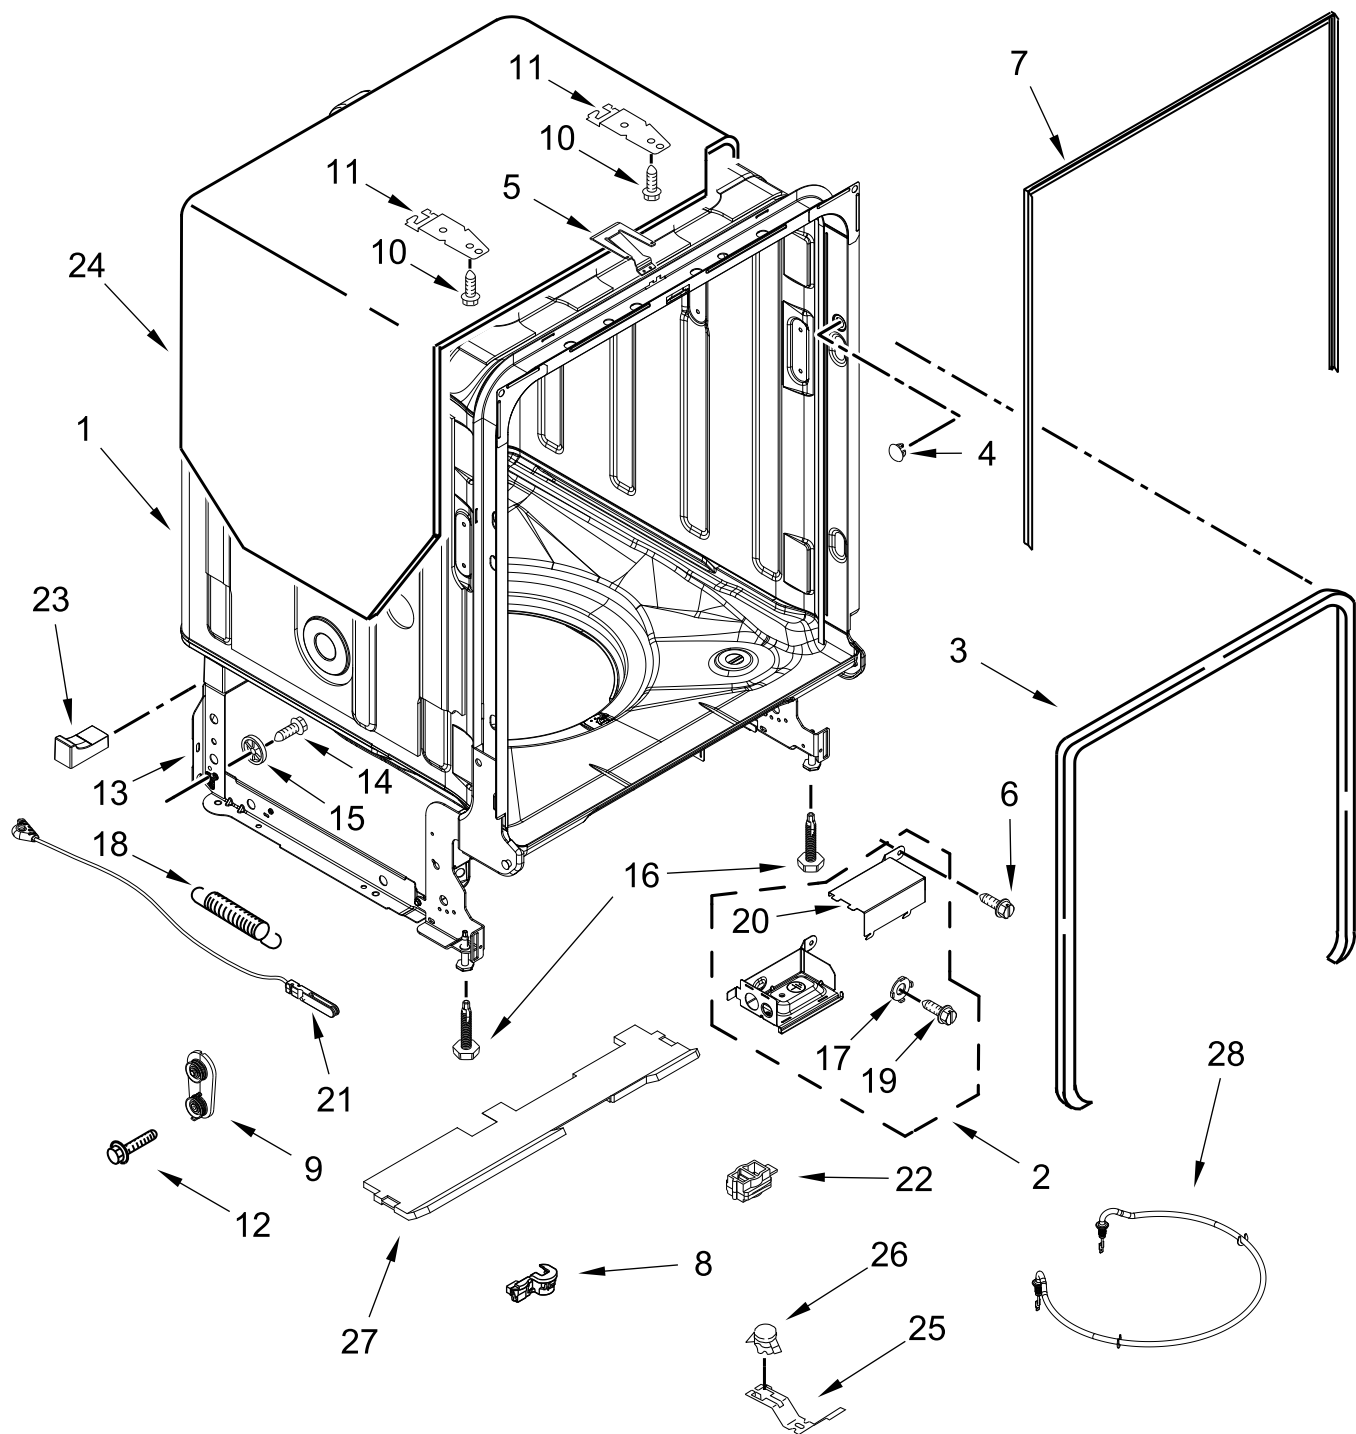

TUB AND FRAME PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11167962	Tub Assembly (Includes Heater Assembly)	13	W10681564	Support Assembly, Rear	24	W10866978	Shield, Tub Sound
2	W10713315	Assembly, Terminal Box	14	W10348411	Screw	25	W10300703	Bracket, Thermostat
3	W10660528	Gasket, Tub	15	W10190778	Wheel Leg	26	W10195091	Thermostat
4	W10813122	Plug, Tub	16	W10619352	Leveler, Leg	27	W10819539	Sound Insulation, Bottom
5	W10544004	Strike, Latch	17	3378128	Washer, Pronged Cup	28	W10696509	Heater Element Assembly
6	304392	Screw	18	8270020	Spring, Door Balance			(Includes Heater Washer & Nut)
7	W10835073	Seal, Cabinet	19	3400014	Screw, Grounding			NOTE: If heater element is removed, it must be replaced.
8	W10337661	Strain Relief	20	W10653292	Cover, Terminal Box			
9	W10084086	Door Balance Assembly	21	W10158291	Cable, Door			
10	3367670	Screw	22	W10292870	Shield, Thermostat			
11	8269145	Bracket, Undercounter	23		Spacer, Tub/Brace			
12	3400074	Screw		W10195630	Left Hand			
				W10195631	Right Hand			


PUMP, WASHARM AND MOTOR PARTS

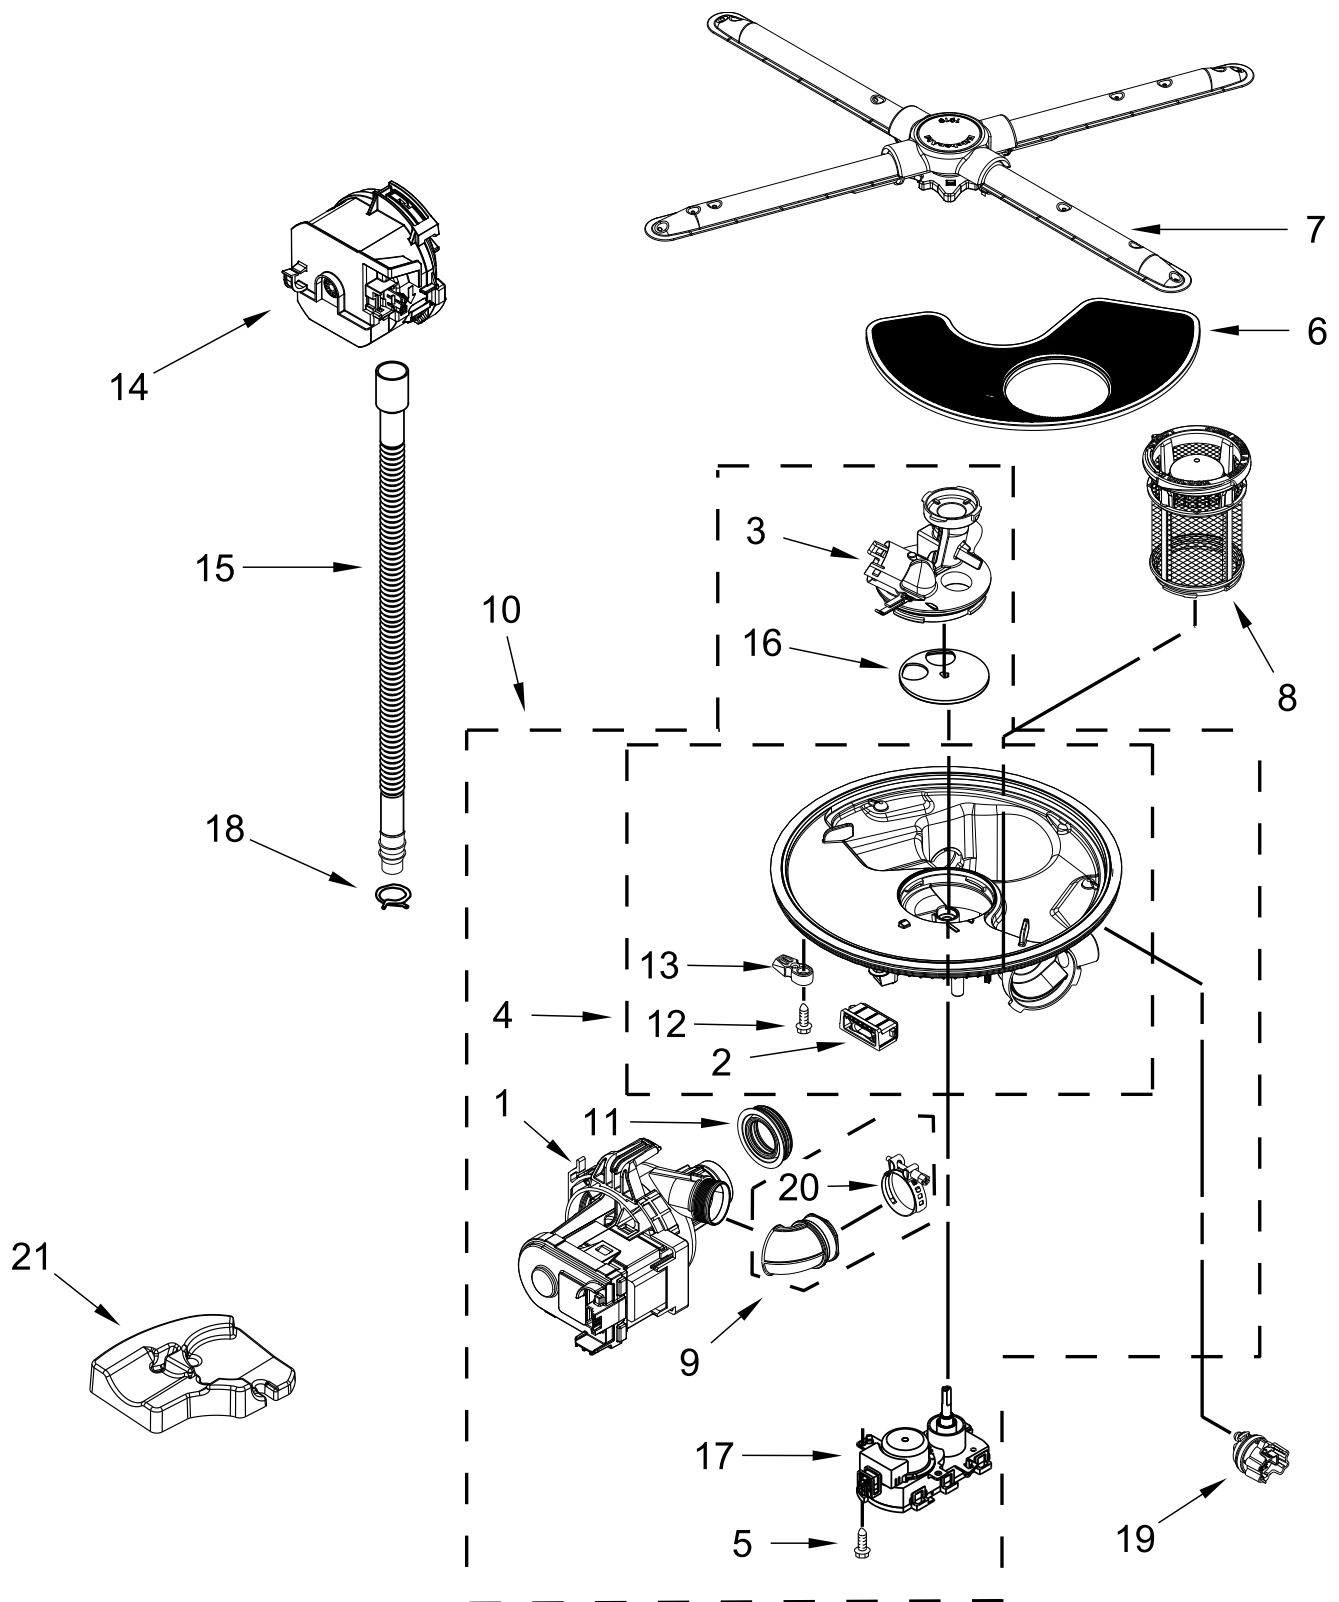

PUMP, WASHARM AND MOTOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10854710	Motor (Also Order Items 9 & 11)	7	W10858786	Wash Arm Assembly	14	W10724439	Pump, Drain
2	W10195086	Motor, Isolator	8	W10789806	Filter Cup Assembly	15	8269144	Hose, Drain
3	W10463894	Cover, Outlet	9	W10445975	Hose Assembly (Includes 2 Clamps)	16	W10476221	Disc, Diverter
4	W10455268	Sump With Seal (Also Order Items 9 & 11)	10	W10917112	Sump & Motor Assembly	17	W10849439	Motor, Diverter
5	9741232	Screw	11	W10538166	Grommet	18	8269146	Clamp, Hose
6	W10463906	Screen	12	W10348407	Screw	19	W10723295	Indicator, Optical Wash
			13	W10372113	Tab, Sump	20	W10789434	Clamp, Hose
						21	W10300776	Damper, Sump Assembly


UPPER WASH AND RINSE PARTS

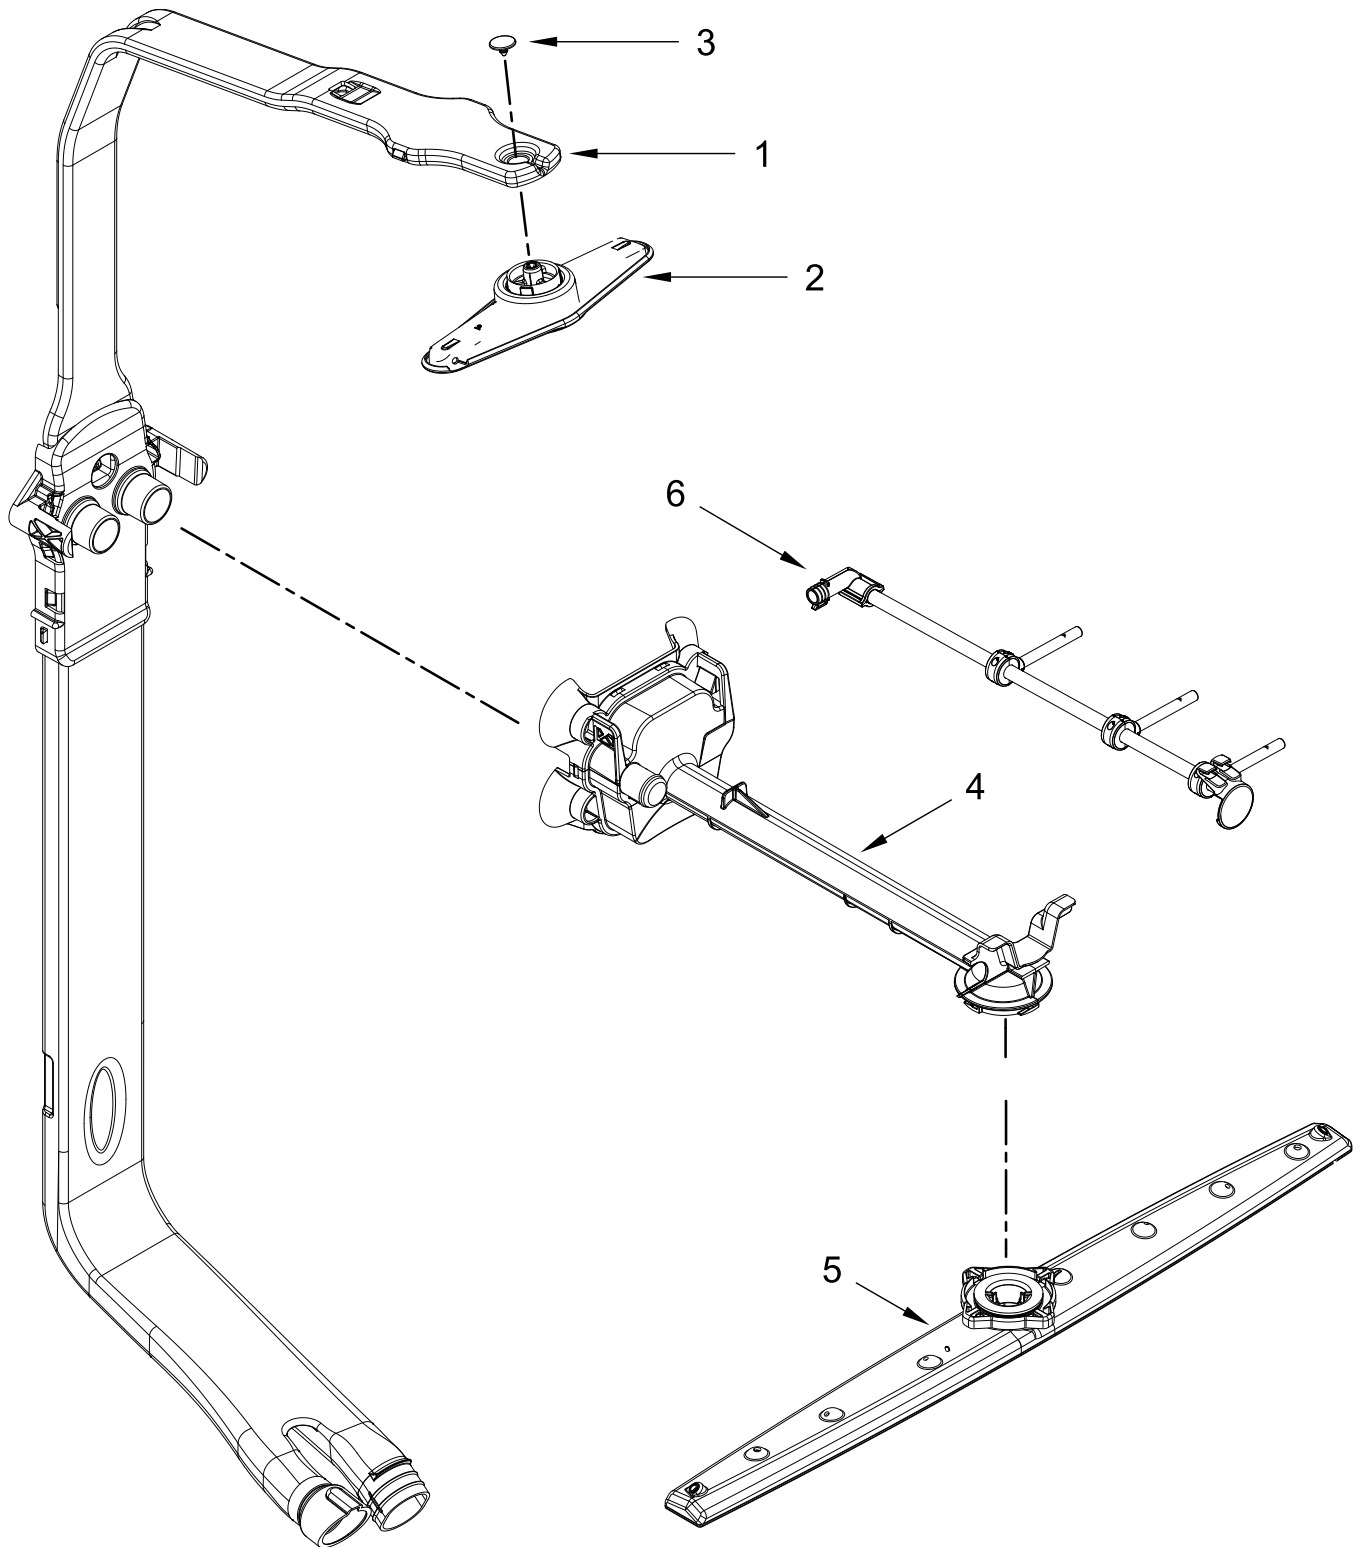

UPPER WASH AND RINSE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10753067	Feed Tube Assembly (Includes Items 2 & 3)	2	W10327455	Sprayarm, Third Level	4	W10900342	Manifold
			3	3400918	Retainer	5	W10448645	Sprayarm, Upper
						6	W10875047	Assembly, Bottle Wash


UPPER RACK AND TRACK PARTS

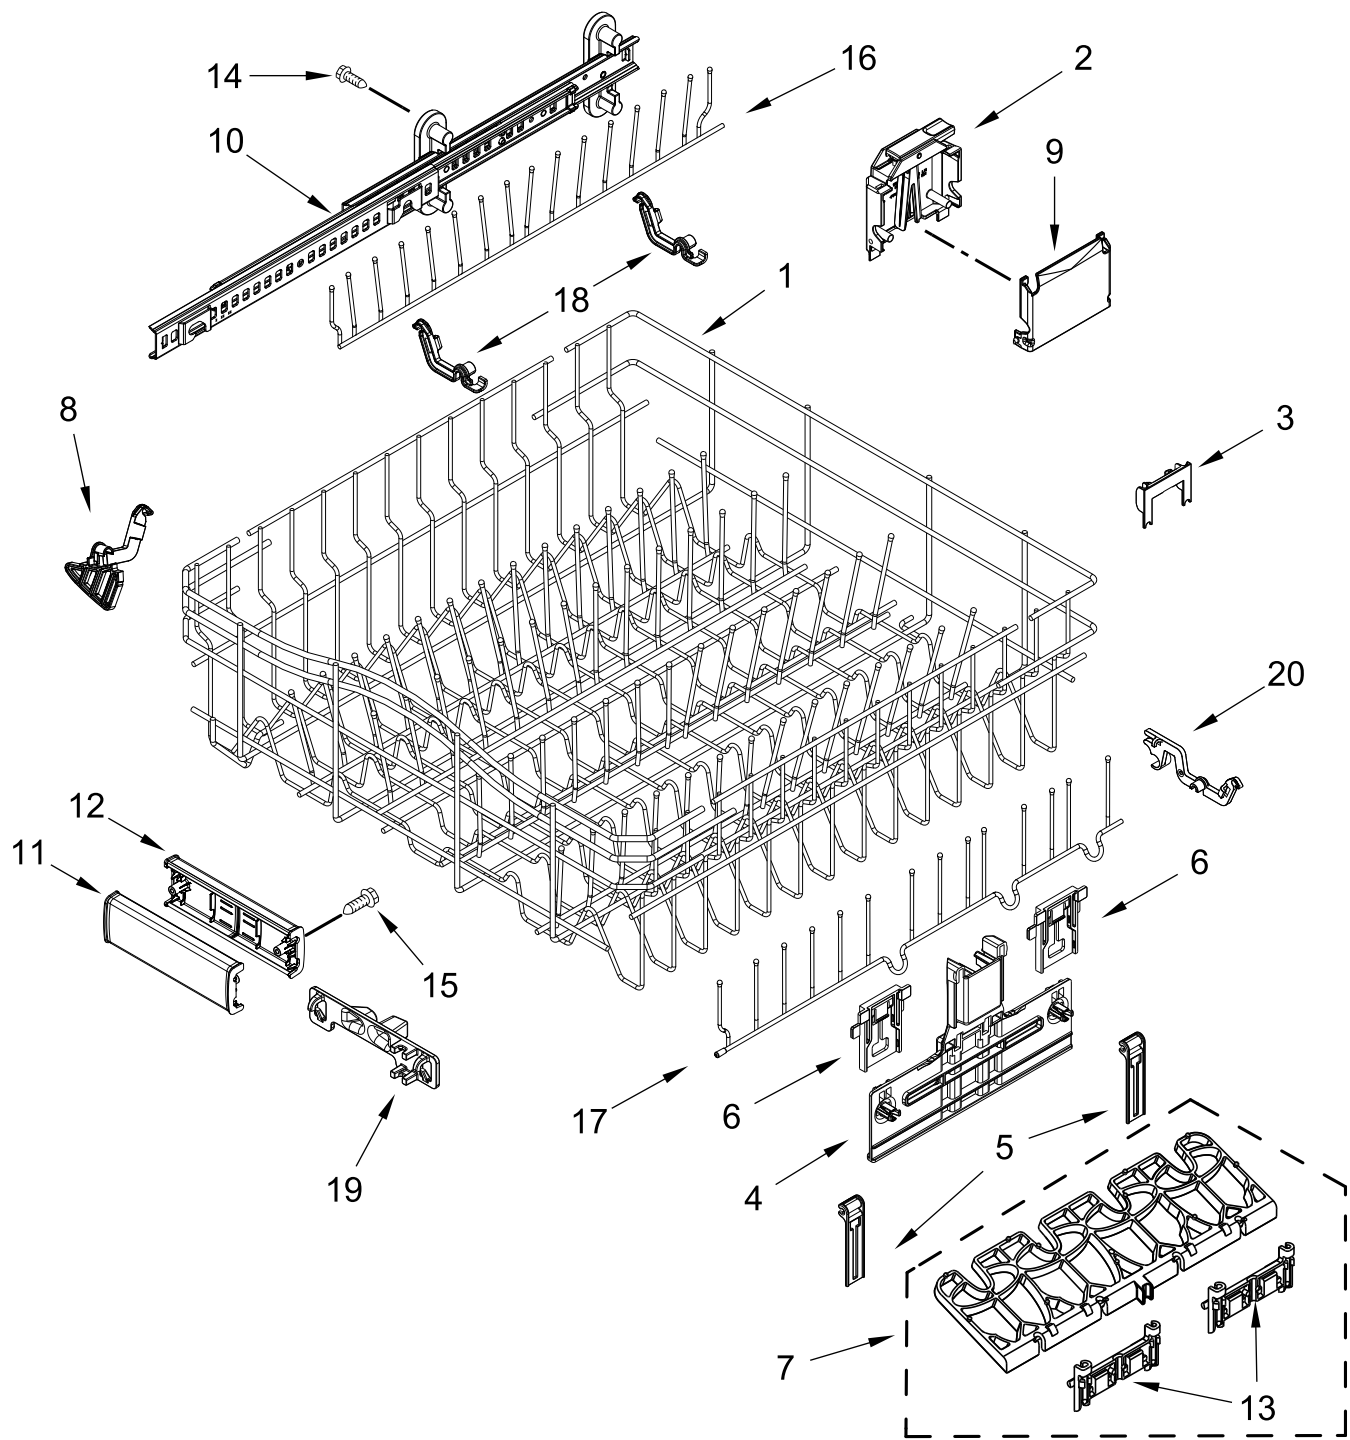

UPPER RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10350380	Dishrack, Upper	7	W10082649	Cupshelf Assembly	13	W10082848	Clip, Cupshelf
2		Housing, Adjuster (Includes Spring and Lever)	8	W10752617	Clip, Dispenser Guard	14	W10309090	Screw
	W10588164	Left Hand	9	W10250162	Cover, Adjuster	15	9741232	Screw
	W10588165	Right Hand	10		Track, Assembly	16	8562030	Tine Row, Fold Down
3	W10250160	Clip, Adjuster		W10914015	Left Hand	17	W10713311	Tine Row, Fold Down
4	W10546503	Adjuster Assembly		W10914016	Right Hand	18	W10082853	Clip, Pivot
5	W10195839	Strap, Tether Adjuster	11	W10778309	Handle, Dishrack Front	19	8539102	Positioner, Dual Dishrack
6	W10195840	Positioner, Adjuster	12	W10473792	Handle, Dishrack Rear	20	W10875054	Retainer, Feedtube

LOWER RACK PARTS

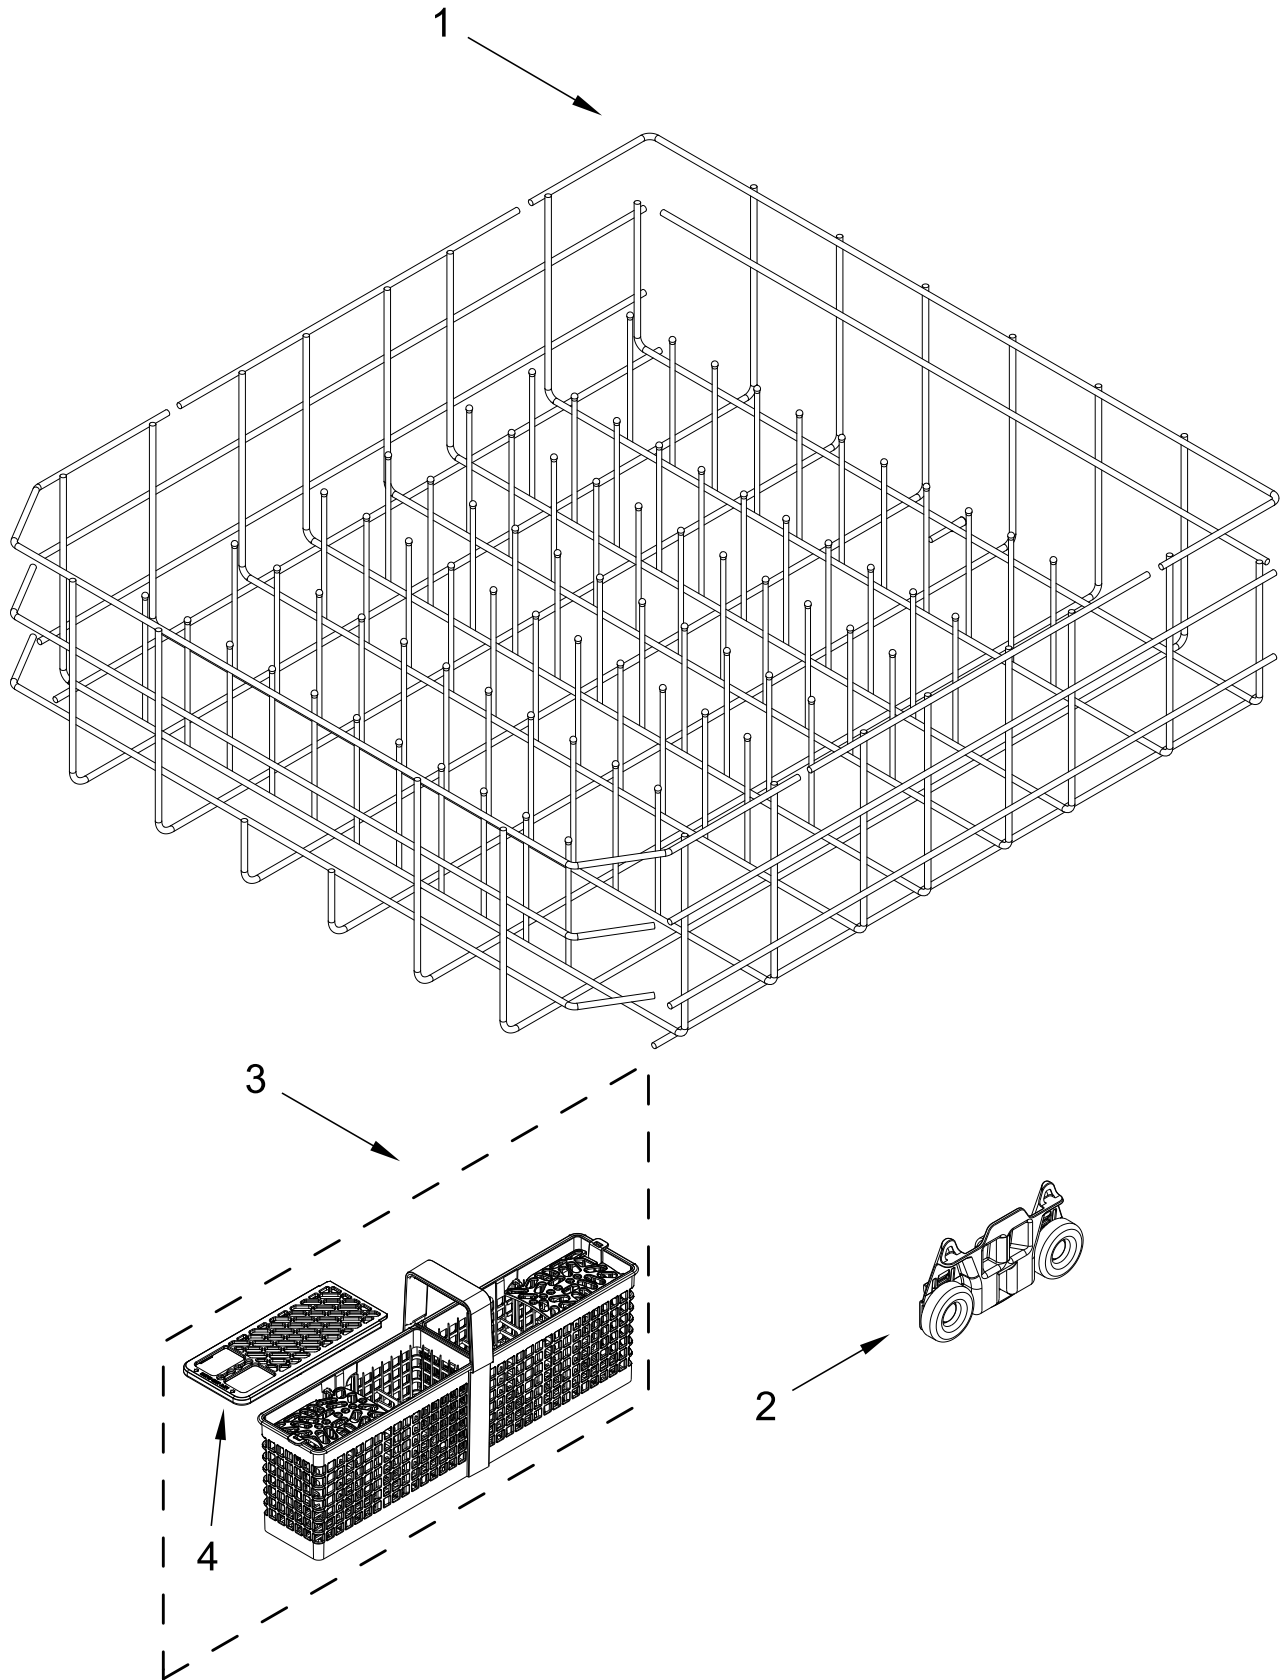

LOWER RACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10525641	Dishrack, Lower	3	W10473836	Basket Assembly, Silverware
2	W10195416	Wheel & Transport Assembly	4	W10473835	Lid, Silverware Basket

OPTIONAL PARTS (NOT INCLUDED)

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		TOWEL BAR HANDLE
W10701399		Stainless
		DISHRACK ACCESSORIES
W10712311		Anti-Tarnish Silverware Basket
W10712312		Cutlery Dishwasher Basket
W10712313		Bottle/Vase Holder
		DRAIN HOSE
W10712310		12 Ft.
		VINYL TOUCH-UP (4oz)
676453		White
676455		Grey
4396853		Silver Atlantis
		MOISTURE BARRIER KIT
4396277		Barrier Kit

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	4396603	Meteorite

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)
	4392900	Biscuit/Bisque

POWER CORD KIT

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4317824	Power Cord Kit (Included Cord & Misc. Hardware)

ANTI-TIP KIT

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	8171477	Floor Mount Kit
	8212560	Side Mount Kit

DISHRACK REPAIR

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396838	White
	4396840	Grey
	4396854	Silver Atlantis