




30" ELECTRIC FREESTANDING SELF-CLEAN RANGE

MODELS:

WFC310S0EB4 (Black)
WFC310S0EW4 (White)


COOKTOP PARTS

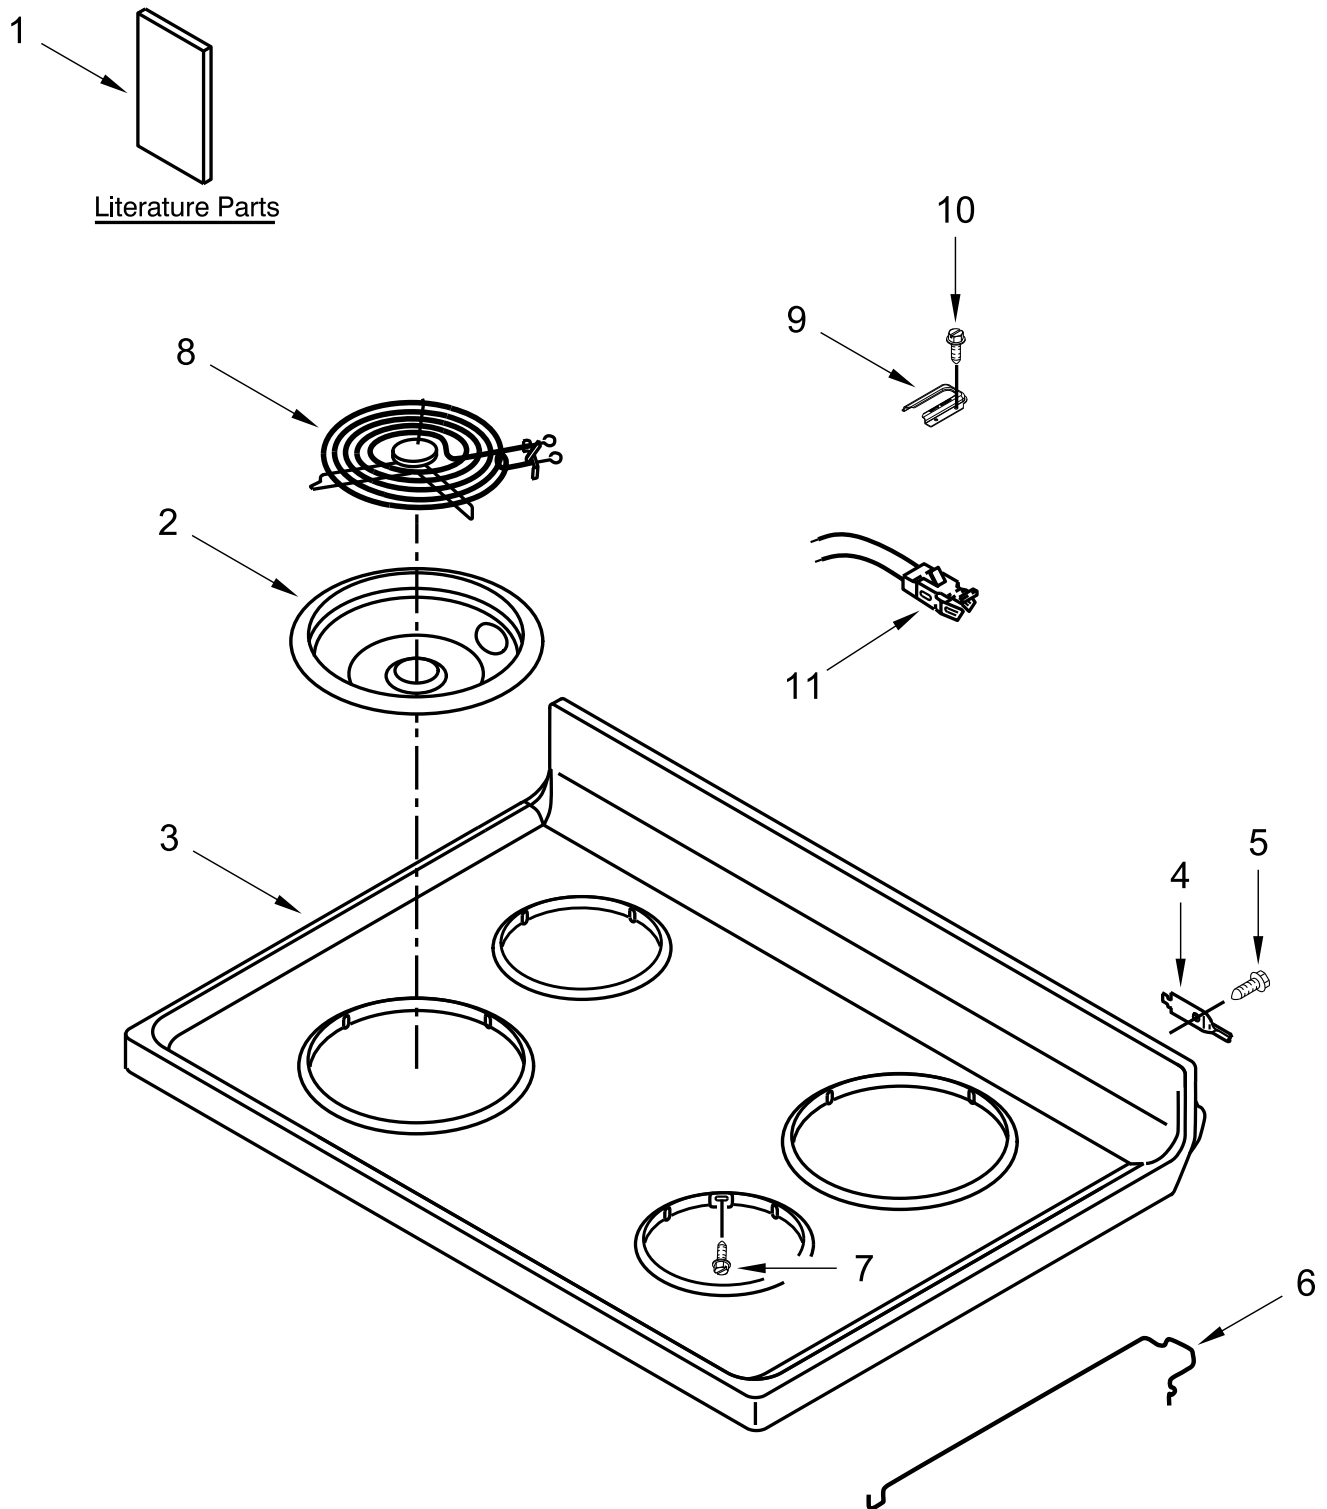

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	3196178	Screw	11	814399	Receptacle, Element
	W11047681	Instructions, Installation	6	3195812	Rod, Support			FOLLOWING PARTS NOT ILLUSTRATED
	W11235900	Owner's Manual	7	3196154	Screw			
	W11327942	Wiring Diagram	8	W11364019	Element, Coil Heating (2400W)		W11226234	Harness, Main
2	W10196405	Bowl, Drip (8") (Left Front and Right Rear)			(Left Front and Right Rear)		W11134595	Harness, Cooktop
	W10196406	Bowl, Drip (6") (Left Rear and Right Front)		W11364018	Element, Coil Heating (1500W)		W11172524	Harness, Sensor
					(Left Rear and Right Front)		W10281322	Kit, Bare Wire Adapter Block
3		Cooktop	9	W10306542	Bracket, Anti-Tip			
	3186233	Black	10	7101P485-60	Screw, Anti-Tip Kit			
	3186231	White						
4	3195060	Hinge, Cooktop						


CONTROL PANEL PARTS

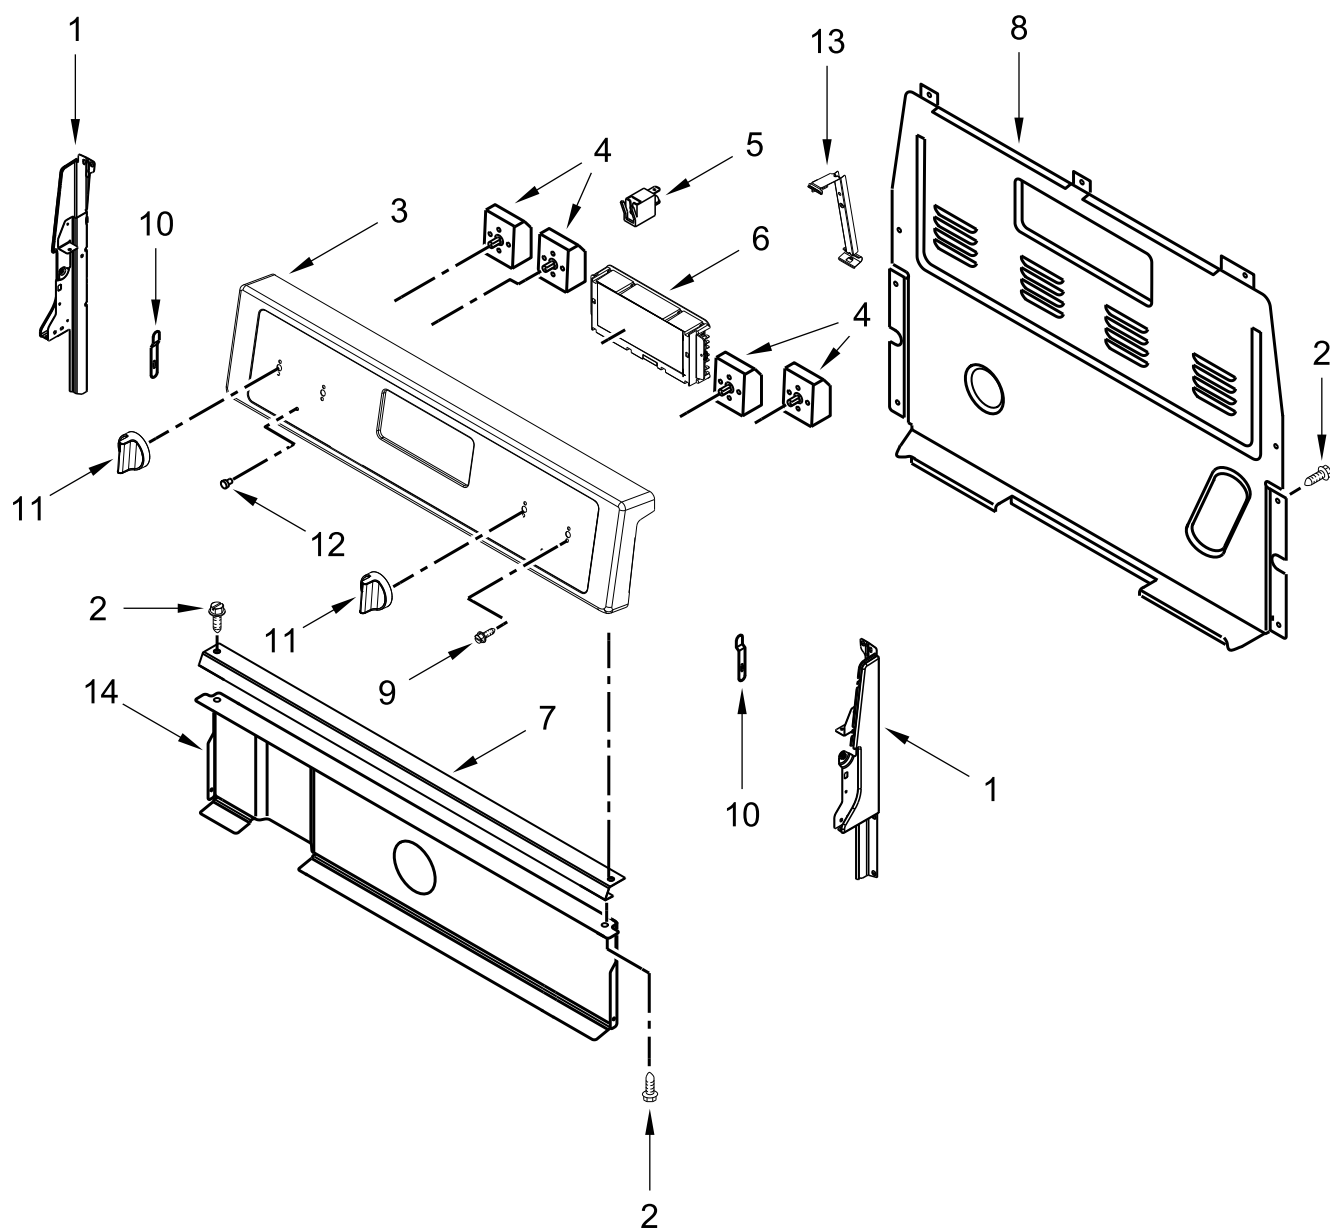

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148954	Switch, Infinite (Orange)	7	W10525121	Bracket, Console Mounting
	W11130372	Black (Left)			(Left Front and Right Rear)	8	8272473	Cover, Upper Rear
	W11130379	Black (Right)				9	3400882	Screw
	W11130371	White (Left)		3148952	Switch, Infinite (Yellow)	10	3196200	Clip, Spring
	W11130378	White (Right)			(Left Rear and Right Front)	11		Assembly, Control Knob
2	3196178	Screw					W10676213	Black
3		Panel, Console	5	W10432504	Hot Surface Indicator		W10676214	White
	W11135505	Black	6		Control, Electric (LCC 190)	12	3196068	Lens, Indicator
	W11135506	White		W10887924	Black	13	W10695491	Bracket, Control
				W10887923	White	14	W10134247	Shield, Heat


CHASSIS PARTS

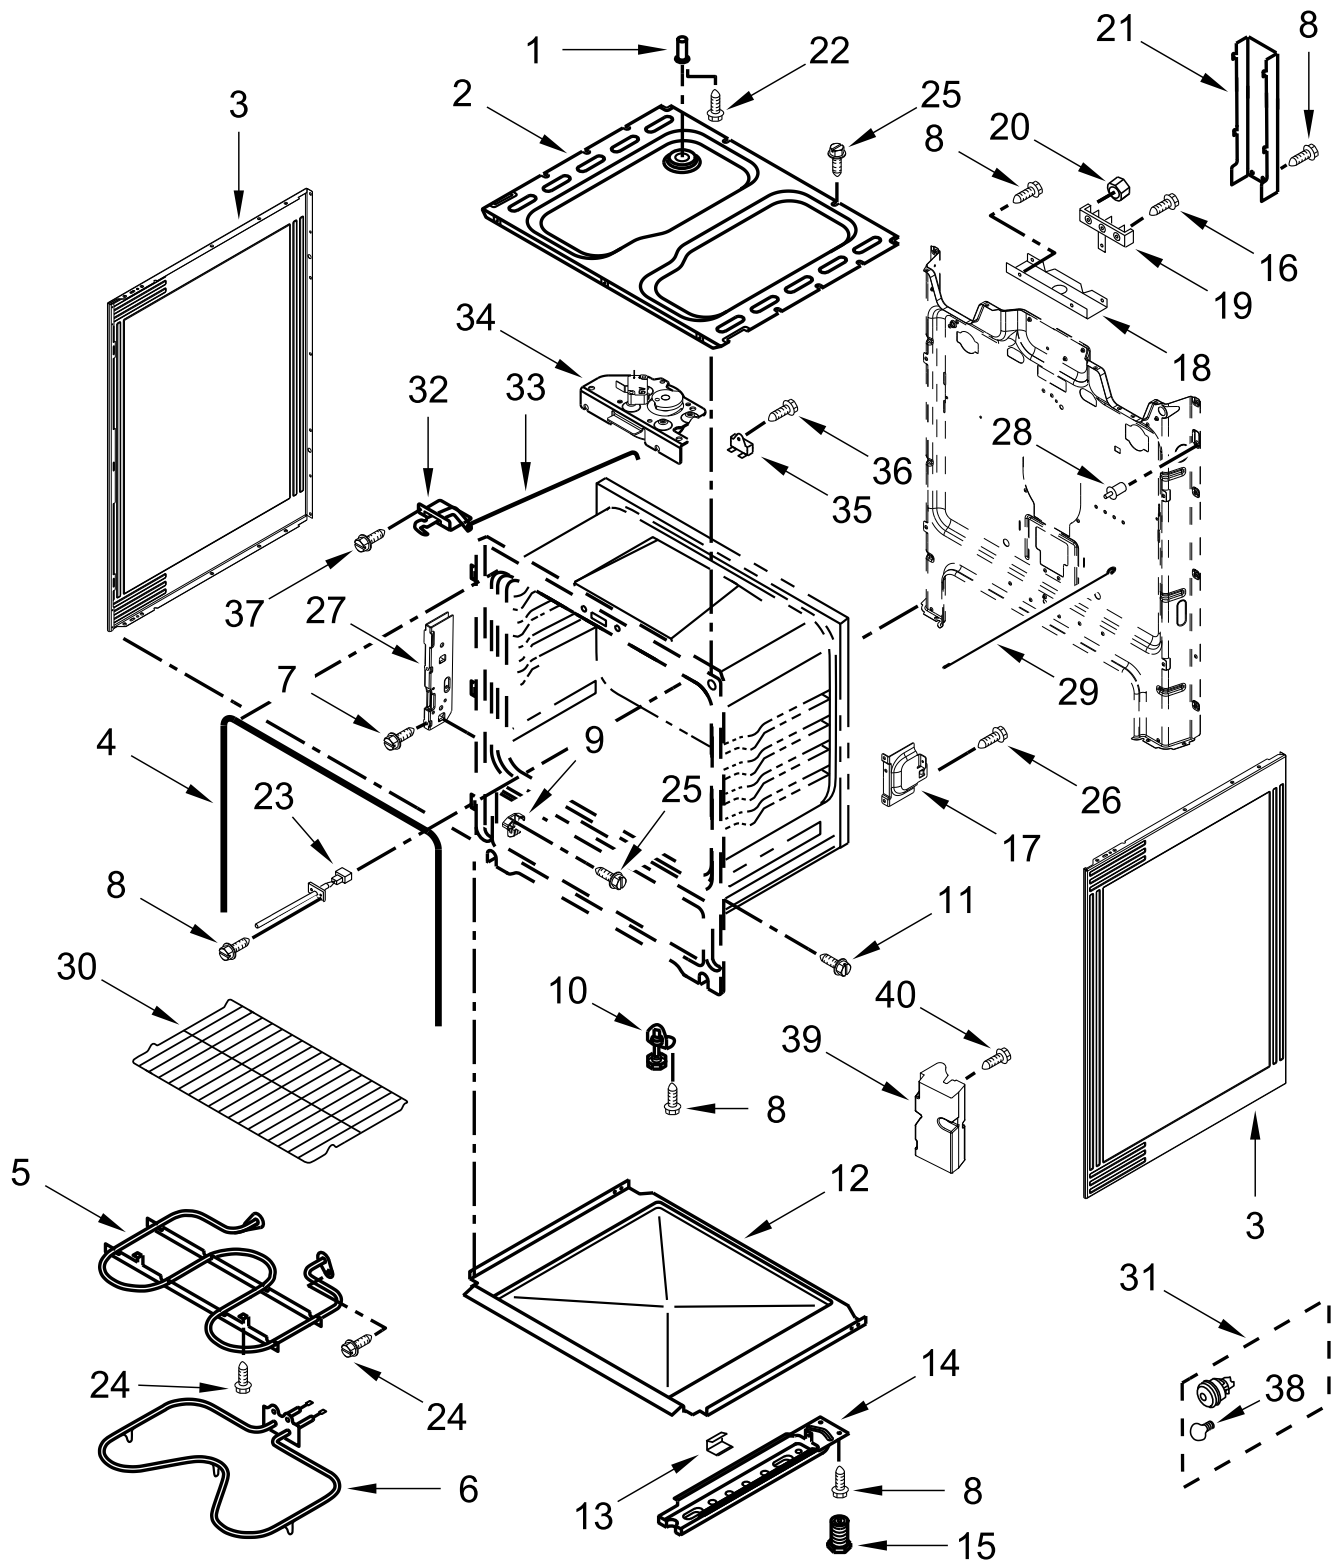

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222268	Vent Tube	16	3400016	Screw	35	3196548	Fuse, Thermal
2	W10209613	Box, Burner	17	W10404688	Clip, Oven Support	36	3196172	Screw
3		Panel, Side	18	3186034	Bracket, Service	37	3196560	Screw
	W10162245	Black	19	W10245259	Block, Terminal	38	W10571723	Bulb, Halogen 40 Watts
	W10575396	White	20	3400029	Nut			
4	W10658354	Seal, Door	21	W10326122	Cover, Terminal Block	39	W10910404	Counterweight
5	W10308476	Element, Broil	22	3196567	Screw	40	W11034869	Screw
6	W11022836	Element, Bake	23	W10181986	Sensor, Oven			FOLLOWING PARTS NOT ILLUSTRATED
7	W10031780	Screw	24	3196174	Screw			
8	3196178	Screw	25	3196165	Screw	W10774939		Insulation, Wrap
9	W10674705	Glide, Drawer Front	26	3196169	Screw	W11127325		Insulation, Back
10	W10341186	Assembly, Front Foot	27	W10289077	Receiver, Hinge			
11	W10067840	Screw	28	W10627802	Switch, Door			
12	8054068	Retainer, Insulation	29	9757239	Rod, Door Switch			
13	W10137382	Clip, Panel	30	W10268578	Rack, Oven			
14	W10390008	Assembly, Base Rail (Left)	31	W11175594	Assembly, Light			
	W10390007	Assembly, Base Rail (Right)	32	9761013	Assembly, Door Latch (Front)			
			33	W10078380	Rod, Latch			
15	W10058460	Foot, Leveling	34	W10107820	Assembly, Door Latch (Rear)			

DOOR PARTS

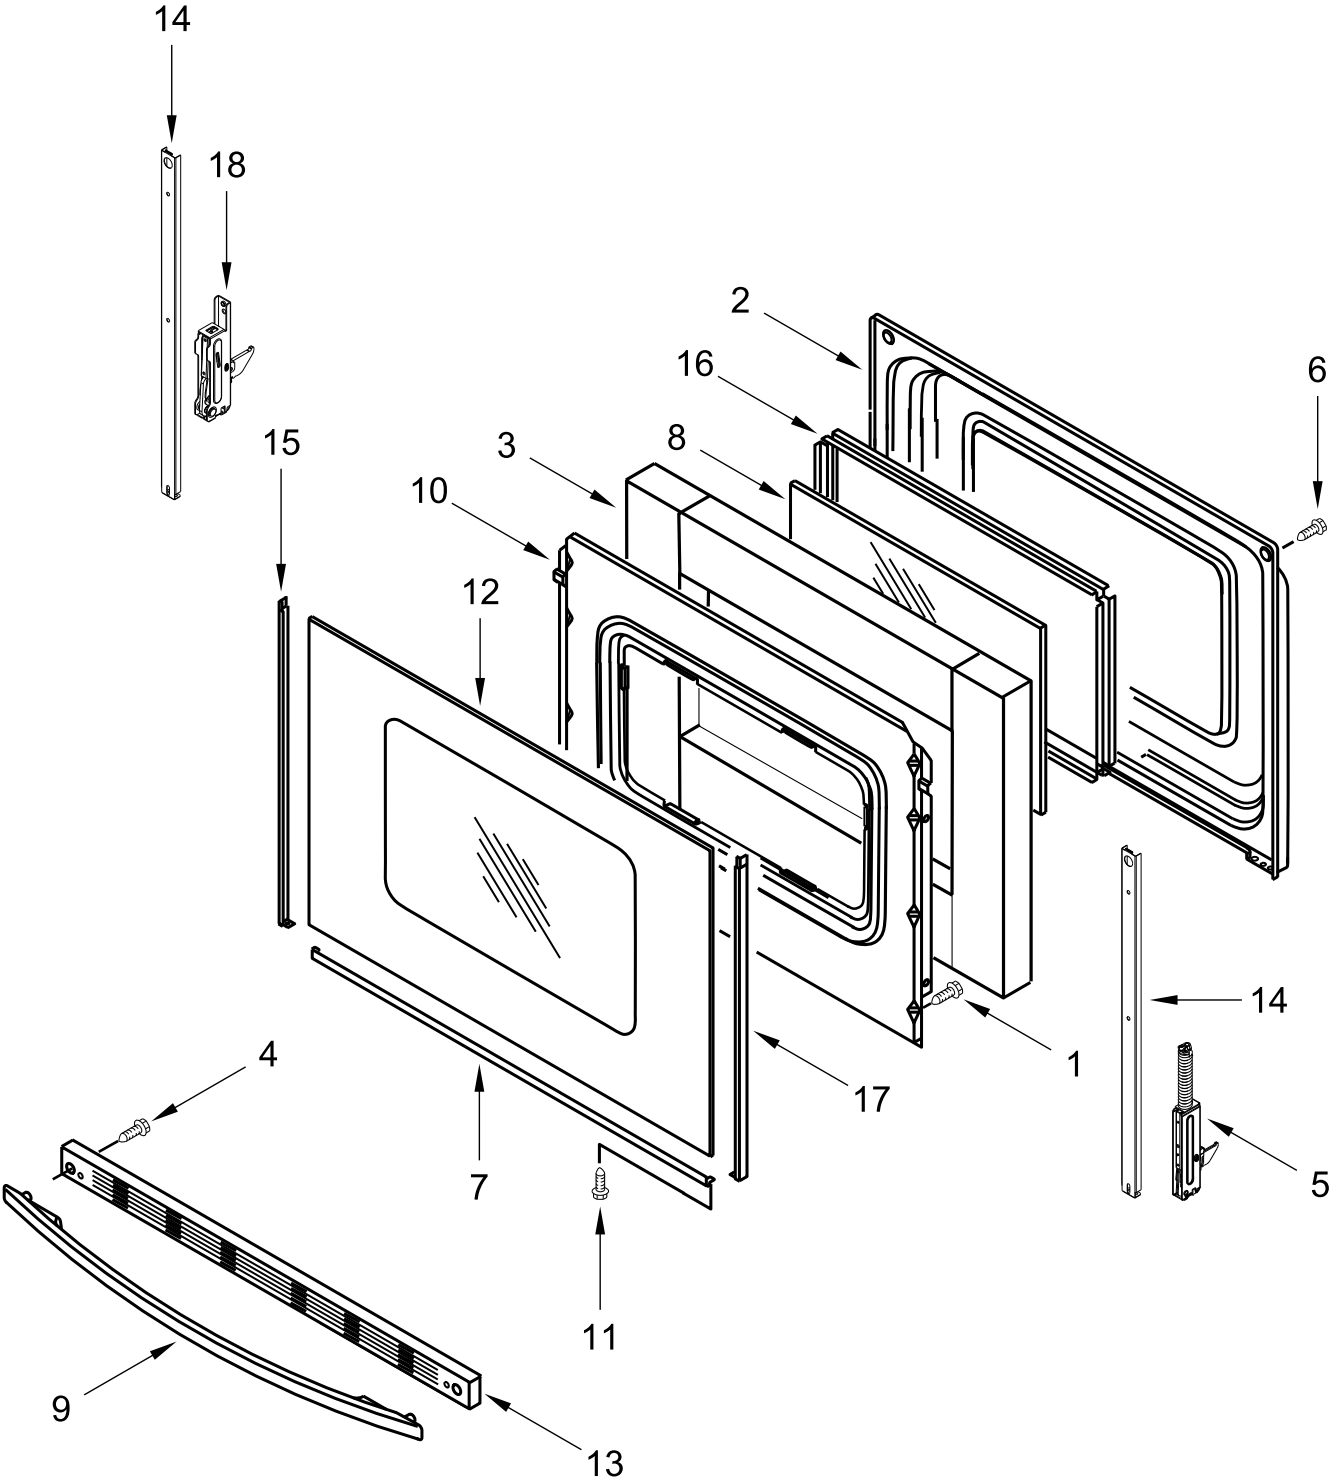


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw
2	9761344	Liner, Door
3	W10278991	Insulation, Door Strip
4	W10200660	Screw
5	W10299226	Hinge, Active
6	W10465148	Screw
7		Trim, Lower Door
	8523177	Black
	8523175	White
8	9758162	Glass, Inner
9		Handle, Oven Door
	W10300490	Black
	W10300489	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
10	9761357	Retainer, Insulation
11	W10327235	Screw
12		Glass, Window
	W10409946	Black
	W10409945	White
13		Trim, Oven Door Vent
	W10310922	Black
	W10310920	White
14	W10544179	Strap, Door
15		Trim, Door
	W10746436	Black (Left)
	8523172	White (Left)
16	W10316950	Frame, Glass

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
17		Trim, Door
	W10746435	Black (Right)
	8523166	White (Right)
18	W10299227	Hinge, Door (Passive)

DRAWER PARTS

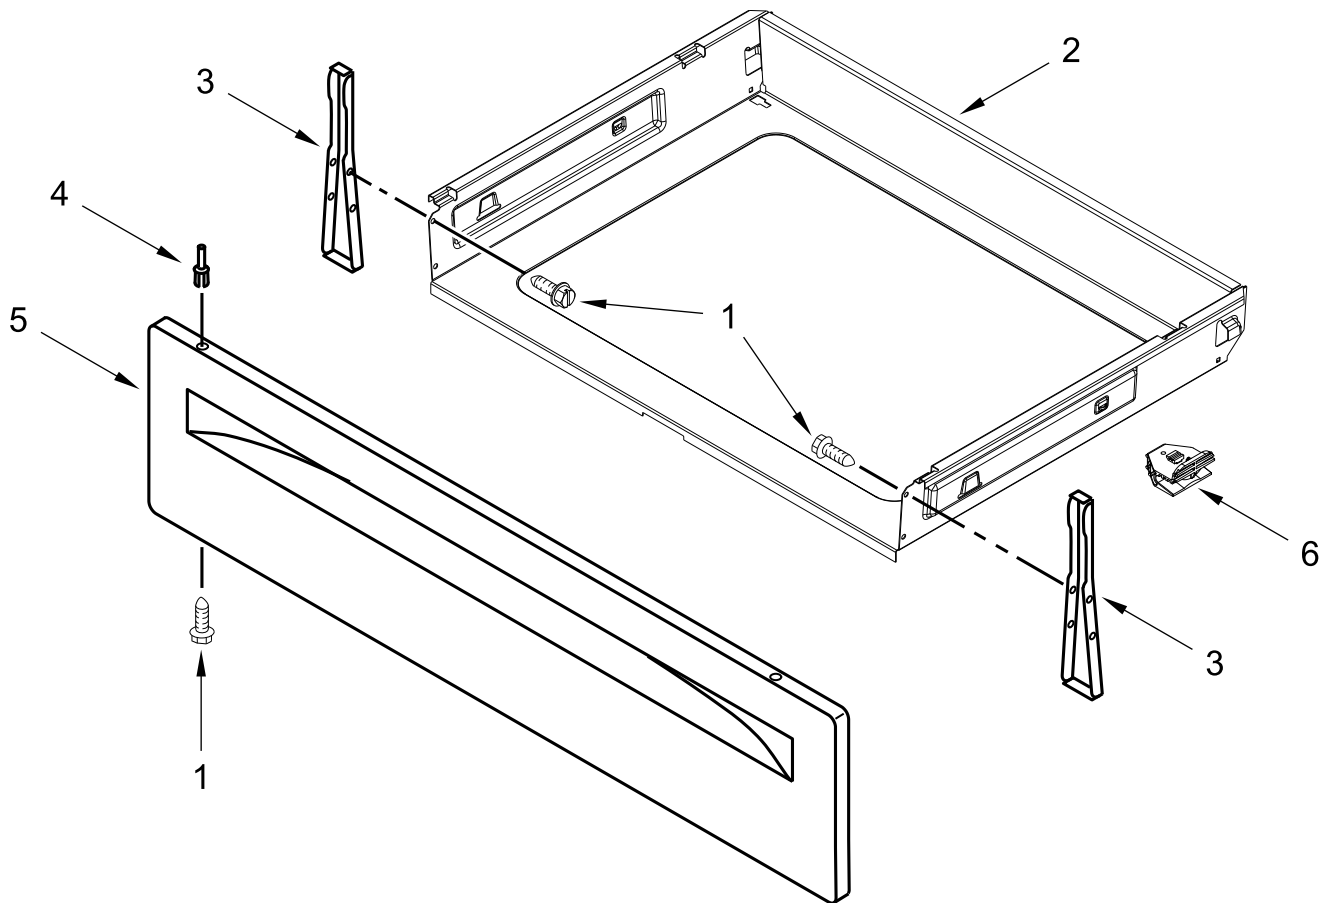

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw
2	W10688022	Drawer, Storage
3	W10462912	Bracket, Mounting Drawer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4		Rivet, Push
	3196813	Black
	3196814	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W11123900	Black
	W11123901	White
6	W10674708	Glide, Drawer Rear

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting