




48" DUAL-FUEL PROFESSIONAL RANGE
Includes Gas Grill

MODELS:

TANKMAN50 (Smoke & Brass)


BURNER BOX AND GRILL PARTS

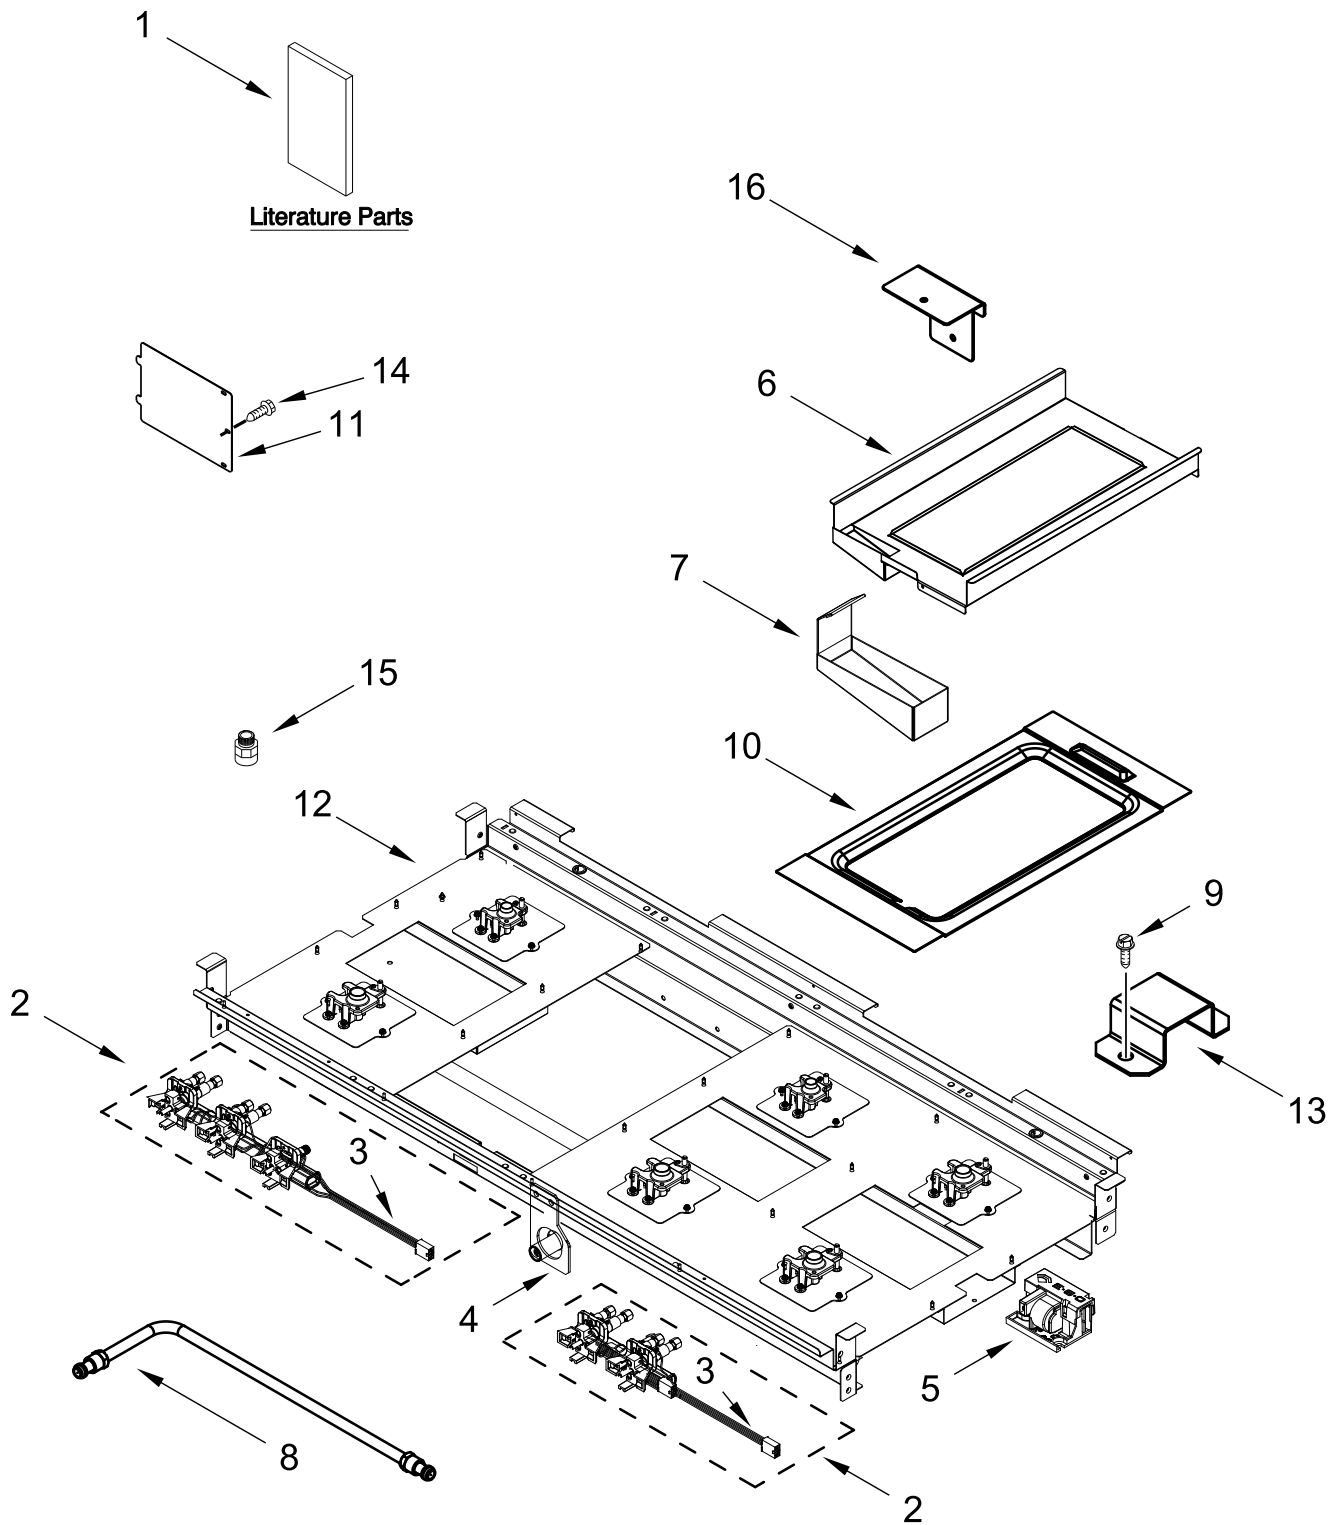

BURNER BOX AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106302	Switch, Harness (Left Front, Left Rear, And Grill)	13	W11174418	Bracket, Grill Orifice Holder
	W11114330	Guide, Use and Care				14	7101P426-60	Screw
	W11114333	Instructions, Installation		W11106300	Switch, Harness (Right Center Front, Right Center Rear, Right Front, Right Rear)	15	4453116	Adapter, Male
	W11177312	Guide, Quick Start				16	W11285353	Bracket, Grill Grease Capture
	W11184746	Guide, Internet Connectivity						FOLLOWING PARTS NOT ILLUSTRATED
	W11266584	Diagram, Wiring (Cooktop)	4	W11121194	Bracket, Manifold		W11297779	Harness, Main (30")
	W11202370	Diagram, Wiring (Oven)	5	W11121317	Module, Spark		W11200311	Harness, Main (18")
	W11202265	Sheet, Tech	6	W11120957	Capture, Grill Grease		W11200330	Harness, Cooktop
2	W10893054	Assembly, Valve Manifold (Left Front, Left Rear, And Grill)	7	W11174414	Tray, Grill Drip		W10780278	Harness, Door Lock
			8	W10892803	Tube, Manifold Supply (Left)		W11200318	Harness, Communication
				W10892801	Tube, Manifold Supply (Right Center)		W11242785	Harness, WIFI
	W10893058	Assembly, Valve Manifold (Right Center Front And Right Center Rear)		W10892802	Tube, Manifold Supply (Right)		W11212216	Cord, Power
							9759877	Retainer, Strain Relief
			9	7101P434-60	Screw		4450800	Screw, Grounding
	W11183722	Assembly, Valve Manifold (Right Front and Right Rear)	10	W11120965	Deflector, Grill Heat		W10253333	Bracket, Anti-Tip
			11	W10115843	Cover, Ignition		7101P485-60	Screw, Anti-Tip Kit
			12		Box, Burner (Not Serviced)		W11422176	Kit, LP Conversion


COOKTOP, BURNER, AND GRILL PARTS

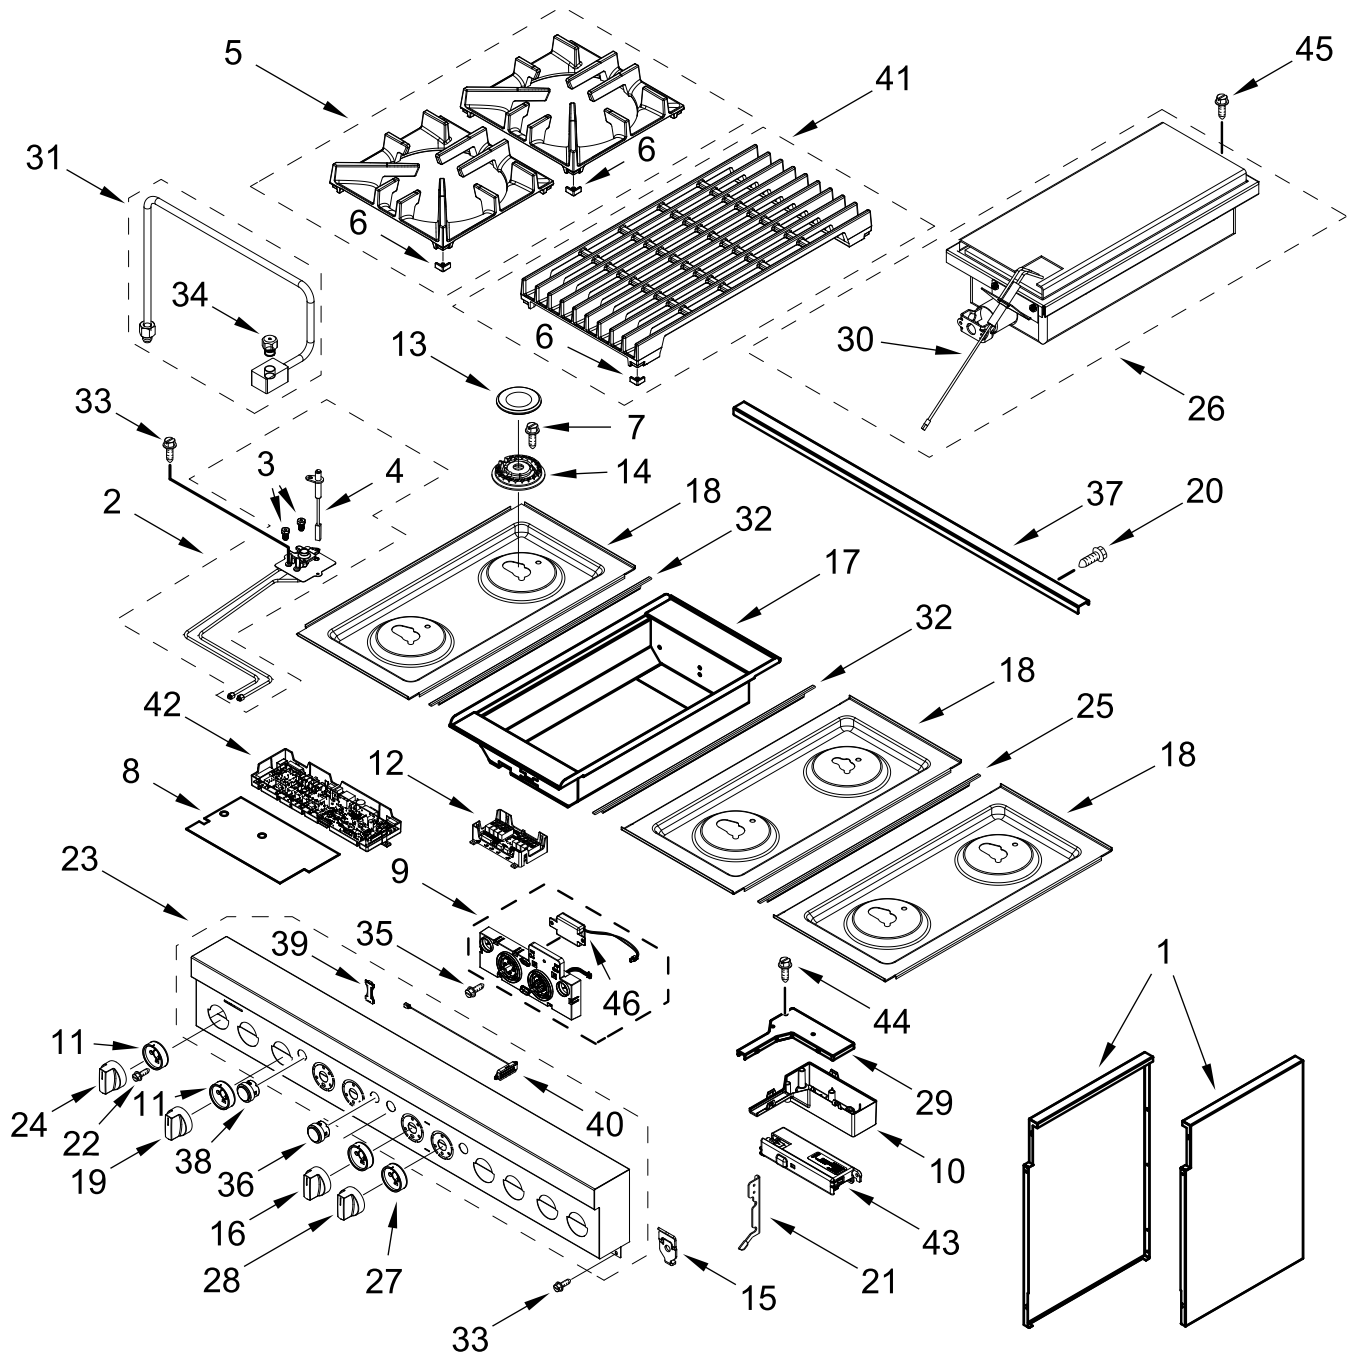

COOKTOP, BURNER, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11327398	Panel, Cabinet Side (Left)	6	W11042504	Bumper, Grate	25		Trim, T-Strip
	W11327400	Panel, Cabinet Side (Right)	7	W11323260	Screw		W10271524	Black
2	W10892807	Assembly, Orifice Holder	8	W11281269	Barrier, Appliance Manager	26	W11120976	Assembly, Grill Burner
		(Left Front)	9	W11436323	Interface, User	27		Bezel, Oven (For 4 Oven Knobs)
	W10892495	Assembly, Orifice Holder	10	W11205795	Cover, WIFI Outer			
		(Left Rear)	11		Bezel, Cooktop (For 6 Cooktop Burners and Grill)		W11241911	Brass
	W10892471	Assembly, Orifice Holder		W11090283	Brass	28		Knob, Oven Temperature
		(Right Center Front)	12	W10890116	Manager, Appliance (Expansion)		W11326205	Smoke & Brass Finish
	W10892724	Assembly, Orifice Holder	13		Cap, Burner	29	W11205794	Cover, WIFI Inner
		(Right Center Rear)		W11121392	Black (Set of 6)	30	W11174598	Electrode, Grill
	W10892726	Assembly, Orifice Holder	14	W10891987	Spreader, Flame (High)	31	W11419278	Grill Orifice Holder Assembly
		(Right Front)			(All But Right Center Rear)			(Left Center)
	W10892474	Assembly, Orifice Holder		W10892022	Spreader, Flame (Low)	32	W10291193	Trim, L-Strip
		(Right Rear)			(Right Center Rear)	33	7101P426-60	Screw
3	W10892422	Orifice, Main (17.4K)	15	W11036559	Spring Clip, Range	34	W11419282	Orifice, Grill (18K)
		(Left Front and Right Front)	16		Knob, Oven Mode			(Left Center)
	W10892418	Orifice, Main (15.4K)		W11326204	Smoke & Brass Finish	35	3400814	Screw
		(Left Rear, Right Center Front, Right Rear)	17	W11174429	Assembly, Grill Box	36	W11327367	Oven Start Button Assembly
	W10892440	Orifice, Main (7.2K)	18		Panel, Cooktop	37	W11327392	Trim, Island
		(Right Center Rear)		W10803515	Black (Left)	38	W11327364	Oven Light Button Assembly
	W10892435	Orifice, Simmer (2.6K)		W10803519	Black (Right Center)	39	W10896369	Assembly, Light Pipe
		(All But Right Center Rear)		W10804373	Black (Right)	40	W11326201	Antenna, WIFI
	W10892429	Orifice, Simmer (2.0K)	19		Knob, Grill	41	W11291177	Grill Grate Assembly
		(Right Center Rear)		W11326206	Smoke & Brass Finish	42	W11100272	Manager, Appliance (Powermax)
4	W11238757	Igniter	20	7101P338-60	Screw	43	W11110768	Assembly, WIFI Module
		(All But Right Center Rear)	21	W10130760	Bracket, Moving Console (Left)	44	7101P624-60	Screw
	W11238756	Igniter		W10130759	Bracket, Moving Console (Right)	45	3196537	Screw
		(Right Center Rear)	22	W11328357	Screw	46	W10568405	Assembly, Speaker
5		Assembly, Grate	23	W11327386	Console Panel			
	W11291176	Black (Set of 2)	24		Knob, Burner (For 6 Cooktop Burners)			
				W11326207	Smoke & Brass Finish			


48" CHASSIS PARTS

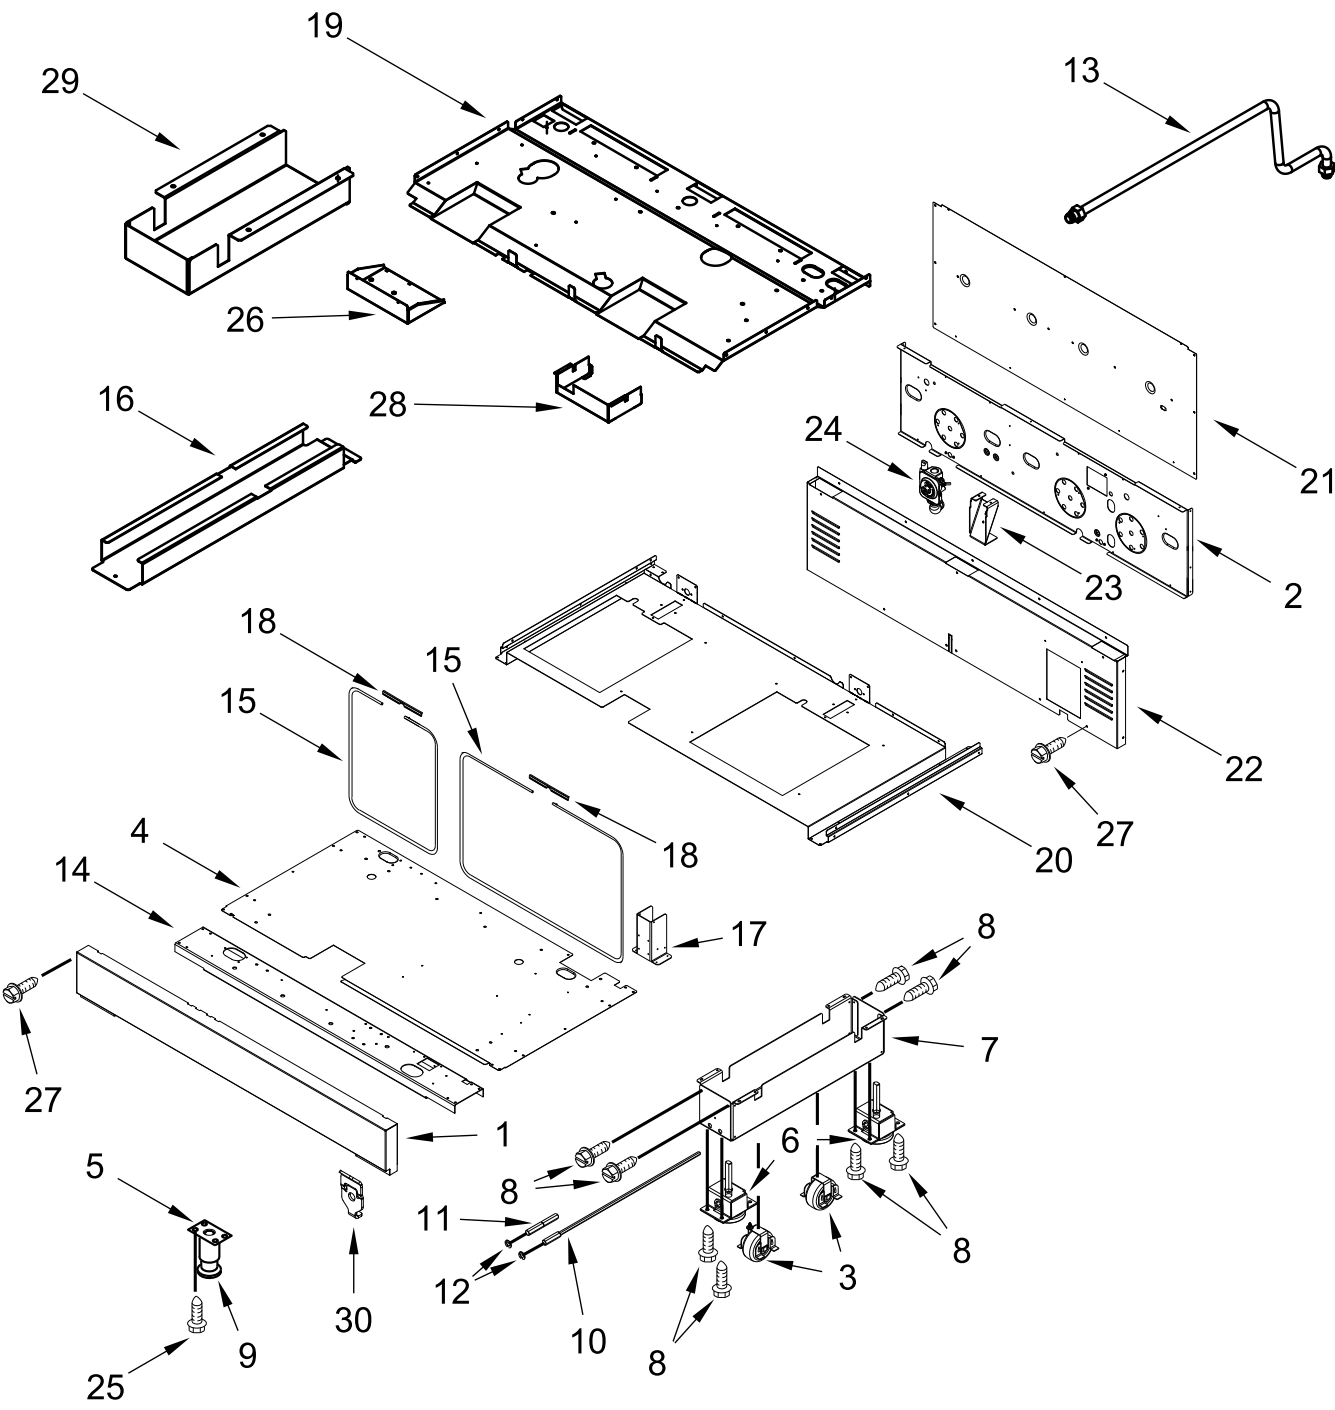

48" CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11327391	Kickplate	13	W11106963	Tube, Pressure Regulator	22	W11034123	Panel, Back Bottom
2	W11324987	Back, Chassis	14	W11369238	Support, Channel	23	W11096823	Bracket, Pressure Regulator
3	W10138054	Assembly, Roller	15	W11115328	Gasket, Oven (30")	24	W10449140	Regulator, Pressure
4	W11110260	Duct, Bottom (48")		W11115326	Gasket, Oven (18")	25	3400518	Screw
5	9759118	Plate, Mounting	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
6	9760860	Leveler	17	W10115819	Column, Central	27	7101P426-60	Screw
7	W10908710	Base, Leveling Leg	18	W11362015	Retainer, Gasket (9" Long)	28	W11369237	Cabinet, Appliance Manager
8	4449743	Screw	19	W11324984	Top, Chassis	29	W11368831	Channel, Wire
9	9759117	Foot, Dual Fuel	20	W11040800	Chassis, Bottom	30	W11036559	Spring Clip, Range
10	W10115869	Shaft, Long	21	W11103335	Panel, Back Top			
11	W10115793	Shaft, Short						
12	489504	E-Ring						


30" OVEN PARTS

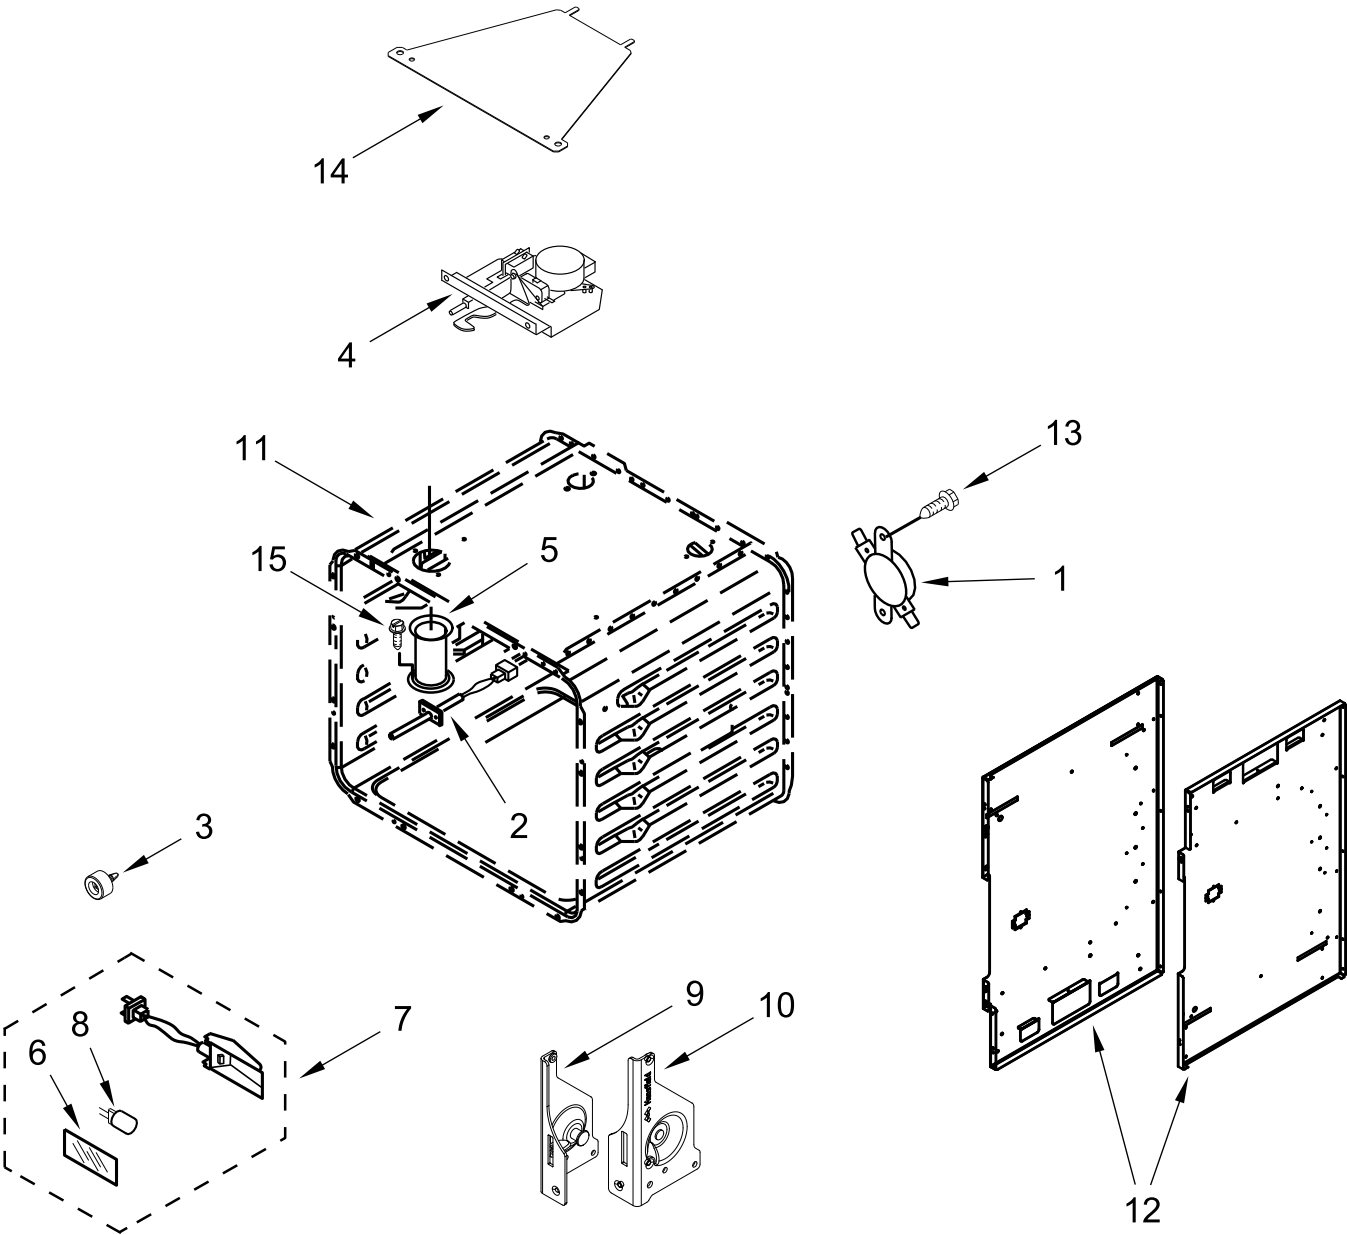

30" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	15	3196176	Screw
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	11		Liner, Oven (Not Serviced)		W10282810	Insulation, Wrap, 30"
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)		W10282816	Insulation, Back, 30"
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)		3400968	Nut
6	W10169756	Lens, Light	13	7101P426-60	Screw			
7	W11223932	Assembly, Oven Light	14	W10160858	Cover, Latch			
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)						


18" OVEN PARTS

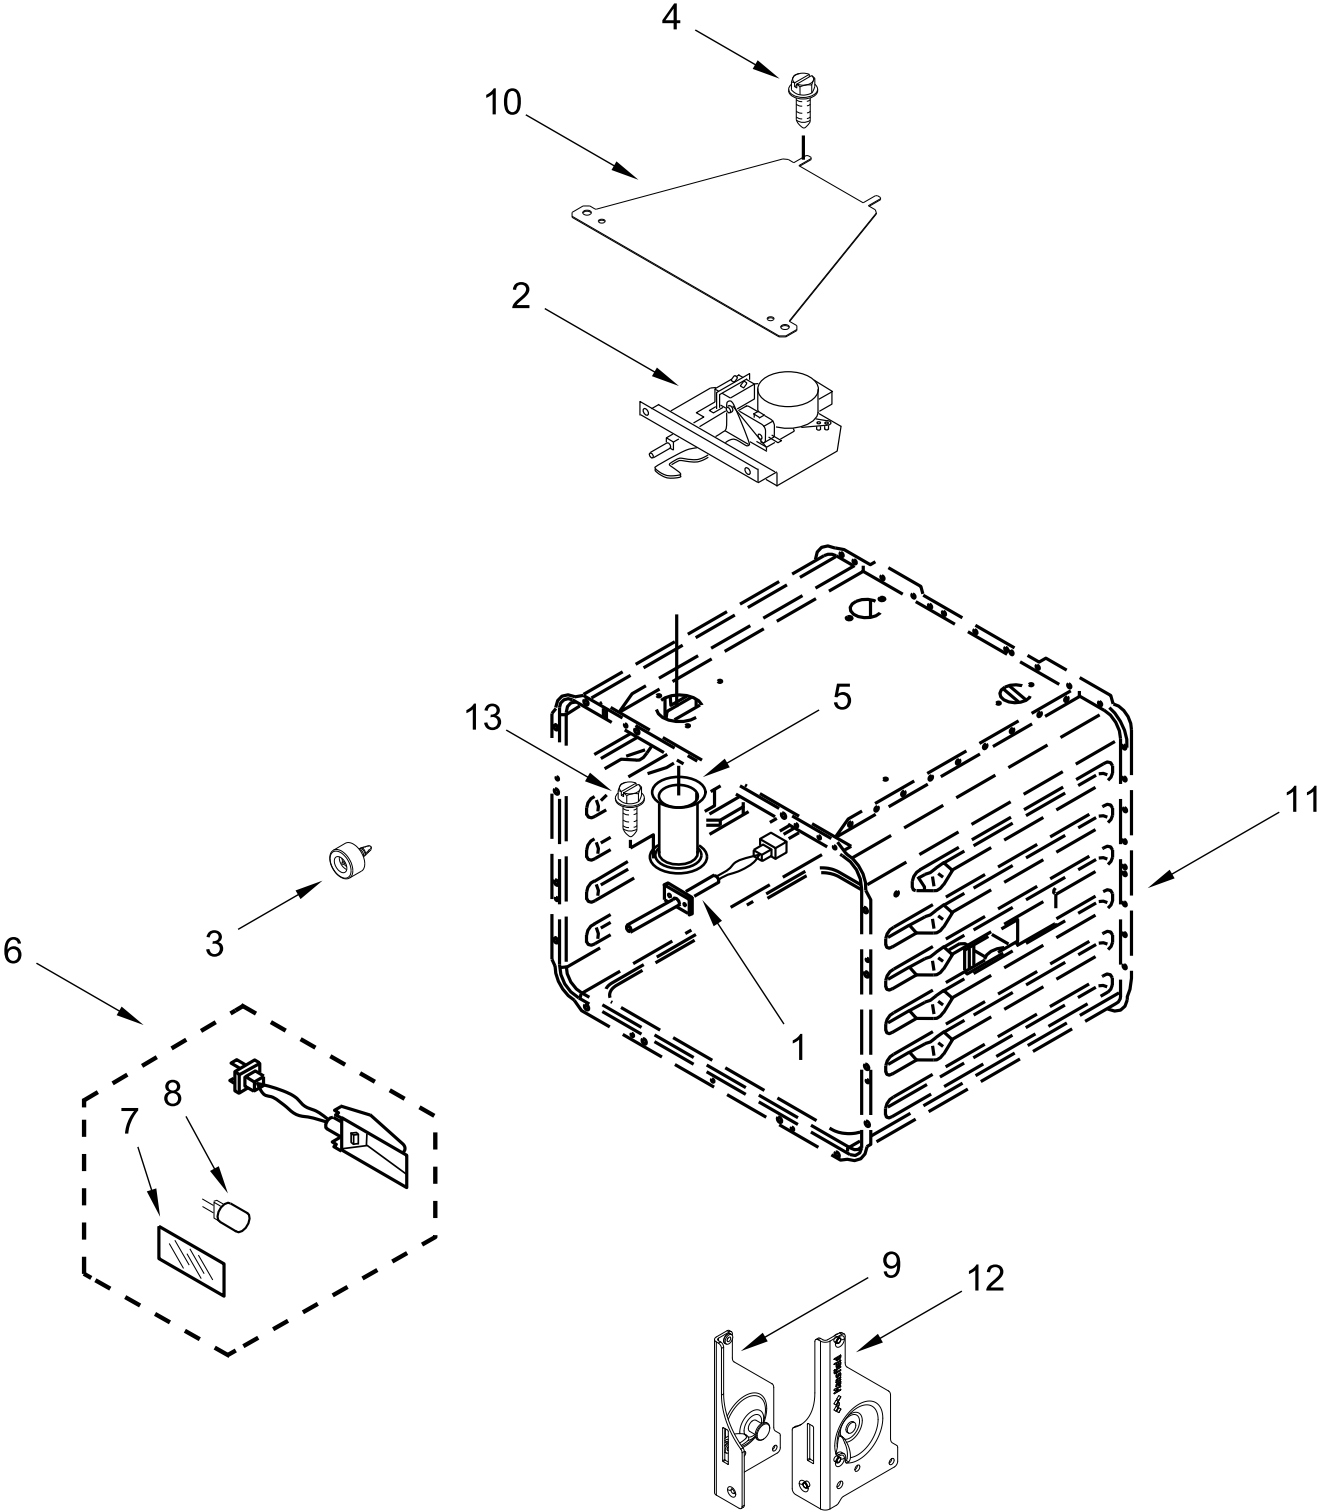

18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	8	W10169757	Bulb, Light	13	3196176	Screw
2	W10830016	Latch, Motorized	9	W11096294	Receiver, Hinge (Left)			FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	10	W10160858	Cover, Latch		W10282820	Insulation, Wrap, 18"
4	7101P426-60	Screw	11		Liner, Oven (Not Serviced)		W11529898	Insulation, Back, 18"
5	W10288078	Tube, Vent	12	W11096293	Receiver, Hinge (Right)		3400968	Nut
6	W11223932	Assembly, Oven Light						
7	W10169756	Lens, Light						


VENTING PARTS

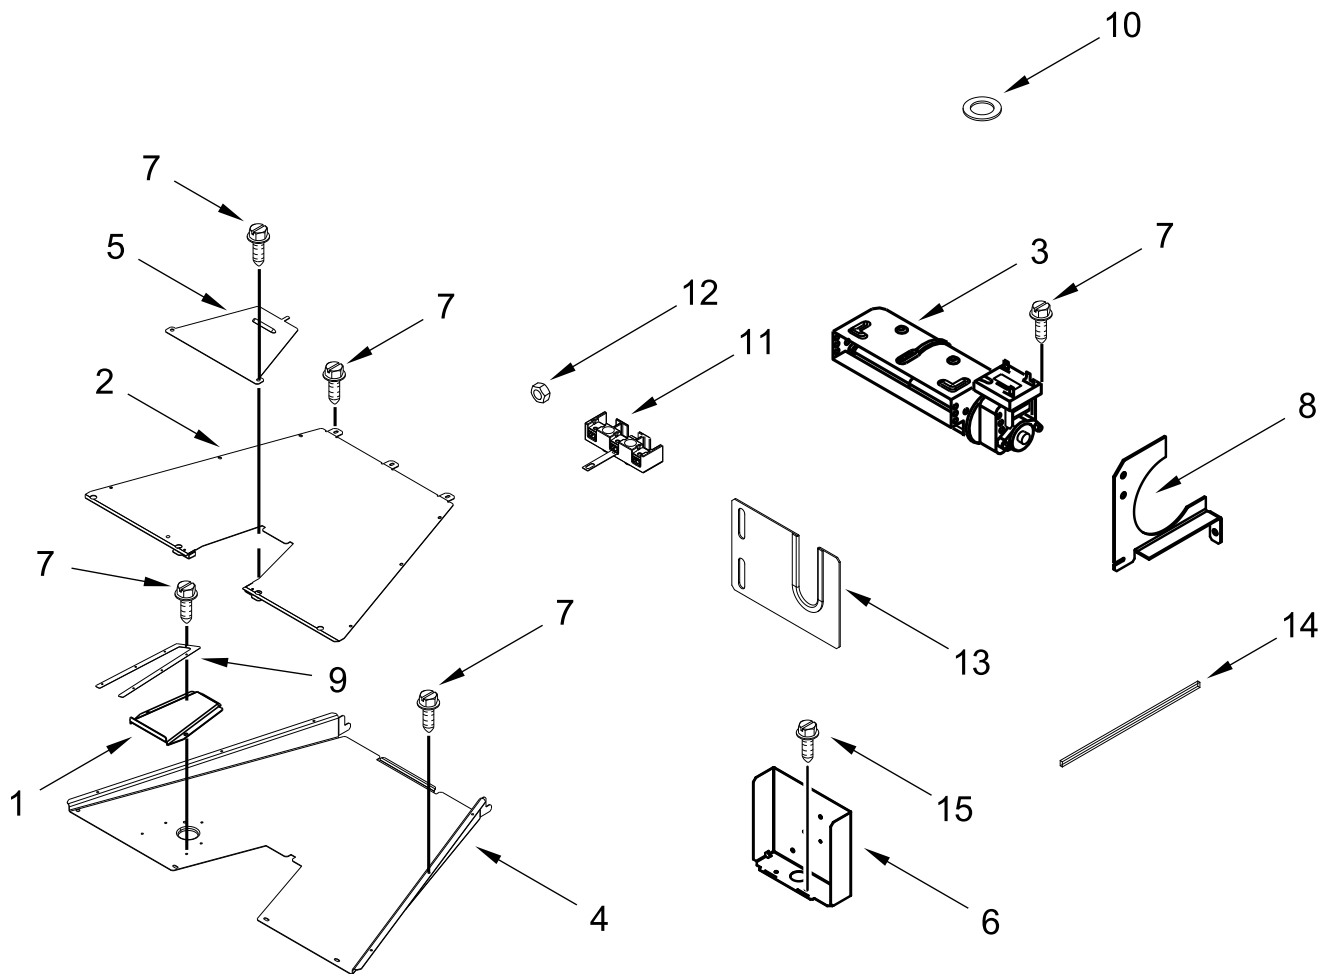

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")
	W10818235	Slope, Exhaust Vent (18")		W11113378	Vent, Cooling Bottom (18")		W10270402	Seal, Vent Slope (18")
2	W11105223	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney
	W11113380	Vent, Cooling Top (18")	6	W11353392	Box, Terminal	11	9761958	Block, Terminal
3	W11200129	Blower	7	7101P426-60	Screw	12	112432	Nut, Hex
			8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel
						14	W10919715	Gasket
						15	3196560	Screw


30" OVEN DOOR PARTS

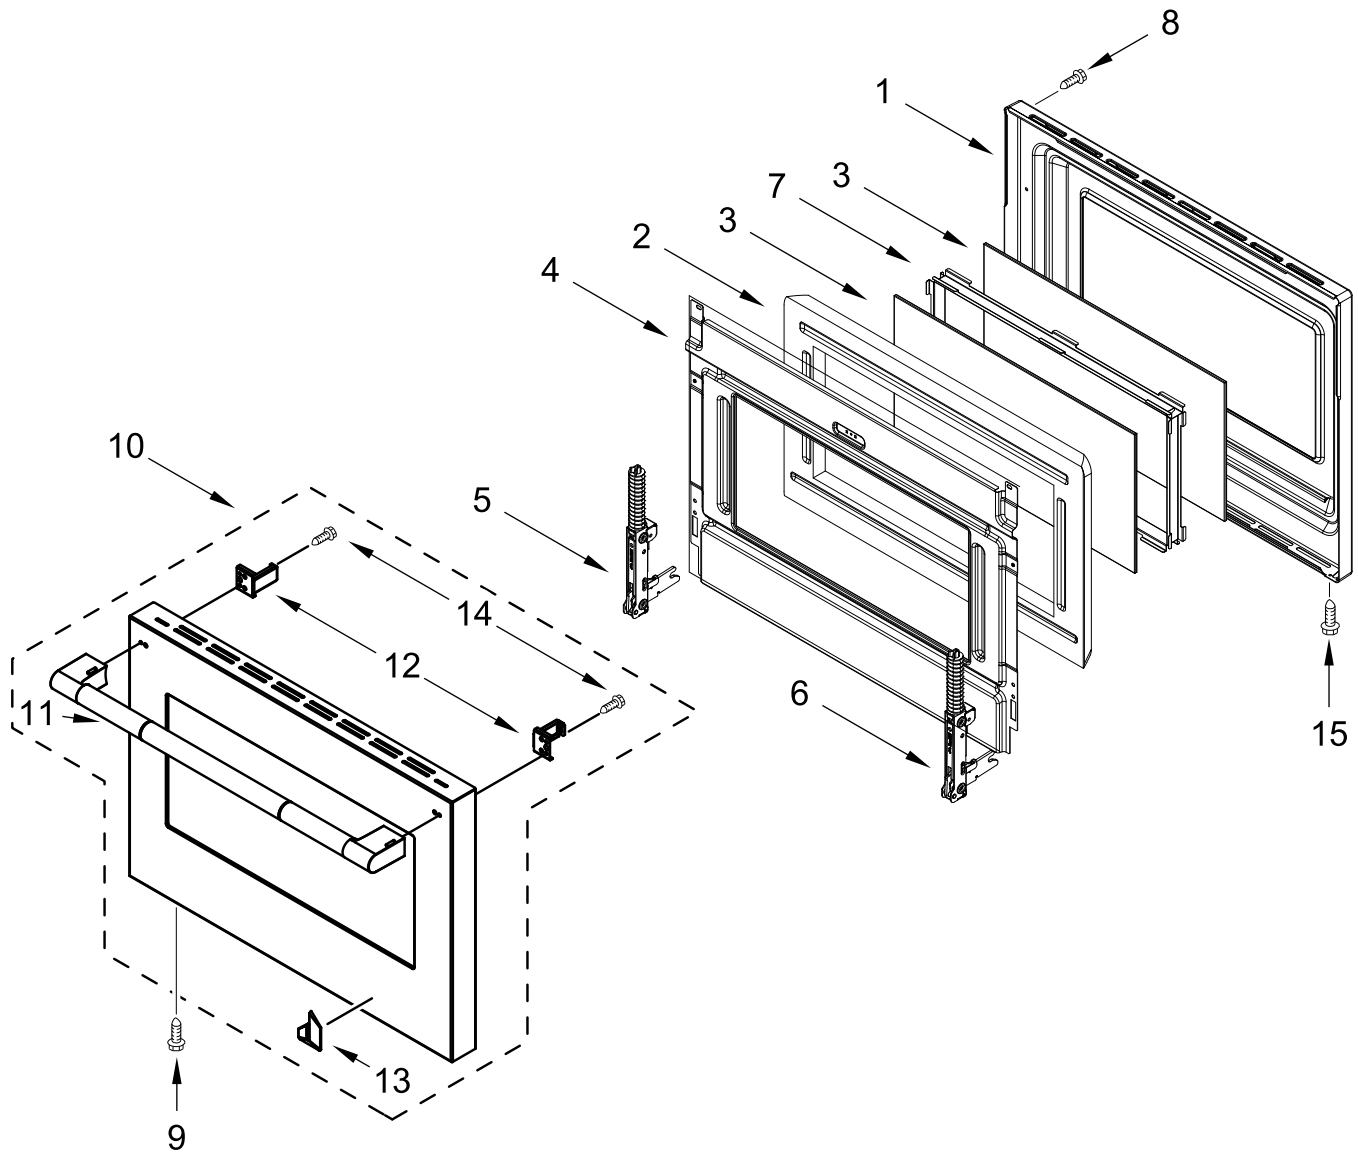

30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30")	8	W10898280	Screw	13		Badge
3	W11184409	Glass, Inner	9	W10162096	Screw		W11326199	Smoke & Brass Finish
4	W11194821	Retainer, Glass	10	W11327404	Outer Door Glass Assembly (Includes Handle)	14	W10276043	Screw
5	W11390105	Hinge, Door (Left)				15	W10607120	Screw
6	W11390124	Hinge, Dual (Right)	11	W11326203	Handle, Door			


18" OVEN DOOR PARTS

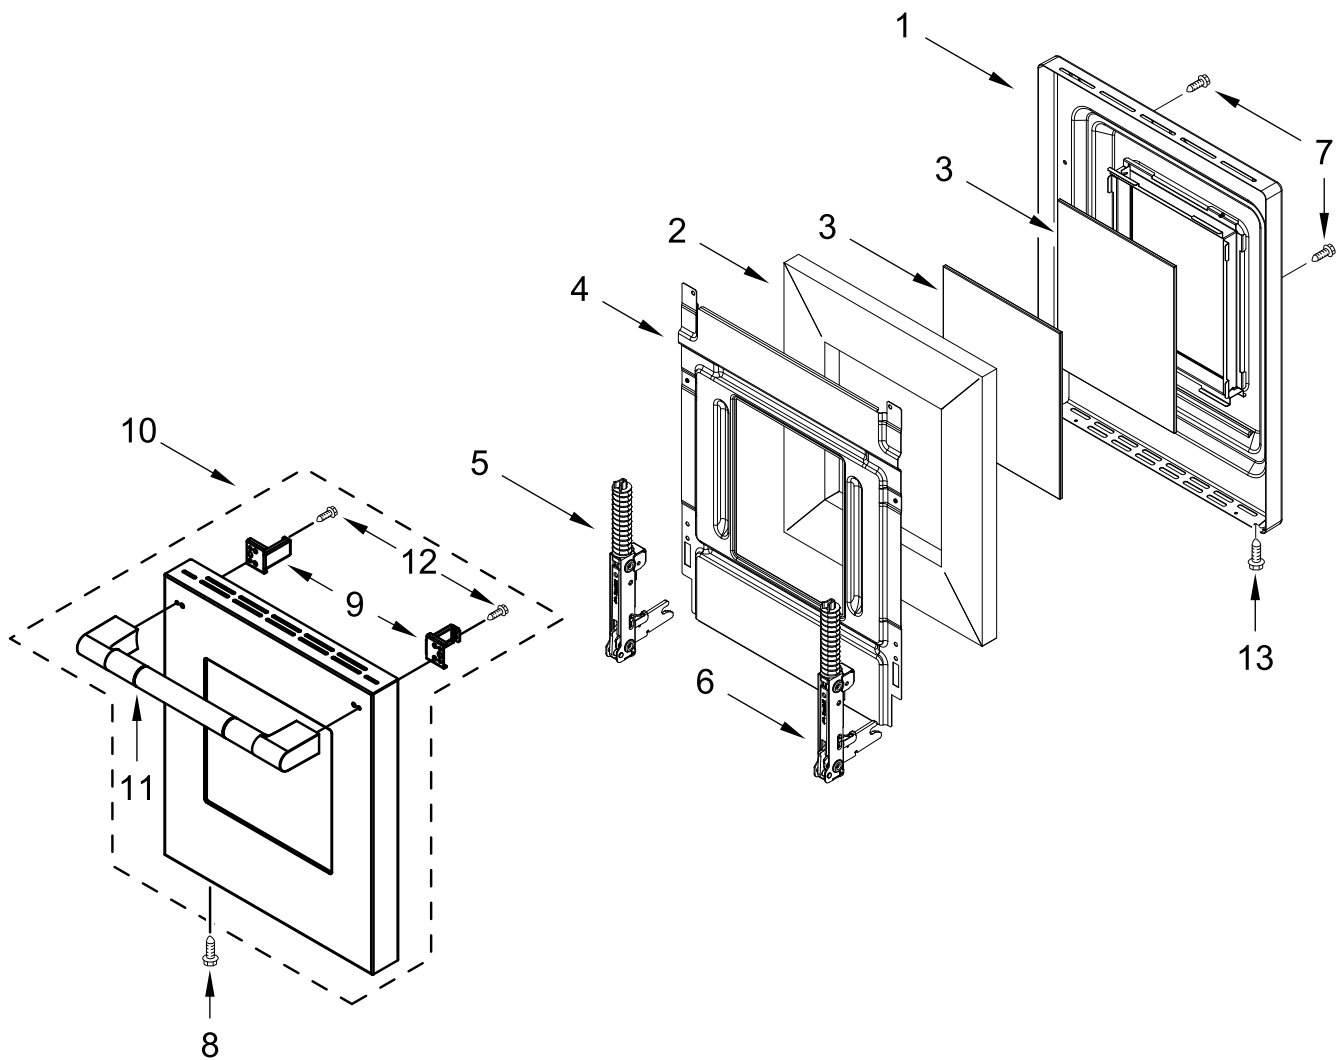

18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	12	W10276043	Screw
2	W10884821	Insulation, Door	8	W10162096	Screw	13	W10607120	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle			
4	W11194818	Retainer, Glass	10	W11327406	Outer Door Glass (Includes Handle)			
5	W11390106	Hinge, Door (Left)	11	W11326202	Handle, Door			
6	W11390125	Hinge, Door (Right)						


30" INTERNAL OVEN PARTS

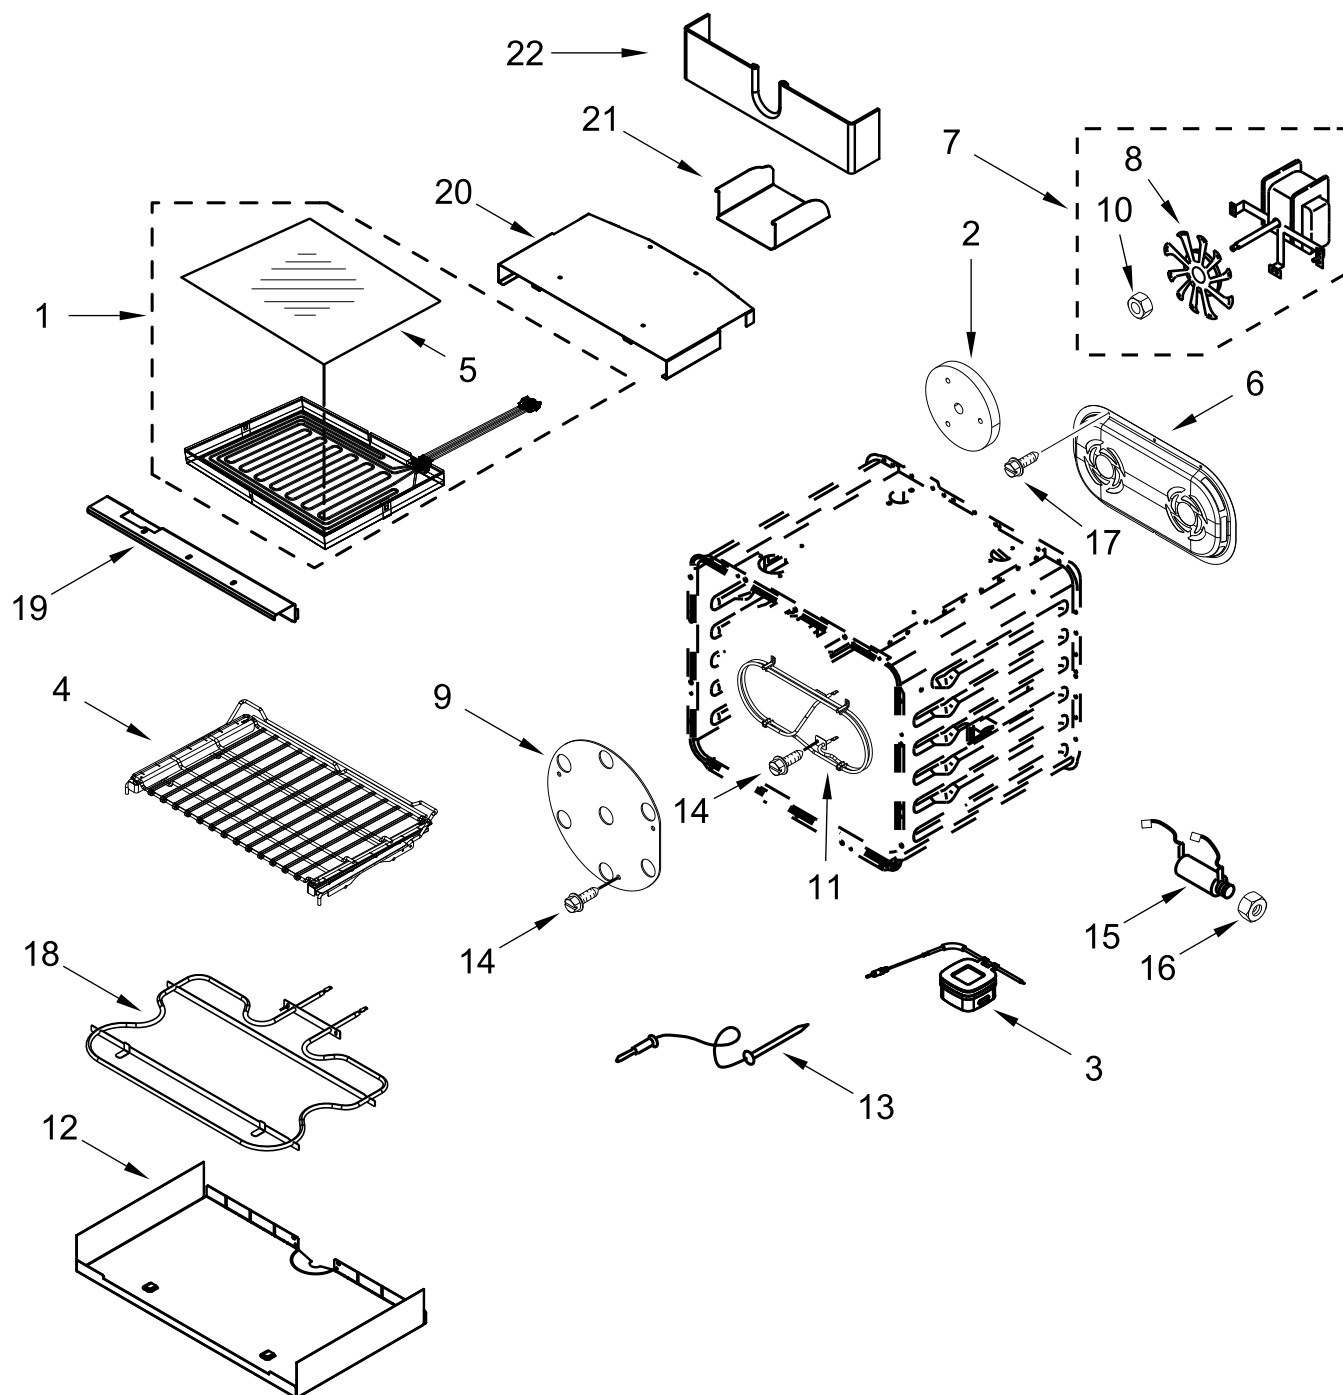

30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11210530	Element, Broil	8	W11108376	Blade, Fan	16	W11033111	Nut, Locking
2	W10282821	Insulation, Convection Cover	9	W10261523	Plate, Fan	17	W10739592	Screw
3	W11186918	Probe, Wireless Meat	10	W10631504	Nut, Acorn (LH)	18	W10115995	Element, Hidden Bake
4	W11491351	Rack, Sliding Oven	11	W10116434	Element, Convection	19	W11112336	Bracket, Broil Front
5	W11193191	Glass, Broil Element	12	W11109421	Tray, Hidden Bake	20	W11158843	Bracket, Broil Top
6	W11232487	Baffle, Convection	13	9755542	Probe, Temperature	21	W11111391	Cover, Broil Terminal
7	W11121400	Fan, Convection	14	4449154	Screw	22	W11170823	Cover Plate, Terminal Hole
			15	9755543	Jack, Meat Probe			

18" INTERNAL OVEN PARTS

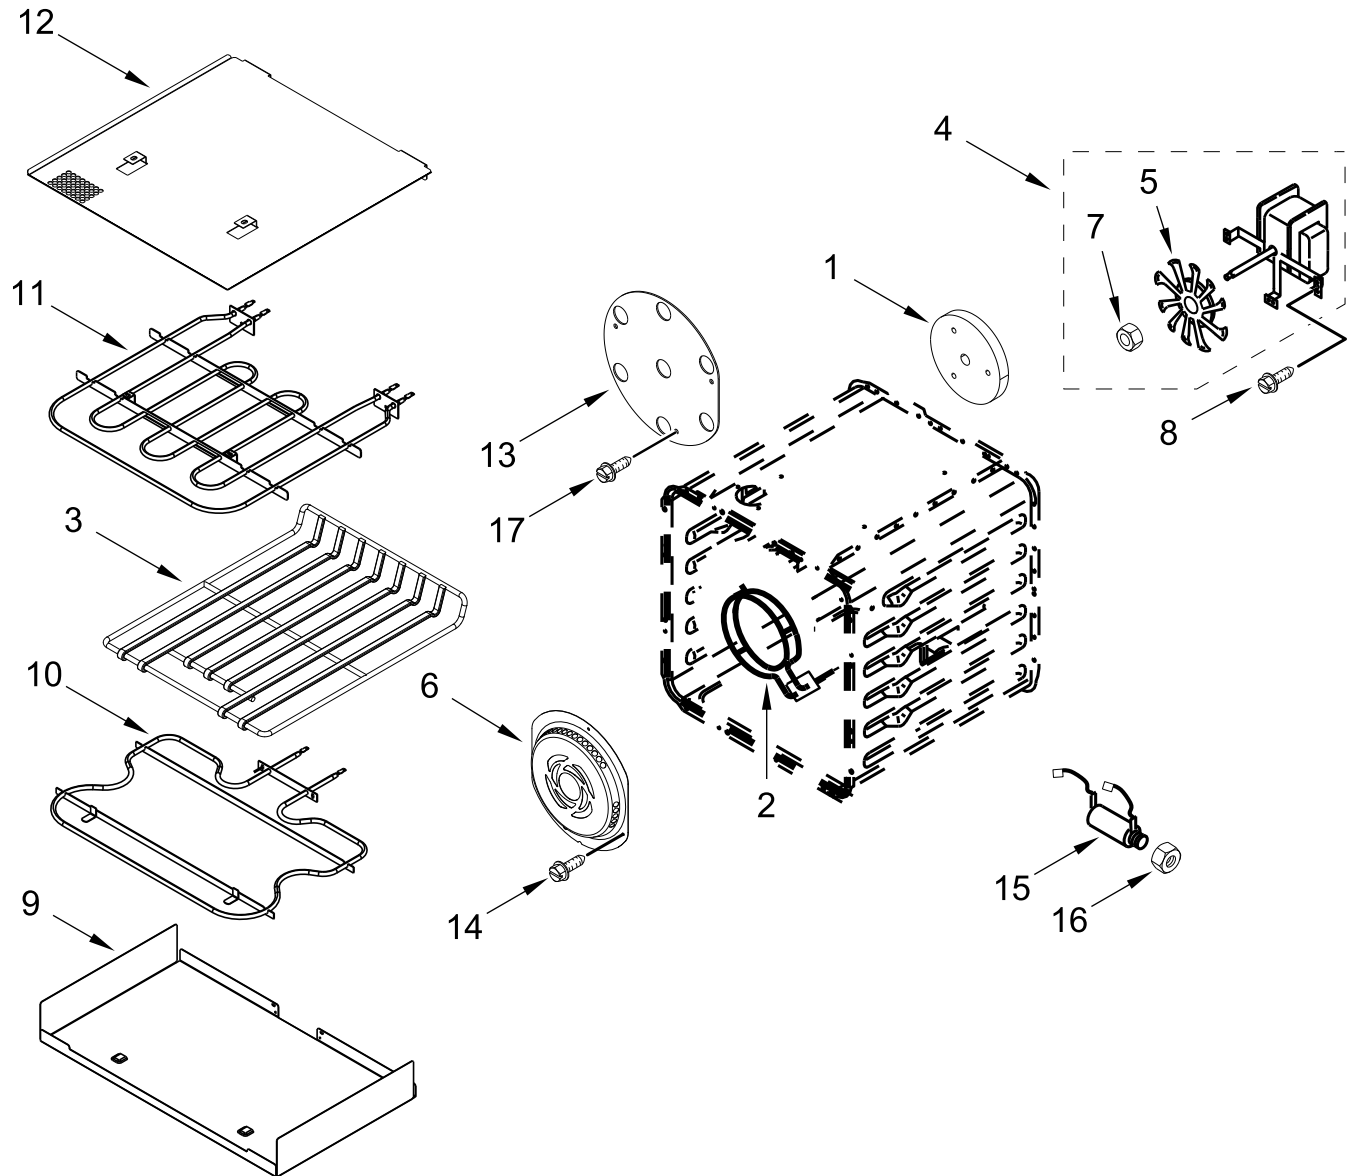

18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	7	W10631504	Nut, Acorn (LH)	14	W10739592	Screw
2	9762242	Element, Convection Steam	8	4449154	Screw	15	9755543	Jack, Meat Probe
3	W11111351	Rack, Oven (18")	9	W11110223	Tray, Hidden Bake	16	W11033111	Nut, Locking
4	W11121400	Fan, Convection	10	W11045324	Element, Hidden Bake	17	W10720084	Screw
5	W11108376	Blade, Fan	11	W10116010	Element, Broil			
6	W11368180	Cover, Fan	12	W10160855	Shield, Element Broil			
			13	W10261523	Plate, Fan			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill