


ATTENTION

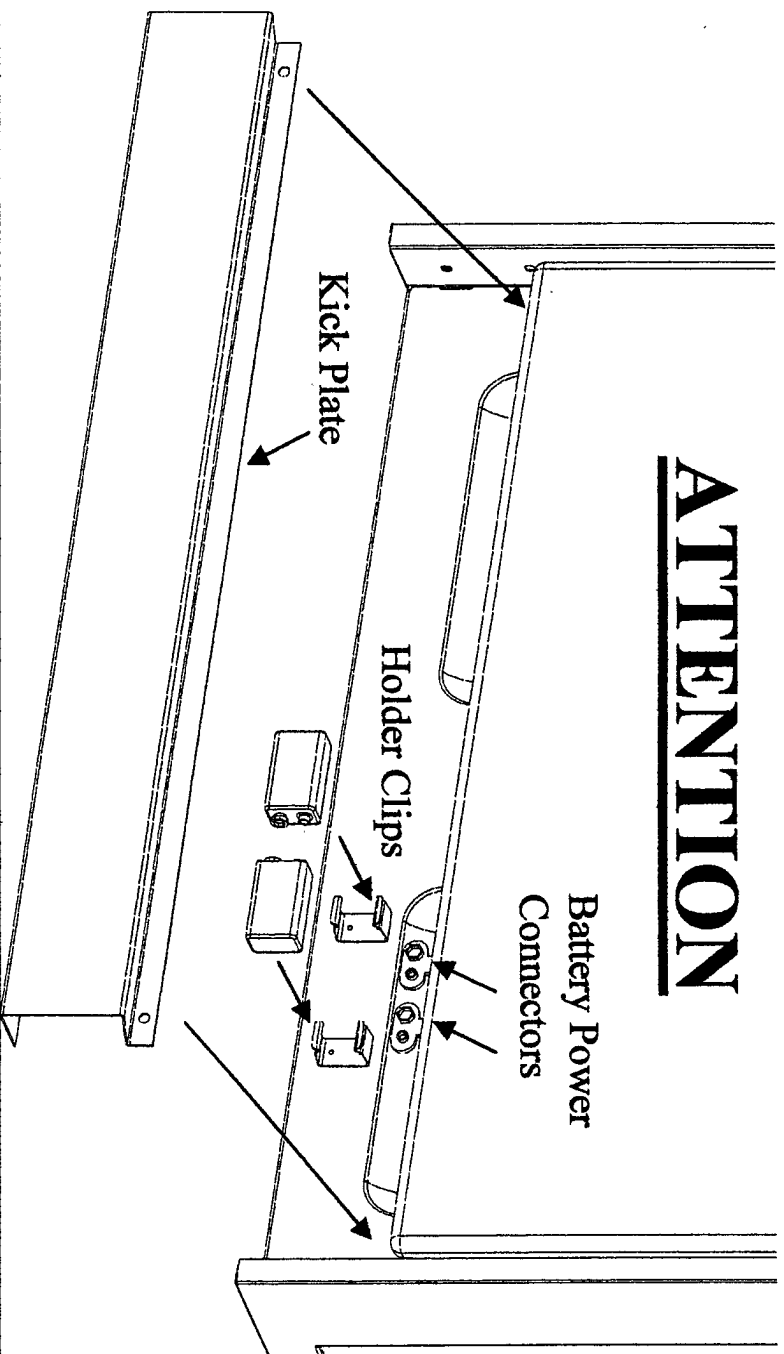

For security reasons, the ignition system batteries are not connected during shipping.

The installer must connect the batteries before putting the range into service.

1. Remove the kick plate by removing its upper corner mounting screws.
2. Connect each 9V battery to one of the power connectors.
3. Clip each battery into a holder clip on the front frame.
4. Reinstall the kick plate with the corner mounting screws.