



## BV755B USER'S MANUAL

**BLUETOOTH® | DVD/MP3/CD AM/FM RECEIVER**  
FEATURING 6.2" (157 mm) WIDESCREEN TOUCHSCREEN

BOSS Audio Systems  
3451 Lunar Court • Oxnard, CA 93030  
[www.bosssaudio.com](http://www.bosssaudio.com)  
800-999-1236 US Toll-free  
805-751-4853 Customer Service  
Tech Support: [www.bosssaudio.com/support](http://www.bosssaudio.com/support)



0819



iPod® and iPhone® are trademarks of Apple, Inc. registered in the U.S. and other countries. BOSS Audio Systems is not affiliated with Apple, Inc.  
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by BOSS Audio Systems is under license.  
Other trademarks and trade names are those of their respective owners.

**To ensure safety while driving**

**and to comply with laws,**

**drivers should not watch video or**

**operate the video device while driving.**

Congratulations on your purchase of a **Boss Audio Systems**®

Multimedia Receiver.

It has been designed, engineered and manufactured to bring you the highest level of performance and quality, and will offer you years of entertainment pleasure.

---

## CONTENTS

Specifications.....	1
Safety Notice.....	2
Accessories.....	3
Unit Installation.....	3
Remote Control Operation.....	4
Wires Connection Description.....	5
Panel Introduction.....	6
Main Menu Operation Instruction.....	7
Access Setup Interface.....	8
General Settings.....	7
Camera Settings.....	8
Clock Settings.....	8
Audio Settings.....	8
Tuner Settings.....	9
Illumination Settings.....	9
About Settings.....	10
Tuner Operation.....	10
DISC/CD/USB/SD Playback.....	11
DVD Mode operation.....	11
Media Playing— CD Audio.....	12
CD Source Menu .....	12
USB/SD Music/Video/Picture.....	12
Bluetooth Operation.....	13
Bluetooth Operation Menu.....	13
Bluetooth Dialing.....	13
Bluetooth Call.....	13
Bluetooth Phone Book.....	14
Bluetooth Phone Call History.....	14
Bluetooth Music Steaming-A2DP.....	14
Bluetooth Pair device.....	14
Photos.....	15
Camera/Aux/AV Menu.....	15
Troubleshooting.....	16

# SPECIFICATIONS

Model No.	BV755B		
General features	Fixed front panel 6.2 inch TFT screen FM/AM Radio RBDS DVD fully compatible with DVD/VCD/CD/MP3/MPEG4/JPEG Front USB&SD reader support Built-in Bluetooth AUX Input AV Input AV output Front/Rear view camera Front,Rear and Subwoofer Pre-Amp.Output 4*80W AMP power output maximum Steering wheel control		
TFT screen	800*480pixel		
SD	32G		
Working power	12V		
Max Output	4*80W		
Working Temperature	-20°C~70°C/-4° F~158° F		
Size	96.5*170.5*144mm		
Weight	1.82kg/4.23lbs		
Compatible Media			
Picture	JPG/JPEG/BMP		
Disc	CD/CD-R/CD-RW/DVD/DVD±R/DVD±RW		
Audio file	MP3/WAV		
Video file	Format	Video code	Audio code
	.MPEG1	MPEG1	MP2
	.MPG	MPEG2	MP2



# SAFETY NOTICE

---

Please read and understand the following safety information before operating this unit.

- ⊘ The device is suitable for 12V power supply (requires grounding). Do not connect it to 24V power supply in trucks or buses, or else it will be damaged.
- ❗ Please use genuine discs instead of incompatible discs, or it will damage the device and/or shorten the service life.
- ❗ Without the guide of qualified personnel, do not replace the fuse, or else it may damage the device or cause fire.
- ⚠ Please follow the traffic laws and regulations and do not watch programs or operate the device when you are driving, to avoid accidents(excluding passengers watching through rear monitor).
- ❗ To ensure safety and operate the device normally, please ask qualified personnel to install the device. Do not disassemble or repair the device without authorization, to avoid damage and accidents. please contact a local car audio distributor for details.
- ⊘ Do not put the device in a moist environment or water, to avoid electric shock, damage and/or fire due to a short circuit.
- ⊘ The mechanical drive part of the monitor uses an automatic precision transmission component. Do not pull, push or rotate the device by force or impact the TFT screen to avoid damaging the device.
- ❗ Do not insert the audio plug of the vehicle into the master unit directly. Please convert with the dedicated end cable provided by our company.
- ❗ When installing the unit, prevent metal objects from falling into the master unit from the vents to avoid a short circuit and damaging the device.

## Safety Statement

 
- ⊘ For the safety of yourself and others, do not watch programs or operate the device when you are driving. It is prohibited by law.
- ❗ The back up monitor function should be used as an auxiliary view only. We are not responsible for any accidents occurred during backing.

# ACCESSORIES

---


Remote.....	1
Power Cable.....	1
Mounting Brackets.....	2
Screw.....	8
Trim Ring.....	1

## UNIT INSTALLATION

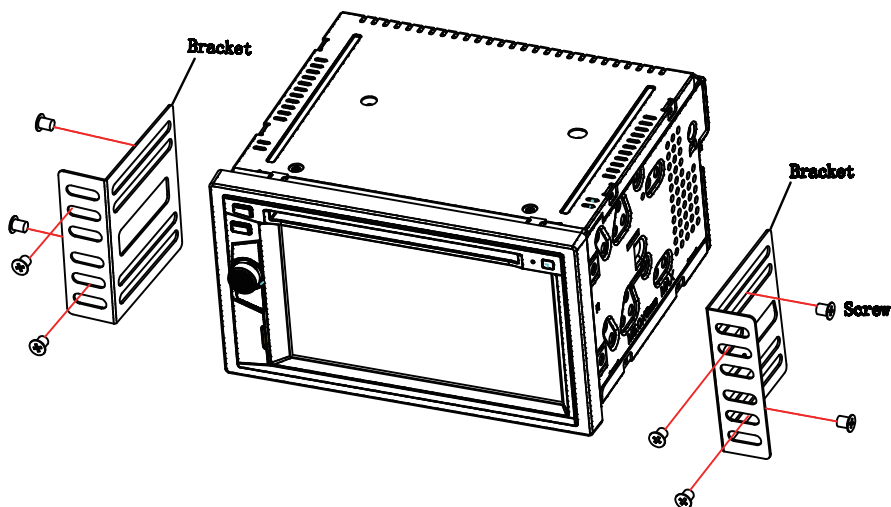

- 1.Put the 2 brackets to the left and right side of the unit;
- 2.Use screws to fix the brackets to the unit.
- 3.Once the screws are attached, the brackets can be adjusted forward or backward depending on the installation requirements.

# REMOTE CONTROL OPERATION

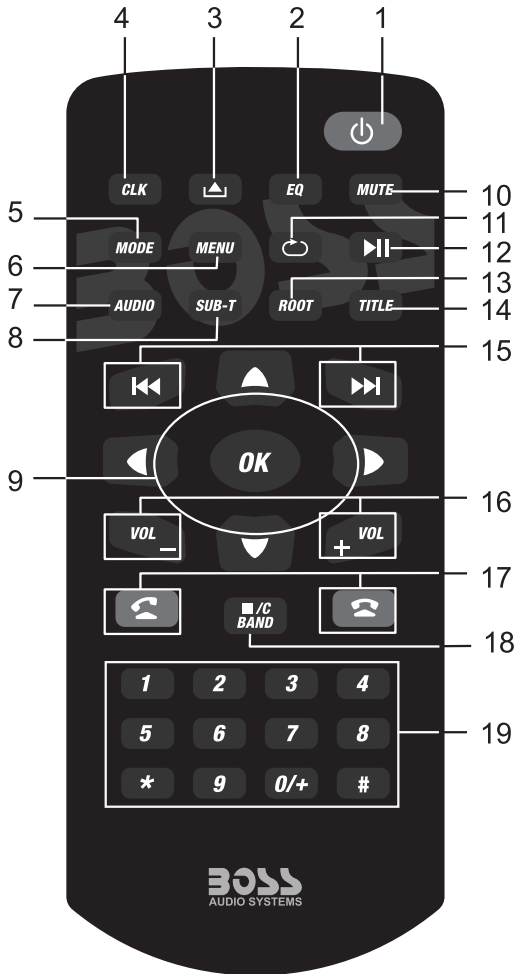 

**1.TURN ON/OFF**

**2.EQ mode**

**3.EJECT Key**

**4.CLK Key**

**5.MODE Key**

**6.MENU Key**

**7.Audio KEY**

**8.SUBTITLE Changing Key**

**9.Direction and OK Key**

**10.MUTE KEey**

**11.REPEAT Key**

**12.Play/Pause**

**13.ROOT Key**

**14.TITLE Key**

**15.Under Disc/music/video mode,press to choose previous/next song.**

**16.VOLUME UP/DOWN Key**

 
**17.Receiving calls/call out; hang up.**

**18.STOP/C/BAND**

**19.Number Key**

# WIRES CONNECTION DESCRIPTION

## The Description of the Input/Output Interface

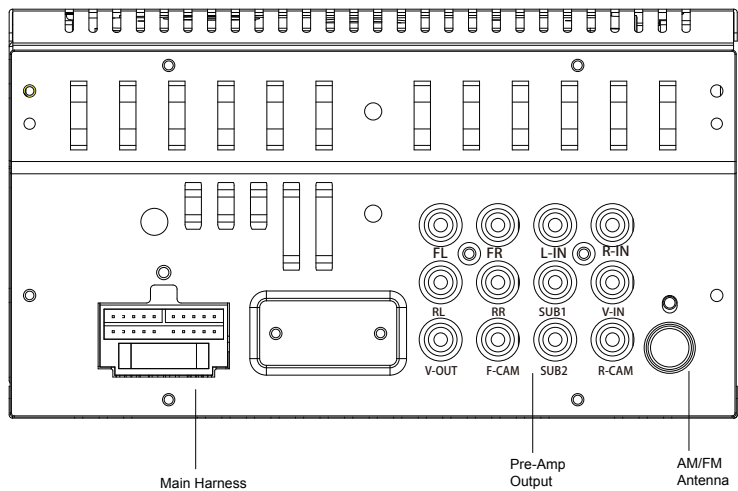

### Power

Yellow.....	Constant (+12v)
Red.....	Accessory (+12v)
Black.....	Ground (-)
Orange.....	Illumination Input (+12v)
Violet/Wht.....	Reverse Input (+12v)
Blue.....	Ant. Output (+12v, 500 mA)
Blue/Wht.....	Rem. Output (+12v, 500 mA)
Lt.Green.....	Parking Brake Input

### Control

3.5mm.....	SWC Input
------------	-----------

 
### Speaker Outputs

White.....	Left Front (+)
White/Blk.....	Left Front (-)
Gray.....	Right Front (+)
Gray/Blk.....	Right Front (-)
Green.....	Left Rear (+)
Green/Blk.....	Left Rear (-)
Purple.....	Right Rear (+)
Purple/Blk.....	Right Rear (-)

### Camera Power

Red/Violet.....	Front Output (+12v, 500 mA)
Red/White.....	Rear Output (+12v, 500 mA)

# PANEL INTRODUCTION

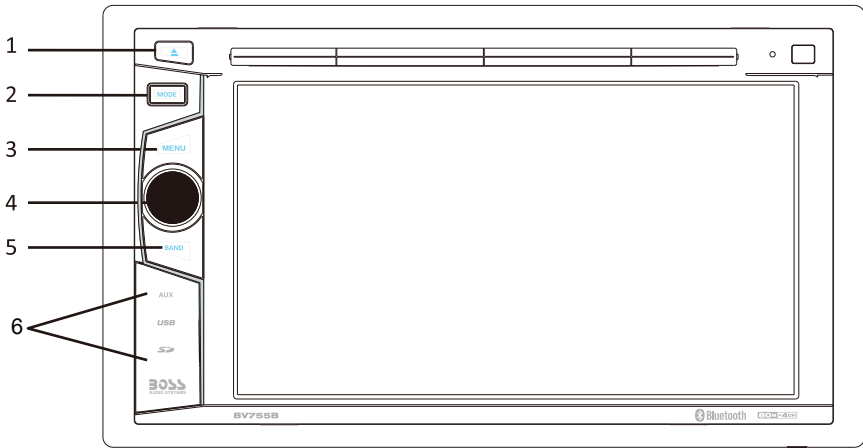

## **1.Eject key**

Press EJECT to remove the Disc

## **2.MODE key**

Press to select system mode.

## **3.MENU key**

Press to return to the home menu, or previous source.

## **4.TURN ON/OFF&VOLUME UP/DOWN**

Long touch to turn ON/OFF the unit. Short touch to activate the MUTE function and silence the audio output. Touch again to restore sound.

Rotate to adjust the output volume UP or DOWN.

## **5.BAND key**

For radio band conversion between FM1/FM2/FM3/AM1/AM2

## **6.Open to see AUX IN jack, SD slot, usb port and reset key.**

# MAIN MENU OPERATION INSTRUCTION

 
## MAIN MENU 1

- 1.Tuner Interface
- 2.Streaming Interface
- 3.DISC Interface
- 4.Phone Interface
- 5.USB Interface
- 6.SD Interface
- 7.Front/Rear Camera Interface




## MAIN MENU 2

- 8.AV INPUT Interface
- 9.AUX IN Interface
- 10.Setting Interface

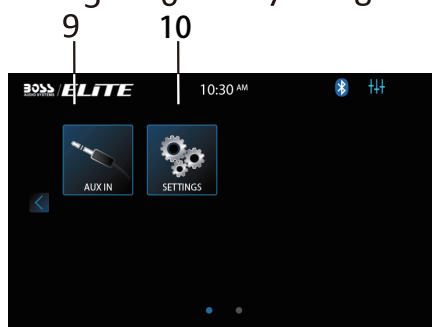

There are seven Setting Menus



## GENERAL SETINGS-Menu 1

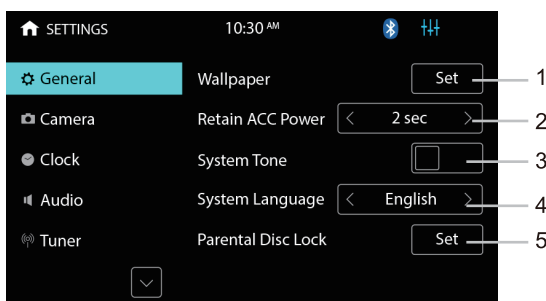 

1. Touch to set wallpaper
2. Retain ACC Power: Select how many seconds to delay shut down after the vehicle powers down
3. When turned on, an audible beep tone confirms each function selection.
4. Touch System Language to select Spanish/English
5. Touch to select parental control level

# ACCESS SETUP INTERFACE

  
## CAMERA SETTINGS-Menu 2

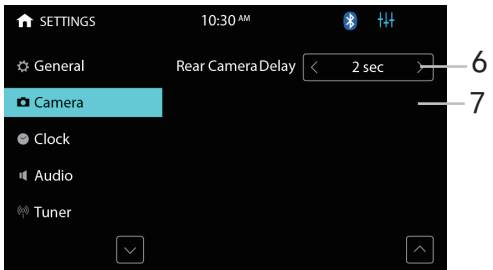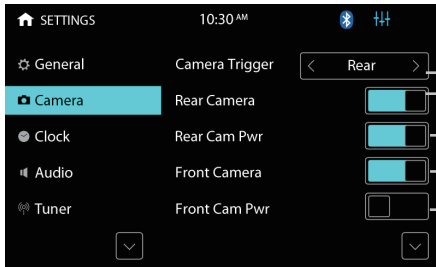



- 1.Camera Trigger:Touch to select Front/Rear/Off, select to display Front Camera, Rear Camera, or no response when reversing.
- 2.Rear Camera: Touch to turn on or turn off the Rear Camera function on main UI.
- 3.Rear Cam Pwr: Turn on to power Rear Camera.
- 4.Front Camera: Touch to turn on or turn off the Front Camera function on main UI.
- 5.Front Cam Pwr: Turn on to power Front Camera.
- 6.Select the delay setting to define the refresh rate for the Rear Camera image when the vehicle is in reverse gear. Options are off / 1 Sec / 2 Sec / 3 Sec. It can switch to front camera delay or Front Camera delay follow the Camera Trigger change .

## CLOCK SETTINGS-Menu 3


 
- a. Press to set clock mode:  
12/24 hr
- b. Press to set hour
- c. Press to set minute
- d. Press to set AM/PM at 12hr mode

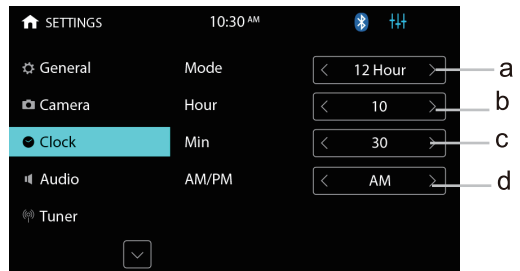

## AUDIO SETTINGS-Menu 4

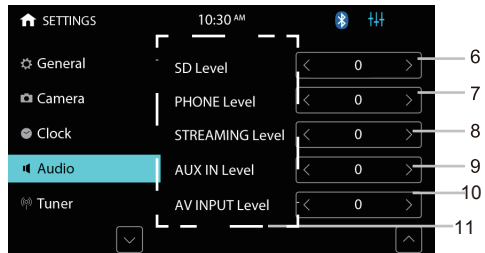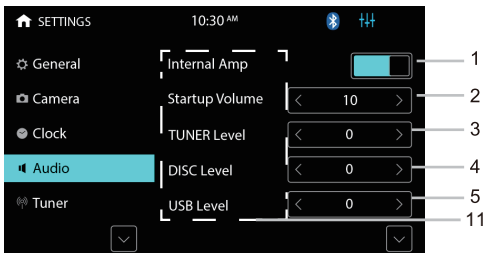  


# ACCESS SETUP INTERFACE

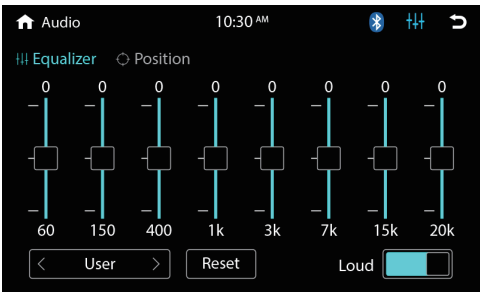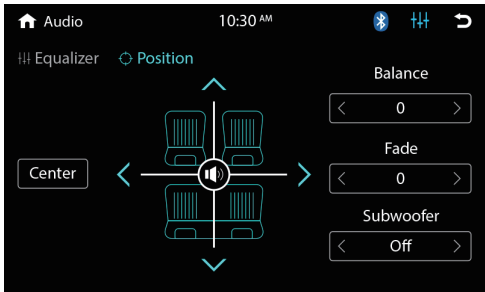  

1. Touch to select whether to output sound from an external amplifier
2. Startup volume: default volume ;
  - ①.If the volume at the last shutdown is less than this volume, the volume at the last shutdown will be used when rebooting;
  - ②.if the volume at the last shutdown is greater than this volume, this default volume will be used when rebooting
- 3-10. Press to set preset gain.
11. Slide up or down to enter previous functions.


## TUNER SETTINGS –Menu 5

 1. Touch to choose between America/ EU regions.
2. Perform radio auto preset (ps) functionality
3. Touch to choose Local or Distance
4. Touch to turn on or turn off RBDS; Touch Set to enter RBDS page .
5. Touch to choose Stereo or Mono

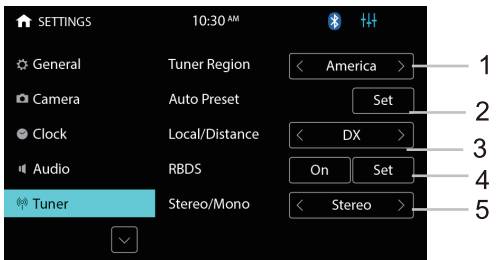

## ILLUMINATION SETTINGS –Menu 5

 1. Touch to turn on the illumination detection function
2. Touch to set screen brightness
3. Touch to set gamma brightness

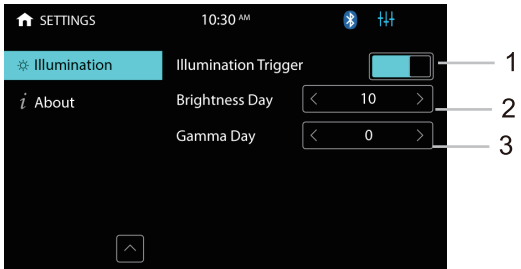




# TUNER OPERATION


## ABOUT SETTINGS –Menu 7

 1. Touch to enter the touch calibration interface
2. Touch to view the version number of the machine.
3. Touch to restore the machine to factory status.
4. Touch to select whether it is necessary to display a warning interface when booting up.

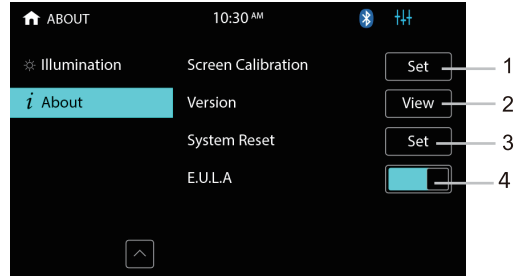

## TUNER OPERATION

 1. Touch to go back to the home page
2. Show PS,PTY and RT messages of RDS
3. Short press to seek backwards, long press to enter manual mode
4. Short press to seek forward, long press to enter manual mode
5. Short press to select the preset station, long press to save current Freq

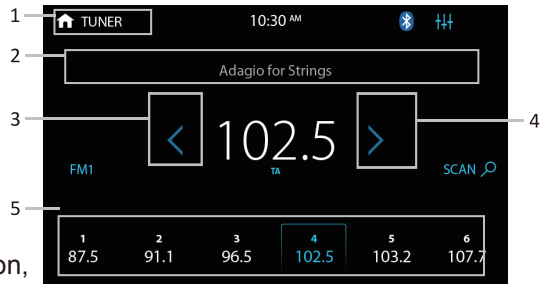


**RBDS:** Touch Setting >Tuner > RBDS > Set to enter the RBDS setup menu. You can choose what program type you'd like to listen to: news, sports, information, etc.

### a.CT(Clock Time)

 Turn on to automatically correct the current time every time the RBDS is opened.

### b.TA(Traffic Announcement)

**ON:**When this is turned on the radio will automatically search for traffic station.

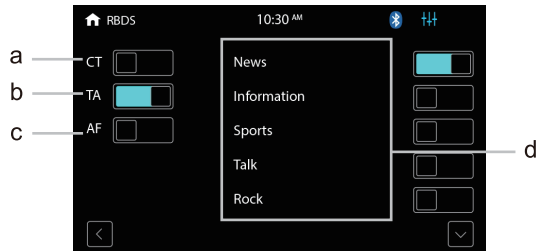

**OFF:**Turn off to end the TA function. In other modes, the traffic announcements will automatically switch to radio mode. Once the traffic announcements are complete it will automatically switch to the previous mode.

### c.AF(Auto Frequency)

When the AF function is turned on, the radio will automatically fine tune to other frequencies when the received stations become weak. A warning message will be displayed on the screen when receiving emergency announcements.

# DISC/CD/USB/SD PLAYBACK

 
## d.PTY(Programming Type)

Touch the button to display program types. Search for stations according to program type.


**NOTE:** If RBDS is turned OFF, AF/TA/PTY will not function.

## DVD MODE OPERATION

1. Touch to select title/chapter of DVD
2. Short press to move to the previous chapter, long press to rewind quickly.
3. Touch to playback/pause
4. Short press to move to the next chapter, long press to fast forward quickly.
5. Touch to enter DVD root menu
6. Go to the next page of the menu bar
7. Go to the previous page of the menu bar
8. Touch to change the repeat mode in the following sequence:  
DVD:repeat all, repeat off, repeat chapter, repeat title  
VCD(PBC off):repeat all, repeat off, repeat single
9. Touch to change random play mode
10. Touch to enter video adjust page
11. Touch to enter DVD title menu
12. Touch to select the subtitle language if the disc is recorded in multiple languages
13. Go to the next page of menu bar
14. Touch to switch video between 4:3 and 16:9
15. Touch to select DVD audio language
16. Touch to select DVD video angle

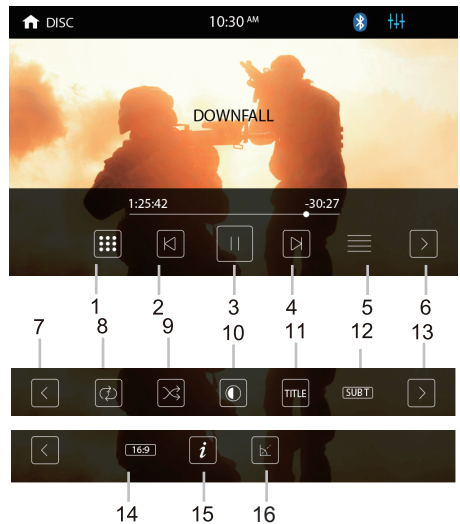

 
**NOTE:** When properly installed, a video cannot be displayed unless the parking brake is applied. If the parking brake wire is not installed correctly, the following message will appear.

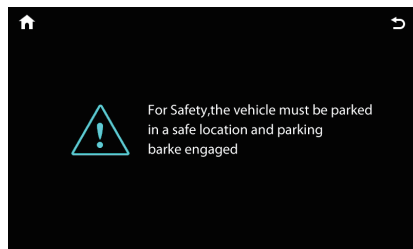

# DISC/CD/USB/SD PLAYBACK


## MEDIA PLAYING—CD AUDIO

 1. Show the music's ID3 information
2. Time bar: show the total time and playing time of the present song
3. Touch to change play mode: repeat all, repeat directory, repeat single, sequential play and shuffle play
4. Touch to return to previous chapter
5. Touch to playback/pause
6. Touch to go to the next chapter
7. Touch to enter file list page

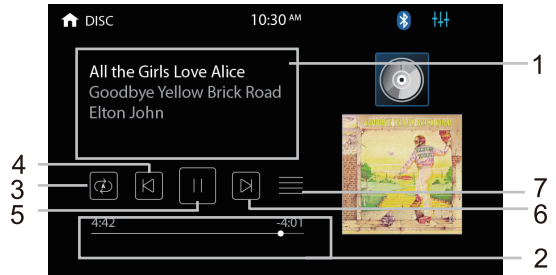





## CD SOURCE MENU

 Touch the SOURCE MENU (ICON 5) to access the CD track menu to view or change tracks manually. Touch again to return to playback.

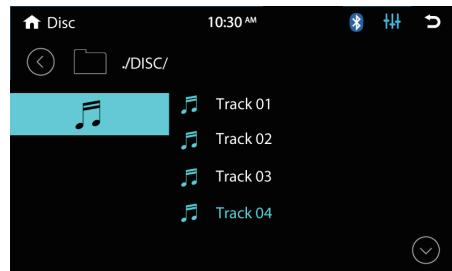

## USB/SD MUSIC/VIDEO/PICTURE

    Press USB/SD in the main menu. The music menu is similar to the disc music menu except there is more ID3 information on it (such as song name & singer).

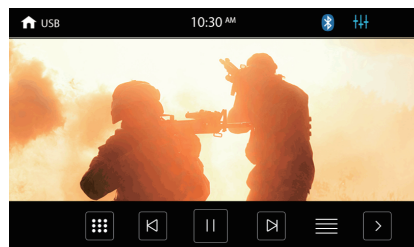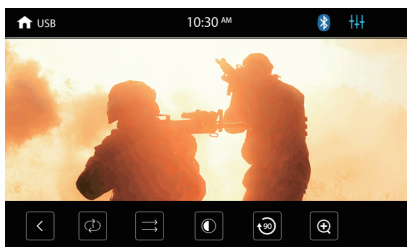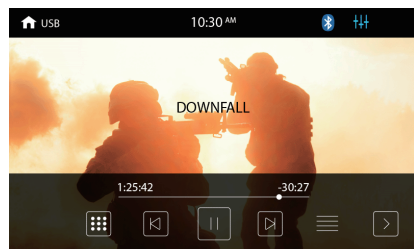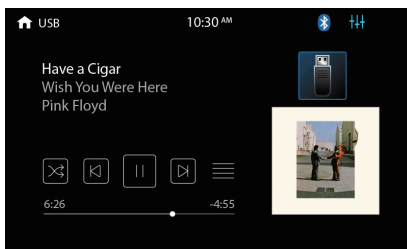

# BLUETOOTH OPERATION

## BLUETOOTH OPERATION MENU

Click the phone icon to enter the Bluetooth function interface.

### 1. Bluetooth setting menu:

a. Turn Bluetooth on and off.

Turn on and the display loops between the gray Bluetooth icon, the white Bluetooth icon. The icon will turn blue when a phone is paired.

b. Connect automatically.

c. Answer automatically.

d. PIN code: The default password is "0000" and can be changed by clicking "0000".

e. Default Bluetooth name for this unit:

Boss Audio BV755B

### 2. Function area:

a. Click to see the dialing keypad. Users can dial phone numbers and make calls.

b. Click to see the Bluetooth phonebook menu.

c. Click to see the Bluetooth call history.

d. Bluetooth pairing interface.

e. Bluetooth setting menu.

## BLUETOOTH DIALING

1. Shows the number dialed in.

Press  to delete wrong numbers.

2. Key area.

3. Touch to call out.

## BLUETOOTH CALL

 
 
 
1. Show contact name.

2. Touch to select talk through phone or through Bluetooth.

3. Touch to mute or un-mute mic.


4. Keypad area.

5. Press to hang up the phone call.

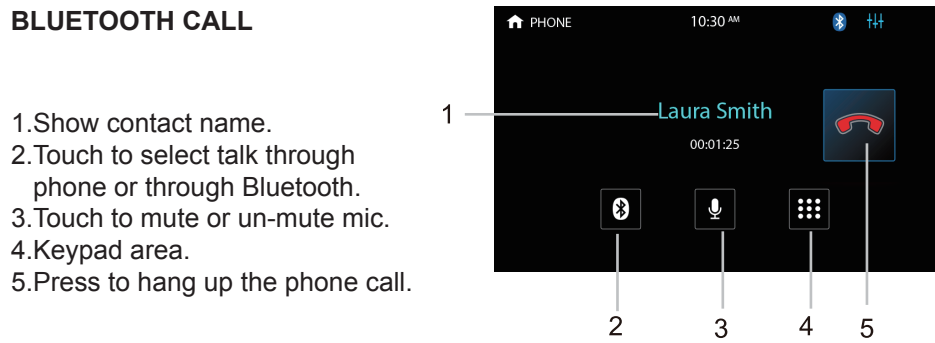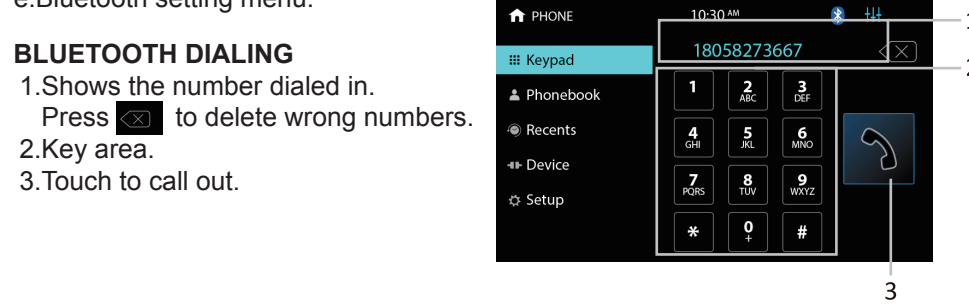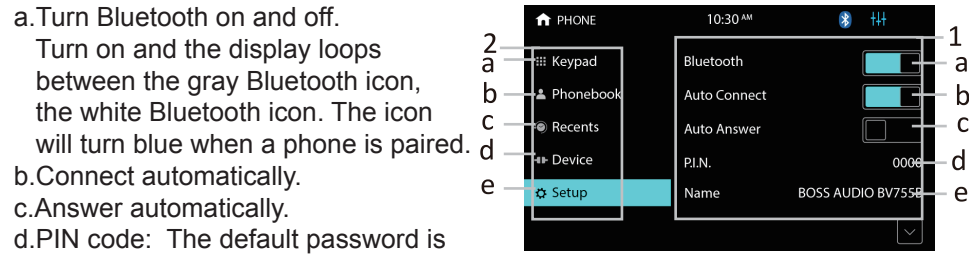

# BLUETOOTH OPERATION

 
## BLUETOOTH PHONE BOOK

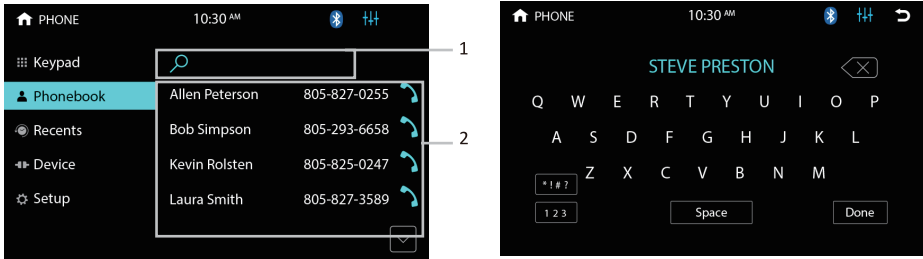

1. Touch to search for a name or phone number.
2. Contact list.


## BLUETOOTH PHONE CALL HISTORY

 1. Click to sync phonebook.
2. Touch to show missed calls.
3. Touch to show the dialed phone number.
4. Touch to show the received phone number.

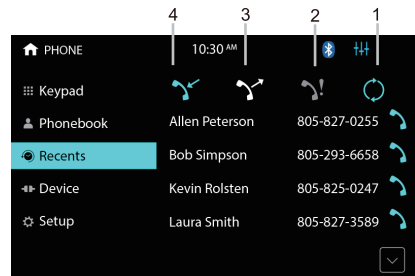


## BLUETOOTH MUSIC-A2DP

 1. Previous song.
2. Play/pause.
3. Next song.
4. Enter EQ setting menu.

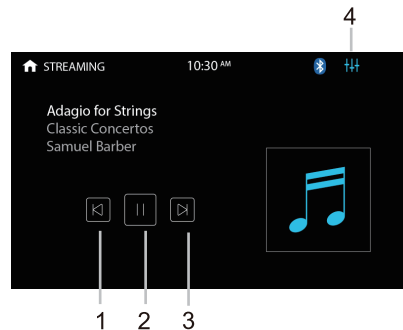

## BLUETOOTH PAIR DEVICE

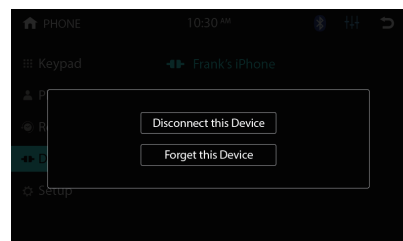 

## PHOTOS

 
1. Keypad: enter number to select file.
2. Previous pic.
3. PLAY/PAUSE: TOUCH: Touch to start picture playing mode. Press again to pause. During picture playing mode, each picture will be played for 5 seconds and then automatically move to the next if the PLAY/PAUSE button is not pressed.
4. Next picture.
5. List: Press to enter file list.
6. Go to the next page of the menu bar.
7. Go to the previous page of the menu bar.
8. Select repeat mode.
9. Random play.
10. Touch to enter the video adjust page.
11. Turn right 90 degrees.
12. Zoom out/in the present picture.



## CAMERA/AUX/AV MENU


### FRONT CAMERA:

Turn on the switching interface of rear camera and front camera at the same time

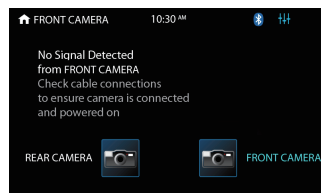


### REAR CAMERA:

 Rear view function. The rear view video signal can display automatically when reversing the car and then return the screen to the last source when the car is moved out of reverse.

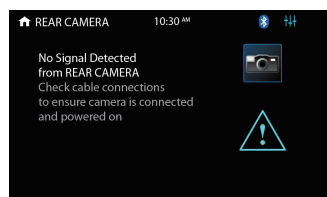


### AUX IN:

 External audio input function Connect the audio device to the unit by the 3.5mm jack in front of the panel and touch AUX IN icon.

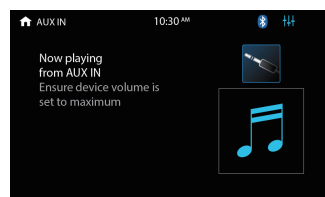

### AV INPUT:

 External video and audio input function Connect the video and audio device to the unit by the RCA jacks and touch AV INPUT icon.

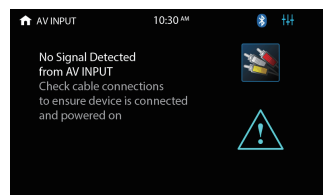

# TROUBLESHOOTING

Media displayed	Cause	Corrective Action
Loading	Disc is being read	
No Disc/Bad Disc	Disc is dirty	Clean the disc
	Disc is upside down	Insert Disc in right way
Unknown Disc	Unsupported Disc type	Check the disc and change
Error	Illegal mechanism operation	Press EJECT for 5s to reset loading mechanism
Problem	Cause	Corrective Action
Unit will not power on	Radio fuse blown	Install new fuse with right rating
	Car battery fuse blown	Install new fuse with right rating
	Illegal operation	Press the RESET button
Screen touch is insensitive	Place of touch screen is uncalibrated	Go to setup menu and set the calibration
No audio output	Improper audio output connection	Check wiring and correct
	VOLUME 0	Turn up the volume
Low audio output	Heavily biased volume balance	Check and adjust the channel balance to the center position
Poor sound quality or distortion	Speaker power rating not compatible with unit	Connect proper speakers
	Speaker short circuit	Check wiring
Weak station searching	Auto antenna is not properly connected	Connect the auto antenna properly
	LOCAL function is activated	Turn LOCAL function OFF

## TROUBLESHOOTING

Problem	Cause	Corrective Action
No image	Incorrect connection to parking wire	Check wiring and correct
	Parking brake is not engaged	Stop vehicle in safe place and set parking brake ON
Flashing image or interference appears on screen	Improper video signal connections	Check wiring and correct
Improper image, improper height/width ratio display	Improper aspect ratio setup	Use correct aspect ratio setting
Cannot insert Disc	Disc already inside unit	Eject the current Disc and insert the new one
Lost of noise during play, and stop then	Disc is scratched or warped	Use a new one in good condition
	Disc is dirty or wet	Clean the Disc



PLEASE WRITE A REVIEW on  
Amazon.com and BOSSaudio.com



Like us on Facebook!



SHARE YOUR

BOSS Audio Systems photos and videos  
on our website and Facebook!

WIN PRIZES!

115



THANK YOU

from BOSS AUDIO SYSTEMS  
FOR YOUR PURCHASE

There's a reason we have been a leader and innovator  
in the business since 1987.

Our goal is for you to be completely satisfied with your purchase.

If for any reason you are unsatisfied, please let us  
be the first to know.

Contact our Customer Care dept. at 805.988.0192

WE WANT YOUR POSITIVE FEEDBACK AND REVIEWS!

[www.bossaudio.com](http://www.bossaudio.com)

115



# MULTIMEDIA PRODUCTS LIMITED WARRANTY

This BOSS AUDIO SYSTEMS ELITE MULTIMEDIA UNIT has a manufacturer's warranty against defects in materials and workmanship to the original purchaser for a period of three years from the date-of-purchase (DOP). This manufacturer warranty is non-transferable. The warranty is for repair or replacement at the sole discretion of BOSS AUDIO SYSTEMS (BAS). For service under this warranty you need to return the product to BAS. If replaced, BAS reserves the right to replace it with a new or reconditioned product of the same or similar design.

## Obtain Warranty Service

Within the first 30 days from the original DOP, BAS will provide a return shipping label for any defective product shipped from within the 50 US States. After the first 30 days you are responsible for the freight charges incurred to send the product back to BAS. To send a product in for warranty service you will need the following:

- A Return Authorization number (RA#). Please contact our Customer Service to receive a RA#.
- A legible copy of the proof-of-purchase with your name, the name of the authorized dealer, the DOP and the model number of the product requiring service.
- Enclose a note stating the problem or issues with the product, your daytime phone number, email and return shipping address (within the USA, no P.O. Box please).

This warranty does not cover any product subjected to abuse, neglect, incorrect wiring, water or physical damage or any attempt to repair or modify the product by anyone other than an BAS Repair Technician. Any damages, resulting from legal action for breach of expressed or implied warranty shall be limited to the cost of the original purchase price of the product. All liability for coincidental damages are excluded under this warranty. The Customer agrees to retain the original proof-of-purchase for establishing the effective date of this warranty. If BAS or an Authorized Dealer replace your product under warranty, the replacement product shall be considered a transaction under the original warranty, and does not extend the original warranty period.

FOLD HERE

0716

To register this product fill-in this form and mail this card to  
the address shown on the reverse side.  
For online registration, see reverse side of this card for instructions.

NAME

AGE

ADDRESS

CITY

STATE

ZIP

E-MAIL

PHONE

MODEL NO.

DATE OF PURCHASE

PURCHASE PRICE

PURCHASED FROM

INSTALLED BY

SERIAL NUMBER (If applicable)

VEHICLE: YEAR, MAKE AND MODEL



3451 Lunar Court • Oxnard, CA 93030

Customer Service:

US Toll-free: 1-800-999-1236

US Local Main: 1-805-988-0192

ONLINE: [www.bosssaudio.com/support/technical-support](http://www.bosssaudio.com/support/technical-support)



## ONLINE PRODUCT REGISTRATION:

Scan this QR Code with your smart device, fill-in the online form to register your product. Or fill-in the online form by visiting: [www.bosssaudio.com/support/product-registration](http://www.bosssaudio.com/support/product-registration)

We hope you are enjoying your new BOSS Audio Systems Elite product. We are always working to improve our products and provide a great customer experience. We welcome your feedback. Please consider writing a review for your new product on our website. We look forward to hearing about your experience.

FOLD HERE

PLACE  
POSTAGE  
HERE



3451 Lunar Court  
Oxnard, CA 93030