


ASSEMBLY INSTRUCTIONS

Model: U7068 Sofa

Description: Power Reclining Sofa With Drop Down
Table, Wireless Charger, LED And USB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

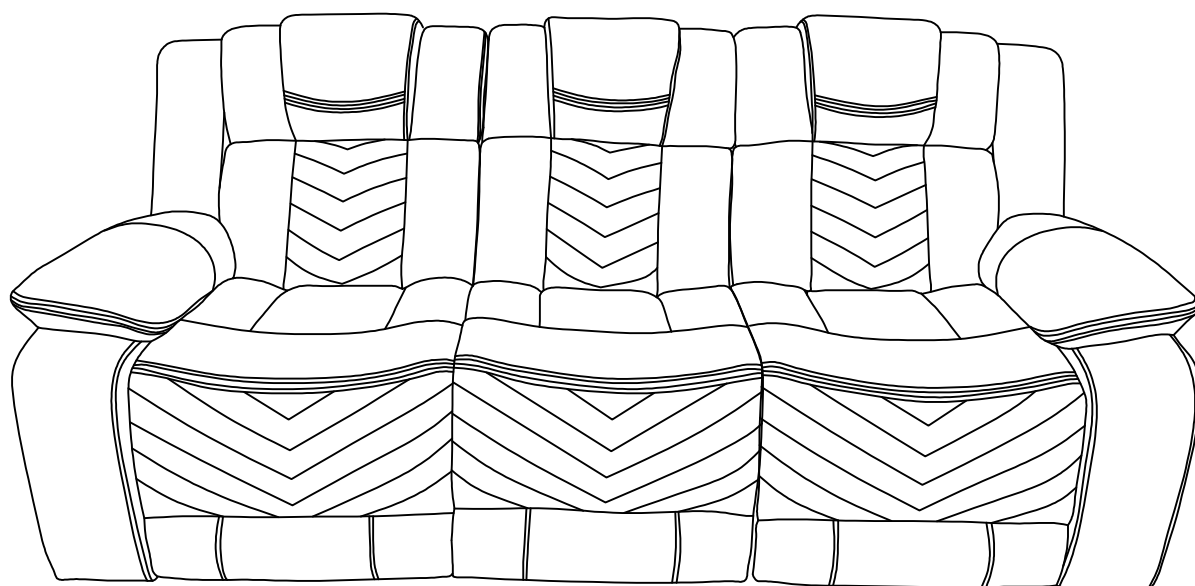








ASSEMBLY INSTRUCTIONS

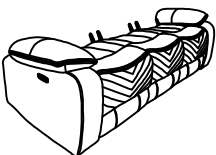Model: U7068 Sofa

Description: Power Reclining Sofa With Drop Down
Table, Wireless Charger, LED And USB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

PARTS LIST				PARTS LIST			
NO.	DESCRIPTION	SKETCH	QTY	NO.	DESCRIPTION	SKETCH	QTY
A	SEAT BODY		1 PC	D	RIGHT BACK REST		1 PC
B	LEFT BACK REST		1 PC	E	LEFT EAR		1 PC
C	MIDDLE BACK REST		1 PC	F	RIGHT EAR		1 PC

HARDWARE LIST				HARDWARE LIST			
NO.	DESCRIPTION	SKETCH	QTY	NO.	DESCRIPTION	SKETCH	QTY
G	ADAPTER		1 PC				


ASSEMBLY INSTRUCTIONS

Model: U7068 Sofa


Description: Power Reclining Sofa With Drop Down
Table, Wireless Charger, LED And USB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step 1: Attach the left back rest (B), the middle back rest (C) & the right back rest (D) to the seat body (A) as shown below diagram

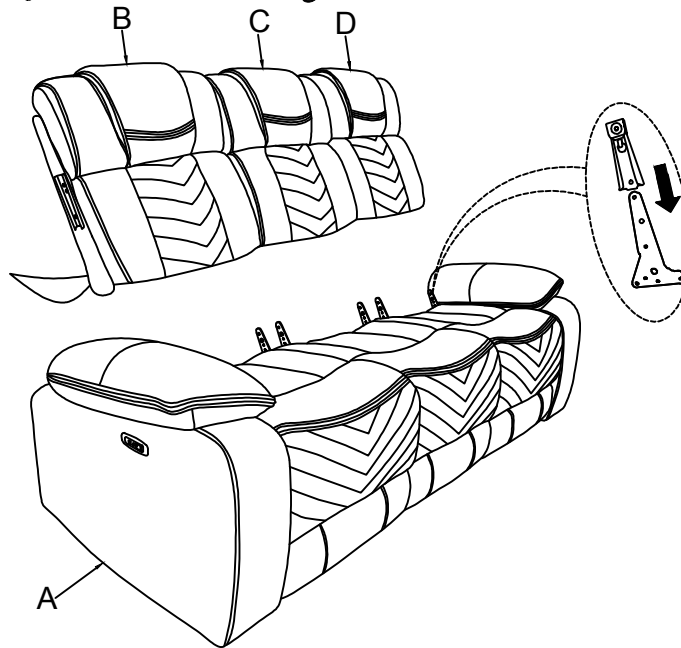

Step 2: Attach the left ear (E) & the right ear (F) as shown below diagram

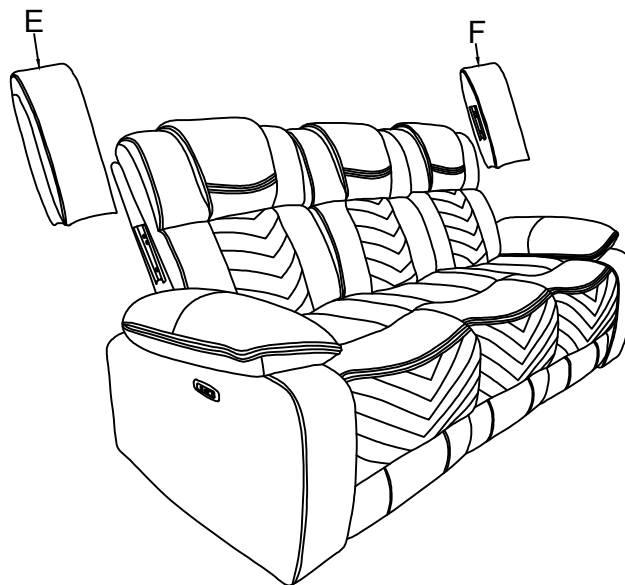


ASSEMBLY INSTRUCTIONS

Model: U7068 Sofa

Description: Power Reclining Sofa With Drop Down Table, Wireless Charger, LED And USB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step 3: Use the adapter to connect with power , then open the footrest by pressing the button open/close as shown below diagram.

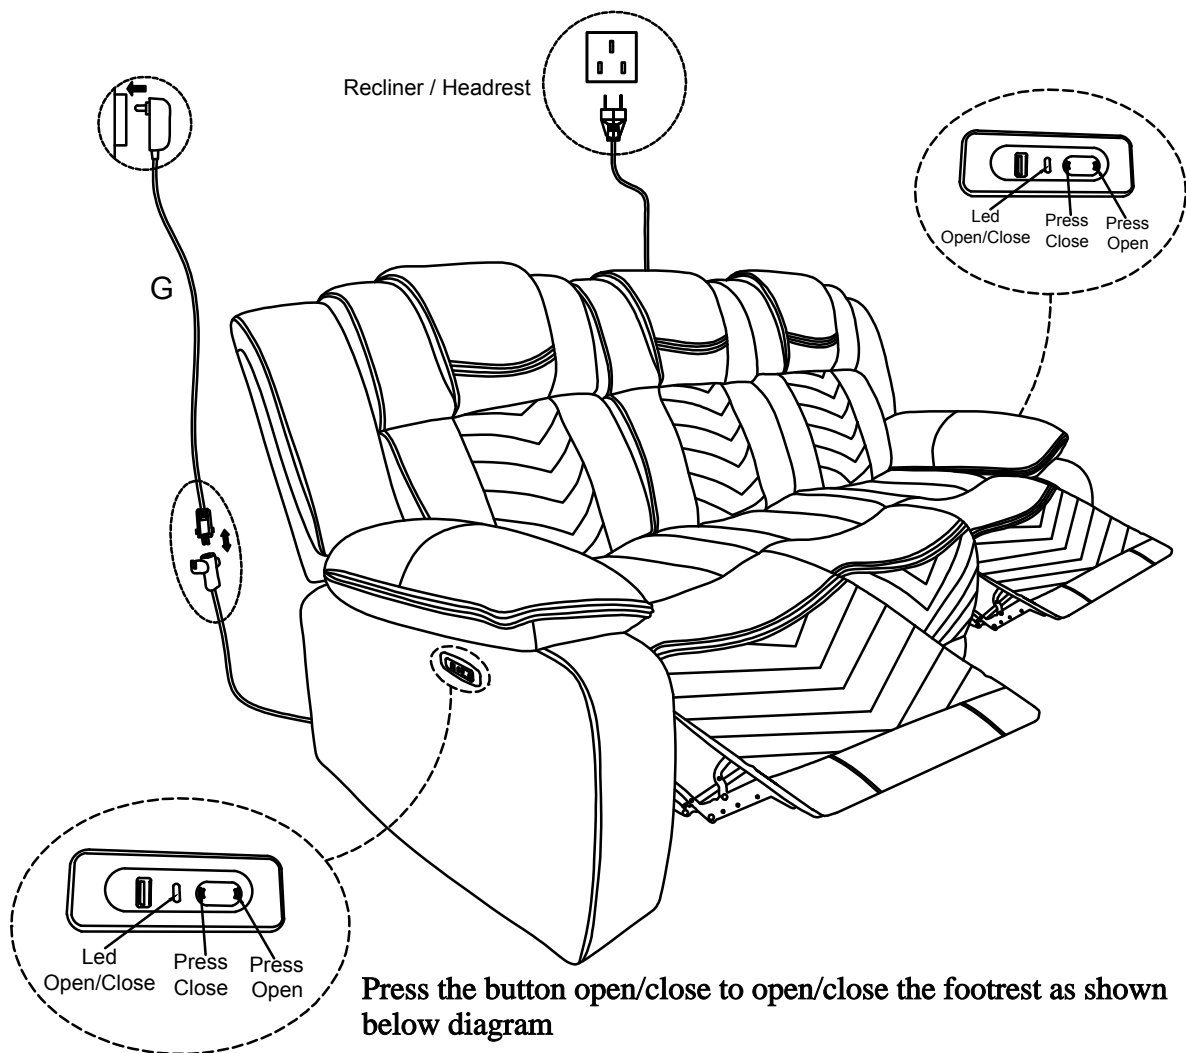

ASSEMBLY INSTRUCTIONS

Model: U7068 Sofa

Description: Power Reclining Sofa With Drop Down
Table, Wireless Charger, LED And USB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment

Step 4: To open/close the receptacle with a USB port and activate the wireless charging as shown below diagram

