

ASSEMBLY INSTRUCTIONS

MODEL

СМ4567-Е

Questions?

GIVE US A CALL: 1-888-980-5122 MON – FRI 8:30AM – 5:30PM (PT)

TOOLS REQUIRED



Allen Wrench



Phillips Screwdriver (Not Included)



2 - People Recommended



The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.







Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific Time and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



PRE ASSEMBLY

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

















Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

Suitable Location

Assembling near the area of the intended location is highly recommended.

Sufficient Space

Make sure you have enough space to move around during the assembly.

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note :

Every cam lock bolt must have a cam lock connector in order to fasten the parts together.









Screw the cam bolt into panel.



Align the cam lock with its side opening (or arrow) pointing to cam bolt.

cam bolt

cam lock



Insert the cam bolt into the bolt hole of joint panel.



Turn the cam lock clockwise gently until it will not turn any more.



HARDWARE			
#A 4pcs	(#B) 4pcs	#C 3pcs	#D 3pcs
	6	@-{)	
Bolt 1/4" x 1-3/8"	Washer Ø16xØ7x1.0	Cam Bolt M6x40	Cam Lock Ø14.5x11
(#E) 2pcs	(#F) 1pc	#G 4pcs	(#H) 3pcs
S JUR M			\bigcirc
M6x34 Connecting Bolt	Allen Wrench M4	Adjustable Foot	Ø20 Sealing Stickers

ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS





ASSEMBLY INSTRUCTIONS

