 


*ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE*

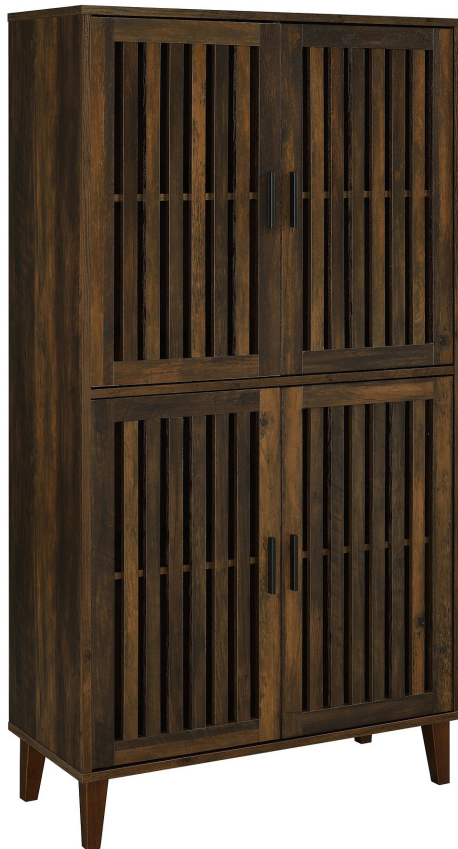

Fine Furniture for every stage of life

950335
ACCENT CABINET

ITEM:950335



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

 
1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

60 MINUTES









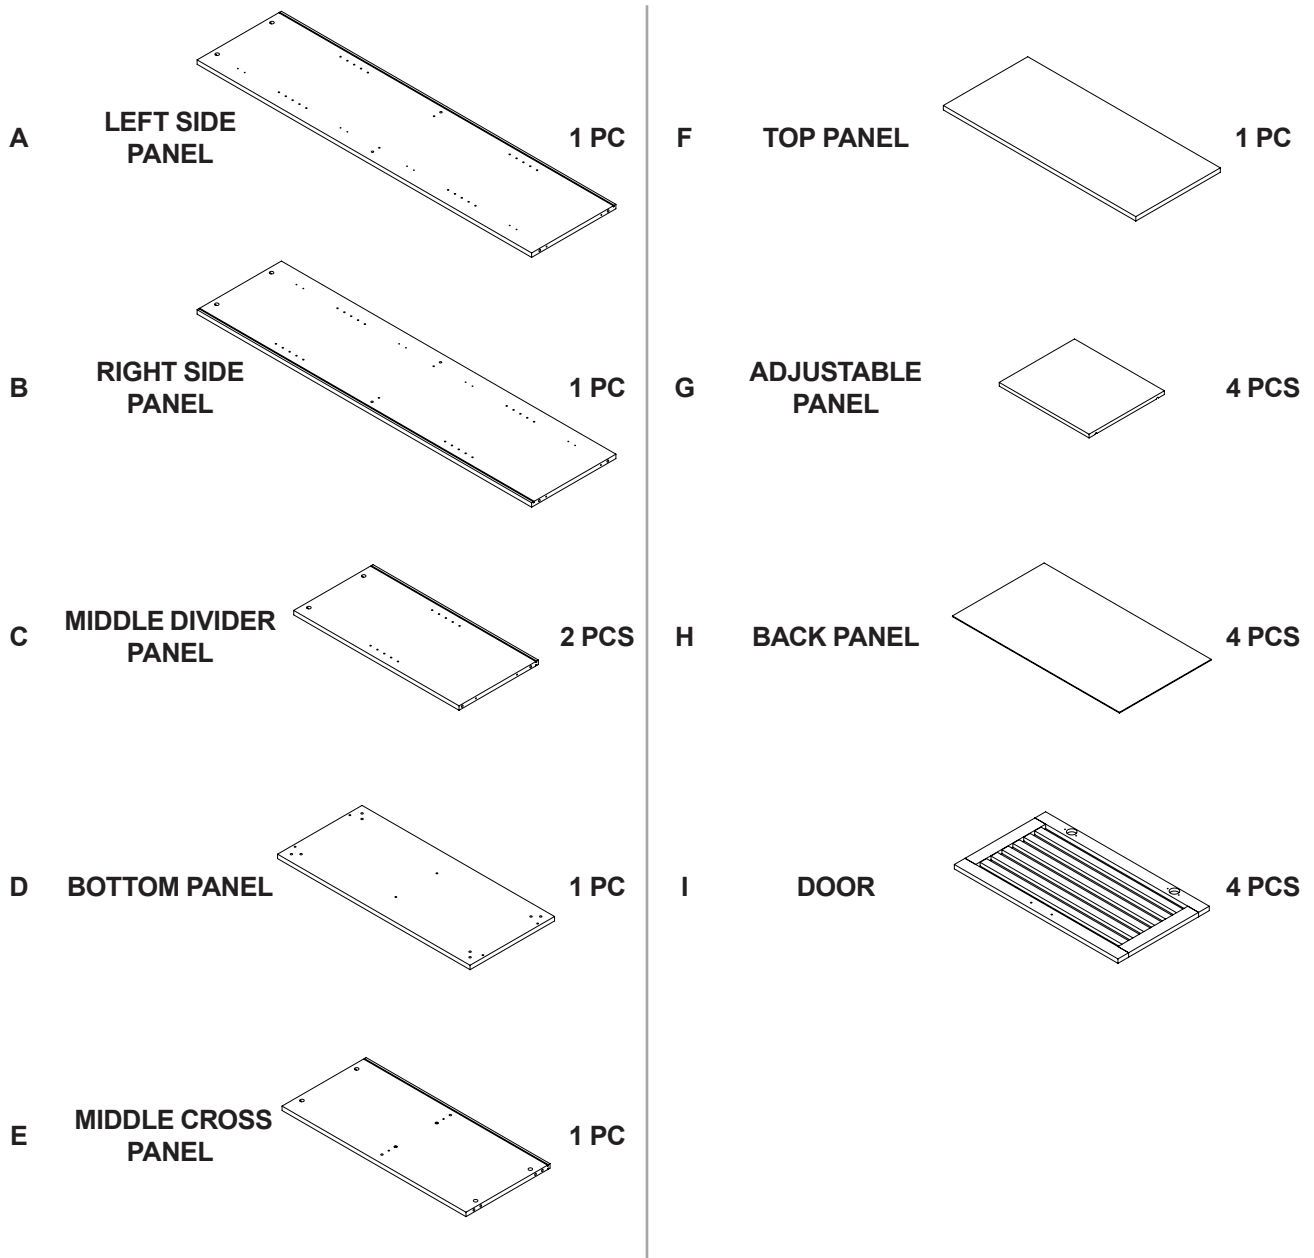







PARTS IDENTIFICATION

      

NOTE:

 Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

 ITEM: **950335****HARDWARE IDENTIFICATION****Z**

NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 15g		1 PC	9	HINGE Ø35mm SR		8 PCS
2	WOODEN DOWEL Ø8x30mm		20 PCS	10	HINGE SCREW Ø4x15mm SR		32 PCS
3	CAM BOLT Ø7x35.5mm SR		12 PCS	11	LEG		4 PCS
4	CAM LOCK Ø15x12mm SR		12 PCS	12	BOLT M6x33mm BLK		4 PCS
5	SCREW Ø4.5x42mm SR		8 PCS	13	ALLEN WRENCH 4mm SR		1 PC
6	PIN FOR ADJUSTABLE SHELF Ø4.9x15mm SR		16 PCS	14	FIXER		16 PCS
7	HANDLE L= 120mm BLK		4 PCS	15	FIXER SCREW Ø3x19mm SR		16 PCS
8	HANDLE BOLT Ø4x28mm BLK		8 PCS	16	STICKER Ø20mm		2 PCS

 
 
 
Z7,Z8,Z9,Z11 not included in blister packaging.**NOTE:**

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **950335**

STEP 1

COASTER
FINE FURNITURE

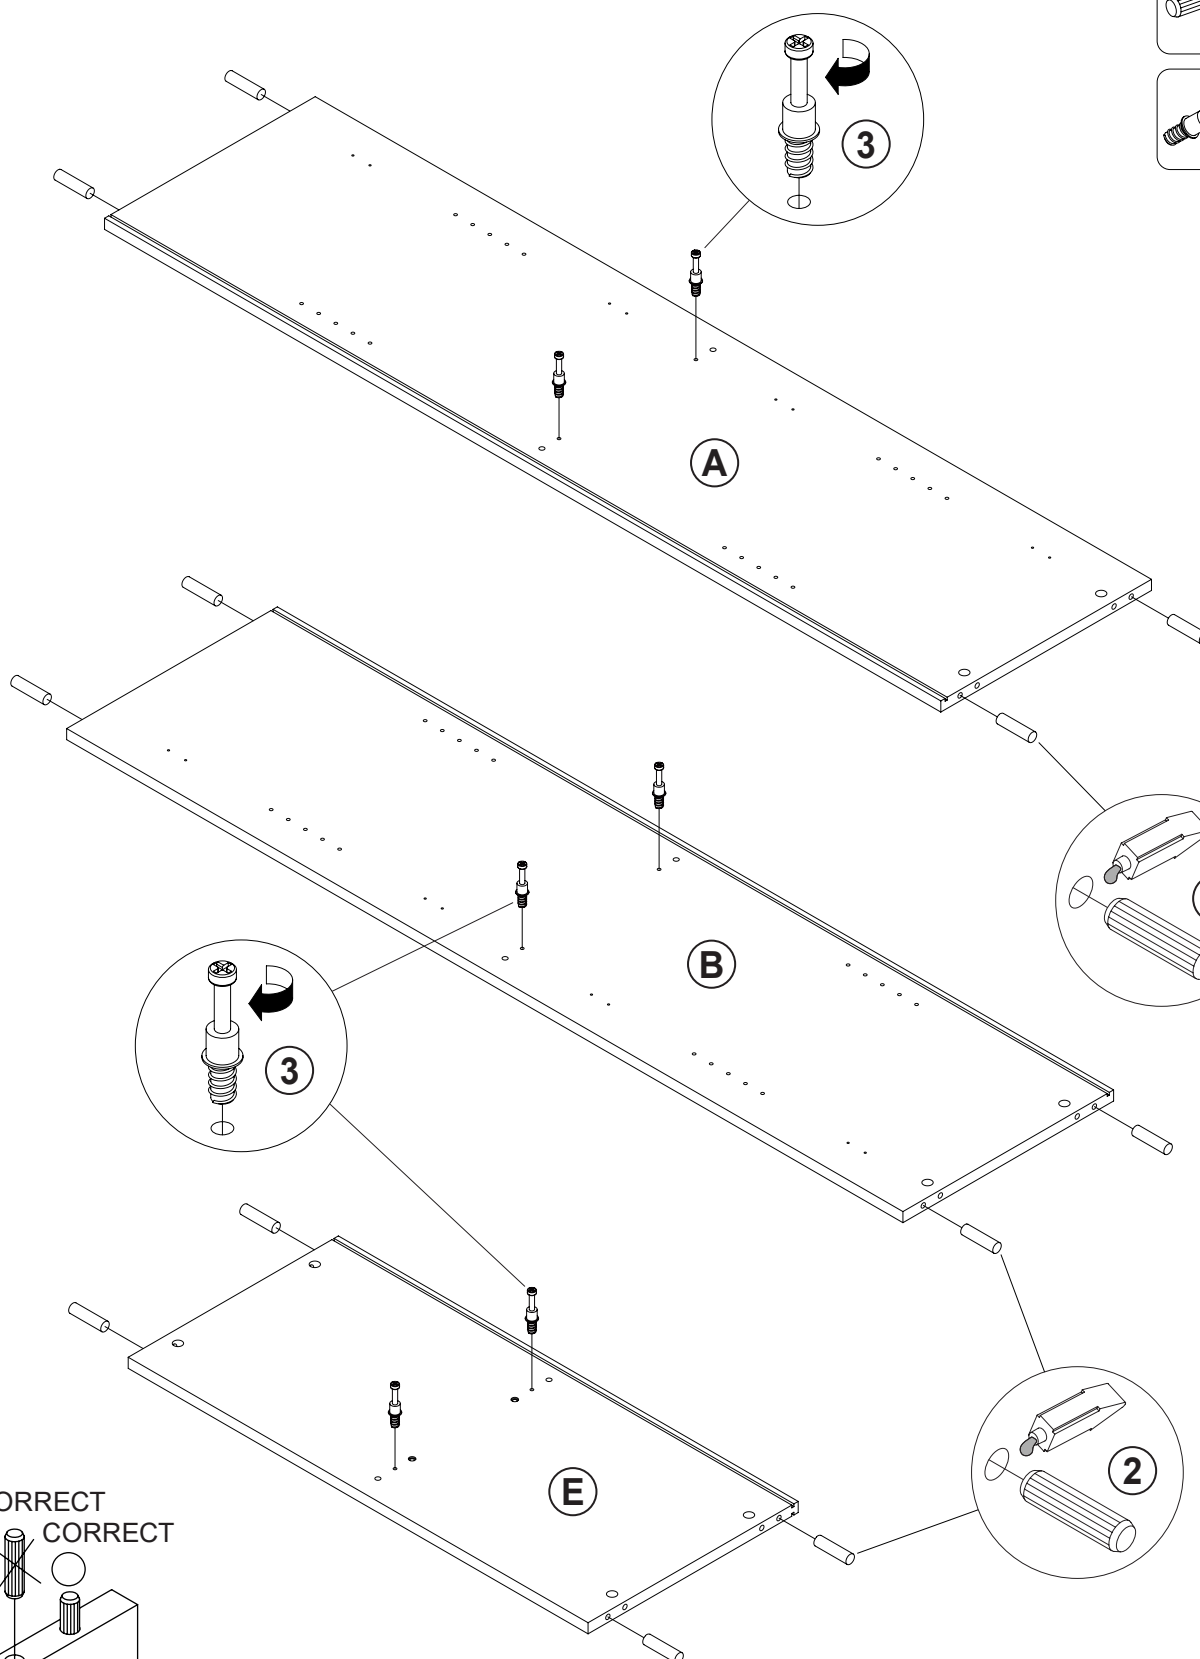

INCORRECT
CORRECT

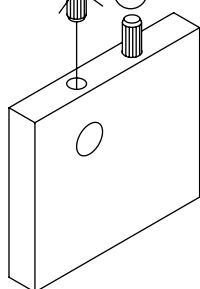 


Apply glue on all wooden dowels to ensure integrity of the structure.


ITEM: **950335**

STEP 2

 COASTER
FINE FURNITURE

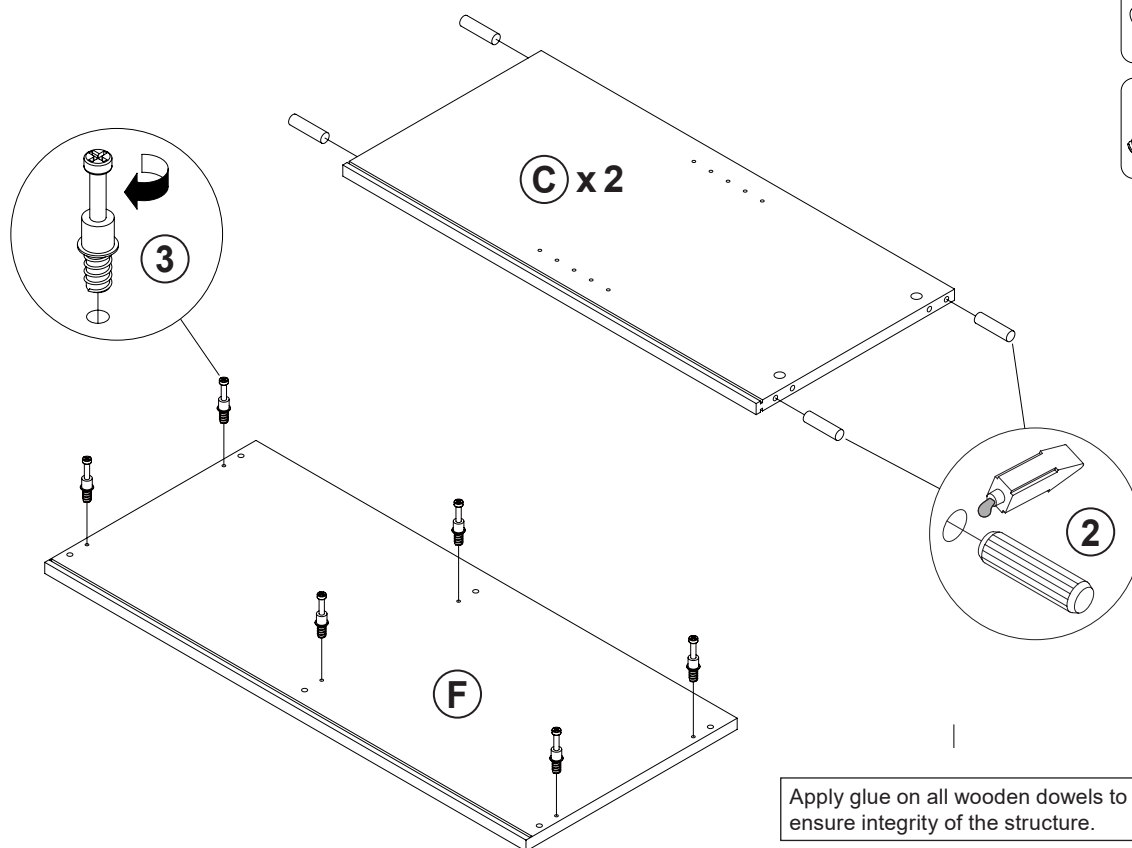

 STEP 3


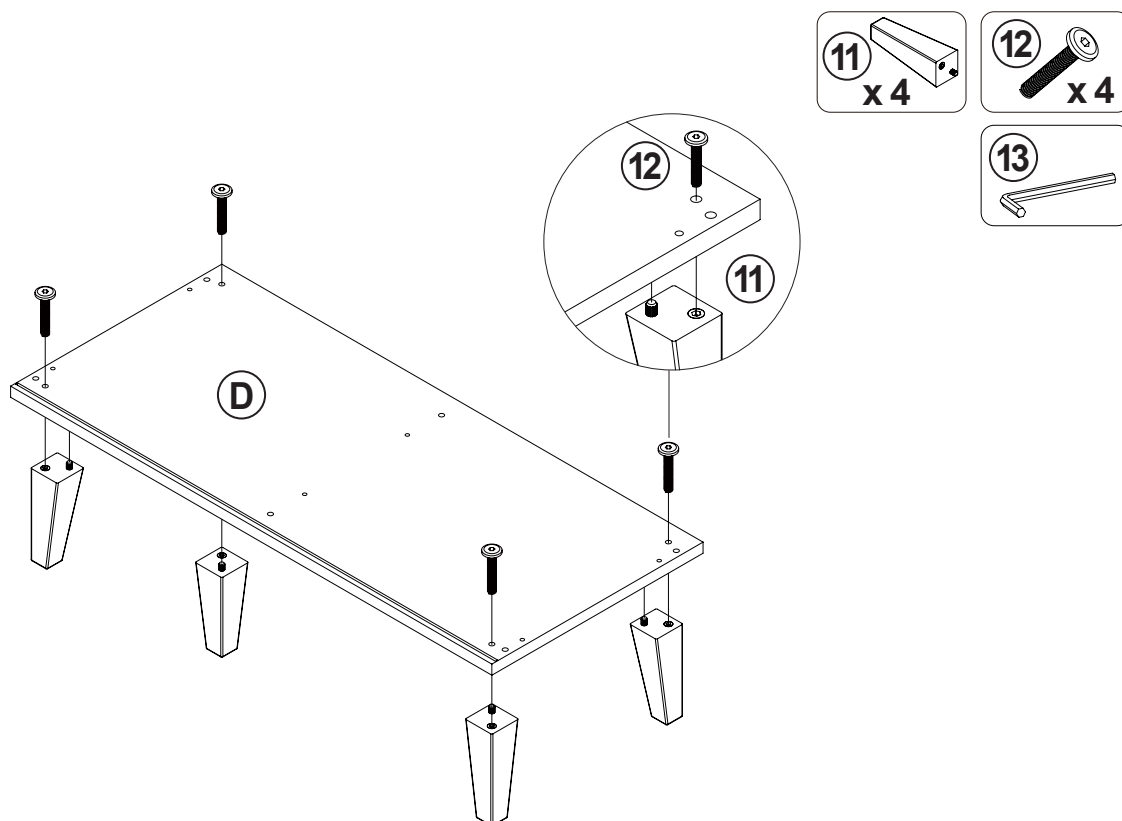


ITEM: **950335**




COASTER
FINE FURNITURE

STEP 4

  Apply glue on all wooden dowels to ensure integrity of the structure.

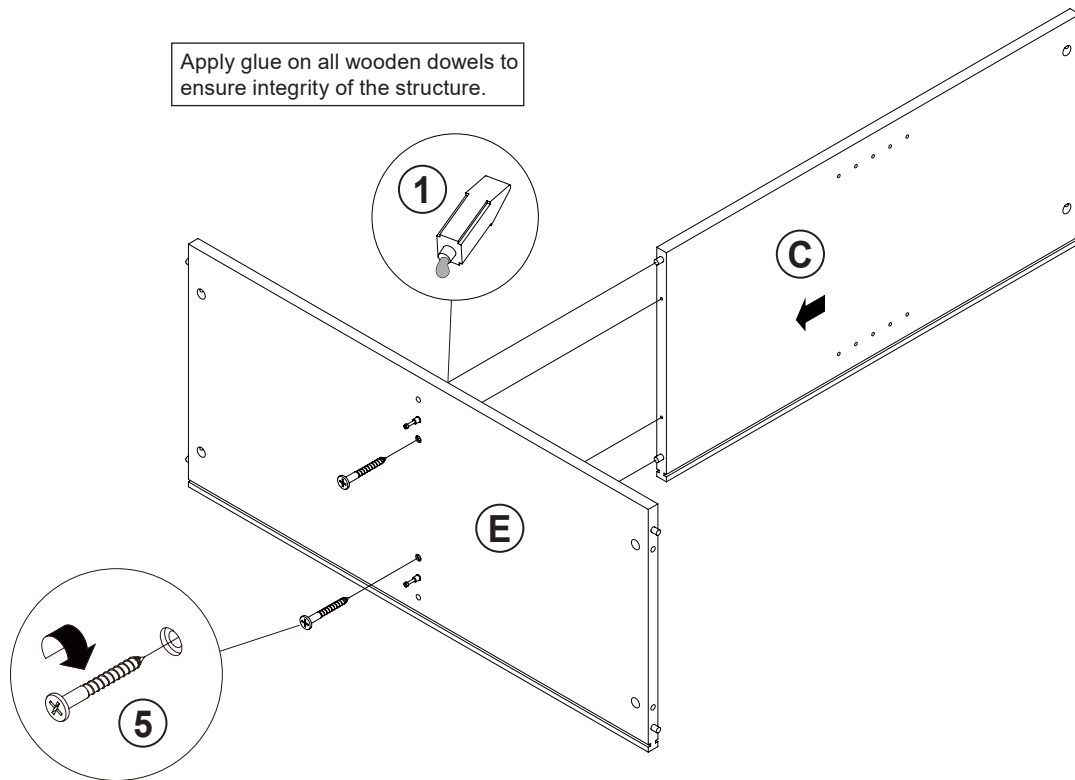

   
STEP 5

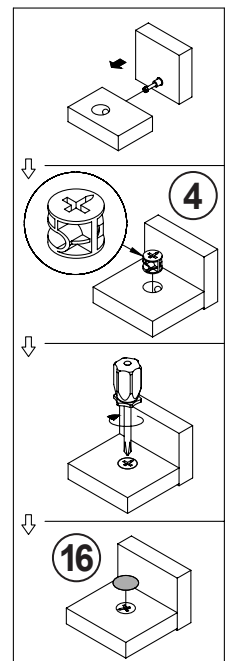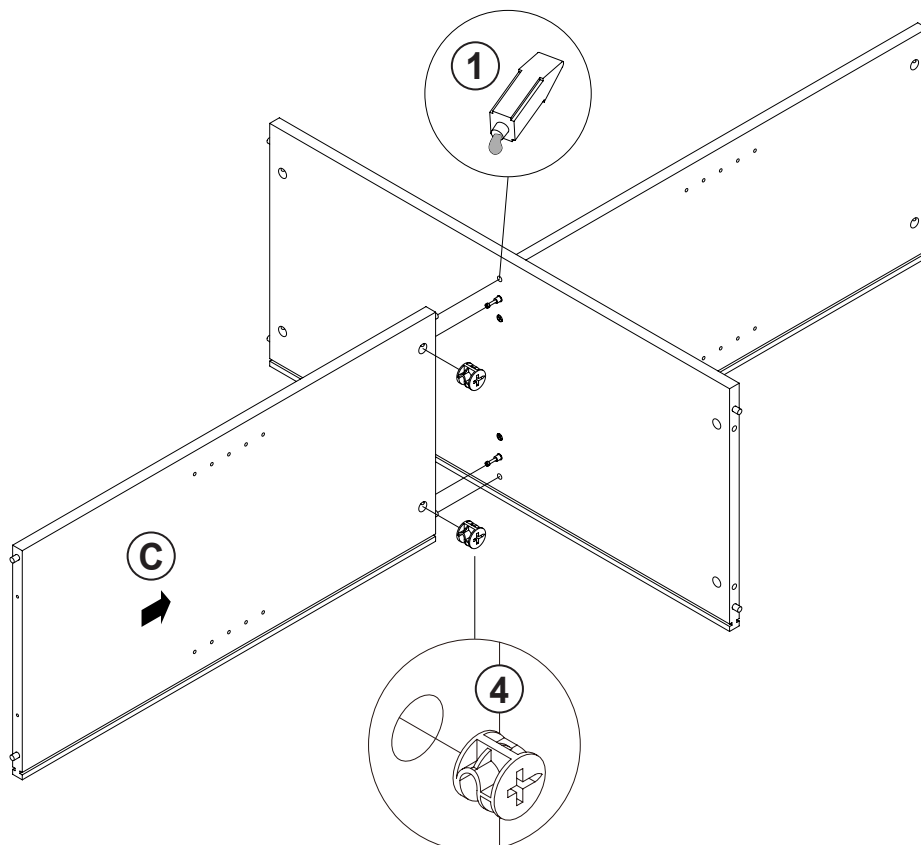


ITEM: **950335**

COASTER
FINE FURNITURE

 STEP 6

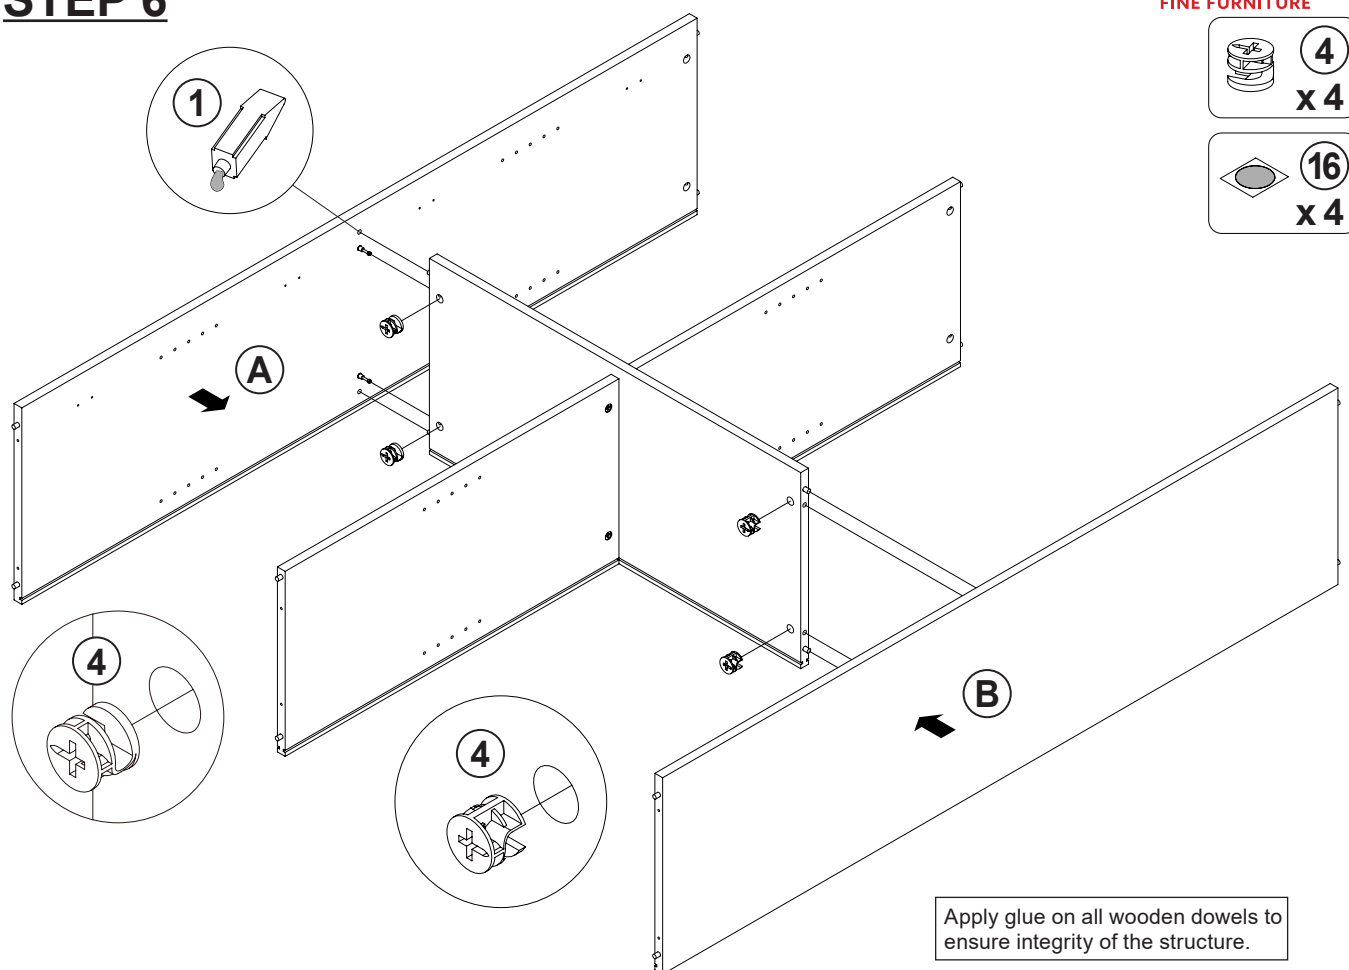



 
STEP 7

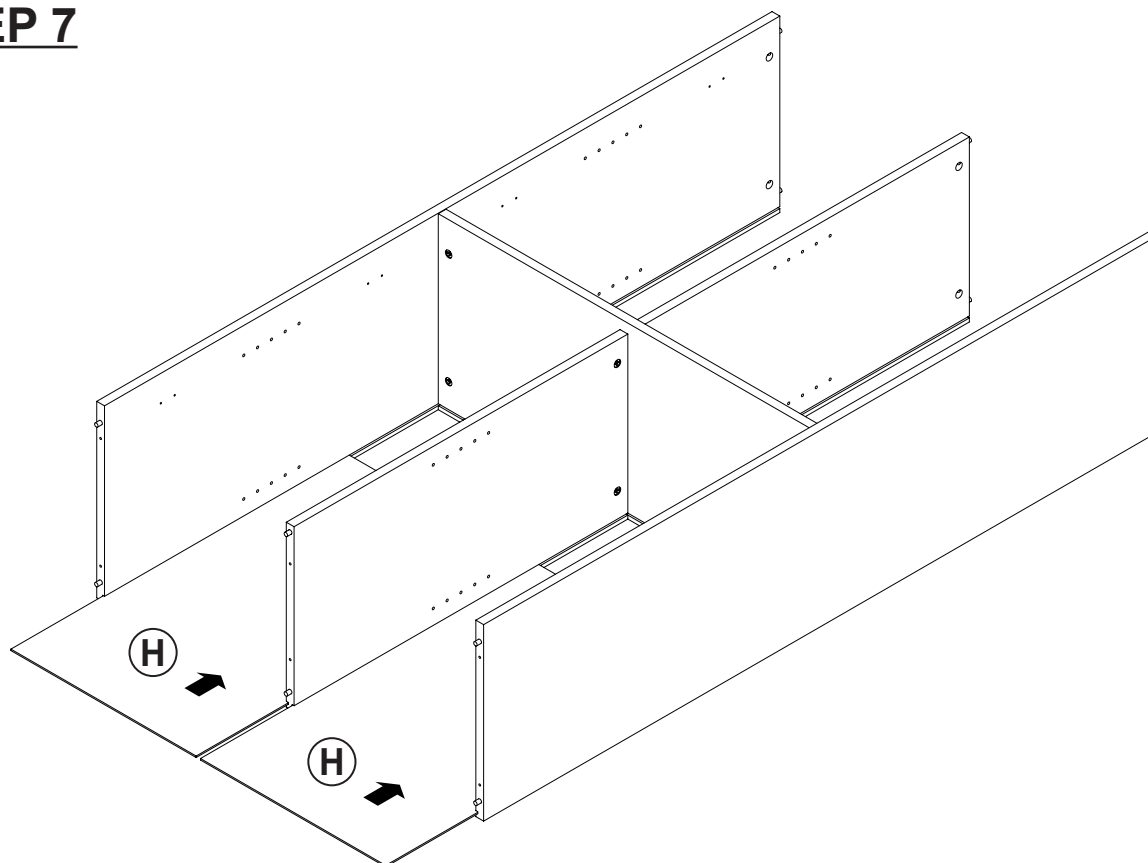


ITEM: **950335**

STEP 8

   COASTER
FINE FURNITURE

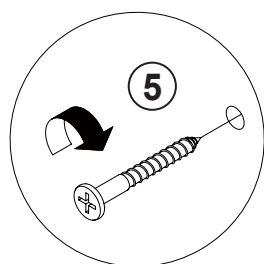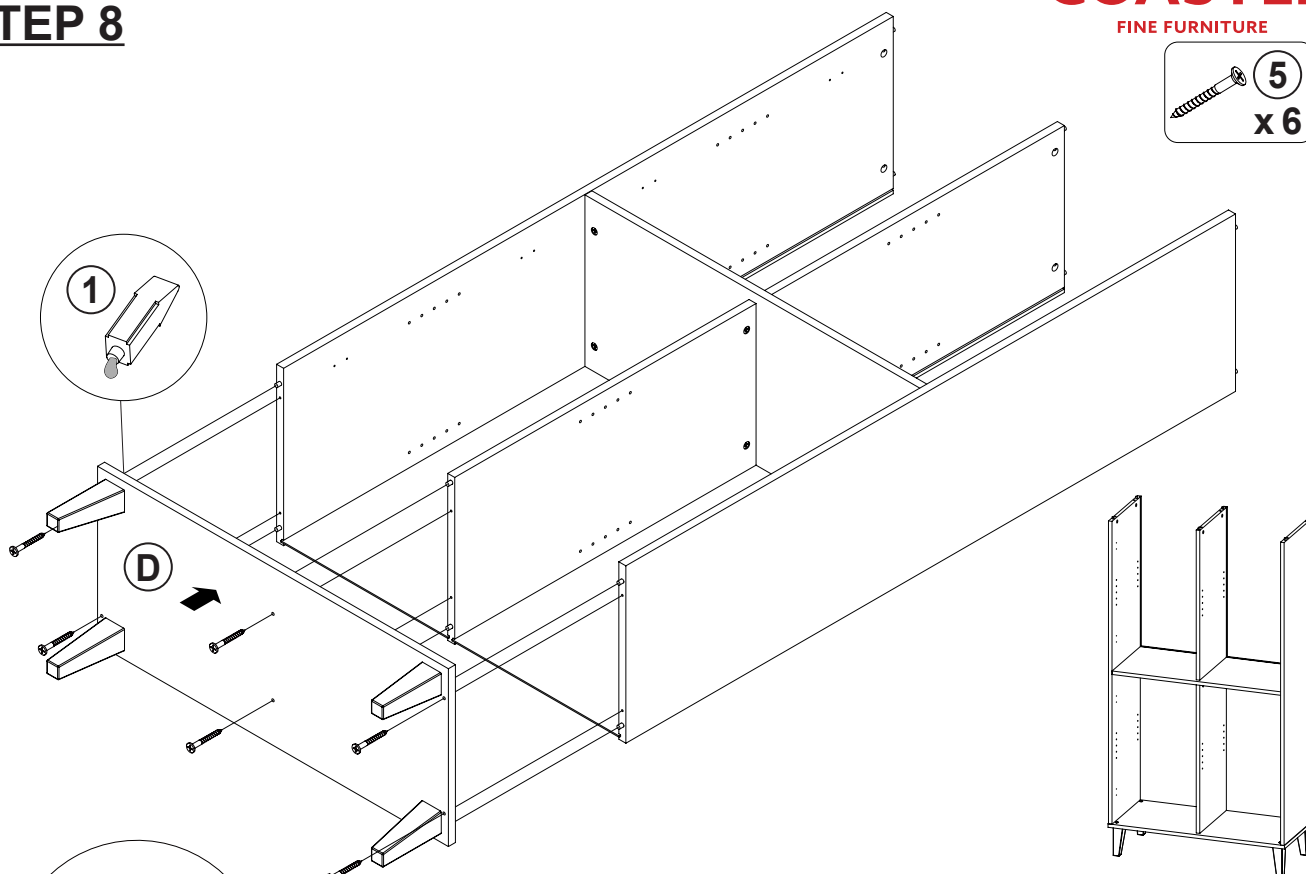





 
STEP 9

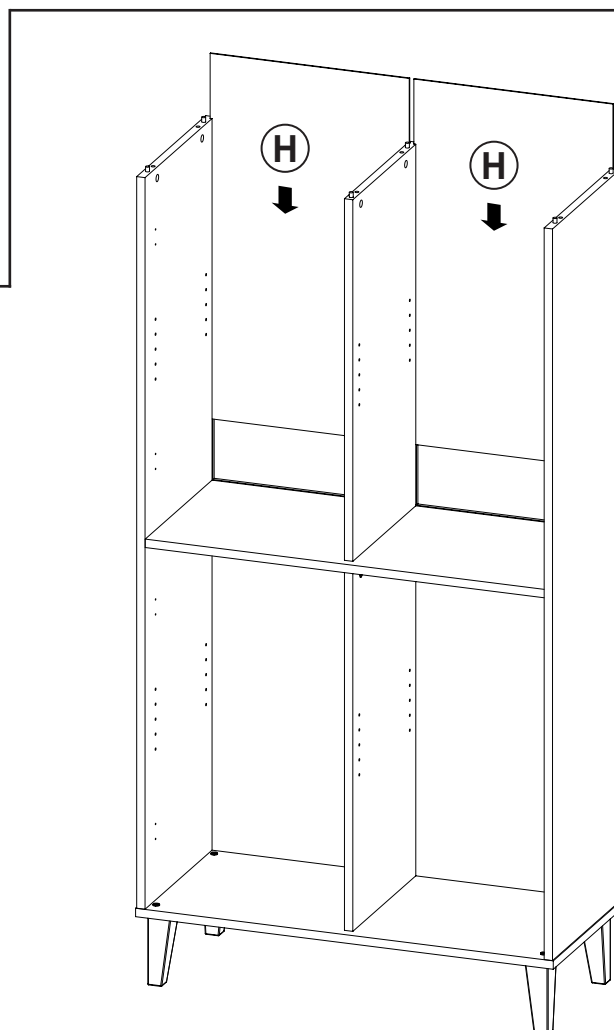



ITEM: **950335**

STEP 10

     COASTER
FINE FURNITURE

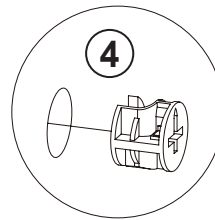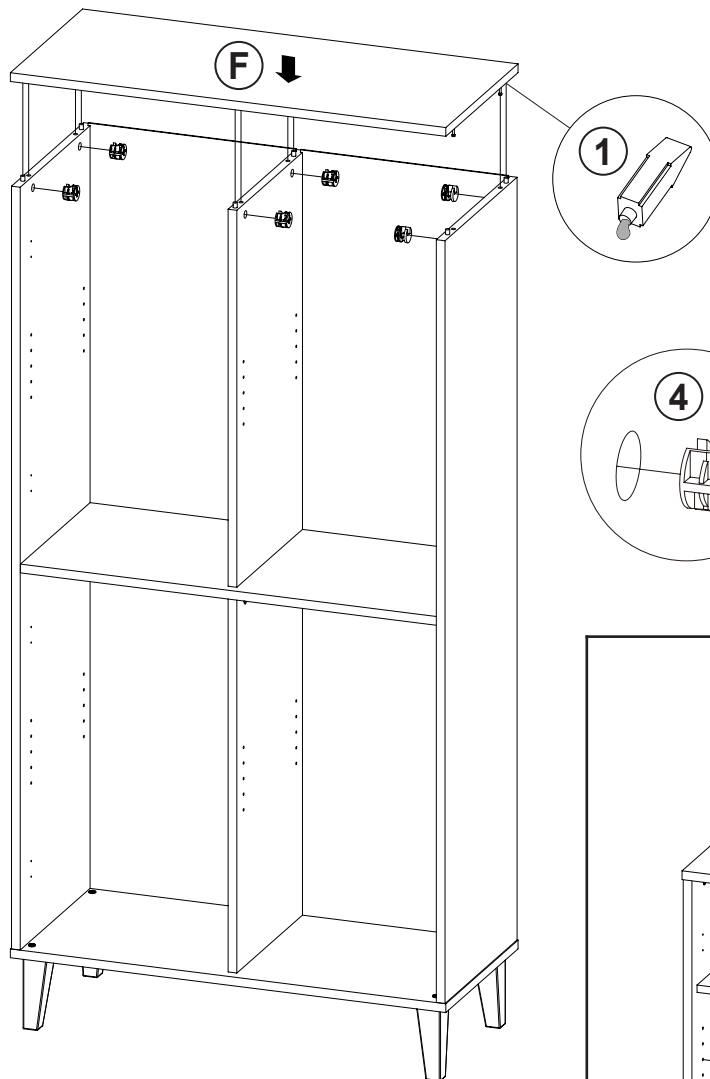

  
STEP 11

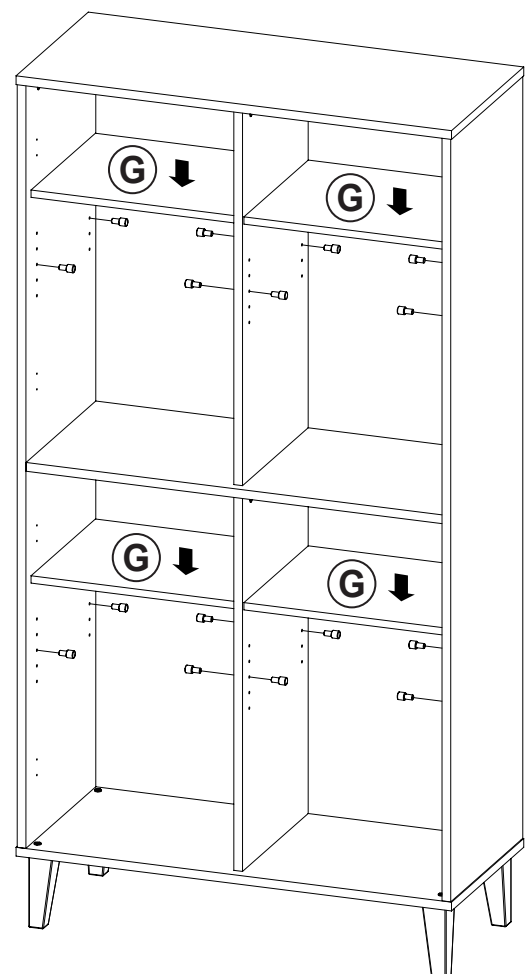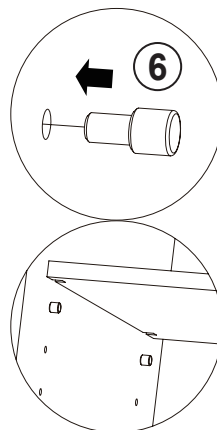

ITEM: **950335**


STEP 12

 COASTER
FINE FURNITURE

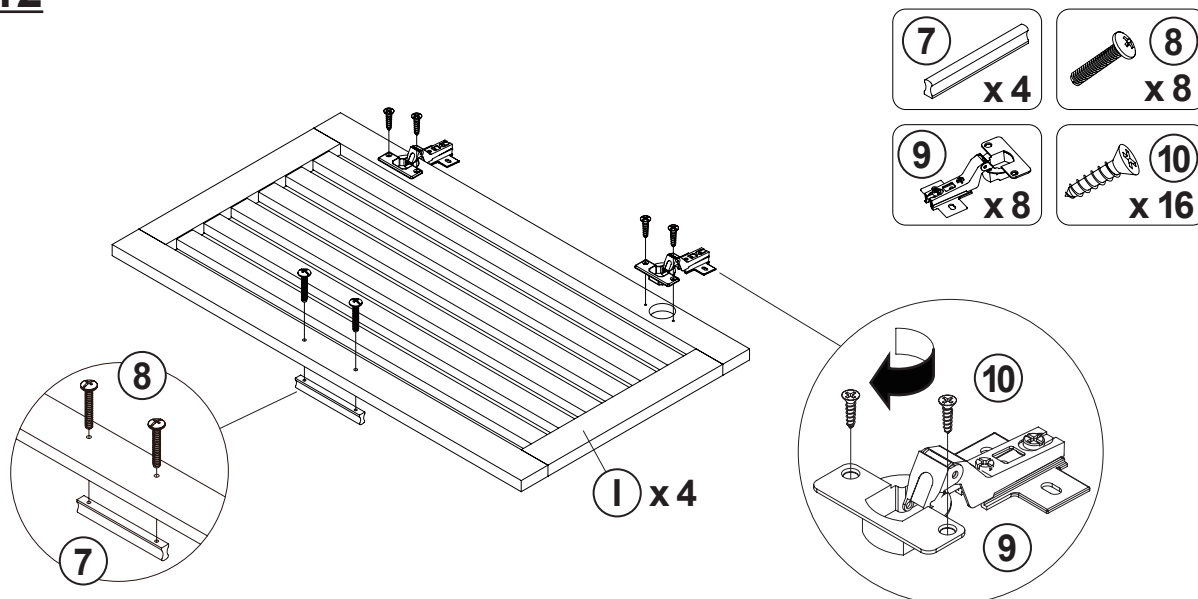

STEP 13



 
10
x 8

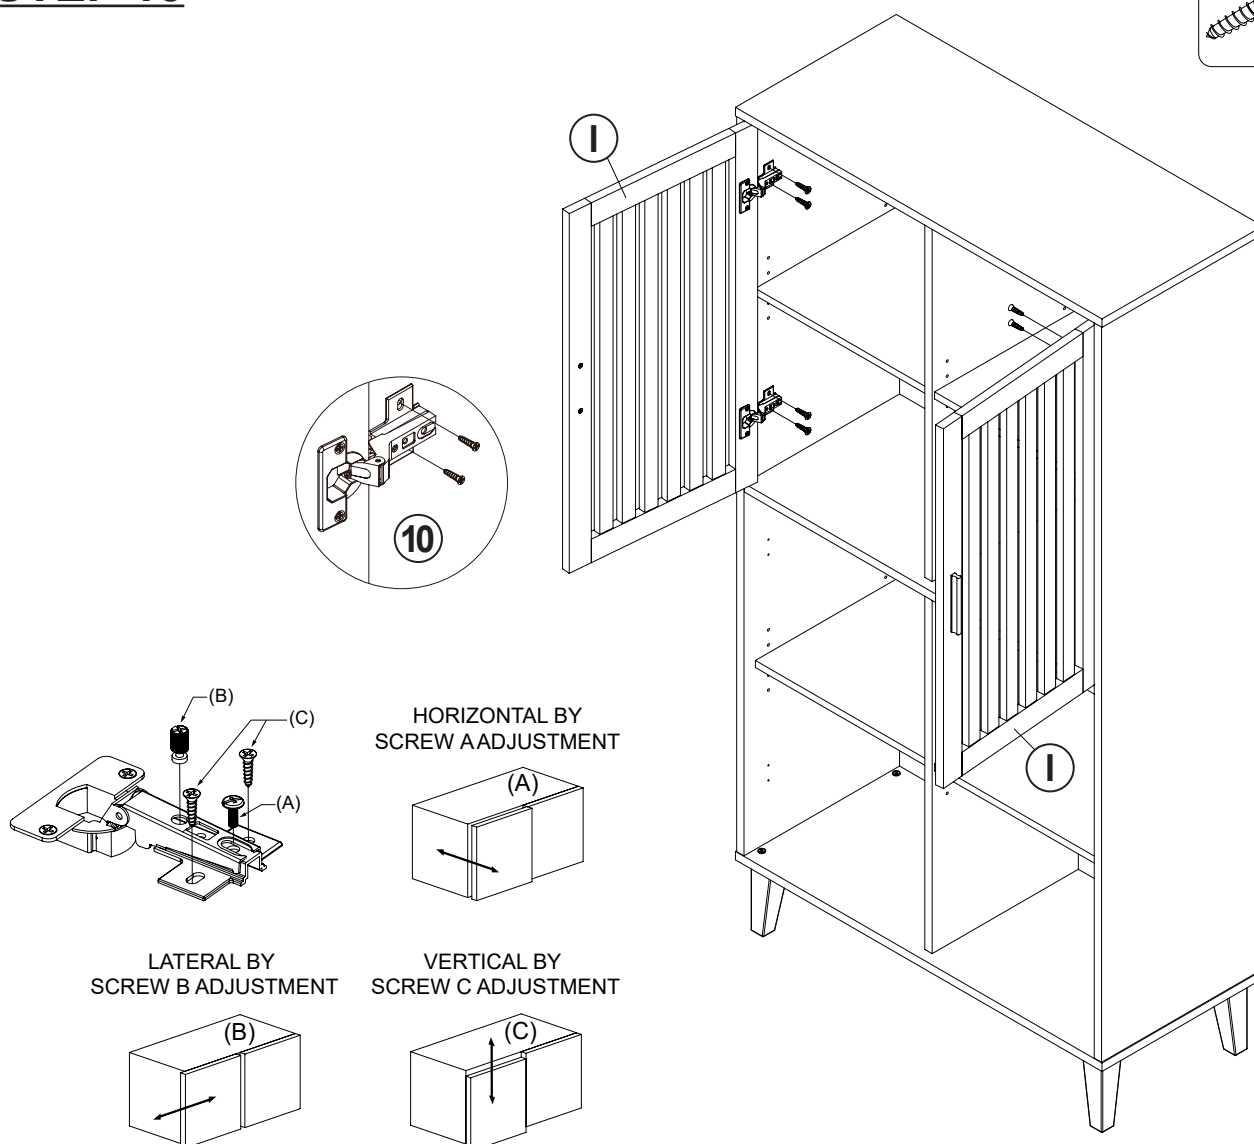


ITEM: **950335**

STEP 14

   
COASTER
FINE FURNITURE

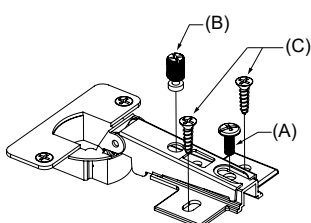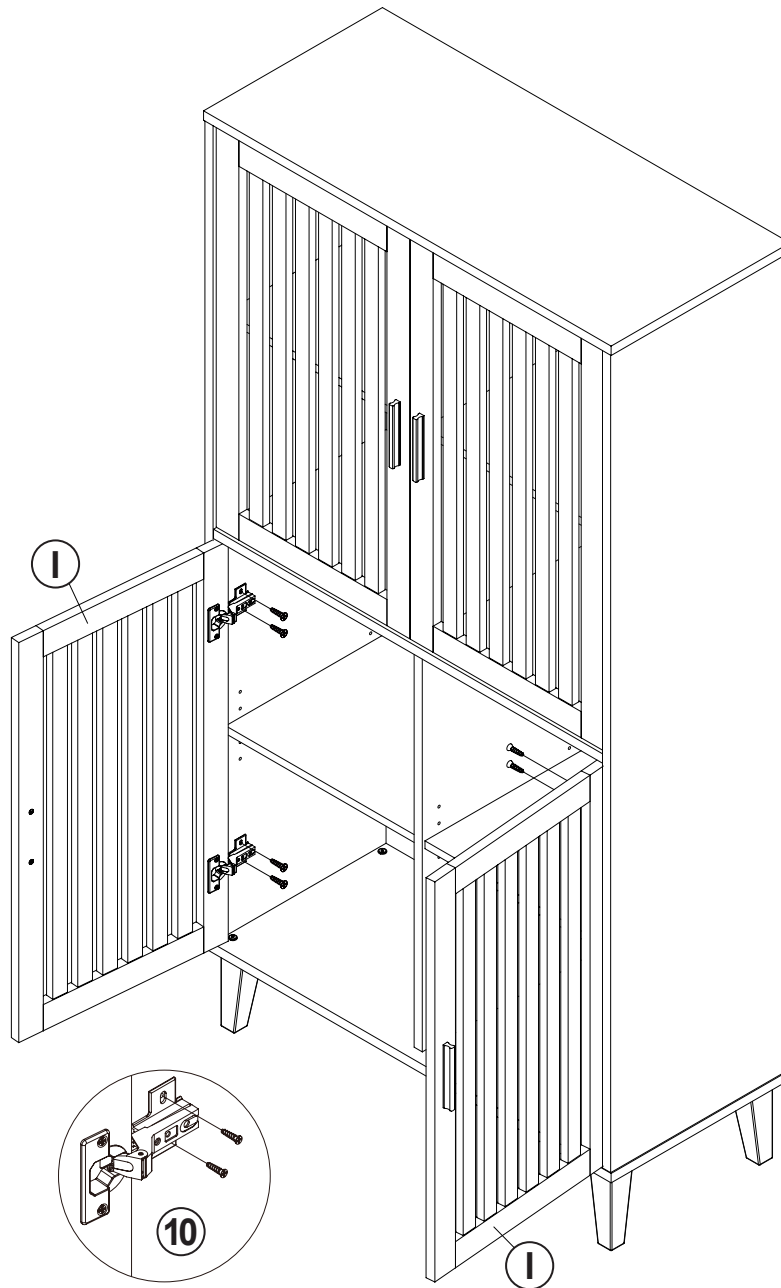


HORIZONTAL BY
SCREW A ADJUSTMENT

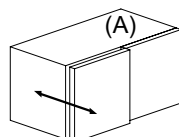 

LATERAL BY
SCREW B ADJUSTMENT

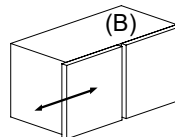 






VERTICAL BY
SCREW C ADJUSTMENT

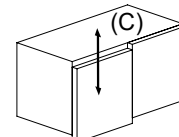 



ITEM: **950335**

STEP 15

    
 
COASTER
FINE FURNITURE

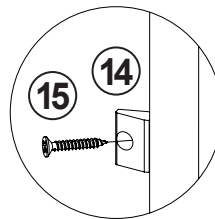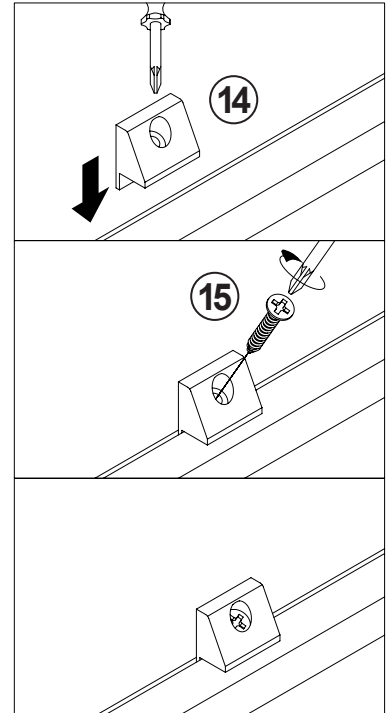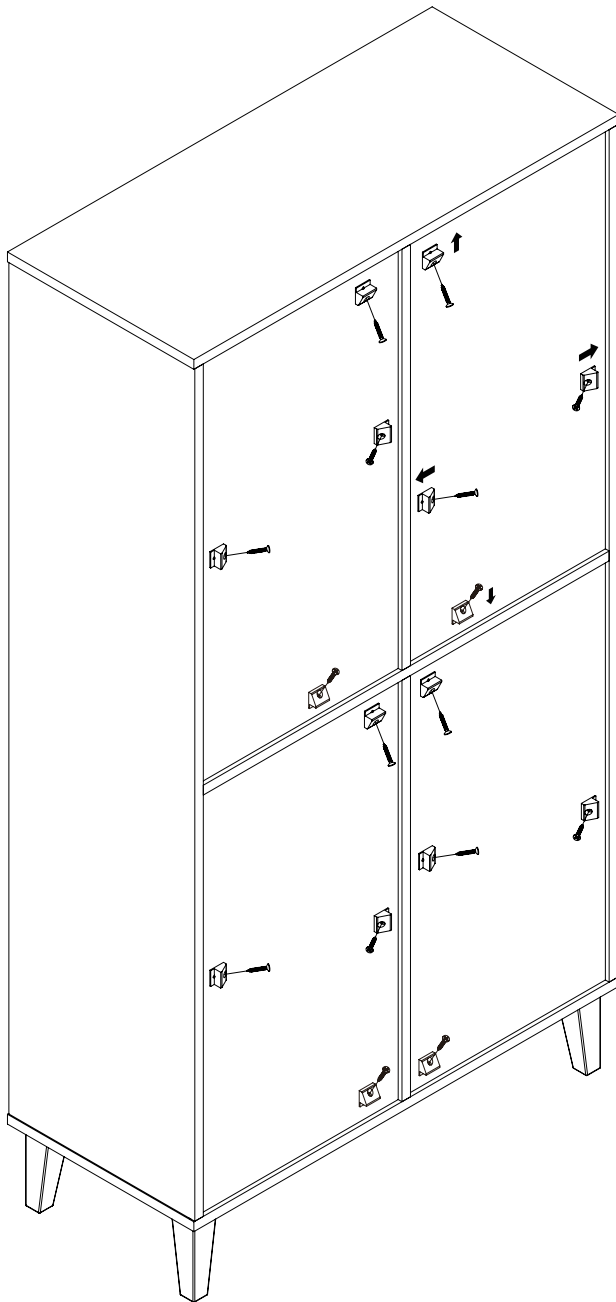

COMPLETE

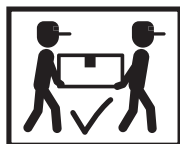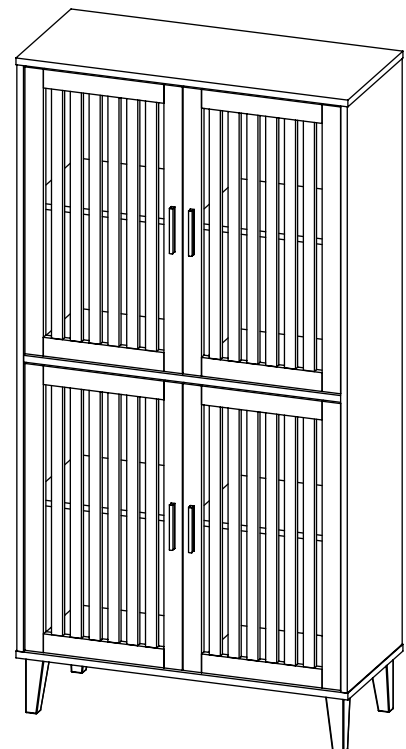  

ITEM: 950335

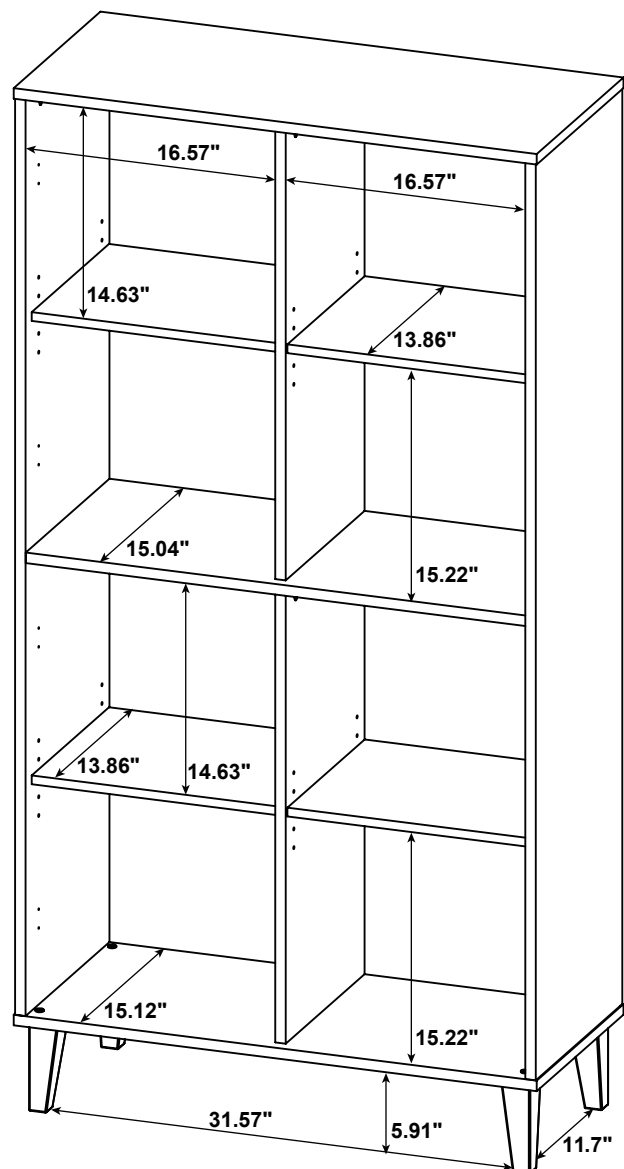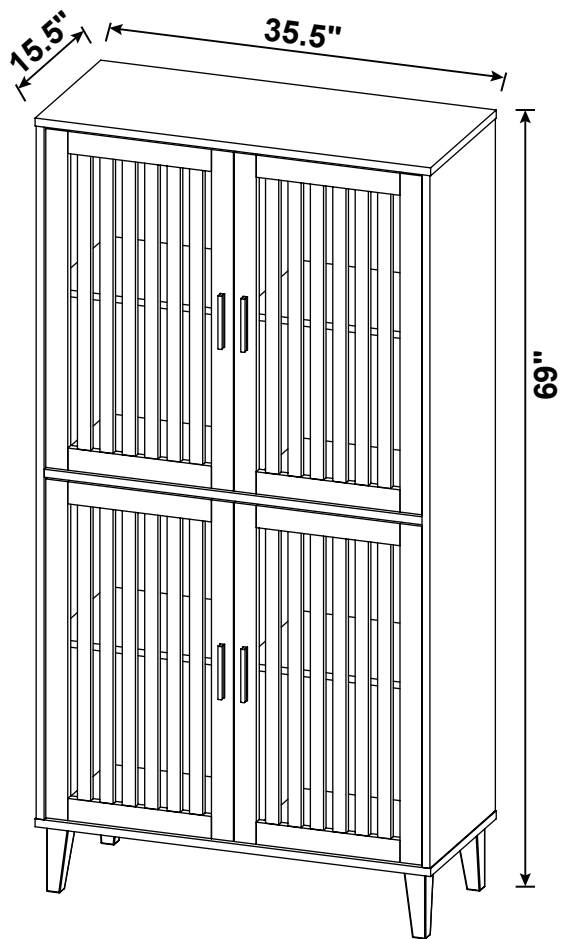  

Note : Dimension tolerance $\pm 5\%$

ANTI-TIPPING INSTALLMENT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.
This restraint may protect against tipping furniture.
Do not allow children to climb on furniture.
This restraint is not a substitute for proper adult supervision.
Failure to detach this restraint before moving the furniture
may result in injury and damage.

1. To attach the anti-tip strap, securely mount one end to the top of the case piece with the 5/8" screw.
2. Position the case piece against the wall in the desired location.
3. Pull the anti-tip strap taut and mark the position of where you will secure the other end on the wall.
4. Drill a 1-1/4" hole in the spot you marked.
5. Tap in plastic wall plug.
6. Fasten anti-tip strap with wall screw provided.

(Please install the anti-tipping kit in the middle of the case piece if only have one set of anti-tipping kit.)

