 
















CROSLEY
FURNITURE

Media Console

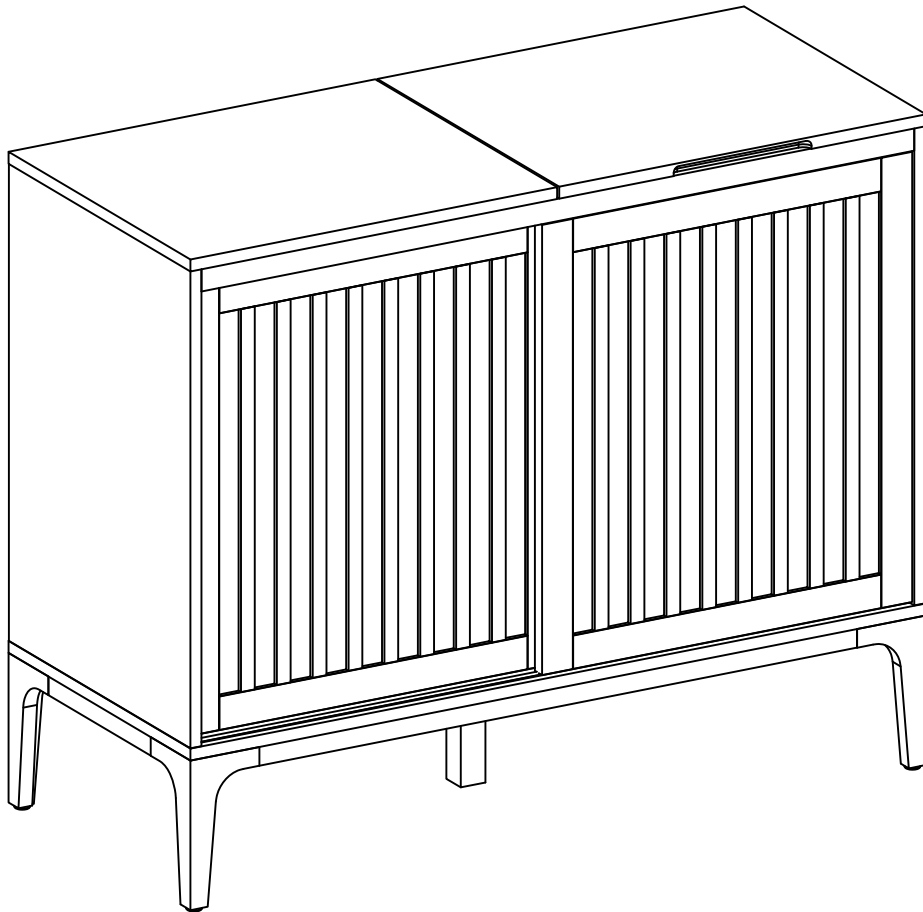



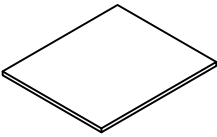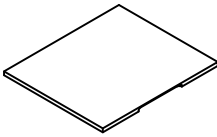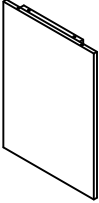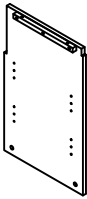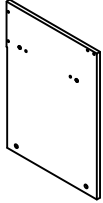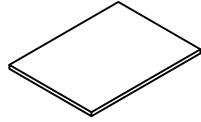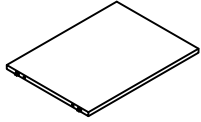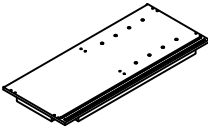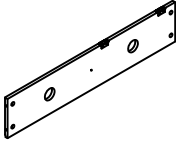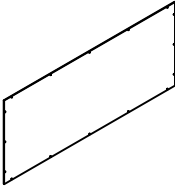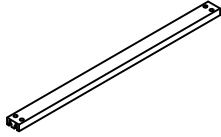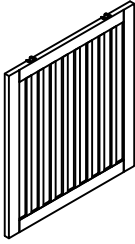



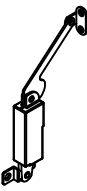

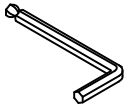
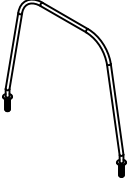
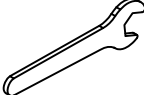
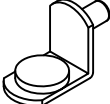

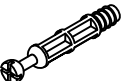

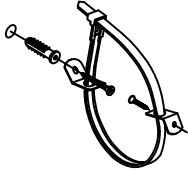
CF1140



PART LIST


<div data-bbox="102 174 156 228">A</div> 	<div data-bbox="379 174 434 228">B</div> 	<div data-bbox="657 174 711 228">C</div> 	<div data-bbox="935 174 989 228">D</div> 	<div data-bbox="1212 174 1267 228">E</div> 
<div data-bbox="130 465 354 506">Left Top Panel</div> <div data-bbox="201 546 284 586">1 PC</div>	<div data-bbox="399 465 638 506">Right Top Panel</div> <div data-bbox="475 546 558 586">1 PC</div>	<div data-bbox="721 465 877 506">Left Panel</div> <div data-bbox="762 546 839 586">1 PC</div>	<div data-bbox="967 465 1181 506">Dividing Panel</div> <div data-bbox="1034 546 1110 586">1 PC</div>	<div data-bbox="1257 465 1436 506">Right Panel</div> <div data-bbox="1318 546 1394 586">1 PC</div>
<div data-bbox="102 589 156 642">F</div> 	<div data-bbox="379 589 434 642">G</div> 	<div data-bbox="657 589 711 642">H</div> 	<div data-bbox="935 589 989 642">I</div> 	<div data-bbox="1212 589 1267 642">J</div> 
<div data-bbox="121 940 367 981">Adjustable Shelf</div> <div data-bbox="194 1021 296 1061">2 PCS</div>	<div data-bbox="424 940 596 981">Fixed Shelf</div> <div data-bbox="472 1021 549 1061">1 PC</div>	<div data-bbox="702 940 906 981">Bottom Panel</div> <div data-bbox="762 1021 839 1061">1 PC</div>	<div data-bbox="1002 940 1149 981">Back Rail</div> <div data-bbox="1034 1021 1110 1061">1 PC</div>	<div data-bbox="1273 940 1449 981">Back Panel</div> <div data-bbox="1321 1021 1398 1061">1 PC</div>
<div data-bbox="102 1059 156 1113">K</div> 	<div data-bbox="379 1059 434 1113">L</div> 	<div data-bbox="657 1059 711 1113">M</div> 	<div data-bbox="935 1059 989 1113">N</div> 	
<div data-bbox="175 1415 309 1456">Top Rail</div> <div data-bbox="207 1496 284 1536">1 PC</div>	<div data-bbox="469 1415 545 1456">Door</div> <div data-bbox="459 1496 561 1536">2 PCS</div>	<div data-bbox="762 1415 823 1456">Leg</div> <div data-bbox="740 1496 845 1536">4 PCS</div>	<div data-bbox="976 1415 1168 1456">Support Leg</div> <div data-bbox="1027 1496 1104 1536">1 PC</div>	

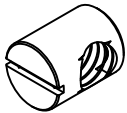HARDWARE LIST

#1  Ø1/4"*25mm Short Bolt 12 PCS (Extra 1)	#2  Ø1/4"*51mm Long Bolt 6 PCS (Extra 1)	#3  Ø1/4"*11mm Spring Washer 18 PCS (Extra 1)	#4  Ø1/4"*13mm Flat Washer 18 PCS (Extra 1)	#5  Barrel Nut 6 PCS (Extra 1)
#6  Hex Nut 8 PCS (Extra 1)	#7  Ø8*30mm Wood Dowel 20 PCS (Extra 1)	#8  6*3*12mm Short Screw 8 PCS (Extra 1)	#9  Spring Hinge 1 PC	#10  8*3*15mm Round Head Screw 16 PCS (Extra 1)
#11  4mm*90 Allen Wrench 1 PC	#12  Metal Wire 4 PCS	#13  Wrench 1 PC	#14  Shelf Holder 8 PCS (Extra 1)	#15  8*4*25 Long Screw 1 PC
#16  Cam Bolt 8 PCS (Extra 1)	#17  Cam Lock 8 PCS (Extra 1)	#18  Safety Strap Kit 1 SET		

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 
Please do not use tools to assemble this unit unless specifically indicated.

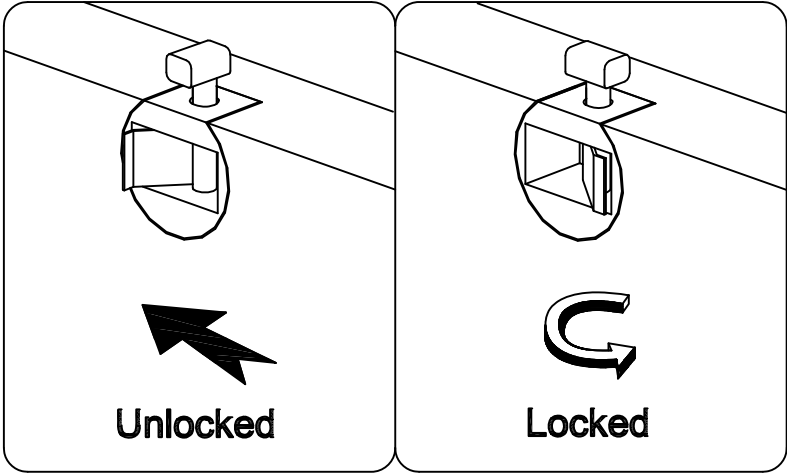




Reference the images above any time the instructions state "lock the hardware"

 Note: Be sure to check all hardware is locked when completed.

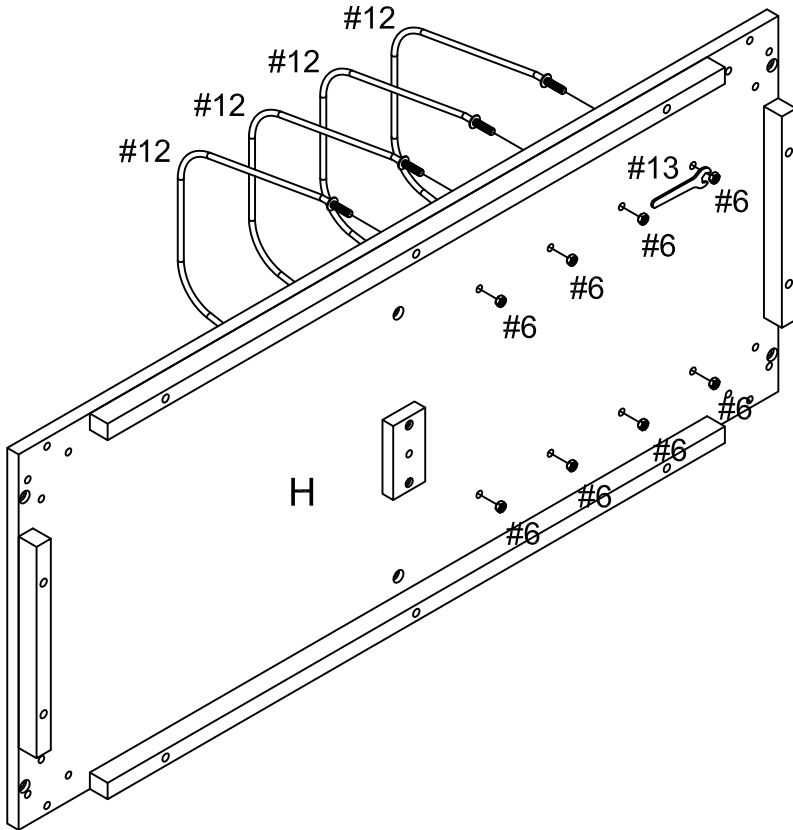Step 1. Attach metal wires (part #12) to bottom panel (part H) using hex nuts (part #6) and wrench (part #13).

 


- #6  x 8
#12  x 4
#13  x 1

NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.




NOTE: Cam locks must rotate full 180°. See pictured insert.

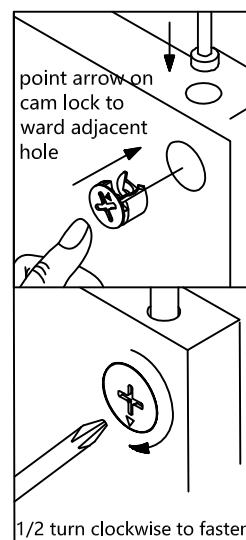

#17 x 2


 
Step 4. Attach fixed shelf (part G) to dividing panel (part D) and right panel (part E) using wood dowels (part #7) and lock the hardware.

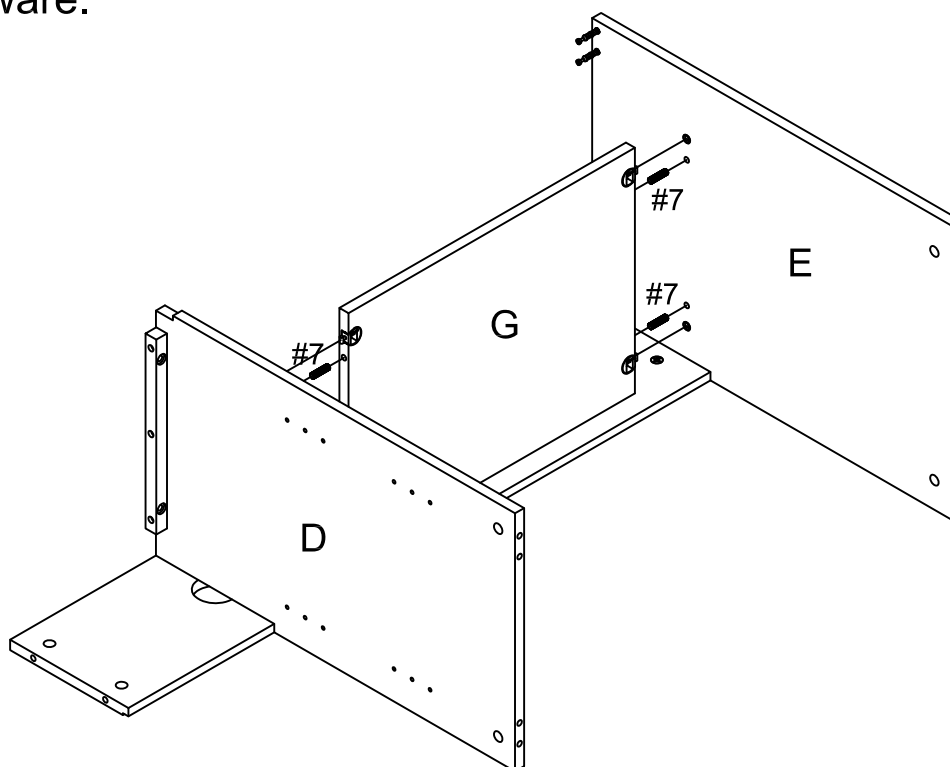

#7  x 4


Step 5. Attach top rail (part K) to right panel (part E) and left panel (part C) to assembled unit (parts D, E, I & K) using cam locks (part #17) and phillips head screwdriver.

  NOTE: Cam locks must rotate full 180°. See pictured insert.

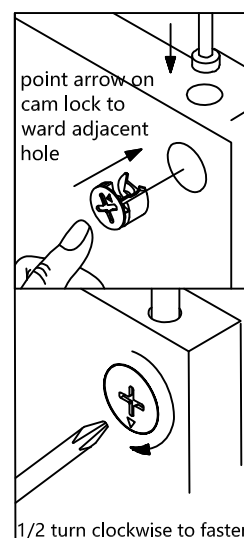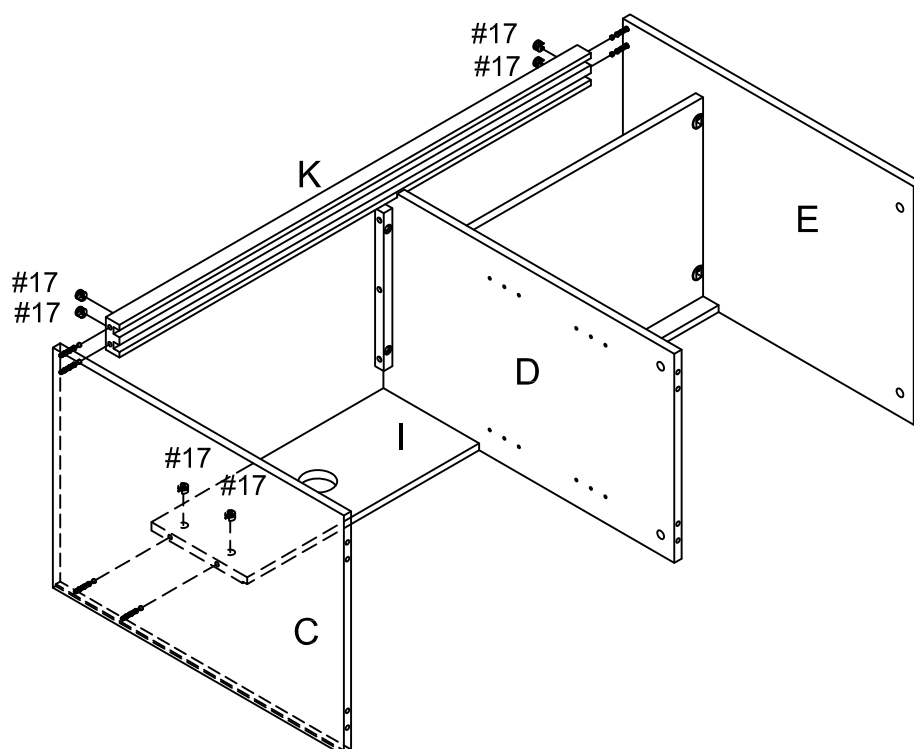


#17  x 6

 
Step 6. Attach bottom panel (part H) to panels (parts C, D & E) using wood dowels (part #7), long bolts (part #2), barrel nuts (part #5), spring washers (part #3), flat washers (part #4) and allen wrench (part #11).

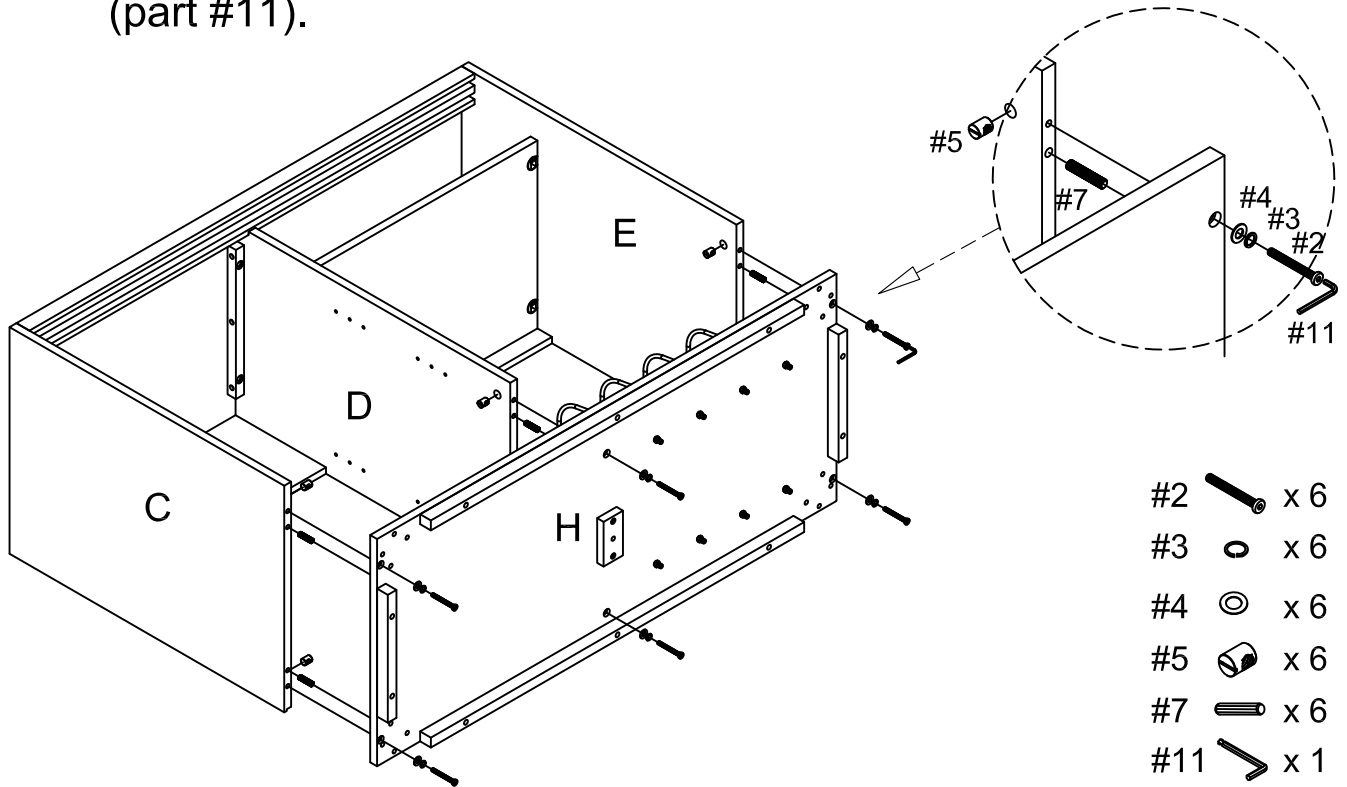

 
Step 7. Attach legs (part M) to bottom panel (part H) using wood dowels (part #7), short bolts (part #1), spring washers (part #3), flat washers (part #4) and allen wrench (part #11).
Attach support leg (part N) to bottom panel (part H).

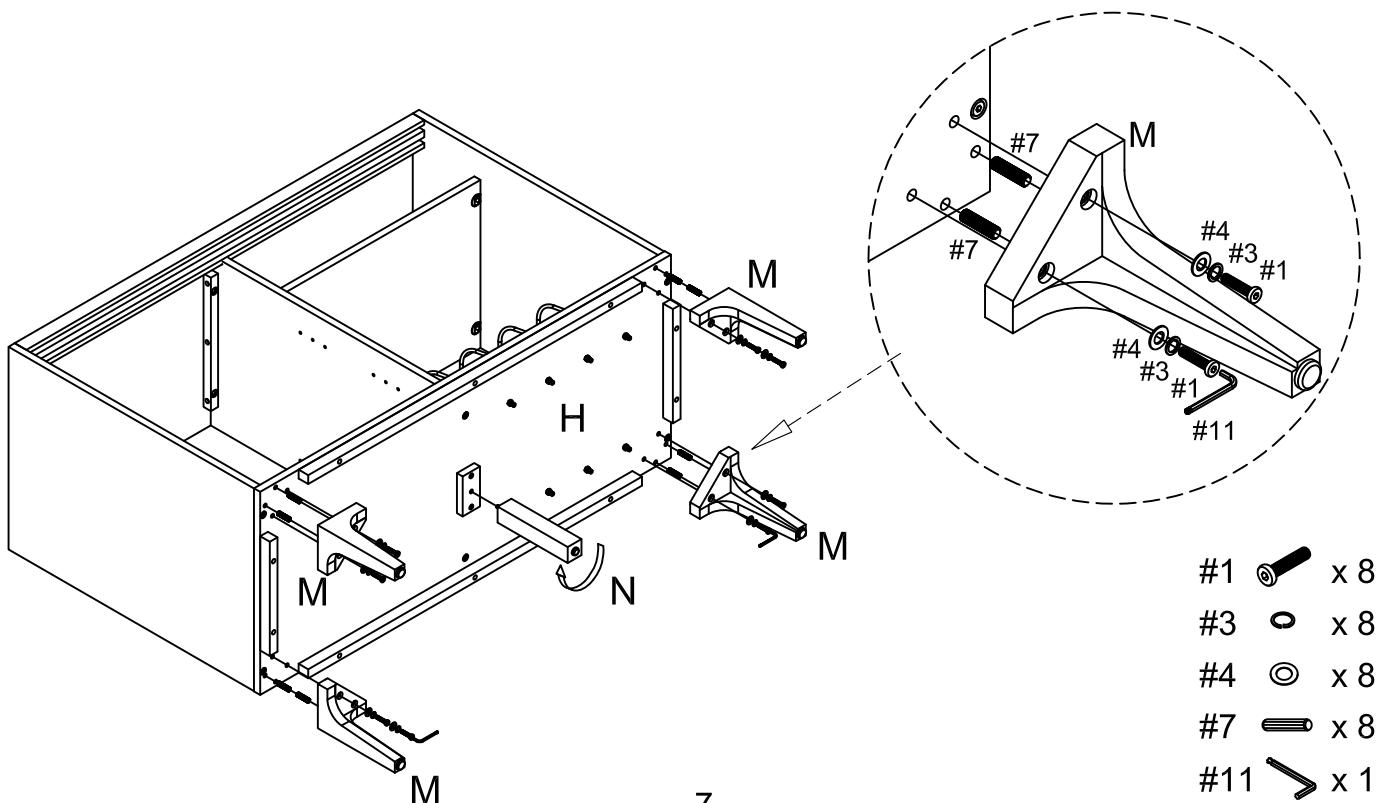

 
Step 8. Carefully turn unit upright. Attach back panel (part J) to assembled unit (parts C, E, H & I) using round head screws (part #10) and phillips head screwdriver. Fix back rail (part I) to dividing panel (part D) using long screw (part 15) and phillips head screwdriver.

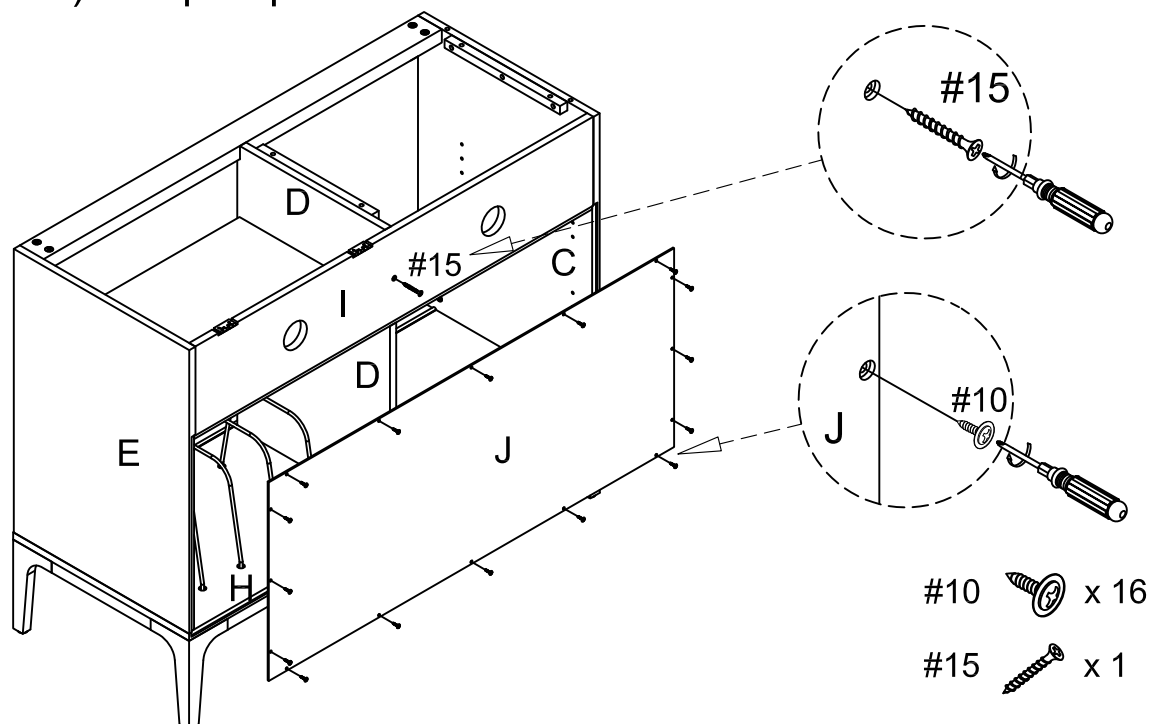

 
Step 9. Attach left top panel (part A) to assembled unit (parts C, D & K) using wood dowels (part #7), short bolts (part #1), spring washers (part #3), flat washers (part #4) and allen wrench (part #11).

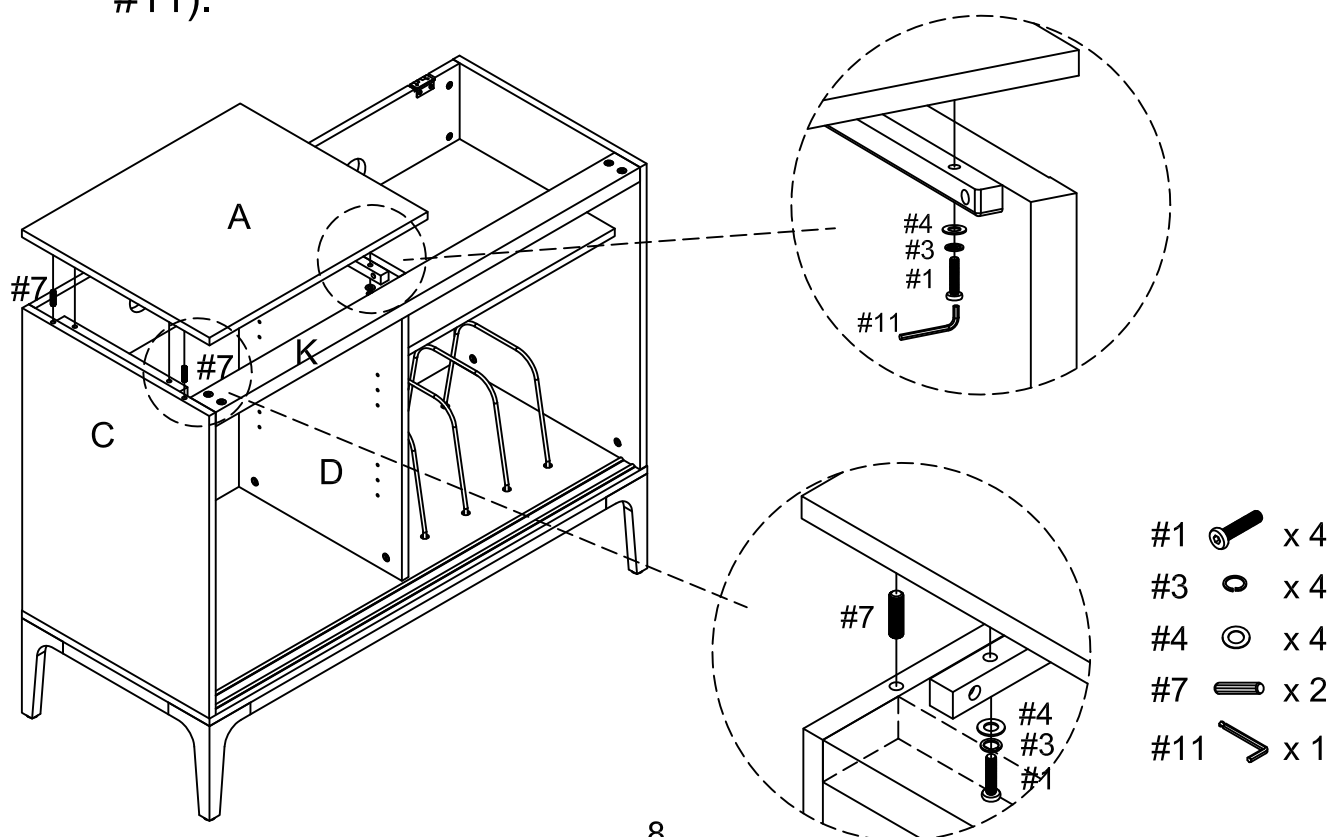

 Step 10. Attach right top panel (part B) to back rail (part I) using short screws (part #8) and phillips head screwdriver. Then attach right top panel (part B) to dividing panel (part D) using spring hinge (part #9), short screws (part #8) and phillips head screwdriver.

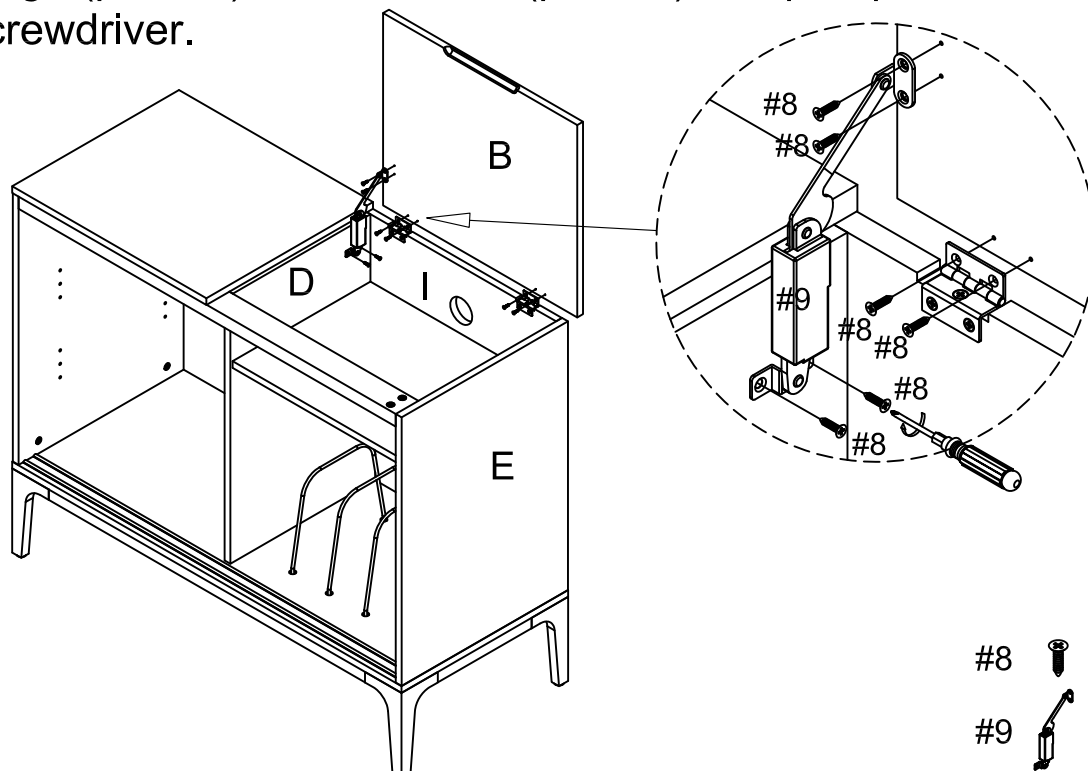


 Step 11. Insert shelf holders (part #14) into desired position and slide adjustable shelves (part F) into place.

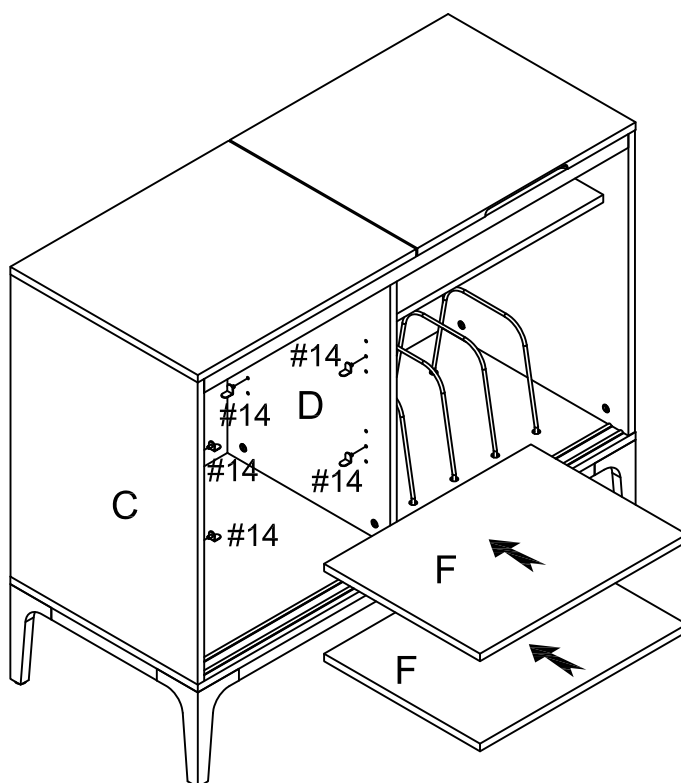

#14 x 8

 
Step 12. Press the door pins up, then install door (part L) to inner runners of pre-assembled unit as shown.

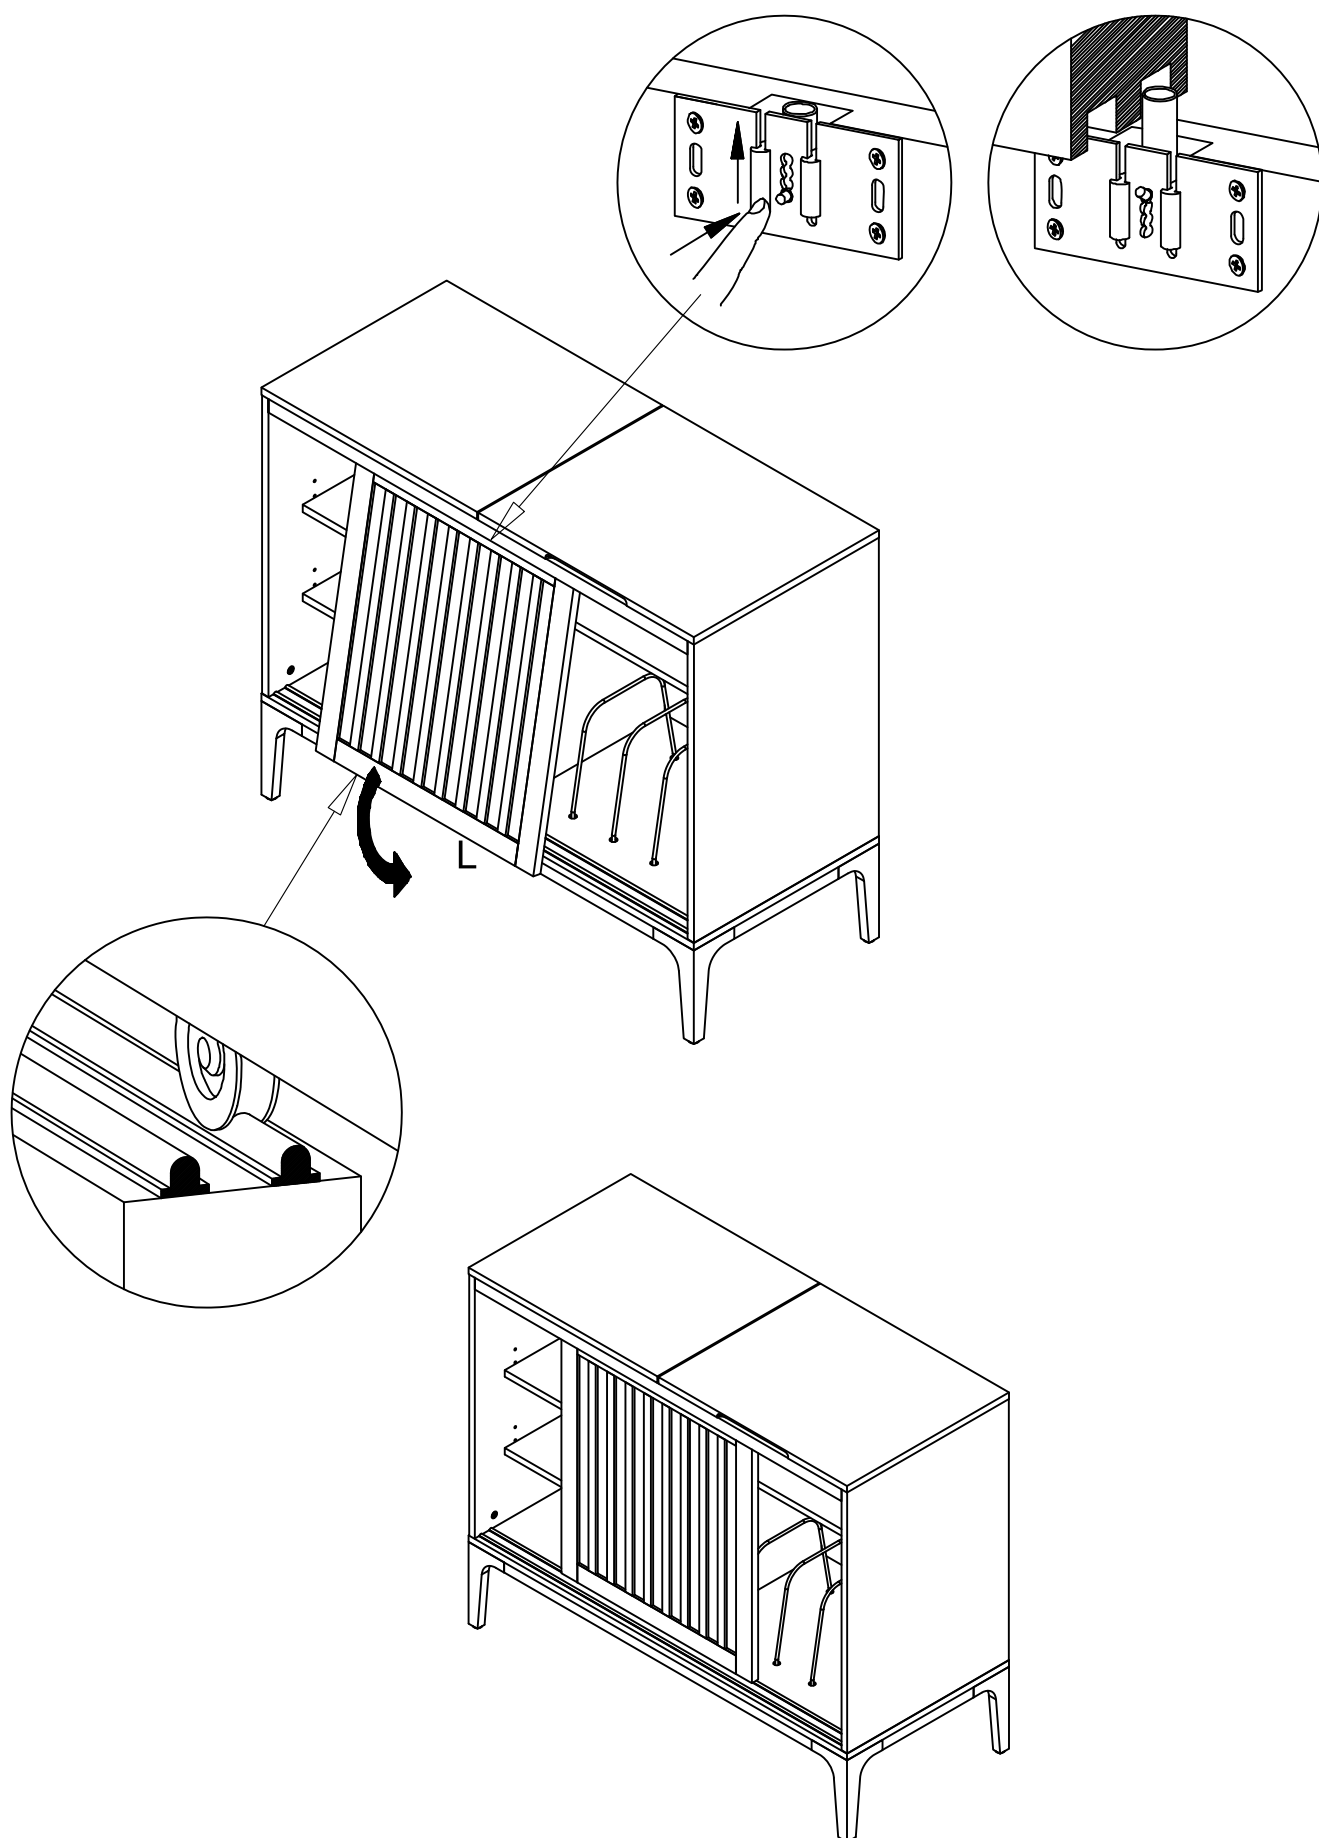






 
Step 13. Press the door pins up, then install door (part L) to outer runners of pre-assembled unit as shown.

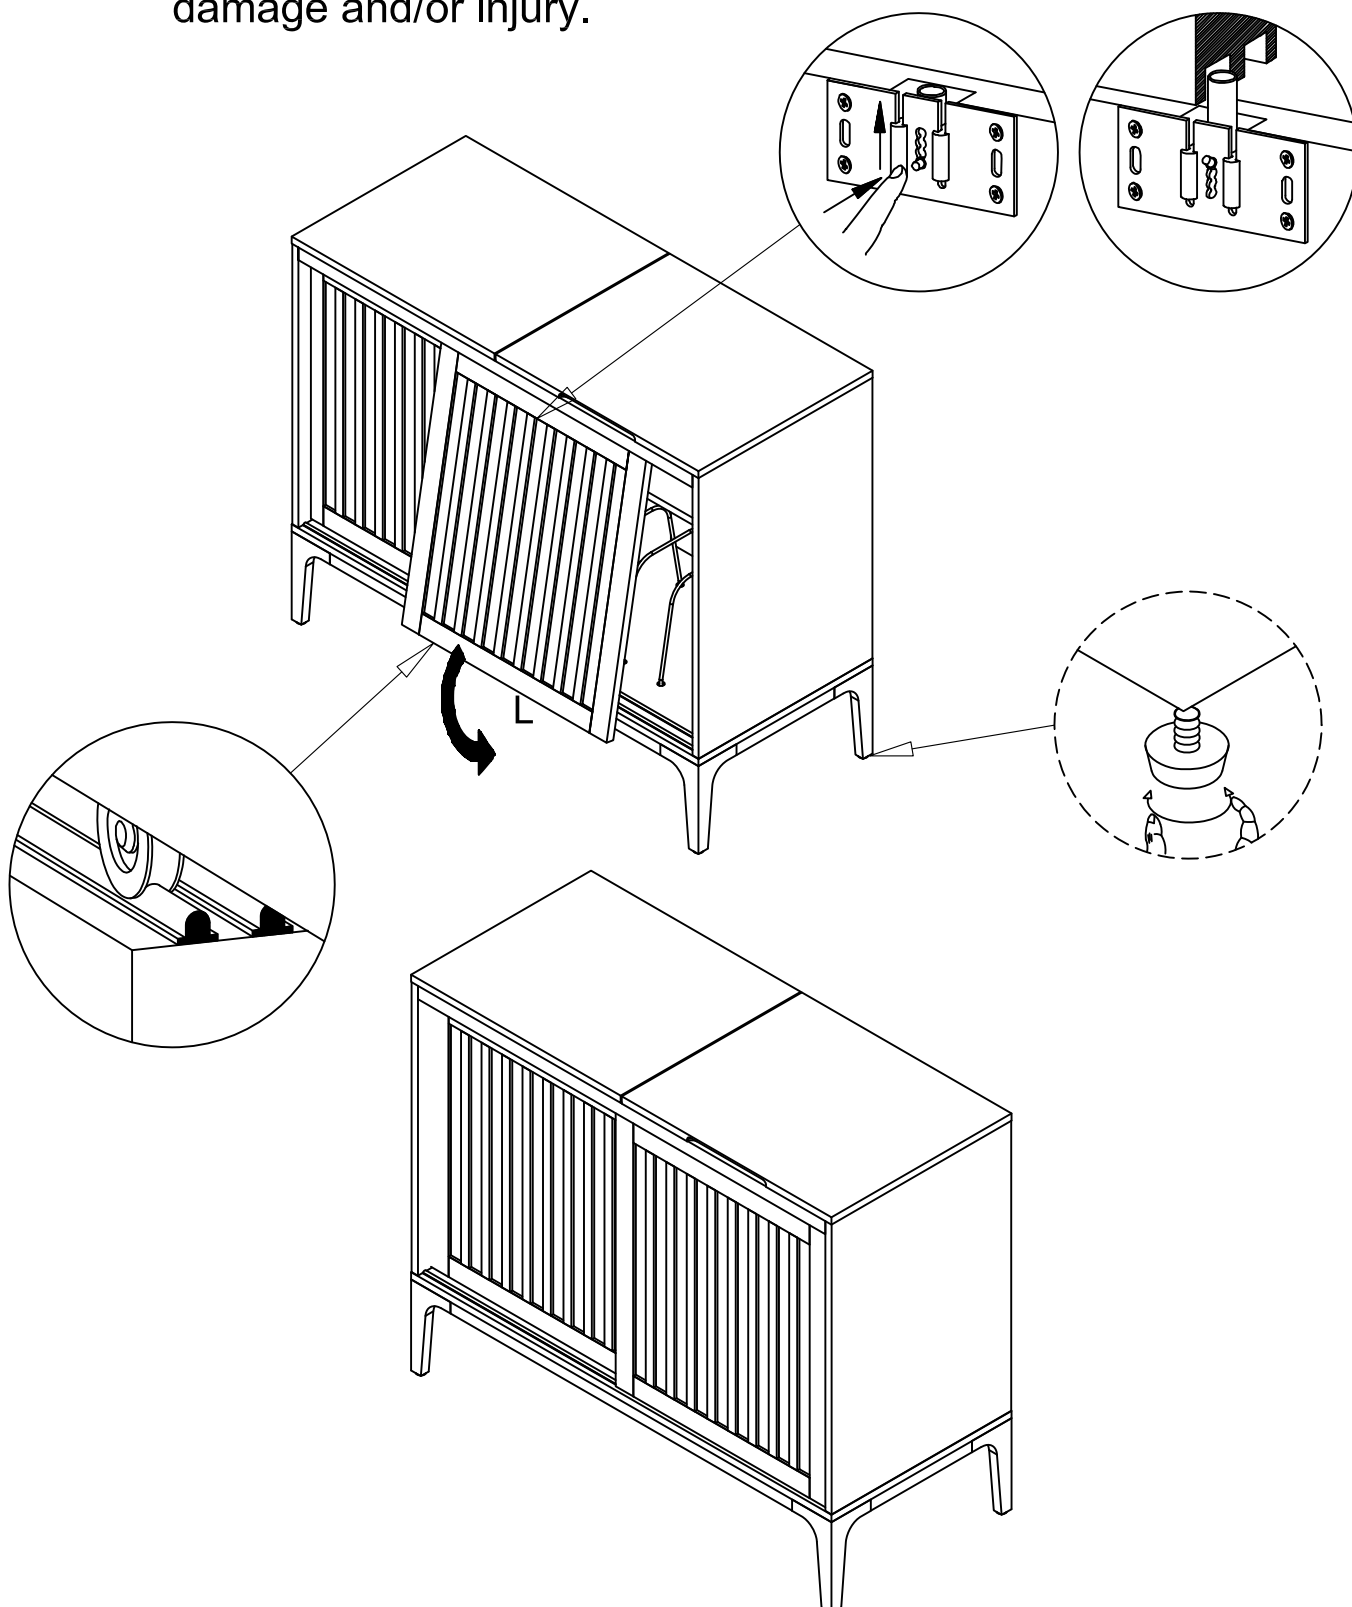NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

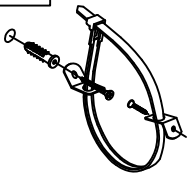Important: Safety strap kit (part #18) must be installed to prevent tipping, damage and/or injury.




#18	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to left top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in left top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

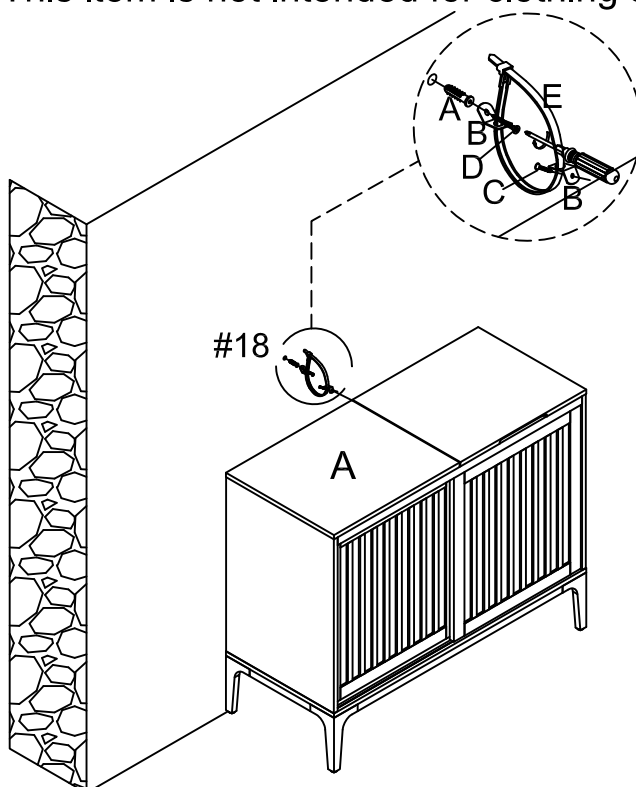

⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!