

Viking Range Corporation

111 Front Street

Greenwood, Mississippi 38930 USA

(662) 455-1200

For more product information, call 1-888-VIKING1 (845-4641)

or visit the Viking Web site at

vikingrange.com



F20034K EN

(022108J)

Viking Installation Guide

Built-In Electric Cooktop

IMPORTANT: PLEASE READ AND FOLLOW

•Before beginning, please read these instructions completely and carefully.

- •Do not remove permanently affixed labels, warnings, or plates from the product. This may void the warranty.
- •Please observe all local and national codes and ordinances.
- •Please ensure that this product is properly grounded.
- •The installer should leave these instructions with the consumer who should retain for local inspector's use and for future reference.

•Installation must conform with local codes or, in the absence of codes, the National Electrical Code, ANSI/NFPA 70-latest edition.

IN CANADA: Electrical installation must be in accordance with the current CSA C22.1 Canadian Electrical Codes Part 1 and/or local codes.

GENERAL INFORMATION

- 1. WARNING: The use of cabinets for storage above the appliance may result in potential burn hazard. Combustible items may ignite, metallic items may become hot and cause burns. If a cabinet storage is to provided the risk can be reduced by installing a range hood that projects horizontally a minimum of 5 in. beyond the bottom of the cabinets.
- 2. WARNING: This appliance shall not be used for space heating. This information is based on safety considerations.
- 3. All openings in the wall behind the appliance in the floor under the appliance shall be sealed.
- 4. Keep appliance area clear and free from combustible materials, gasoline, and other flammable vapors.
- 5. Disconnect the electric supply to the appliance before cleaning or servicing.
- 6. When removing the cooktop for service and/or cleaning, disconnect AC power supply.
- 7. Electrical Requirement: Listed on Specifications Minimum Recommended Electric Circuit.



SPECIFICATIONS - VECU ELECTRIC COOKTOP

Description	VECU106	30″ V	V.	VECU166	36" W.	
Cutout Width	Minimum	28 3/4	" (73.0 cm)	Minimum	34 3/4" (88.3 cm)	
	Maximum	29 5/8	3″ (75.2 cm)	Maximum	35 1/2" (90.2 cm)	
Cutout Height	Minimum - 3 1/8" (7.9 cm)					
Cutout Depth	Minimum - 19 1/8" (48.6 cm) Maximum - 19 7			num - 19 7/8" (50.5 cm)		
Overall Width	30 3/4″ (78.1 cm)			36 3/4" (93.3 cm)		
Overall Height from Bottom	5″ (12.7 cm)					
Overall Depth from Rear	21" (53.3 cm)					
Electrical Requirements	240 - 208/120 VAC/60 Hz - 3-wire conduit with a No. 10 ground wire.					
		40 amp	o connection		60 amp connection	
Maximum Amp Usage	240V	8.4 kW	/; 35.0 amps	11.8 k	W 49.2 amps	
	208V	6.3 kW	'; 30.3 amps	8.9 k	W 42.6 amps	
Surface Element Rating		<u>240V</u>	<u>208V</u>	<u>240V</u>	<u>208V</u>	
	Right Front Right Rear Center Front Bridge Center Rear Left Front Left Rear	1500 2500 N/A 800 N/A 1800 1800	1125 watts 1875 watts N/A 600 watts N/A 1350 watts 1350 watts	1200 2500 1800 800 1800 2200 1500	900 watts 1875 watts 1350 600 watts 1350 1650 watts 1125 watts	
Approximate Shipping Weight			1000 watts		(28.4 kg)	

SPECIFICATIONS - DECU ELECTRIC COOKTOP

Description	DECU106 30" W.	DECU166 36" W.	DECU155 45" W.			
Cutout Width Minimum	28 5/8" (72.7 cm)	34 3/4" (88.3 cm)	42 7/8" (108.9 cm)			
Maximum	29 7/8" (75.9 cm)	35 7/8″ (91.1 cm)	44 1/8″ (112.1 cm)			
Cutout Height	Minimum 3 1/8" (7.9 cm)					
Cutout Height with Conduit	4 1/8" (10.5 cm)					
Cutout Depth	Minimum	19 3/4" (50.2 cm) Ma:	Maximum - 20 1/8" (51.1 cm)			
Overall Width	30 3/4" (78.1 cm)	36 3/4" (93.3 cm)	45" (114.3 cm)			
Overall Height from Bottom	4 1/2" (11.4 cm)					
Overall Depth from Rear	21" (53.3 cm)					
Electrical Requirements	240 - 208/120 VAC/60 Hz - 3-wire conduit with a No. 10 ground wire. Connect with lo-					
	cally supplied 3-wire with ground, flexible cord rated 60 amp 125-250 VAC minimum.					
	Cord must be agency approved for use with household electric cooktops.					
Maximum Amp Usage 240V	8.4 kW; 35.0 amps	10.9 kW; 44.0 amps	11.8 kW: 49.0 amps			
208V	6.3 kW; 30.0 amps	8.2 kW; 34.0 amps	8.9 kW; 43.0 amps			
Surface Element Rating	<u>240V</u> <u>208V</u>	<u>240V</u> <u>208V</u>	<u>240V</u> <u>208V</u>			
Right Front Right Rear Center Right Center Left Left Front Bridge Left Rear	15001125 watts25001875 wattsN/AN/AN/AN/A18001350 watts800600 watts18001350 watts	1500 1125 watts 2200 1650 watts 2500 1875 watts N/A N/A 1800 1350 watts 800 600 watts 1800 1350 watts	15001125 watts22001650 watts1200900 watts25001875 watts18001350 watts800600 watts18001350 watts			
Approximate Shipping Weight	52 lb. (23.4 kg)	60 lb. (27.0 kg)	71 lb. (32.0 kg)			

ELECTRICAL REQUIREMENTS

Check your local codes regarding this unit. This cooktop is supplied with a 3-wire, A.C. 208/120 volt or 120/240 volt, 60 HZ electrical system. A white (neutral) is not needed for this unit. See next section for grounding instructions. It should be fused separately. CAUTION: Be sure the electric power is off from the breaker box to the junction box until the cooktop is installed and ready to operate. The junction box should be connected to a suitable ground. Do not use a GFI circuit.

Refer to the sepcifications chart and the identification label on the bottom of the burner box for kilowatt rating and recommended amperage. House wiring and fusing must comply with local codes. If no local codes are applicable, wire in accordance with the National Electrical Code, ANSI/NFPA 70-latest edition.

ELECTRICAL CONNECTION

WARNING: The electrical power to the unit must be shut off while line connections are being made. Failure to do so could result in serious injury or death.

When making the wire connections, use the entire length of the conduit provided (3 feet). The conduit must not be cut. Connect the red and black leads from the unit conduit to the corresonding leads in the junction box. The green ground wire in the conduit is connected to the unit frame. When connecting to a 3-conductor branch circuit, if local codes permit, connect the green ground connector lead of the unit to the branch circuit neutral (gray or white in color).



DO NOT USE AN EXTENSION CORD WITH THIS APPLIANCE. SUCH USE MAY RESULT IN A FIRE, ELECTRICAL SHOCK OR OTHER PERSONAL INJURY.

PROXIMITY TO SIDE CABINET INSTALLATION

- 1. The cooktop may be installed directly to existing base cabinets.
- such combustible surfaces above the 36" (91.4 cm).
- above the 36" (91.4 cm) high countertop.



MINIMUM CLEARANCES FROM ADJACENT COM-

•Must be minimum 18" (45.7 cm) above countertop •Wall cabinets directly above the product must be

minimum 36" (91.4 cm) above the countertop.

2. The cooktop CANNOT be installed directly adjacent to sidewalls, tall cabinets, tall appliances, or other side vertical surfaces above 36" (91.4 cm) high. There must be a minimum of 6" (15.2 cm) side clearance from the cooktop to

3. Within the 6" (15.2 cm) side clearance to combustible vertical surfaces above 36" (91.4 cm), the maximum wall cabinet depth must be 13" (33.0 cm) and wall cabinets within this 6" (15.2 cm) side clearance must be 18" (45.7 cm)

4. Wall cabinet above the cooktop must be a minimum of 36" (91.4 cm) above the countertop for a full width of the cooktop. This minimum height requirement does <u>not</u> apply if a rangehood is installed over the cooking surface.



WOOD/COMPOSITE OVERLAY INSTALLATION

The bottom of the hood should be 30" (76.2 cm) min. to 36" (91.4 cm) max. above the countertop. This would typically result in the bottom of the hood being 66" (167.6 cm) to 72" (182.9 cm) above the floor. Refer to the rangehood installation instructions for further information. These dimensions provide for safe and efficient operation of the hood.



DIMENSIONS

VECU HEIGHT



30" W. VECU TOP



CUTOUT w/VIPR101





36" W. VECU TOP



INSTALLATION OF HOLD DOWN BRACKET - VECU MODELS

Front Brackets

After installating cooktop with two of the sheet metal screws (Item 1), locate the sheet metal screw hole in the rear of the burner box. Screw hold down brackets (Item 2) using the third sheet metal screw (Item 3) to the burner box.

Rear and Side Brackets

- 1. After installation of cooktop, locate the two sheet metal screw holes on each end of the bottom of the burner box. Screw hold down bracket (Item 1) with sheet metal screw (Item 2) to the burner box.
- 2. Screw the eye bolt (Item 3) into the self-retaining nut (Item 3) and tighten firmly against bottom of countertop.





36" W. DECU TOP

DIMENSIONS DECU HEIGHT







45" W. DECU TOP



INSTALLATION OF HOLD DOWN BRACKET - DECU MODELS

Two (2) hold brackets will be provided with your unit. After cooktop has been installed into the countertop, locate the bracket in the slots as needed (Figure 1). Place a bracket in the slots and lower until the bracket catches. (Figure 2). Use the bolt to tighten the cooktop to the countertop. (Figure 3)

Figure 1

45" W. DECU BURNER BOX





*There must be a 1" (2.5 cm) clearance under counter on the left and right side of the cooktop for pull down brackets to be attached. Do not install brackets on front and rear of cooktop

NOTE: If countertop is less than 1 1/2" (3.8 cm) thick, a filler block will have to be used for bolt to push against. (See figure 4)

Figure 4





Figure 3





PERFORMANCE CHECKLIST

- A qualified installer should carry out the following checks:
- 1. Check top surface elements glow red when turned on.
- 2. Check hot surface indicator lights glow red when corresponding element is hot.

Any adjustments necessary that are a result of the installer not following instructions will be the responsibility of the installer, dealer of the end user of this product.

FINAL PREPARATION

- 1. Some stainless steel parts may have a plastic protective wrap which must be peeled off.
- 2. All stainless steel body parts should be wiped with hot, soapy water and with a liquid cleaner designed for this material. If buildup occurs, do not use steel wool, abrasive cloths, cleaners, or powders! If it is necessary to scrape stainless steel to remove encrusted materials, soak with hot, wet cloths to loosen the material, then use a wood or nylon scraper. Do not use a metal knife, spatula, or any other metal tool to scrape stainless steel! Scratches are almost impossible to remove.

REPLACEMENT PARTS

Only authorized replacement parts may be used in performing serivce on the cooktop. Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be referred to a qualified technician.