



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

610153P
Power Recliner

ITEM: 610153P



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING



- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A SEAT



1PC

B BACK



1PC

C LEFT EAR



1PC

D RIGHT EAR



1PC

E ADAPTER




1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **610153P**
ASSEMBLY INSTRUCTIONS
STEP 1

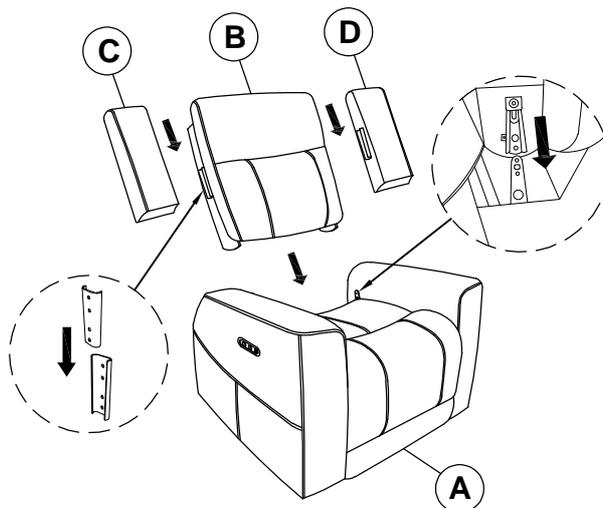


STEP 2

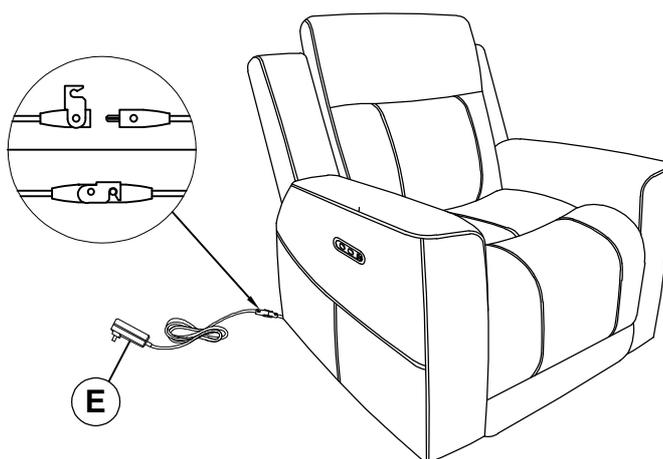


STEP 3
COMPLETE

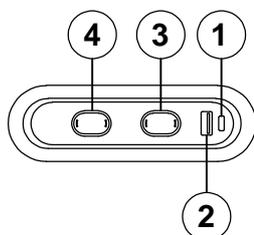

- 1 Type C
- 2 USB Port
- 3 Open Recliner
- 4 Close Recliner

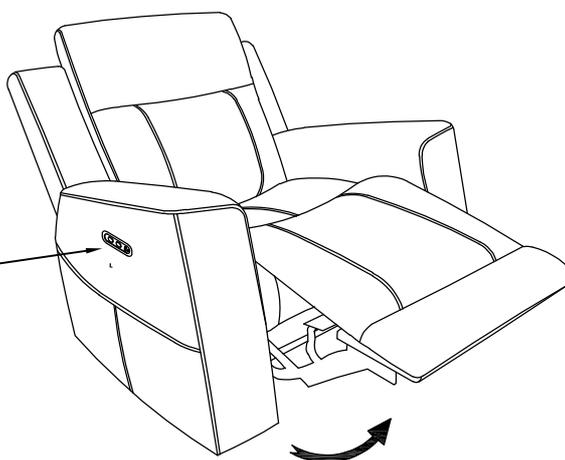

ITEM: 610153P

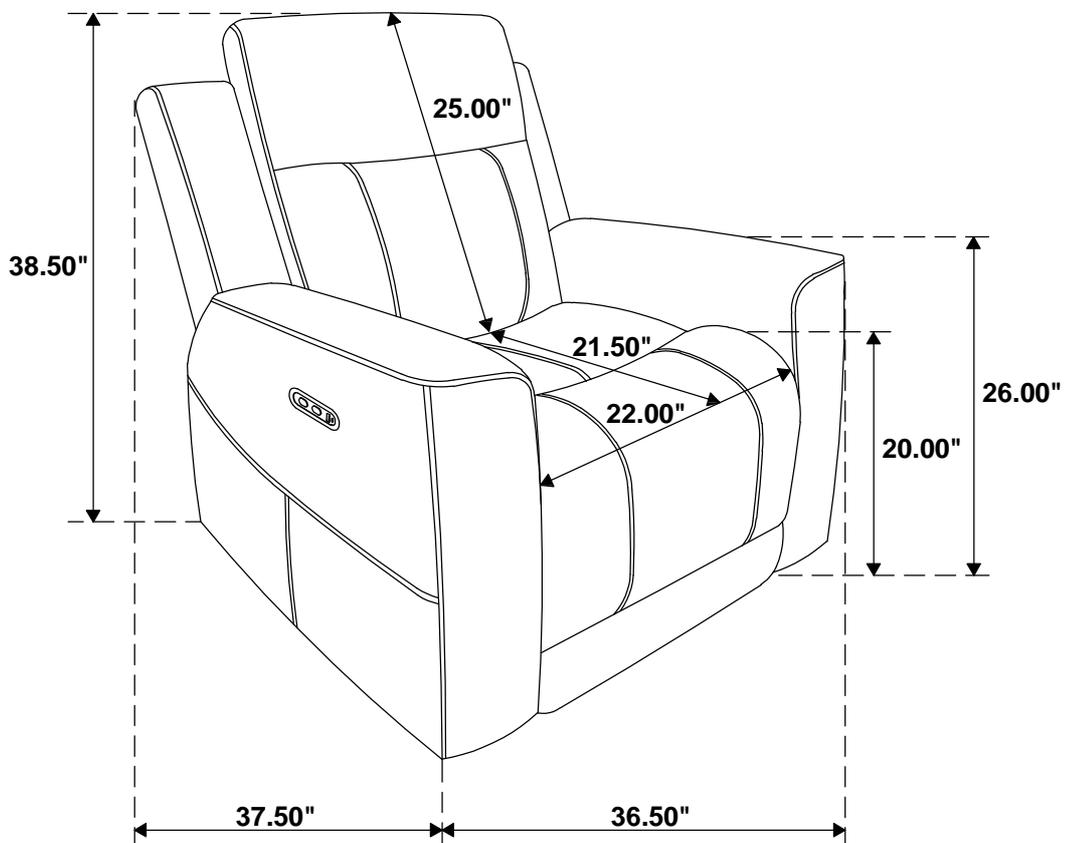

Note: Dimension tolerance $\pm 5\%$