



ENGLISH

OWNER'S MANUAL

Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.

NB2030A



MFL67693318

www.lg.com

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.**

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION : Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC WARNING: This equipment may generate or use radio frequency energy. changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

Table of Contents

1 Getting Started

- 2 Safety Information
- 6 Accessories
- 6 Introduction
 - 6 – Symbols Used in this Manual
- 7 Remote control
- 8 Top panel
- 8 Rear panel
- 9 Installing the sound bar
- 9 Installing the cover foot

2 Connecting

- 10 Mounting the main unit on a wall
- 11 Optional Equipment Connection
 - 11 – OPTICAL In connection

3 Operating

- 12 Operations
 - 12 – DRC (Dynamic Range Control)
 - 12 – AV Sync
 - 12 – AUTO POWER DOWN
 - 12 – AUTO POWER On/Off
 - 12 – Turn off the sound temporarily
 - 13 – LG Sound Sync
- 14 Controlling a TV with the Supplied Remote Control

4 Troubleshooting

- 15 Troubleshooting

5 Appendix

- 16 Trademarks and Licenses
- 16 Maintenance
 - 16 – Handling the Unit
- 17 Specifications

1

2


3

4


5

Accessories


Please check and identify the supplied accessories.

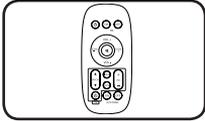


Remote control (1)

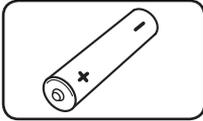


Batteries (1)

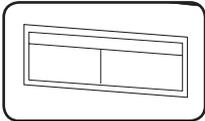


Wall Mount Bracket
Installation Template
(1)

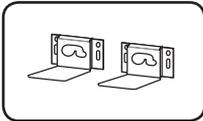


Wall mount bracket (2)

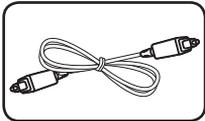

Optical cable (1)

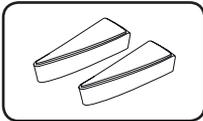

Cover foot (2)

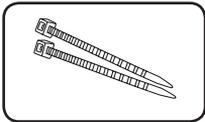

Cable ties for arranging
cables(2)

Introduction

Symbols Used in this Manual


 **Note**

Indicates special notes and operating features.

 **Caution**

Indicates cautions for preventing possible damages from abuse.

Remote control

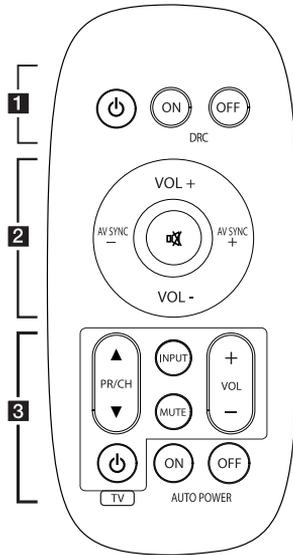

Battery Installation

Remove the battery cover on the rear of the Remote Control, and insert battery with **+** and **-** matched correctly.

..... **1**

⏻ (Power): Switches the unit ON or OFF.

DRC (ON/ OFF) : Sets the DRC.

..... **2**

🔇: Mutes the sound.

VOL -/+ : Adjusts speaker volume.

AV SYNC -/+ : Synchronizes the audio and video.

! Note


- When the volume reaches the highest/ lowest level and you push **VOL +/-** on the remote control again, red LED on the unit turns on for 2 seconds to signal on what the volume level is.
- When the unit turns on, volume of the unit will rise gradually to the volume level set at the unit turned off.

..... **3**

TV Control buttons: See page 14.


AUTO POWER (ON/OFF) : This function automatically powers the unit ON/OFF.

Top panel

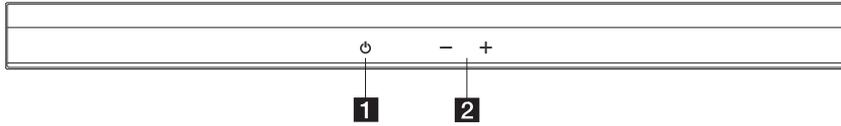

- 1  (Standby/On)
- 2 - / + (Volume)
Adjusts speaker volume.

Rear panel

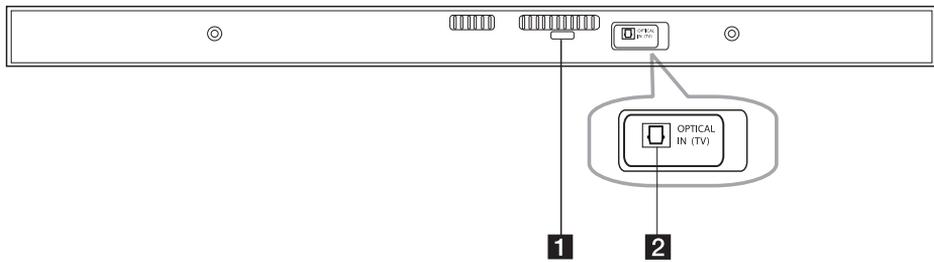


- 1 Software Download Connector - Only for service.
- 2 OPTICAL IN (TV)

Installing the sound bar


You can hear the sound by using optical cable connect the unit to the other device : TV, Blu-ray disc player, DVD player, etc.

Place the unit in front of the TV and connect it to the device. (Refer to page11)

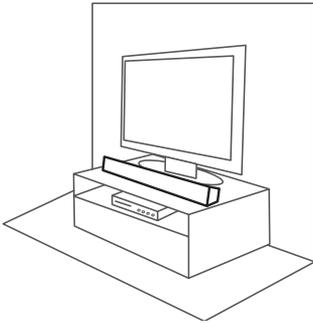

Installing the cover foot

 You can extend the height of the unit.




1. Turn the unit upside down.
2. Peel off a sticker attached to the cover foot.
Then place it on the existing foot of the unit.
3. Press the cover foot with adequate force to get it firmly fixed.

1


Getting Started

Mounting the main unit on a wall


You can mount the main unit on a wall.
Prepare screws and brackets.

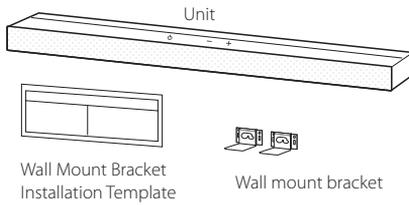

1. Match the TV's BOTTOM EDGE of Wall Mount Bracket Installation Template with the bottom of TV and attach to the position.

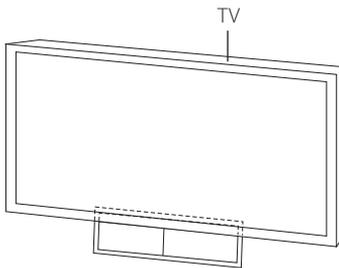


2. When you mount it on a wall (concrete), use the wall plugs (Not supplied). You should drill holes. A guide sheet (Wall Mount Bracket Installation Template) is supplied to drill. Use the sheet to check the point to drill.

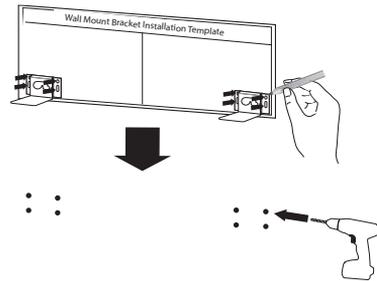


! Note

Screws and Wall Plugs are not supplied for mounting the unit. We recommend the Hilti (HUD-1 6 x 30) for the mounting.

- Remove the Wall Mount Bracket Installation Template.
- Fix the brackets with screws (not supplied) as shown in the illustration below.

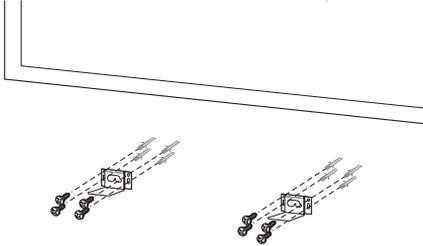

- Hang the main unit onto the brackets as shown below.

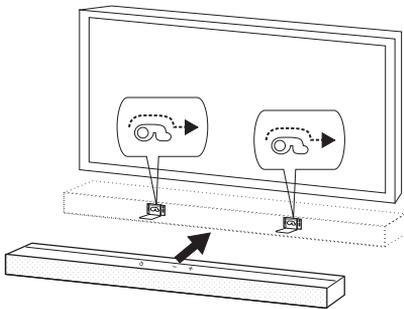

! Caution

- Do not hang onto the installed unit and avoid any impact to the unit.
- Secure the unit firmly to the wall so that it does not fall off. If the unit falls off, it may result in an injury or damage to the product.
- When the unit is installed on a wall, please make sure that a child does not pull any of connecting cables, as it may cause it to fall.
- Do not install this unit upside down. It can damage the parts of this unit or be the cause of personal injury.

! Note


Detach the unit from the bracket as shown below.



Optional Equipment Connection

OPTICAL In connection

Connect an optical output of external devices to the OPTICAL IN connector.

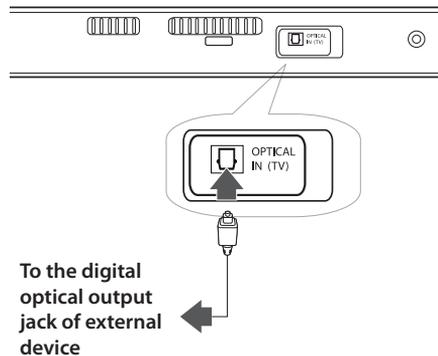

Operations

DRC (Dynamic Range Control)

Makes the sound clear when the volume is turned down (Dolby Digital only). Set to DRC by pressing **DRC ON**.

To cancel DRC, press **DRC OFF**.

AV Sync

When receiving audio signals from TV, sound and images may not match. In that case, this function can adjust the delay time.

Use **AV SYNC +/-** to scroll up and down through the delay amount, which you can set between 0 and 300 ms.

! Note

When the AV SYNC reaches the highest/lowest level and you push **AV SYNC +/-** on remote control again, red LED on the unit turns on for 2 seconds to signal what the AV SYNC level is.

AUTO POWER DOWN

This unit turns off automatically to save power consumption if no signal is transmitted to the unit for about 25 minutes.

But the unit can turn on automatically based on the [AUTO POWER] function you've set.

AUTO POWER On/Off

This function automatically turns on the unit when you turn on the external device (TV, DVD player, Blu-ray player etc.) connected to the unit by optical cable. Turn on this function by pressing **AUTO POWER ON**.

To cancel it, press **AUTO POWER OFF**.

! Note

If you don't connect external device to the unit by optical cable or there is no digital input, the unit is turned off after 1 minutes when you turn on this function.

It is not available to turn on the unit by AUTO POWER function if you turn off it directly.

Turn off the sound temporarily

Press **MUTE** to mute your unit.

You can mute your unit, for example, to answer the telephone.

To cancel it, press **MUTE** again on the remote control or change the volume level.

! Note

Red LED on the unit blinks at intervals of 2 seconds to signal that the unit is in mute mode.

LG Sound Sync



You can control some functions of this unit by your TV's remote control with LG Sound Sync. It is compatible with the LG TV that is supported LG Sound Sync. Make sure of the LG Sound Sync logo on your TV.

Controllable function by LG TV's remote control :
Volume up/down, mute.

Refer to the TV's instruction manual for the details of LG Sound Sync.

Make one of the following connections, depending on the capabilities of your equipment.

! Note

You can also use the remote control of this unit while using LG Sound Sync. If you use TV's remote control again, the unit synchronizes with the TV.

When the connections failed, make sure of the condition of the TV and power of it.


Make sure of the condition of this unit and the connection in the cases below when using LG Sound Sync.

Turned off the unit.

Disconnecting the optical digital audio cable.

With wired connection


1. Connect your LG TV to the unit by using an optical digital cable.

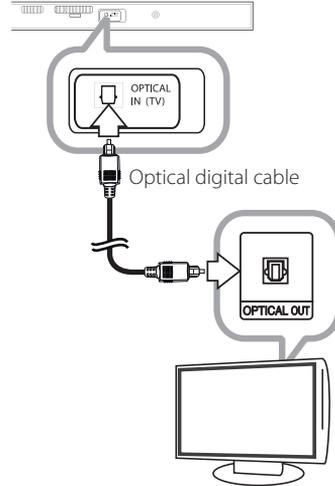

2. Set up LG Sound Sync (Optical) on the TV. Refer to the TV's instruction manual.
3. Turn on the unit.
4. Select OPTICAL function.
When you finish the connection, show a message on your TV.

Controlling a TV with the Supplied Remote Control

You can control your TV using the buttons below.
(LG TV only.)

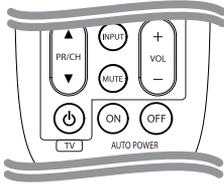

Button	Operation
MUTE	Turn the TV's volume on or off
INPUT	Switch the TV's input source between the TV and other input sources.
⏻ (TV POWER)	Turn the TV on or off.
VOL +/-	Adjust the volume of the TV.
PR/CH ▲/▼	Scan up or down through memorized channels.

! Note

- Depending on the TV being connected, you may not be able to control your TV using some of the buttons.
- The remote control of the unit performs basic operation of your TV. Please use the TV's remote control to enjoy advanced operation of your TV.

Troubleshooting

PROBLEM	CORRECTION
No Power	Plug in the power cord.
	Check the condition by operating other electronic devices.
No sound	Check the OPTICAL IN connection.
The remote control does not work properly.	The remote control is too far from the unit. Operate the remote control within about 23 ft (7m).
	There is an obstacle in the path of the remote control and the unit. Remove the obstacle.
	The battery in the remote control is exhausted. Replace the batteries with new one.
The AUTO POWER function does not work.	Depending on the connected device by the optical cable, this function may not operate.
When you sense that outputted sound of the unit is low.	<p>Check the details below and adjust the unit according to them.</p> <ul style="list-style-type: none"> • Switch [ON] state of DRC function to [OFF] by using remote controller. • With the sound bar connected with TV, change the AUDIO DIGITAL OUT setting on TV Setup Menu from [PCM] to [AUTO] or [BITSTREAM]. • With the sound bar connected with Player, change the AUDIO DIGITAL OUT setting on Player Setup Menu from [PCM] to [PRIMARY PASS-THROUGH] or [BITSTREAM]. • Change Audio DRC setting on Player setup menu to [OFF] state.



Trademarks and Licenses



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS, the Symbol, & DTS and the Symbol together are registered trademarks & DTS 2.0 Channel is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



This product is manufactured under licence from Sontia Logic Limited and contains software which is protected under international copyright laws ©Sontia Logic Limited. All rights reserved. Sontia® and the Sontia wave logo are registered trademarks of Sontia Logic Limited.

Maintenance

Handling the Unit

When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

Keeping the exterior surfaces clean

- Do not use volatile liquids such as insecticide spray near the unit.
- Wiping with strong pressure may damage the surface.
- Do not leave rubber or plastic products in contact with the unit for a long period of time.

Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

Specifications

General	
Power requirements	AC 120 V, 60 Hz
Power consumption	11 W
Dimensions (W x H x D)	899.2 mm x 58.4 mm x 83.8 mm (35.4 inches x 2.3 inches x 3.3 inches)
Net Weight (Approx.)	2.6 kg (5.7 lbs)
Operating temperature	41 °F to 95 °F (5 °C to 35 °C)
Operating humidity	5 % to 90 %

Inputs	
DIGITAL IN (OPTICAL IN)	3 V (p-p), Optical jack x 1

Amplifier	
Stereo mode	20 W + 20 W (6 Ω at 1 kHz)

Designs and specifications are subject to change without prior notice.



LG Customer Information Center

1-800-243-0000 USA, Consumer
1-888-865-3026 USA, Commercial

Register your product Online!

www.lg.com

Printed in China