

How to Install or Replace Handles on Your ILVE Majestic Range



Replacing the Handles:

Upgrading your ILVE Majestic range handle is easier than you might think. Whether you're replacing a worn-out part or simply updating the look, this guide walks you through each step with clarity and care.

Tools Required:

- 8mm Socket Wrench
- Phillips screwdriver
- Flat, padded surface to rest the oven door
- Gloves (optional but recommended)

How to Install or Replace Handles on Your ILVE Majestic Range



Step 1: Open the Oven Door


Set the door at a 90-degree angle. Unlock both hinges by pulling levers towards the door.

Step 2: Remove the Oven Door

Carefully lift the oven door up and off the hinges. Place it on a soft, stable surface to prevent scratching or breakage.

Step 3: Detach the Top Glass Retainer

Unscrew the two screws on either side of the top retainer. Lift and set the retainer aside.

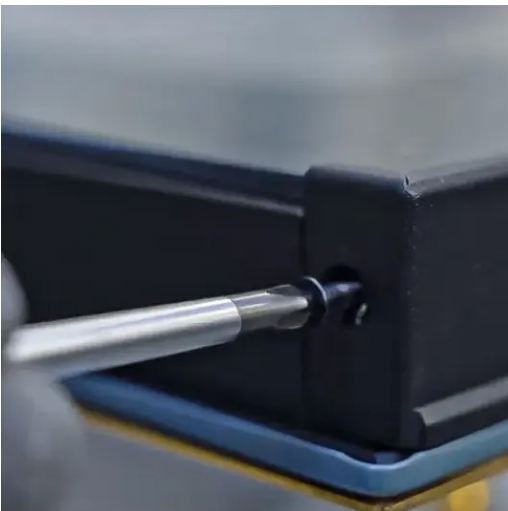


Step 4: Remove the Glass Panels

Gently lift out the inner and middle glass panels. Handle them carefully to avoid damage.

Step 5: Unscrew and Remove the External Glass Structure.

This exposes the oven handle. Set it aside on a protected surface.

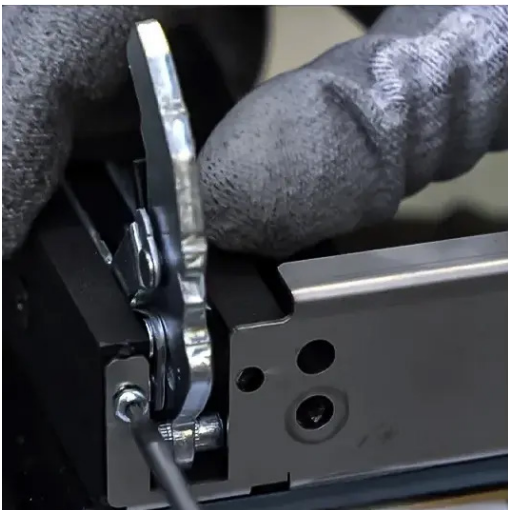

Step 6: Remove the Existing Handle

Use an 8mm socket wrench to loosen both bolts. Detach the old handle.

Step 7: Install the New Handle

Align and secure the new handle with the same 8mm wrench. Make sure it's tightened evenly on both ends.

How to Install or Replace Handles on Your ILVE Majestic Range



Step 8: Reattach the External Glass Structure

Line it up and screw it back into place securely.

Step 9: Insert the Outer Glass Panel

Slide it carefully into position.

Step 10: Reinsert the Middle Glass Panel

Ensure proper alignment within the internal supports.



Step 11: Align the Clips

Double-check that the glass panels are properly held in place.

Step 12: Double-Check the Middle Glass Panel

Make sure it's fully sealed and straight. Repeat if necessary.

Step 13: Snap on the Top Glass Retainer

Press it gently into place over the glass.

Step 14: Tighten the Retainer Screws

Secure the top retainer with the screws you removed earlier.

Final Recommendations

- Refer to the full ILVE Installation Manual for clearance requirements and connection guidelines.
- Always hire a licensed professional for gas and electrical installations.
- Register your ILVE Range online to activate your warranty and receive product support.

Need further assistance? Visit us.ilve.com or contact our support team.