

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

115272 Dining Side Chair

REVISION 0: 02/18/2022

PAGE 1 OF 3

COASTERFURNITURE.COM

ITEM: 115272

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A BACK FRAME 1PC

B SEAT CUSHION WITH FRAME 1PC

C FRONT LEG 2PCS

HARDWARE IDENTIFICATION

1 LONG BOLT WITH WASHER
(M6 x 80mm - BLK)

2 MEDIUM BOLT WITH WASHER
(M6 x 60mm - BLK)

3 SHORT BOLT WITH WASHER
(M6 x 45mm - BLK)

4 ALLEN WRENCH
(M4 - GD)

NOTE:

Quantities shown are for one chair.


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 115272


ASSEMBLY INSTRUCTIONS




STEP 1

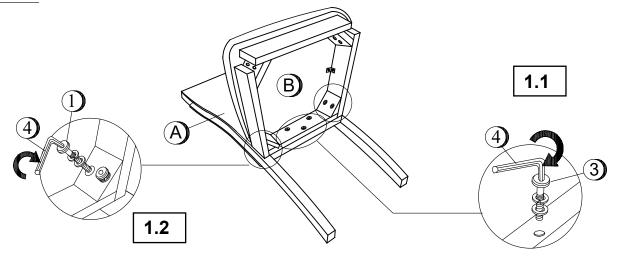

STEP 2

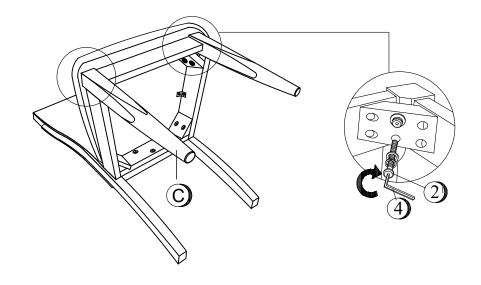

STEP 3 COMPLETE

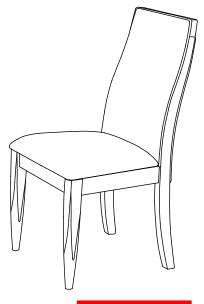




PAGE 3 OF 3

COASTERFURNITURE.COM

ITEM: 115272



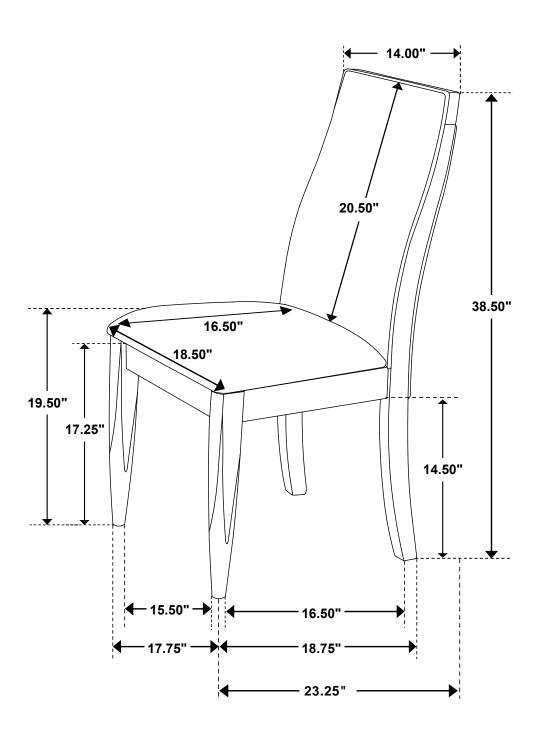

Note: Dimension tolerance ±5%