













MODEL : 4249SET *Ashford II* ASSEMBLY INSTRUCTIONS

Thank you for purchasing this quality product. Be sure to check all packed material carefully for small parts which may have come loose inside the carton during shipment. Place all parts on a clean, smooth surface such as a rug or carpet to avoid scratching the parts. Be sure you have all the parts and hardware before you begin assembly.


NOTE : DURING ASSEMBLY, DO NOT TIGHTEN ANY HARDWARE UNTIL THE COMPLETE UNIT HAS BEEN ASSEMBLED.

REF.	DESCRIPTION	QTY.
A	GLASS 87W0267 	1
B	TOP FRAME 95W0837 	1
C	CENTER LEG 95W0839 	1
D	SIDE LEG 95W0838 	2

REF.	DESCRIPTION	QTY.
E*	1/4" FLAT WASHER 	2
F*	1/4" LOCK WASHER 	2
G*	1/4" X 2 1/2" SCREW 	2
H*	CAM PIN 	4
I*	CAM LOCK 	4
J*	CAM LOCK COVER 	4
K*	HEX KEY 	1
L*	GLUE 	1

*HARDWARE KIT 95W0833


STEP 1
ATTACH 4 CAM PINS(H) TO TOP FRAME(B) AS SHOWN.

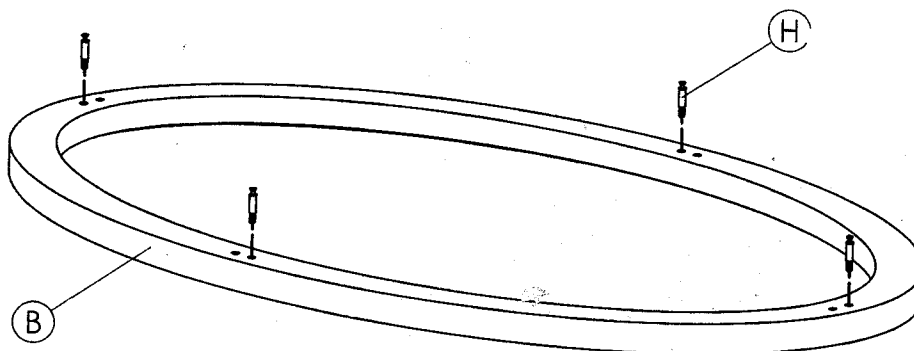

MODEL : 4249SET *Ashford I* ASSEMBLY INSTRUCTION


STEP 2

ATTACH EACH SIDE LEG(D) TO CENTER LEG(C) WITH 1 FLAT WASHER(E), 1 LOCK WASHER(F) AND 1 SCREW(G) USING HEX KEY(K).

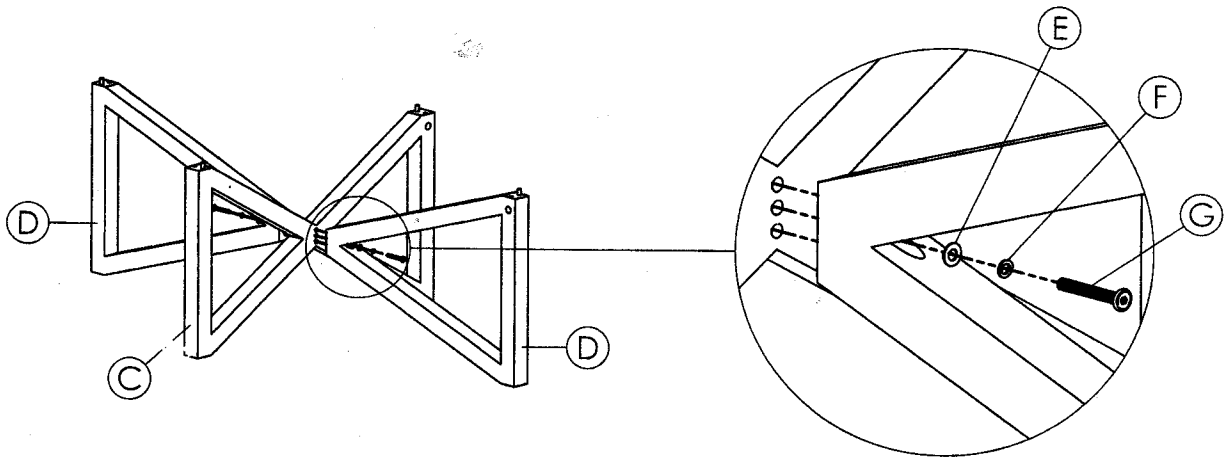

STEP 3

PLACE A COUPLE OF DROPS OF GLUE(L) ONTO THE DOWELS ATOP EACH LEG. THEN ATTACH TOP FRAME(B) TO THE LEG ASSEMBLY WITH 4 CAM LOCKS(I).

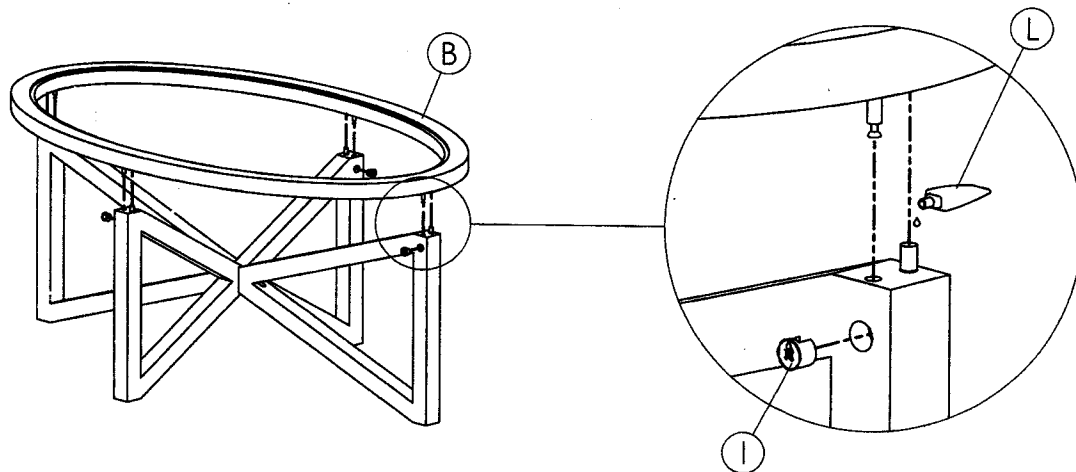

STEP 4

PLACE A CAM LOCK COVER(J) OVER EACH CAM LOCK(I) AND PLACE GLASS(A) INTO TOP FRAME(B).

