

# Operating Instructions

## Washing Machine

**Save these instructions for future reference**

*Dear Customer,*

*Thank you for choosing this quality product from ASKO.*

*We hope it will meet your expectations and fulfill your needs for many years to come. Scandinavian design combines clean lines, everyday functionality, and high quality. These are key characteristics of all our products and the reason they are greatly appreciated throughout the world.*

*To get the most out of your new machine, we recommend that you read the operating instructions before using it. The operating instructions also include information on how you can help protect the environment.*

**ASKO W6984**

 **ASKO**

# Contents

<b>Before using your machine for the first time</b>	4	<b>Advice and tips before washing</b>	11
Transport protection	5	Sorting your laundry	11
Packing material	5	Clothing	11
Washer door	5	Laundry labels	11
Language selection	5	Laundry label symbols	11
Time display options	5	Colored cotton	13
Set the clock	5	Unbleached linen	13
Checking water hardness	5	Wool	13
<b>Important safety instructions</b>	6	Rayon fibers and synthetic fibers	13
Grounding instructions	6	Stain removal	13
Installation	7	Reducing allergic reactions	13
Overflow guard function	7	Save time and energy	13
Transport/Winter storage	7	High Water Level	13
Disposal	7	Economy and efficiency	14
<b>Child safety</b>	8	Detergents	14
Keep an eye on children!	8	Dyeing fabrics	14
Child-safe Start	8	Liquid detergents	14
<b>Parts of the washing machine</b>	9	Recommended detergent amounts based on water hardness	15
<b>Detergent compartment</b>	10	<b>Operating instructions</b>	16
		Sort your laundry.	16
		Turn on the main power switch	16
		Open the washer door and load the laundry	16
		Add detergent and fabric softener, as required	16
		Select the program	17
		Select options	20
		Close the washer door and press the Start/Stop button	22
		Once the program has finished	22

# Contents

<b>Settings</b>	23	<b>Installation</b>	33
You can change the following settings:	23	Leveling the machine	33
Child-safe Start	23	Water supply connection	33
Door opening	23	Drain outlet connection	34
Temperature	24	Electrical Connections	34
Extra rinses	24	Grounding instructions	34
Pre-soak	24	Freestanding installation	34
Anti Wrinkle function	24	Stacked installation	34
Clock	24	Built-in installation	35
Buzzer Volume	25	<b>Reversing the door</b>	36
Spin Option	25	Follow these instructions:	37
Select language	25	<b>Fitting the wooden door</b>	38
Back	25	<b>Service</b>	39
<b>Care and maintenance instructions</b>	26	Warranty	40
Cleaning the trap and the drain pump	26	How to contact ASKO Appliances Inc.	40
Cleaning the detergent compartment	26	<b>Quick guide</b>	44
Cleaning the outside of the machine	26		
Cleaning the inside of the machine to avoid unpleasant smells	26		
Rinse holes under the paddle	27		
If you have hard water	27		
<b>Troubleshooting</b>	28		
The washer door will not open	28		
The machine will not start	28		
Error messages	29		
<b>Technical information</b>	30		
Technical data	30		
<b>Transport protection</b>	31		

# Before using your machine for the first time

Do you need this Use&Care Guide in Spanish? Log on to [www.askousa.com/customer-care](http://www.askousa.com/customer-care) to download.

¿Necesita esta Instrucciones de uso y cuidado en español? Entre en [www.askousa.com/customer-care](http://www.askousa.com/customer-care) y descárguesela.

# Before using your machine for the first time

## Transport protection

Remove any transport protection devices before installing the machine. See the "Transport protection" chapter.

## Packing material

Please sort waste materials in accordance with local guidelines.

## Washer door

- The washer door cannot be opened until the machine is connected to the electricity supply.
- To open the door manually, see "The washer door will not open" in the "Troubleshooting" chapter.
- The machine cannot be started when the door is open.
- To open the washer door while a program is running, see "Close the door and press the Start/Stop button" in the "Operating instructions" chapter.

## Language selection

You will be prompted to select the display language when you have connected your machine and start it for the first time. Do as follows:

Turn the program selector to choose from: US English, English, Svenska, Dansk, Norsk, Suomi, Français, Deutsch, Italiano, Español, Русский, Nederlands.

Press the button in the middle of the program selector or Start/Stop to save and to continue to the clock and time display settings.

## Time display options

The time is shown on the display.

Press the up or down arrow button to choose 12h, 24h, or display remaining time. Press the program selector or Start/Stop to confirm.

Once you have made a selection, the menu for setting the clock will open.

## Set the clock

1. Press the up or down arrow button until the correct hour figure is displayed. Press the program selector to confirm.
2. Press the up or down arrow button until the correct minute figure is displayed. Press the program selector or Start/Stop to save.

Once you have made a selection, the program menu will open.

## Checking water hardness

The quantity of detergent needed depends, among other things, on water hardness. See the detergent pack for details. Phone your local water company to check the water hardness in your area.

### NOTE!

Each machine is tested before leaving the factory. A small amount of water may remain in the drain pump, though this does not affect quality or damage the machine.

**See Quick guide on the last page**

# Important safety instructions



## SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

### WARNING!



To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the appliance.
- Do not run appliance while you are out of the home.
- Do not wash or dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, cooking oils, or other flammable or explosive substances because they give off vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing compartment.
- Do not reach into the appliance if the drum is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-repair instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. HYDROGEN

GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, before using a washing machine or combination washer-dryer, turn on all water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.

### WARNING!



This appliance must be properly grounded.

This manual does not cover every possible condition and situation that may occur. Use common sense and caution when installing, operating, and maintaining any appliance.

#### Grounding instructions

##### A) Grounding instructions for a grounded, cord-connected appliance:

In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

### WARNING!



Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative or personnel if you are in doubt as to whether the appliance is properly grounded.

Do not modify the plug provided with the appliance. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

# Important safety instructions



## **B) Grounding instructions for a permanently connected appliance:**

This appliance must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.

### **NOTE!**

This manual does not cover every possible condition and situation that may occur. Use common sense and caution when installing, operating, and maintaining any appliance.

## **Installation**

See the "Installation" chapter.

## **Overflow guard function**

If the machine's water level rises above the normal level, the overflow guard function begins to pump water out and shuts off the water intake. If the water level has not dropped within 60 seconds, the program is terminated.

## **Transport/Winter storage**

If the machine is to be transported or stored in unheated premises where the temperature can fall below freezing, do as follows:

- Empty the filter and the drain pump. See the "Care and maintenance instructions" chapter.
- Shut off the water to the washing machine, loosen the supply hose to the intake valve, and let the water run out from the valve and hose.
- After emptying the pump, a small amount of water may remain in the machine. This does not affect quality or damage the machine.

## **Disposal**

When the machine has reached the end of its service life and is to be disposed of, it should immediately be made unusable by removing the door to the washing compartment. Contact your local authorities for information about where your machine should be disposed of and recycled in the proper way. The machine is manufactured and labeled for recycling.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE**

# Child safety

## Keep an eye on children!

### Be observant of children!

- Laundry detergents are corrosive, so always keep them out of reach of children.
- Should a child swallow detergent, give plenty to drink immediately, i.e., one or two glasses of milk or water. Do not try to induce vomiting. Seek medical advice immediately: The National Poison center phone number is 1-800-222-1222.
- Always close the door and start the appliance as soon as you put in the detergent.
- Always turn the power off to the machine when it is not in use.
- Always keep small children away from the machine when it is open. There may be some detergent residue left inside the machine.
- If laundry detergent gets in someone's eyes, rinse them with plenty of water for at least 15 minutes.

## Child-safe Start


You can activate the Child-safe Start option to prevent children from starting the machine. You can deactivate the Child-safe Start option by pressing the Start/Stop button and the program selector (the big arrow) at the same time. The Child-safe Start option will be temporarily deactivated for three minutes.

1. Press the up or down arrow button until Child-safe Start appears in the middle of the display.
2. Press the program selector again (the big arrow) to access the options menu on the right of the display.
3. Press the up or down arrow button to select Off or On.
4. Press the program selector to save your setting.
5. If you do not want to select any more settings, press the arrow button down until you reach the program you want.





# Parts of the washing machine

1. Main power switch
2. Detergent compartment
3. Program panel
4. Serial number plate (on inside of washer door)
5. Drain pump cover
6. Drain pump (behind cover)

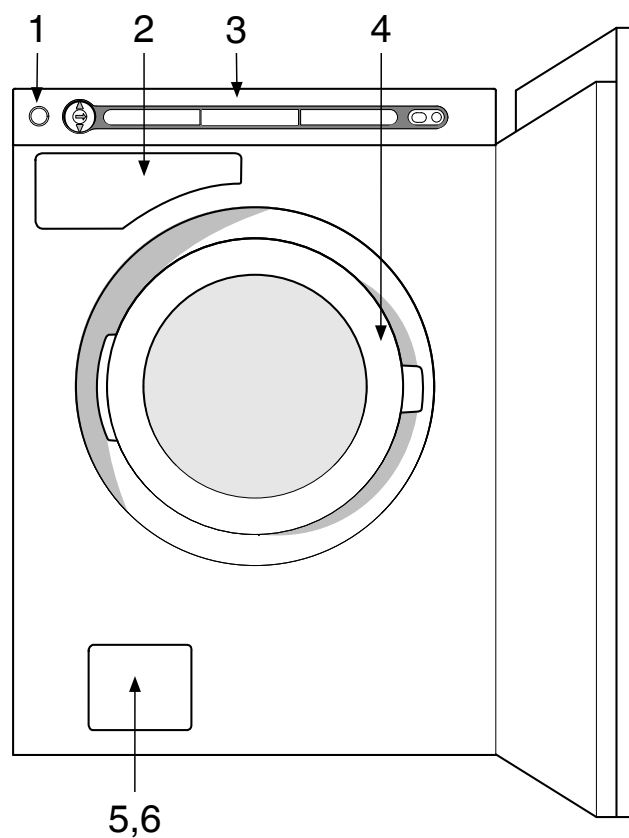

# Detergent compartment

1. Pre Wash
2. Main Wash
3. Main wash liquid detergent.
4. Fabric softener

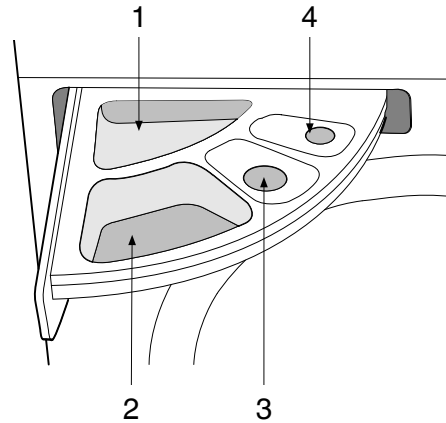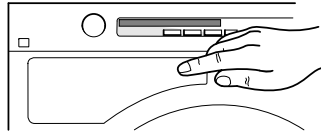

The detergent drawer automatically dispenses the detergent and fabric softener at the appropriate times. Simply pour the measured amounts of detergent and softener into the proper compartments (as illustrated) and close the drawer.

## NOTE!

To avoid oversudsing, do not put detergent in the prewash compartment unless you are using one of the Heavy wash programs which has a prewash cycle.

# Advice and tips before washing

Here are some tips that may help you before washing.


## Sorting your laundry

Sort items according to:

- how soiled they are
- color
- material

## Clothing

1. Close zippers and Velcro straps so they won't damage fabrics.
2. New colored items may contain excess dye and should therefore be washed separately the first few times.
3. Turn delicate items inside out. This reduces the risk of burling and fading.
4. Empty pockets and wash them inside out if possible.

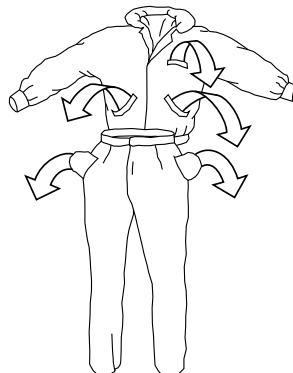







## Laundry labels

Look at the item's laundry label. The table below shows suitable wash programs for different materials and wash loads. Using modern washing machines and detergents, such as compact detergents, you can usually wash at lower temperatures. It is a good idea to use trial and error to find out what produces the best results.







## Laundry label symbols

Examples of washing instructions and recommended programs. Always follow the washing instructions for each garment.







Laundry labels	Material	Program	Load
	Heavily soiled cotton, linen, white, and light-colored items.	Sani 140 °F (60 °C) to 203 °F (95 °C)	1/1 drum
	Normally soiled cotton, linen, cotton/polyester. Light and dark-colored garments.	Quick 140 °F (60 °C)	1/1 drum
	Polyester, polyamide, elastane, acrylic. Light and dark-colored garments.	PermaPress 104 °F (40 °C)	1/1 drum
	Acrylic, viscose, modal, acetate.	Everyday Wear (Easy care) 104 °F (40 °C)	1/2 drum
	Silk and very delicate items	PermaPress 86 °F (30 °C)	1/3 drum
	Wool and other very delicate garments	Wool/Delicate 86 °F (30 °C) to 104 °F (40 °C)	1/3 drum

# Advice and tips before washing




## Wash cycle

-  Normal wash cycle
-  Permanent Press or Wrinkle Resistant setting
-  Gentle/Delicate setting
-  Hand wash only
-  Do not wash
-  Do not wring. Hang dry, drip dry, or dry flat

## Wash water temperature

-  Maximum water temp 200° F/95°C
-  Maximum water temp 160° F/70°C
-  Maximum water temp 140° F/60°C
-  Maximum water temp 120° F/50°C
-  Maximum water temp 105° F/40°C
-  Maximum water temp 85° F/30°C






## Bleach instructions

-  Any bleach when needed
-  Only non-chlorine bleach
-  Do not bleach






## Dry clean symbol

-  Dry clean only



 

## Tumble dry cycle

-  Machine dry
-  Normal setting
-  Permanent Press or Wrinkle Resistant setting
-  Gentle or Delicate setting
-  Do not tumble dry







## Tumble dry heat setting

-  Any heat
-  High heat
-  Medium heat
-  Low heat
-  No heat/Air fluff

## Special drying instructions

 -  Line dry or hang to dry
-  Drip dry (do not spin or wring)
-  Dry flat
-  Dry in shade

## Ironing instructions

-  Ironing is necessary
-  High temperature setting
-  Medium temperature setting
-  Low temperature setting
-  Do not iron or press with heat
-  Iron without steam

# Advice and tips before washing

## Colored cotton

Colored cotton items labeled 140 °F (60 °C) should be washed at 140 °F (60 °C) the first time in order to remove any excess dye. If you do not do so, there is a risk that the color will run. Use detergent without bleach in order to preserve the color of the fabric.

## Unbleached linen

Unbleached linen fabrics should be washed at 140 °F (60 °C), using detergent containing no bleach or optical whiteners. Heavily-soiled linen can occasionally be washed at higher temperatures, but not too often as the heat can destroy the linen's sheen and strength.

## Wool

These fabrics are labeled either machine wash or hand wash. The Wool program is at least as gentle as washing by hand.

Wool is especially sensitive to processes such as washing.

If you do not wish to spin dry, you can squeeze out the water using terrycloth towels. In this case select No spin.

To find out how to choose this setting, see the "Operating instructions" chapter. However, most garments can withstand a short spin. Choose a short spin by selecting a spin speed of 800 rpm or less.

## Rayon fibers and synthetic fibers

Materials made of rayon fibers, such as viscose, and some synthetic fibers are very delicate and require much space to avoid wrinkling. Only half fill the drum when washing and choose a spin speed of 800 rpm or lower.

### NOTE!

Viscose and acetates are fragile when wet.

## Stain removal

The automatic stain program can be used for the following types of stains: Chocolate, Blood, Red wine, Egg, Grass, Dairy products, Coffee/Tea, Butter/Grease, and Blueberry. The program is suitable for cotton, cotton/synthetics, and synthetics.

### NOTE!

For stain removal it is always important to treat the stain as soon as possible. Leaving a stain and allowing it to dry makes it more difficult to remove. It is also important to carefully scrape off any of the stain on the surface of the garment. Do not load the machine with more than 6 lb (2.5 kg) of laundry.

## Reducing allergic reactions

The washing machine has a Super Rinse option. Use this for people with sensitive skin, such as those with allergies and small children.

## Save time and energy

Use the Color program to save time and energy. This program has a shorter main wash than White, but is often sufficient for lightly soiled laundry.

## High Water Level

If you want more water for the main wash and rinses, you can use the High Water Level option. High Water Level is used automatically in the Wool/Hand program.

# Advice and tips before washing

## Economy and efficiency

You can save a lot of energy by not using higher temperature programs than necessary.

- Select Quick if you just need to freshen up shirts or exercise clothes, for example. This will save both water and energy.
- If you select a fast spin speed, this reduces energy consumption when drying in a tumble dryer or drying cabinet.
- Always wash with a full load when using the Sani, Color, and White programs.
- Avoid pre-washing. Modern machines and detergents clean effectively without pre-washing. Pre-washing is only necessary for heavily soiled laundry.

## Detergents

Eco-labeled detergents are less harmful to the environment.

Detergent overdosing does not give better washing results; it merely causes a greater impact on the environment.

Try to use less detergent, and increase only if you are not satisfied with the results.

## Dyeing fabrics

If you want to dye fabrics in the machine, select the Color program with the Super Rinse option. Select the temperature according to the dye manufacturer's recommendations.

Choose a low spin speed if the fabric to be dyed is a blended material, such as polyester/cotton.

### NOTE!

Add the dye directly to the washing drum – not to the detergent compartment. After dyeing, you should run the machine empty using the same program. Use the normal amount of detergent.

### NOTE!

Due to environmental concerns, we discourage the use of strong chemicals.

When using agents for bleaching or stain removal, there is a risk of rust (corrosion) and discoloration of the machine.

## Liquid detergents

We don't recommend liquid detergents because they tend to produce more suds than powder detergents when used in water temperatures of 150° F or higher. If you should try a liquid detergent, start with a very small amount, such as 1 to 2 tablespoons. Also, liquid detergent can be used for all programs without prewash, so add it into the main wash compartment.

## Detergents

Laundry detergents are available in low-, normal- and high-sudsing formulas. A detergent's ability to clean is not relative to the amount of suds it produces. Excess suds in a front-loading washer actually interfere with the cleaning because they cushion the tumbling action. Also, high-sudsing detergents are more difficult to completely rinse out.

The use of anything other than a low-sudsing detergent can cause severe oversudsing, which could cause suds to backup through the detergent compartment and run down the front of the washer onto the floor. If oversudsing occurs, run the wash through one or more rinse programs until all items are thoroughly rinsed. Remove the laundry then run the washer through a Normal wash program to get rid of any remaining detergent.

We recommend that you don't use bleach in your ASKO washer. The tumbling wash action, temperature control options, extended wash times and proper amount of detergent are sufficient to remove most stains.

# Advice and tips before washing

## Recommended powder detergents

ASKO washers use 50% to 75% less detergent than most other washers. This is because of their low water consumption and the fact that all the wash water is repeatedly circulated through the laundry, ensuring that all the detergent is fully utilized. We recommend that you use powder detergents made specifically for front-loading washers. These are sometimes called HE (High-Efficiency) detergents. Please visit our homepage [www.askousa.com](http://www.askousa.com) to see the powder detergents we recommend for ASKO washers.

We recommend that you do not use any powder detergent that doesn't wash completely out of the detergent drawer.

## Detergent Amounts Based on Water Hardness

The amount of detergent needed can vary due to differences in water hardness. To determine the water hardness in your area, contact your local water utility or area water softening company. The harder the water, the more detergent you may need. Refer to the chart below for the recommended detergent amounts based on water hardness. Remember, you should adjust the amount of detergent you use by small amounts until you find the correct amount.

## Recommended detergent amounts based on water hardness

Detergent amounts		
Water hardness	Pre Wash	Main Wash
Soft (0-3 grains per gal.)	1 teaspoon	1 to 1-1/2 tablespoons
Medium (4-8 grains per gal.)	1 teaspoon	1 to 2 tablespoons
Hard (9+ grains per gal.)	1 teaspoon	2 to 3 tablespoons

Note that 12 grains and higher is extremely hard water and detergent alone may not be enough. You may need to use a water softener to maximize the performance of your washer. Also, in areas with hard water (9+) you may need to wash at lower temperatures to prevent hard water deposits from forming in the tank and wash system.

## Amount of detergent to use

The amount of detergent needed varies among the different brands, but for most detergents, you need only one or two tablespoons. Using too much detergent can result in detergent residue being left in your clothes, which can cause them to appear gray or dingy. You should start with a small amount of detergent and increase it only if the cleaning results are unsatisfactory.

Additionally, you should never put detergent in the prewash compartment unless you are using a wash program that has a prewash cycle. This could cause excess foaming, which could damage the machine.

The amount of detergent needed can also depend on the hardness of the water in your area. See the "Detergent Amounts Based on Water Hardness" section on the next page for more details.

# Operating instructions

## WARNING!



To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance.

### 1 Sort your laundry.

See the "Advice and Tips before washing" section.

Place underwired bras in a laundry net.

Empty pockets. Coins, nails, and the like can cause damage to the machine and fabrics. See the "Advice and Tips" section before washing.

### 2 Turn on the main power switch

### 3 Open the washer door and load the laundry

If the washer door is closed, press the Door Opening button (key symbol). The door opens once all water has drained from the machine. Load the laundry. The wash program chart shows how much laundry can be washed with each program.

### 4 Add detergent and fabric softener, as required

The detergent packaging will have recommendations for how much detergent you should use. The machine holds 18 lb (8 kg) of laundry. If you only have a small amount of laundry in the machine, you can reduce the amount of detergent used.

#### Powder detergent

Pour the powder into the main wash compartment, and pre-wash compartment as well if desired.

#### Liquid detergent

When using liquid detergent, follow the chart on page 15 for recommended detergent amounts. We recommend always using a wash ball with very thick liquid detergent.

#### Wash ball or net


If you use a wash ball or net, place it directly in the drum and select a program without pre-wash.

#### NOTE!

Detergent overdosing does not give better washing results; it merely causes a greater impact on the environment.

Try using less detergent, and increase only if you are not satisfied with the results.

#### Fabric softener

Pour the fabric softener into the compartment with the  symbol. Follow the recommendations on the fabric softener packaging.

#### NOTE!

Do not fill above the compartment's maximum fill level. Otherwise fabric softener will be dispensed too early, which impairs the washing effect.

## WARNING!




To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance.



# Operating instructions

## 5 Select the program

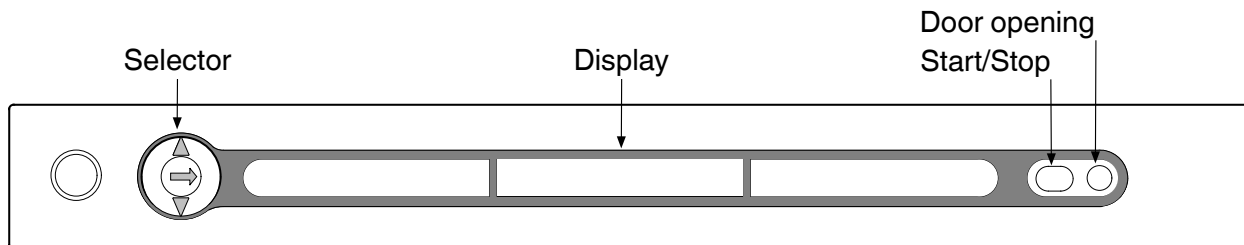

You select the program by pressing the up or down arrow button. The name of the selected program is highlighted and the program end time appears on the display. Start the program by pressing the Start/Stop button, or press the button in the middle of the arrow buttons to select Options.

### 1. Auto

This program automatically adjusts the length of the main wash and the number of rinses to the amount and type of laundry loaded in the machine.

### 2. Stain Care

For information on stain removal, see the Advice and Tips section before washing.

- Press the program selector (the big arrow) again to access the stain symbol. Select the appropriate stain type by turning the program selector.
- Press the program selector (the big arrow) again to access the fabric symbol. Select the desired fabric type.
- Follow the dosage recommendations on the detergent package.
- For stains of Red wine, Tea/Coffee, Blueberry, and Chocolate, we recommend that you also add half the recommended amount of detergent to the pre-wash compartment.
- You can select the temperature freely, so use the highest temperature recommended for each garment.

### 3. Time Choice

This program adjusts itself to the specified time frame or finish time. When using this program, it is however important to select a temperature and time suited to how soiled the laundry is. The spin speed can be selected freely.

### 4. Sani

Program for heavily soiled laundry, with dirt that needs to be fully dissolved before the main wash. A pre-wash is used to do this. The machine adapts the program time and water consumption to the load size.

### 5. White

#### HeavyWhite program description

Program for normally to heavily soiled laundry, whites and colors. You can select the temperature freely, so follow the washing instructions for each garment. 140 °F (60 °C) is a good temperature for heavily soiled cotton garments, as well as for garments worn next to the skin. Select 104 °F (40 °C) if the laundry is less soiled. The spin speed can be selected freely. The machine adapts the program time and water consumption to the load size.

# Operating instructions

## 6. Color

A standard program for lightly to moderately soiled laundry. The temperature can be selected freely, so follow the washing instructions for each garment. Garments worn next to the skin ought to be washed at 140 °F (60 °C). Very lightly soiled laundry often comes clean already at 104 °F (40 °C). The spin speed can be selected freely.

## 7. Quick

Program for normally soiled cotton and/or linen clothes for daily use. You can select "Cold" (incoming water temperature), 104 °F (40 °C), or 140 °F (60 °C). The lower the selected temperature, the shorter the program time. Garments worn next to the skin should be washed at 140 °F (60 °C).

## 8. Everyday Wear (Easy care)

Program for blended materials, permanent press shirts, and functional sports clothing. The program has a high water level and as such is also suitable for cushions, quilted jackets, and similar items. Read the washing instructions carefully and remember, for example, that fabric softener must not be used with the membranes found in some outer garments. A washing temperature up to 140 °F (60 °C) and a spin speed up to 1200 rpm can be selected.

## 9. PermaPress

Program for delicate fabrics made of synthetic fibers, blended materials, or silk. The maximum temperature is 140 °F (60 °C), but follow the washing instructions for each garment. Many synthetics will come clean at 104 °F (40 °C). Garments worn next to the skin ought to be washed at 140 °F (60 °C). The maximum spin speed is 800 rpm.

## 10. Wool

A gentle laundry program for wool, silk, and garments that should be washed by hand. The highest available temperature is 104 °F (40 °C). This program has a short spin. The maximum spin speed is 800 rpm.

## 11. Delicate

A gentle laundry program for wool, silk, and garments that should be washed by hand. The highest temperature is 86 °F (30 °C). This program has a short spin. The maximum spin speed is 800 rpm.

## 12. Rinse

This program performs one cold rinse cycle + spin. Suitable for laundry that just needs to be dampened and for cleaning cloths and mops.

## 13. Spin

Used to simply spin the wash.

## 14. Drain

Used when you only want to drain the water from the machine.

# Operating instructions

## Program chart

Program	Pre Wash	Temp. °F	Number of rinses	Spin speed rpm	Max. load (lb)	Water consumption (approx. gallon)	Energy consumption (approx. kWh)	Program time (approx. hrs and min.)
1. Auto								
2. Stain Care								
3. Time Choice								
4. Sani	X	203	5	1800	18	22,5	2.2	2:45
	X	140	5	1800	18	19,8	1.2	2:40
5. White		140	3	1800	18	15,6	1.20	2:21
		104	3	1800	18	15,6	0.59	2:02
6. Color		140	3	1800	18	15,9	1.2	1:40
7. Quick		104	2	1800	9	6,6	0.4	0:40
8. Everyday Wear (Easy care)		104	2	1200	9	13,2	0.5	1:20
9. PermaPress		104	4	800	9	10,6	0.4	1:20
10. Wool		86	3	800	6	18,5	0.5	0:45
11. Delicate		86	3	800	6	18,5	0.5	0:45
12. Rinse			1	1800	9	4,0	0.1	0:20
13. Spin				1800	9		0.1	0:15
14. Drain								0:01

# Operating instructions

## 6 Select options

You can select options to adjust the wash program to suit your own specific requirements. The available options depend on the selected program. If the option is available for the selected program, the symbol is shown on the display.

The machine will remember the options you select for each program (with one exception – Delayed Start). You can still change the selected options the next time you select a particular program.


 




### Temperature

- Choose the temperature by pressing the program selector (the big arrow) until a temperature is highlighted.
- Press the up or down arrow button until the correct temperature is displayed. You can select temperatures between Cold and 203 °F (95 °C). If you select Cold, the washing temperature will be the same as that of the water entering the machine. You cannot choose a temperature higher than 104 °F (40 °C) for Wool or higher than 86 °F (30 °C) for Delicate. The maximum temperature for Time Choice is 140 °F (60 °C).
- Press the Start/Stop button to start the program or press the program selector (the big arrow) again to select more options.






### Spin

- Select the spin speed by pressing the program selector (the big arrow) until spin is highlighted.
- Press the up or down arrow button until the correct speed is displayed. You can select speeds between 400 and 1800 rpm,  (no spin), or  (no drain). The maximum spin speed varies according to the selected program. The speed is shown on the display.
- , means that the program does not include a spin cycle and ends by draining.
-  No drain means that the program does not include a spin cycle and ends with the water from the final rinse still in the machine. The washing will remain covered by the water from the final rinse, stopping it from getting wrinkled. If you have selected "No drain", once the program has ended you must select the Spin or Drain program to drain the water from the machine before you open the washer door.



### Rinse

The number of rinses varies depending on the selected program. Use this option if you want to increase or decrease the number of rinses for the selected program.  Economy Rinse removes one rinse from the program.  Normal Rinse means the program runs the original number of rinses.  Super Rinse adds two extra rinses to the program. The maximum number of rinses is seven. Super Rinse is recommended for persons with extremely sensitive skin and/or in areas with very soft water.

1. Select the number of rinses by pressing the program selector (the big arrow) until the rinse symbol lights up on the display.
2. Press the up or down arrow button to select the number of rinses.
3. Press the Start/Stop button to start the program or press the program selector (the big arrow) again to select more options.

# Operating instructions



## Delayed Start

When you select Delayed Start, the machine will start ½-24 hours after you press the Start/Stop button. This option cannot be used with Time Choice.

1. Select Delayed Start by pressing the program selector (the big arrow) until the clock symbol is highlighted and the current start and end times appear on the right of the display.
2. Each time you press the arrow buttons you add half an hour to the time up to a maximum of 24 hours.

### NOTE!

Remember to press the Start/Stop button to start the program.

### NOTE!

Make sure the detergent compartment is completely dry before you add detergent, otherwise there is a risk that the detergent will clump before the machine starts.



## High Water Level

1. High Water Level means additional water is used during the main wash and rinse cycles. Select High Water Level by pressing the program selector (the big arrow) until High Water Level is highlighted.
2. This option cannot be used with the Auto, Time Choice, Wool, Delicate, Rinse, Spin, and Drain programs.
3. Press the up arrow button to choose High Water Level or the down arrow to choose Normal Water Level.
4. Press the Start/Stop button to start the program or press the program selector (the big arrow) again to select more options.

### NOTE!

The machine takes in the additional water for High Water Level about 15 minutes after the main wash has started.

# Operating instructions

## **7** Close the washer door and press the Start/Stop button

### **Time remaining**

When the program starts, an estimated program time, in hours and minutes, is displayed. The remaining time is updated three times during the program, based on the actual load and the incoming water temperature. The first update takes place after about 15 minutes. The remaining time is last updated just before the final rinse.

### **To add or remove laundry after the program starts**

If you want to add or remove items after the program has started, you can stop the program by pressing and holding the Door Opening button (key symbol) for three seconds. When you restart the machine, add any extra detergent needed and close the washer door. The machine continues automatically from the point where the program was interrupted.

### **Stopping or changing a program**

You can stop a program by pressing the Start/Stop button for three seconds. "Stop" appears on the display. To restart the machine, select a new program, add any extra detergent needed, and press the Start/Stop button.

#### **NOTE!**

Do not open the detergent compartment while the machine is running.

## **8** Once the program has finished

Once a program has finished, "End" appears on the display.

The washer door opens automatically once the program has finished. If you want to deactivate the Automatic Door Opening function, see the "Selecting settings" section.

- Remove the laundry.
- Turn off the main power switch as this will save energy.

If you have small children or pets at home, close the washer door once you have removed the laundry.

### **Backlighting**

Two minutes after the wash program finishes the display backlighting enters energy saving mode.

# Settings

## You can change the following settings:

- Child-safe Start
- Door opening
- Language
- Temperature
- Extra rinses
- Pre-soak
- Anti Wrinkle function
- Clock
- Buzzer Volume
- Spin Option

How to choose the settings:

1. Press the program selector (the big arrow) until the program selection menu in the display on the left is highlighted.
2. Then press the up or down arrow button until Settings is highlighted.
3. Press the program selector (the big arrow).

## Child-safe Start

You can activate the Child-safe Start option to prevent children from starting the machine. You can deactivate the Child-safe Start option by pressing the Start/Stop button and the program selector (the big arrow) at the same time. The Child-safe Start option will be temporarily deactivated for three minutes.

1. Press the up or down arrow button until Child-safe Start appears in the middle of the display.
2. Press the program selector again (the big arrow) to access the options menu on the right of the display.
3. Press the up or down arrow button to select Off or On.
4. Press the program selector to save your setting.
5. If you do not want to select any more settings, press the arrow button down until you reach the program you want.

## Door opening

The default setting is for the washer door to open automatically when the program has finished. If for any reason you do not want the door to open automatically, you can program the machine so that the door only opens when you press the Door Opening button (key symbol).

1. Press the up or down arrow button until Automatic Door Opening appears in the middle of the display.
2. Press the program selector again (the big arrow) to access the options menu on the right of the display.
3. Press the up or down arrow button to select Off or On.
4. Press the program selector to save your setting.
5. If you do not want to select any more settings, press the arrow button down until you reach the program you want.

# Settings

## Temperature

1. Press the up or down arrow button until Temperature appears in the middle of the display.
2. Press the program selector (the big arrow) once to access the options menu to the right of the display.
3. Press the up or down arrow button and choose °C or °F.
4. Press the program selector (the big arrow) to save your setting.
5. If you do not want to select any more settings, press the arrow button down until you reach the program you want.

## Extra rinses

Upon delivery, your washing machine is set to use three rinses in the White and Color programs. If you want to increase the number of rinses to five for these programs, do as follows:

1. Press the up or down arrow button and select "Extra rinses On" for five rinses or "Extra rinses Off" for three rinses.
2. Press the Door Opening button once to save the setting.

## Pre-soak

If the laundry is stained, such as with blood, we recommend a presoak. The laundry will be soaked in cold water for two hours before the wash program starts. This option cannot be used with the Time Choice, Wool, and Delicate programs.

1. Press the up or down arrow button until Presoak appears in the middle of the display.
2. Press the program selector again (the big arrow) to access the options menu on the right of the display.
3. Press the up or down arrow button to select Off or On.
4. Press the program selector (the big arrow) to save your setting.
5. If you do not want to select any more settings, press the arrow button down until you reach the program you want.

## Anti Wrinkle function

This option means the drum will rotate for three seconds each minute for two hours once the wash program has finished. This function prevents the clothes from lying in the same position and getting wrinkled. This is a useful feature if you cannot take the laundry out right away.

1. Press the up or down arrow button until Anti Wrinkle appears on the right of the display.
2. Press the program selector again (the big arrow) to access the options menu on the right of the display.
3. Press the up or down arrow button to select Off or On.
4. Press the program selector (the big arrow) to save your setting.
5. If you do not want to select any more settings, press the arrow button down until you reach the program you want.

## Clock

Set the clock to 12 hour, 24 hour, or remaining program time display.

1. Press the up or down arrow button until Clock appears in the middle of the display.
2. Press the program selector again (the big arrow) to access the options menu on the right of the display.
3. Press the up or down arrow button to choose 12 hour clock, 24 hour clock, or remaining program time display.
4. Press the program selector (the big arrow) to save your setting.
5. If you selected 12 or 24 hour clock, you will now come automatically to the clock setting menu.

## Setting the clock

1. Press the up arrow button until the correct hour is shown.



# Settings

2. Press the program selector (the big arrow) to save your setting.
3. Press the up arrow button until the correct minutes are shown.
4. Press the program selector (the big arrow) to save your setting.
5. If you do not want to select any more settings, press the arrow button down until you reach the program you want.

## Buzzer Volume

You can choose to have the machine notify you when a program has finished or when a fault has occurred.

1. Press the up or down arrow button until Buzzer Volume appears in the middle of the display.
2. Press the program selector again (the big arrow) to access the options menu on the right of the display.
3. Use the up and down arrow buttons to adjust the Buzzer Volume: Off, Low, Normal, or High
4. Press the program selector to save your setting.
5. If you do not want to select any more settings, press the arrow button down until you reach the program you want.

## Spin Option

If you have a problem with resonance frequencies where your machine is positioned, try changing the Spin Option setting. Choose between four preset options.

## Select language

1. Press the up or down arrow button until Language appears in the display.
2. Press the program selector again (the big arrow) to access the options menu on the right of the display.
3. Press the up or down arrow button and choose from: US english, English, Svenska, Dansk, Norsk, Suomea, Français, Deutsch, Italiano, Espanol, Русский, Nederlands.
4. Press the program selector to save your setting.
5. If you do not want to select any more settings, press the arrow button down until you reach the program you want.

## Back


To return to the program menu, press the program selector (the big arrow).

# Care and maintenance instructions


## Cleaning the trap and the drain pump

The washing machine has a trap where small items such as coins, buttons, and hairpins can collect. To clean the trap and the drain pump, do as follows:


1. Make sure the machine is empty of water and switched off at the main power switch.

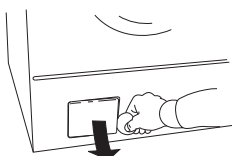


2. Open the door.

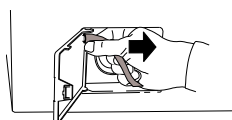


3. Unhook the drain hose from the connector inside the door and drain the water into a suitable container, such as a shallow bowl.

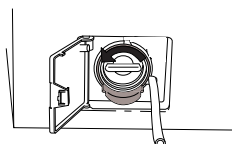

4. Turn the cover counter-clockwise to open the pump. Remove the cover.

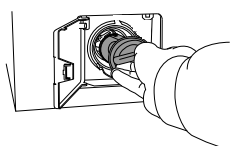

 5. Remove any items and debris from the pump housing and cover. Also check that the pump impellers at the back rotate.




6. Screw on the cover, replace the drainage hose on the hatch pin, and close the hatch.

## Cleaning the detergent compartment

### NOTE!

Do not wash the detergent compartment or the insert in a dishwasher!

Open the detergent compartment and remove the insert. Rinse the insert and scrub it clean with a dish brush. Wipe up any detergent left inside the detergent compartment. Replace the insert in the detergent compartment.

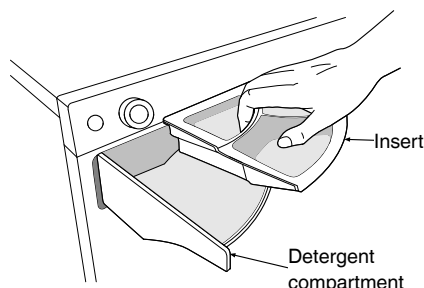

## Cleaning the outside of the machine

Clean the outside of the machine and the program panel with a mild cleaner. Do not use any solvents, as these can damage the machine.

### NOTE!

Do not hose down the machine with water!

## Cleaning the inside of the machine to avoid unpleasant smells

Modern detergents often allow laundry to be washed at low temperatures. This means that small deposits can build up in the machine. These, in turn, may lead to unpleasant odors developing.

To avoid this, we recommend running a 203 °F (95 °C) wash program once a month. When you do this, use a small quantity of detergent. It is not necessary to put any laundry in the machine.


# Care and maintenance instructions

## Rinse holes under the paddle


If you suspect that objects such as nails or paper clips may have fallen into the wash drum, you should check the space under the paddles. Such objects can rust and cause spots on clothing. Nails and other sharp objects can cause holes in fabrics.

### Do as follows:


1. Insert a screwdriver or similar tool into the hole on the paddle as illustrated and carefully push to the left.

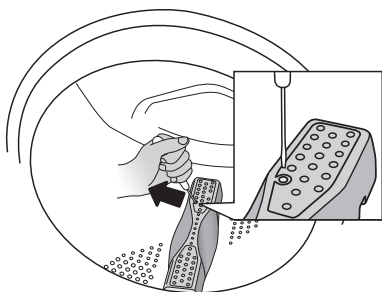

2. Use your other hand to grasp the paddle and pull it toward you.

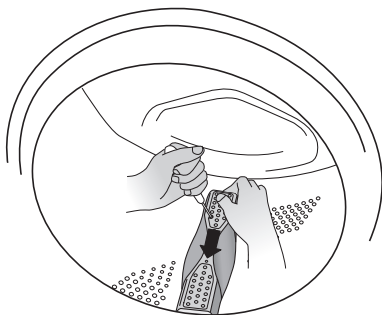

3. Lift the paddle.
4. Remove any objects.
5. Place the paddle in the mounting hole with the F-mark toward you. Ensure that all the paddle fasteners are in their holes in the drum. Push it in until it catches.

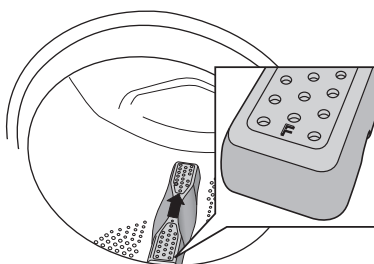

## If you have hard water

If you live in an area with hard water (high limescale content), a grayish-white coating may form on the wash drum. To remove this coating, pour approximately 20 gram (1 oz) of citric acid into the wash drum and run any 203 °F (95 °C) program. Repeat if necessary.

# Troubleshooting

## The washer door will not open

1. Check that the main power switch is on.
2. Is there power? Check your home's fuses (circuit breakers). The washer door cannot be opened with the door opening button (with the key symbol) if the power is off.

**If nothing else works, the washer door can be opened as follows:**

## WARNING!




The door may only be opened manually if the electric power is cut and the machine has been drained of water.

- A Run the Drain program to empty the water from the machine. If this does not work, the machine must be drained manually. See "Cleaning the trap and the drain pump" in the "Care and maintenance instructions" chapter.

If this does not work, the machine must be drained manually. See "Cleaning the trap and the drain pump" in the "Care and maintenance instructions" chapter.

- B Ensure that the main power switch is turned off and that the plug has been removed from the wall socket.
- C Take the emergency door opening tool and place it in the gap on the right side of the washer door lock. This tool is found in the enclosed plastic bag.
- D Push the tool upward to open the washer door.

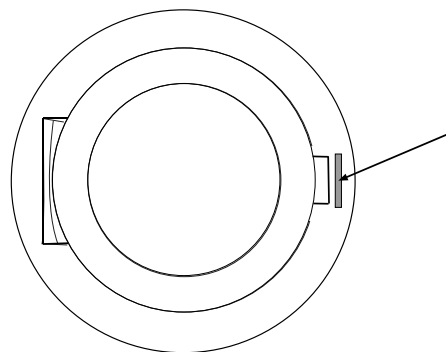

If in the future the washer door does not open when the wash program has finished, call the Customer Care Center.

## The machine will not start

1. Is the washer door properly closed? Push it firmly.
2. Is there power? Check the fuses and residual current devices (circuit breakers) in the building.
3. Check that you have not selected Delayed Start. To cancel Delayed Start, press the Start/Stop button for three seconds.

# Troubleshooting

## Error messages

If an error occurs during the program, a message is shown on the display. To exit the message after taking action, turn the machine off and then back on.

The error messages that may be shown in the display are:

### Close the door

Close the washer door and the program will start.

### Overfilling

1. Shut off the water tap.
2. See "Drainage error".

### Drainage error

#### Check:

- that no objects are stuck in the drainage hose outlet.
- that the drain pump is not blocked by foreign objects. Clean the pump. See the "Care and maintenance instructions" chapter.
- that there are no kinks in the drainage hose.

After taking action, run the Drain program or press the Door Opening button (key symbol) to empty the machine. If this does not resolve the problem, call the Customer Care Center.

### Water Inlet Fault

#### Check:

- that the tap on the water pipe is open.
- that the filter in the machine's water intake is not blocked.

#### Action:

1. Shut off the water tap.
2. Unscrew the hose.
3. Clean the filter in the intake valve on the machine.
4. Screw the hose back on.
5. Turn on the tap.
6. Run the program again to check whether the error has been fixed.
7. If this does not resolve the problem, call the Customer Care Center.

### Door opening error

Contact the Customer Care Center at the number listed at the bottom of this page!

### Motor fault

Contact the Customer Care Center at the number listed at the bottom of this page!

### Imbalance

The machine stops the spin cycle if there is too much imbalance. The washing machine restarts the spin cycle and hopefully the laundry is better distributed in the drum. This procedure can be repeated up to 10 times. If the machine still fails to find a good balance, the program jumps to the next step.

The error message requires no action.

# Technical information

## Technical data


Height:	33 1/2" (850 mm)
Width:	23 1/2" (597 mm)
Depth:	23 7/8" (606 mm)
Weight:	161 lb (73 kg)
Cylinder volume:	15,9 gal (60 l)
Max. laundry capacity:	18 lb (8 kg)
Spin speed (rpm):	400-1800
Rated power:	See serial number tag and rating plate.
Heater output:	See serial number tag and rating plate.
Water pressure:	14-145 psi
Wash drum and liquid compartment material:	Stainless steel
Outer casing material:	Powder-coated and hot-galvanized sheet steel or stainless steel.
Water connection:	59" (1.5 m) pex pipe
Drain:	67" (1.7 m) polypropylene hose

# Transport protection


Your washing machine has transport protection of Type A or Type B.

## Type A


Before the machine is used, the three transport screws should be removed as shown below.

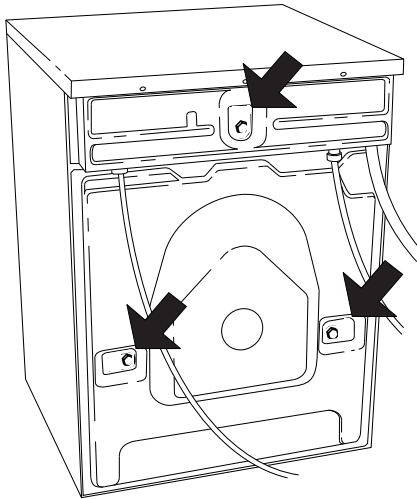

1. Loosen and remove the bolts.

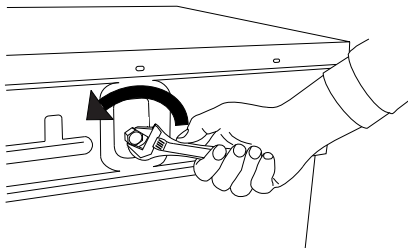

2. The enclosed plastic bag contains three plastic plugs to fit in the empty screw holes.

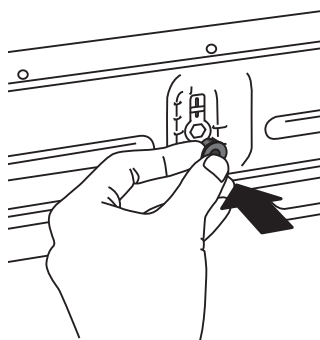

## NOTE!

If the machine is to be moved and transported, the transport screws must be refitted to prevent damage to the machine through shaking. If the transport screws or plastic plugs have been lost, you can order new ones from your retailer.

Article number	Designation
----------------	-------------

80 882 77	Screw
-----------	-------


80 884 67	Plastic plug
-----------	--------------

Order three of each item!


# Transport protection

## Type B


Remove the three transport bolts and the plastic plugs for locking the machine for transport before using the machine.

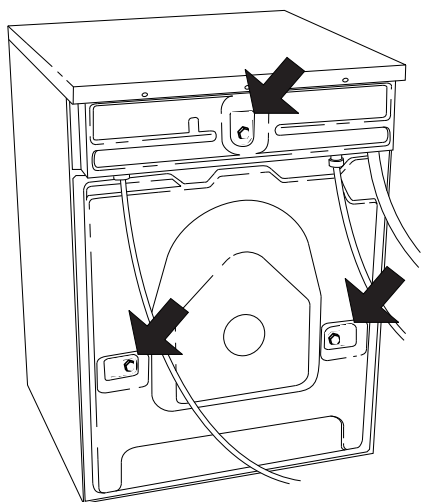


1. Loosen and remove the bolts as illustrated below.

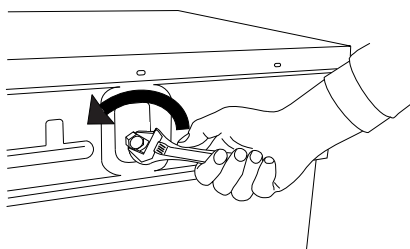

2. To remove the plastic plugs that held the bolts, squeeze together and pull out.

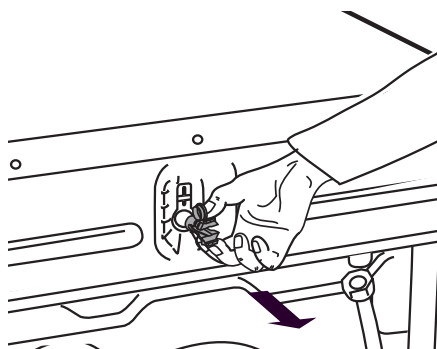

3. Remove the plastic covers from the plugs. Push the plastic covers into the three holes that contained the plugs. Save the plastic plugs in case the machine is moved in the future.

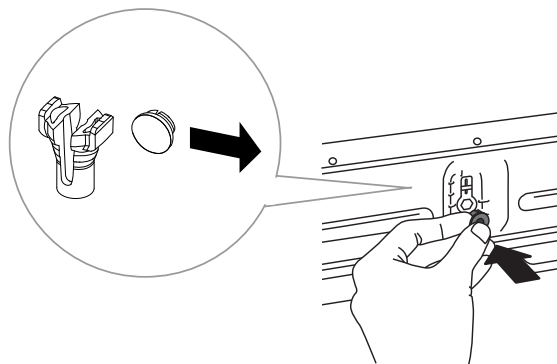

### NOTE!

If the machine is to be transported, the bolts and plastic plugs for locking the machine during transport must be installed to prevent damage to the machine through shaking. If the transport bolts or plastic plugs have been lost, you can order new ones from your retailer.

Article number	Designation
80 882 77	Screw
80 901 05	Plastic plug, transport lock

Order three of each item!




# Installation

Read these instructions carefully and completely before you install the machine. The installation should be carried out by a qualified person who is familiar with all local codes and ordinances for electrical and plumbing connections.

Cosmetic damage must be reported to your dealer within five days from the date of purchase. After unpacking the washer, thoroughly check the unit for cosmetic damage.


## Leveling the machine

It is important that the machine is level to prevent excessive vibrations during spin cycles. Each foot of the washer is adjustable, so you can level the washer on any surface. Once it is level, securely tighten the lock nuts on the feet to prevent excessive vibration during spin cycles.

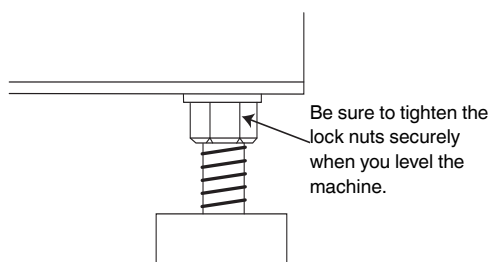

## Water supply connection

Since ASKO washers have a built-in heating element, you only need a cold water inlet. The connection should be made by someone who is sufficiently skilled. Use the hose supplied with the washer. (The inlet hose is marked for correct connection.) The water pressure must be in the range 15–146 PSI. A valve should be fitted on the water supply pipe. If a new supply pipe has been installed for the washer, it should be flushed thoroughly to remove any foreign particles that might clog the filter in the fill valve.

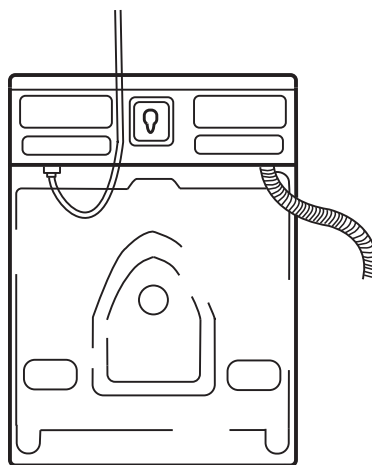

### NOTE!

If the unit is installed on a second storey, follow local building codes. We recommend installing a drip pan.

# Installation

## Drain outlet connection

The machine is supplied with the outlet hose already attached. The hose should be extended over a suitable sink edge or drain pipe at a height of 24" to 36" (610 mm to 914 mm) above the bottom of the unit. (The lower height is preferable.) Make sure the hose is not kinked.



### NOTE!

If the hose is extended, the internal diameter of the coupling must not be less than 1/2".

## WARNING!



Do not extend the drain hose higher than 36" (914 mm) from the bottom of the unit.

## Electrical Connections

The machine is delivered ready-fitted with a plug and is intended for connection to an ASKO Dryer, which is equipped with a matching receptacle. The plug supplied with the washer can only be used with an ASKO Dryer. If the washer is used separately or with another dryer, it must be on a separate 208-240 V single-phase circuit.

If the machine is to be used in a wet area, the supply must be protected by a residual current device.

As supplied: 208-240 V, 60 Hz, 2000 W heating element, 16 A fuse required.

## WARNING!



Connection to a permanently wired supply point must be made only by a qualified electrician

## Grounding instructions

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

## Freestanding installation

The washer can be placed next to the dryer. It is essential that the machine is leveled and the locknuts are tightened to prevent excessive vibration during spin cycles. Also be sure to leave a minimum of 1/2" of space between the washer and the dryer. The height adjustment for the washer is 33 1/2" to 34 1/2" (850 mm to 876 mm). Do not raise it higher than 34 1/2" (876 mm).

## WARNING!



Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded.

Do not modify the plug provided with the appliance. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.


## Stacked installation

ASKO washers should never be stacked on a counter or a dryer. You can, however, stack an ASKO dryer on an ASKO washer. Refer to your Dryer Use and Care Guide for instructions on how to do this.

# Installation


## Built-in installation

ASKO washers can be installed beneath a cabinet or worktop with a height of 34" to 35" (863 to 889 mm) or in a closet. There must be a gap of about ½" (12 mm) all around the machine, including between the rear edge of the machine's top panel and the back wall. The opening width must be at least 24½" (622 mm). Space must also be available for the fill and drain hoses. See the illustration below for measurements and positions. If the washer is installed in a closet the door must be left open while the washer is running.

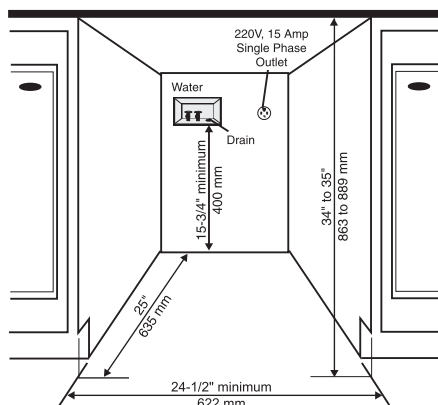

If the drain outlet is higher than 24" (610 mm), the connections will need to be recessed.

# Reversing the door

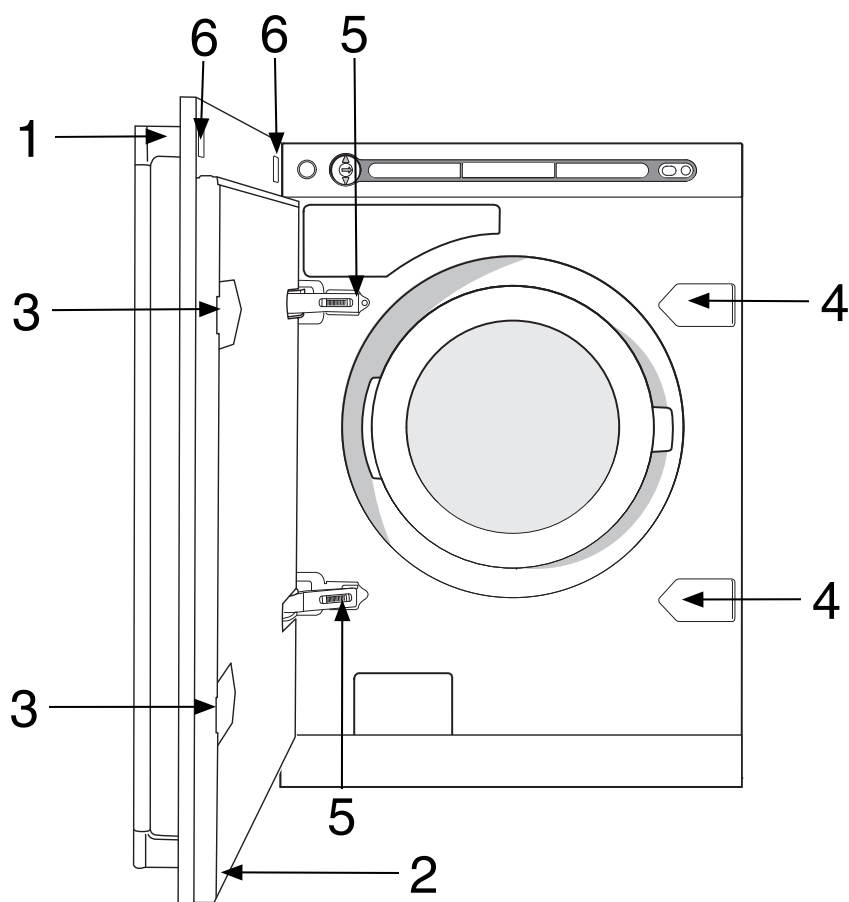


- |                               |                            |
|-------------------------------|----------------------------|
| 1. Cover door                 | 4. Cover plates on machine |
| 2. Steel door                 | 5. Hinge                   |
| 3. Cover plates on steel door | 6. Plastic guard           |

# Reversing the door


You can choose whether the cover door is hung on the right or the left.

## Follow these instructions:


1. Remove the cover door by undoing the four screws. The door is attached to two plastic mounts. Pull straight out.

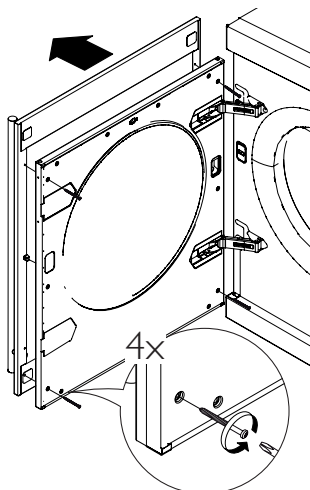


2. Remove the cover plates from the machine by pushing them sideways. Whether to the right or the left depends on how the door is fitted to the machine.

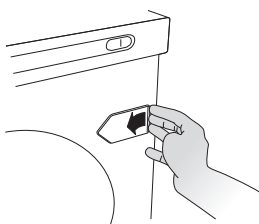


3. Remove the door from the hinges (A). Then unscrew the hinge from the machine (B).

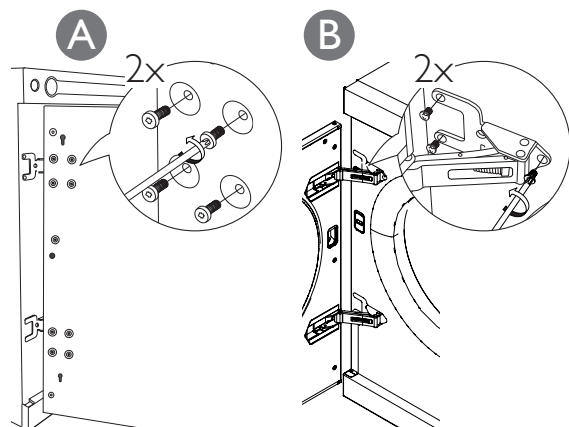

4. Reattach the cover plates on the other side of the machine.
5. Undo the screws holding the cover plates for the steel door. Reattach them on the other side.

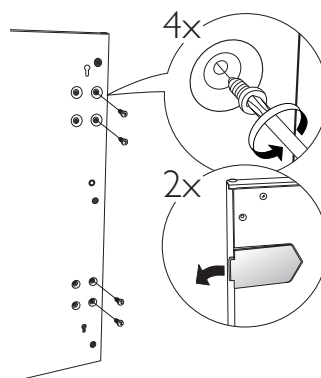


6. Reattach the hinges on the other side of the machine. Then reattach the steel door.
7. Remove the glued plastic guards from the top edge of the cover door and move them to the bottom edge (if the door needs to be rotated 180 degrees).

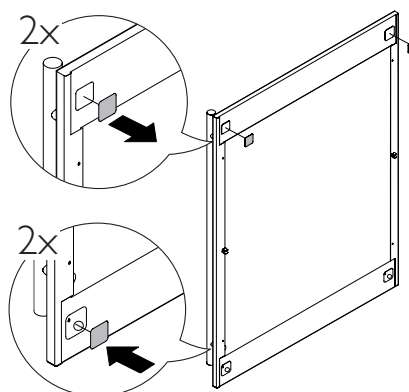

8. Refit the cover door.





# Fitting the wooden door

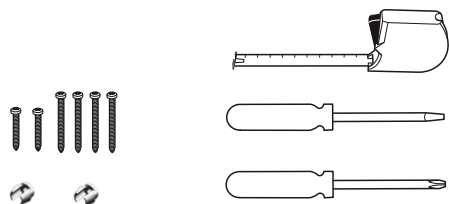

## Fitting the wooden door

Height 30,2" (766 mm)

Width 23 1/2" (597 mm)

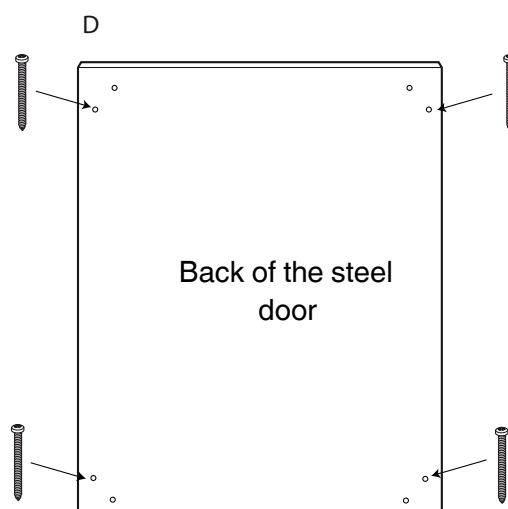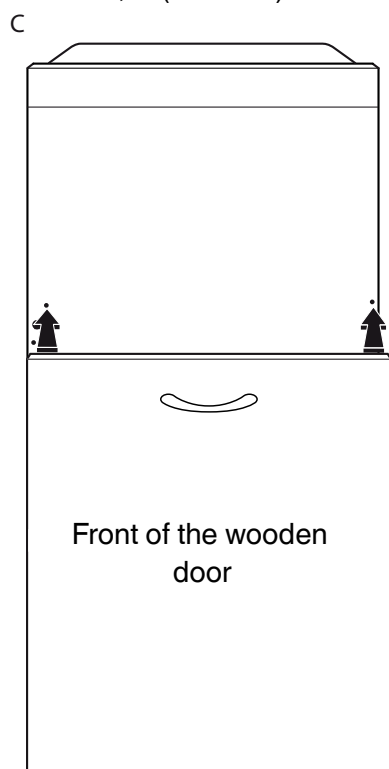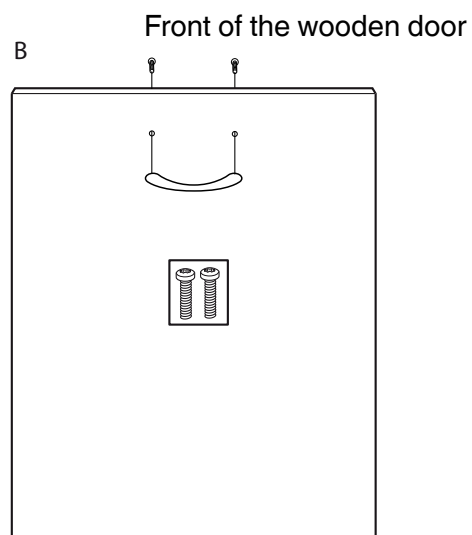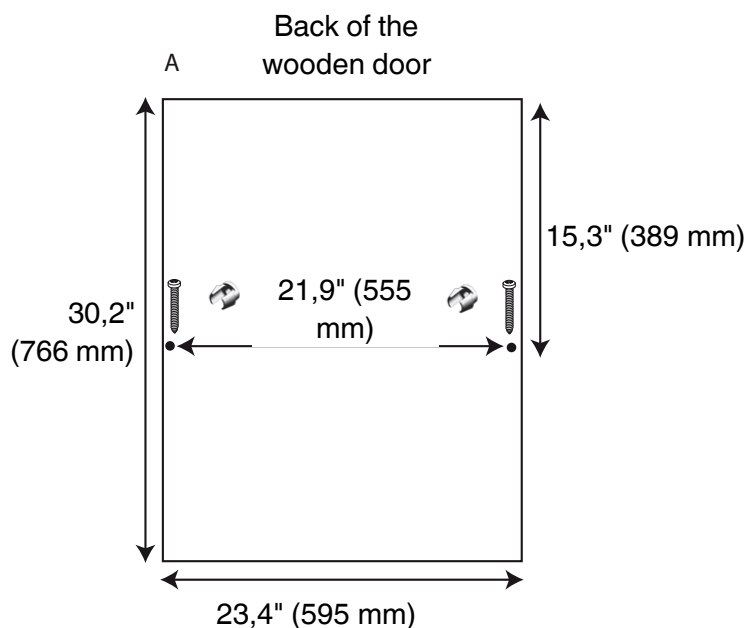

# Service

It is important to register your product warranty by logging onto "<http://www.askousa.com/customer-care/register-my-appliance/>" and filling out all required fields within 90 days from the date of purchase. After doing so, you will be e-mailed a certificate that will extend the original warranty for one additional year. If you do not have access to the internet, complete the warranty card included with the product and mail it to the address on the warranty card within 90 days from the date of purchase. Cosmetic damage must be reported to your dealer within five days from the date of purchase. After unpacking the washer, thoroughly check the unit for cosmetic damage.

<b>For residential installations only</b>	<b>ASKO Appliances Inc. will pay for:</b>
Length of warranty Two-Year Full From date of purchase.	ASKO replacement parts and/or repair labor to correct defect in materials or workmanship. Service must be provided by an authorized ASKO service agent.
Third Year Full Complete your product warranty registration online at " <a href="http://www.askousa.com/customer-care/register-my-appliance/">http://www.askousa.com/customer-care/register-my-appliance/</a> " within 90 days from the date of purchase to extend the original warranty one additional year. If you do not have access to the internet, complete the warranty card included with the product and mail it to the address on the warranty card within 90 days from the date of purchase.	ASKO replacement parts and/or repair labor to correct defect in materials or workmanship. Service must be performed by an authorized ASKO service agent.
Lifetime	ASKO replacement parts (labor cost not included) for the stainless steel tank if it exhibits a manufacturing defect such as cracking or rusting through. Service must be provided by an authorized ASKO service agent.
<b>For non-residential installations One-year Full Warranty</b> From date of purchase.	ASKO replacement parts and/or repair labor to correct defect in materials or workmanship. Service must be provided by an authorized ASKO service agent.

# Service

## Warranty

### **ASKO Appliances Inc. will not pay for:**

- Service calls to:
  1. Correct the installation of the appliance.
  2. Repair damage due to shipment, delivery, installation, misuse or abuse.
  3. Instruct how to use the appliance.
  4. Replace house fuses or correct house wiring.
  5. Correct house plumbing, including drainage problems related to improper installation.
  6. Clean or service air device in drain line.
- Repair and/or replacement parts for failure of product if appliance is used for other than home/residential use.
- Damage resulting from accident, fire, floods, acts of God, alteration, misuse, abuse, improper installation, or installation not in accordance with local electrical or plumbing codes.
- Any shipping costs for parts during the limited warranty period.
- Replacement parts or repair labor costs for units operated outside the continental United States.
- Pickup and delivery. ASKO products are designed to be repaired in the home.

### **In no event shall ASKO Appliances Inc. be responsible for any incidental or consequential damages.**

Some states will not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

### **For warranty service, contact our Customer Care Center at the number listed below.**

Before calling for service or contacting ASKO Appliances Inc. regarding a warranty issue, make a note of the model, type name, and serial number.

## **How to contact ASKO Appliances Inc.**

### **Write to us at:**

ASKO Appliances Inc.

P.O. Box 940609

Plano, TX 75094-0609

[www.askousa.com](http://www.askousa.com)

### **Or contact our**

Customer Care Center at

1-800-898-1879

[www.askousa.com](http://www.askousa.com)



# Notes

# Notes

# Notes

# Quick guide

## 1 Washing

1. Empty pockets and close zippers.
2. Read the item's laundry label.
3. Sorting laundry.


### NOTE!

Place underwired bras in a laundry net.

## 2 Load the laundry

1. Pressing the main power switch.
2. If the washer door is closed, press the Door Opening button (key symbol) and the door will open.
3. Load the laundry and close the washer door.

## 3 Detergent compartment

1. Pour detergent into the main wash compartment, and pre-wash compartment as well if required. Pour fabric softener into the compartment on the right with the  symbol.

2. If you use liquid detergent, follow the detergent manufacturer's recommendations.
3. If you use liquid detergent, use the accompanying divider. Place it in the filter at the back of the detergent compartment. Pour detergent directly into the main wash compartment.

## 4 Select the program

1. Select a program by turning the program selector.
2. Select any options and settings.
3. Press the Start/Stop button.

## 5 Program finished

1. "End" on the display indicates that the wash program has ended.
2. The washer door opens automatically once the program has finished.
3. Remove the laundry.
4. Turn off the main power switch.

If you have small children or pets at home, close the washer door once you have removed the laundry.