



UTTERMOST ASSEMBLY INSTRUCTIONS

ITEM#: 27191

PARTS LIST:

**A. Decorative Frame B. Cylinder Finial C. Plastic Washer D. Shade
E. Plastic Washer F. Nipple**

****Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.**


1. Take out the table lamp from the package .

2. Put E(Plastic Washer), D(Shade).

A (Decorative Frame), C(Plastic Washer) through F(Nipple). Make sure A(Decorative Frame) is at the same angle as the lamp base, Then Tighten by B(Cylinder Finial)

3. Use on/off 2*60W bulb(not included).

4. Use Line Switch control the bulb on and off.

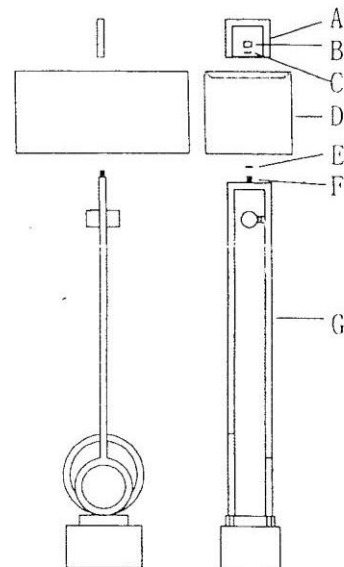

IMPORTANT SAFETY ISTRUCTIONS

This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet. reverse the plug, If it still does not fit, Contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted .Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD ROCKY MOUNT VIRGINIA 24151

www.uttermost.com