

ALEXA COMMAND GUIDE

Celerity™ High-Speed Oven

SWA3099MS

Pair with your Amazon Alexa App and enjoy hands-free cooking with Alexa.

Menu Item	Command	Quantity Range
Microwave Time Cook	Alexa, microwave/cook for X minutes and Y seconds in the oven. Alexa, microwave/cook for X minutes and Y seconds in (device name). Alexa, microwave/cook for X minutes and Y seconds at level Z .	X = 01:00 - 30:00 Y = 00:01 - 00:59 (by 1 sec increments) Z = 1 - 10
+30 Seconds (Microwave Manual Cook Only)	Alexa, add 30 seconds to the oven. Alexa, add 30 seconds to (device name).	-
+1 Minute (Oven Manual Cook Only)	Alexa, add 1 minute to the oven. Alexa, add 1 minute to (device name).	-
Pause Time	Alexa, pause the oven. Alexa, pause (device name).	-
Resume Time	Alexa, resume the oven. Alexa, resume (device name).	-
Stop Time	Alexa, stop the oven. Alexa, stop (device name).	-
Preheat	Alexa, preheat the oven to X degrees. Alexa, preheat (device name) to X degrees. Alexa, preheat the oven. Alexa, preheat (device name).	X = 90F/150F/275F - 450F
Defrost	Alexa, defrost for X minutes. Alexa, defrost for X minutes and Y seconds in (device name). Alexa, defrost for X minutes and Y seconds in the oven.	X = 01:00 - 30:00 Y = 00:01 - 00:59 (by 1 sec increments)

ALEXA COMMAND GUIDE

Celerity™ High-Speed Oven

SWA3099MS

Menu Item	Command	Quantity Range
Convection Bake	<p>Alexa, convection bake for X hours and Y minutes in the oven. (<i>Default temp 350F</i>)</p> <p>Alexa, convection bake for X hours and Y minutes in (device name).</p> <p>Alexa, convection bake for X hours and Y minutes at Z degrees in the oven.</p> <p>Alexa, convection bake for X hours and Y minutes at Z degrees in (device name).</p>	<p>X = 1,2</p> <p>Y = 01:00 - 59:00 (by 1 min increments)</p> <p>Z = 90F/50F/275F - 450F (by 5F increments)</p>
Convection Roast	<p>Alexa, convection roast for X hours and Y minutes in the oven. (<i>Default temp 425F</i>)</p> <p>Alexa, convection roast for X hours and Y minutes in (device name).</p> <p>Alexa, convection roast for X hours and Y minutes at Z degrees in the oven</p> <p>Alexa, convection roast for X hours and Y minutes at Z degrees in (device name).</p>	<p>X = 1,2</p> <p>Y = 01:00 - 59:00 (by 1 min increments)</p> <p>Z = 375F - 450F (by 5F increments)</p>
Grill	<p>Alexa, grill for X minutes in the oven.</p> <p>Alexa, grill for X minutes in (device name).</p> <p>Alexa, grill for X minutes at level Z in the oven.</p> <p>Alexa, grill for X minutes at level Z in (device name).</p>	<p>X = 01:00 - 30:00 (by 1 min increments)</p> <p>Z = 1 - 10</p>
Speed Bake	<p>Alexa, bake for X hours and Y minutes in the oven. (<i>Default temp 350F</i>)</p> <p>Alexa, bake for X hours and Y minutes in (device name).</p> <p>Alexa, bake for X hours and Y minutes at Z degrees in the oven.</p> <p>Alexa, bake for X hours and Y minutes at Z degrees in (device name).</p>	<p>X = 1,2</p> <p>Y = 01:00 - 59:00 (by 1 min increments)</p> <p>Z = 90F/50F/275F-450F (by 5F increments)</p>

ALEXA COMMAND GUIDE

Celerity™ High-Speed Oven

SWA3099MS

Menu Item	Command	Quantity Range
Speed Roast	<p>Alexa, roast for X hours and Y minutes in the oven. (<i>Default temp 425F</i>)</p> <p>Alexa, roast for X hours and Y minutes in (device name).</p> <p>Alexa, roast for X hours and Y minutes at Z degrees in the oven.</p> <p>Alexa, roast for X hours and Y minutes at Z degrees in (device name).</p>	<p>X = 1,2</p> <p>Y = 01:00 - 59:00 (by 1 min increments)</p> <p>Z = 375F – 450F (by 5F increments)</p>
Air Fry	<p>Alexa, air fry for X minutes in the oven. (<i>Default temp 425F</i>)</p> <p>Alexa, air fry for X minutes in (device name).</p> <p>Alexa, air fry for X minutes at Z degrees in the oven.</p> <p>Alexa, air fry for X minutes at Z degrees in (device name).</p>	<p>X = 01:00 - 30:00 (by 1 min increments)</p> <p>Z = 375F – 450F (by 5F increment)</p>
Warm	<p>Alexa, warm for X hours and Y minutes in the oven. (<i>Default temp 150F</i>)</p> <p>Alexa, warm for X hours and Y minutes in (device name).</p> <p>Alexa, warm for X hours and Y minutes at Z degrees in the oven.</p> <p>Alexa, warm for X hours and Y minutes at Z degrees in (device name)</p>	<p>X = 1,2,3,4</p> <p>Y = 01:00 - 59:00 (by 1 min increments)</p> <p>Z = 90F/150F/200F</p>
Proof	<p>Alexa, proof for X hours and Y minutes in the oven. (<i>Default temp 90F</i>)</p> <p>Alexa, proof for X hours and Y minutes in (device name).</p> <p>Alexa, proof for X hours and Y minutes at Z degrees in the oven.</p> <p>Alexa, proof for X hours and Y minutes at Z degrees in (device name).</p>	<p>X = 1,2,3,4</p> <p>Y = 01:00 - 59:00 (by 1 min increments)</p> <p>Z = 90F/150F/200F</p>

¹Must register with Amazon Alexa App. ²Amazon Echo device not included.

© 2025 Sharp Electronics Corporation. All rights reserved. Sharp and all related trademarks are trademarks or registered trademarks of Sharp Corporation and/or its affiliated companies. Amazon, Alexa, and all related marks are trademarks of Amazon.com, Inc. or its affiliates. All other trademarks are property of their respective owners. Product specifications and design are subject to change without notice. Internal capacity calculated by measuring maximum width, depth and height. Actual capacity for holding food is less.