 
 


Cabinet

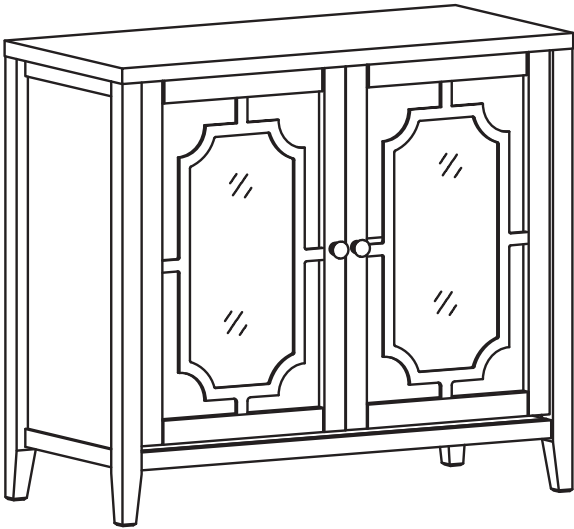 


A

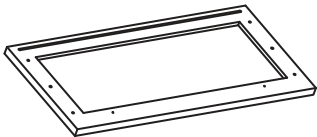


1 pc

B

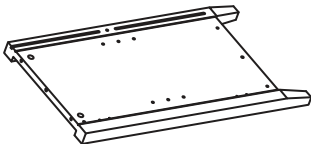


1 pc

 C

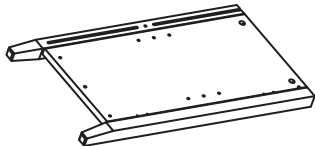


1 pc

 D



2 pcs

 E




1 pc

F




1 pc

 G

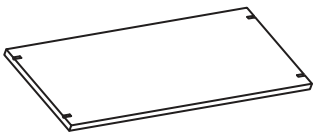


1 pc

 H

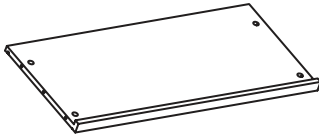

1 pc

 I

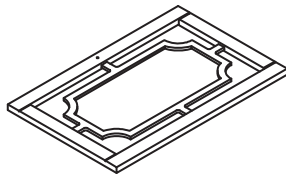

2 pcs

1



4 pcs

2



12 pcs

3



12 pcs

4



2 pcs

5



2 pcs

6



2 pcs

7



4 pcs

8



4 pcs

9



4 pcs

10



4 pcs

11



 
16 pcs

12





2 pcs


CAM LOCK SYSTEM

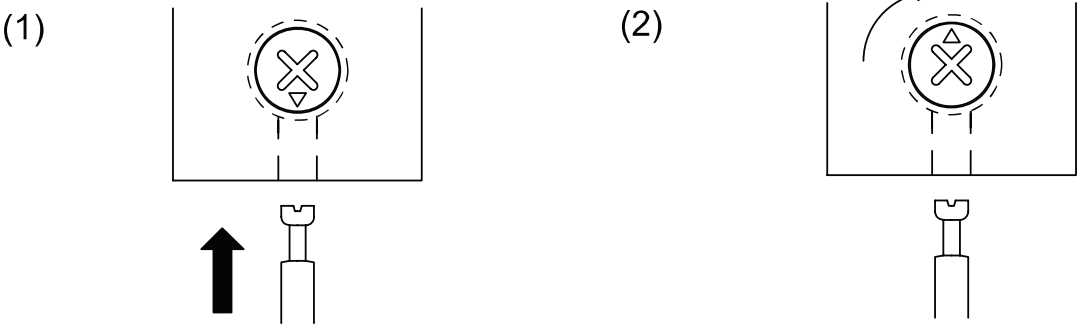

IMPORTANT NOTE--CAM LOCK ADJUSTMENT

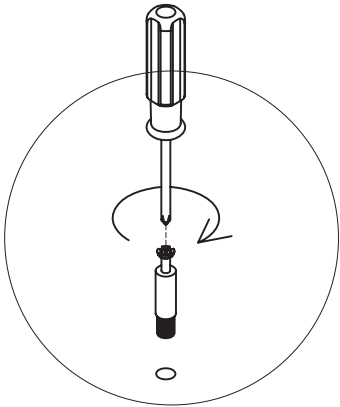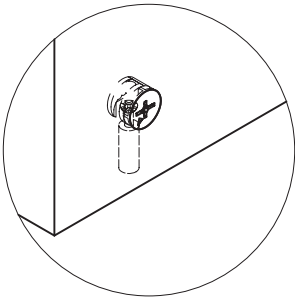  


 If Cam Lock
is too loose,
Please adjust Metal
Dowel to turn right
as drawing.

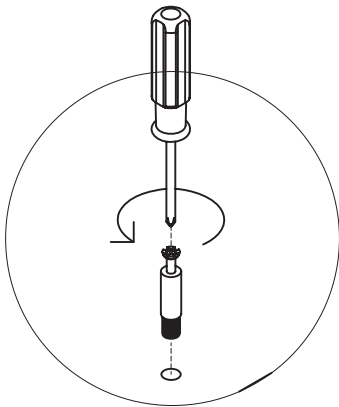


If Cam Lock
is too tight,
Please adjust Metal
Dowel to turn left
as drawing.

 
Step 1

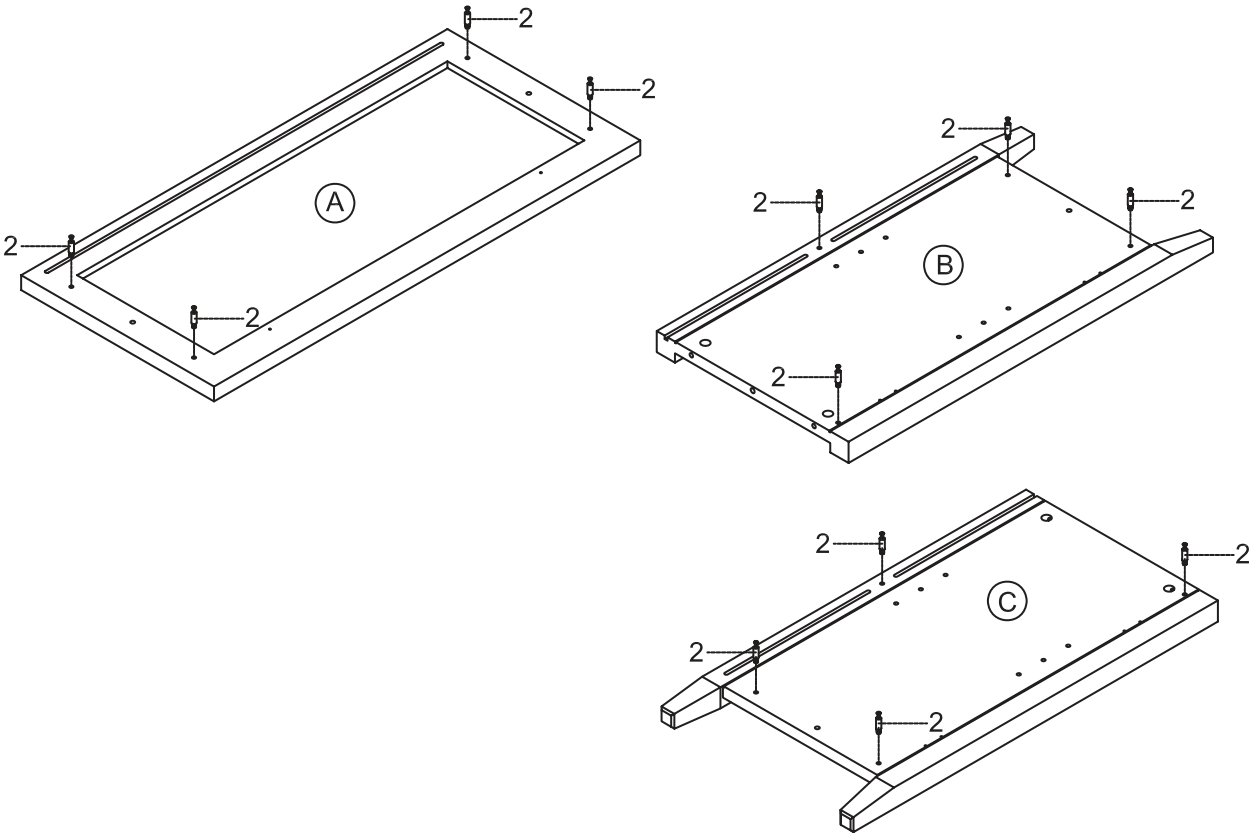

 
Step 2

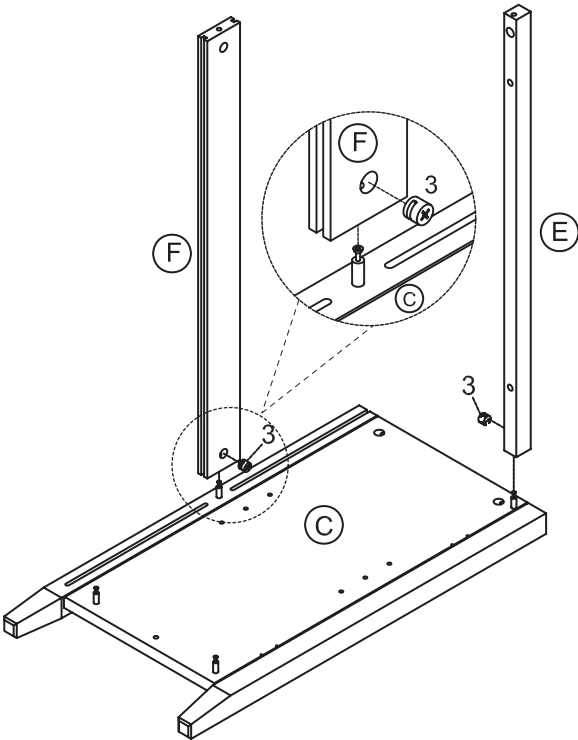

 
Step 3

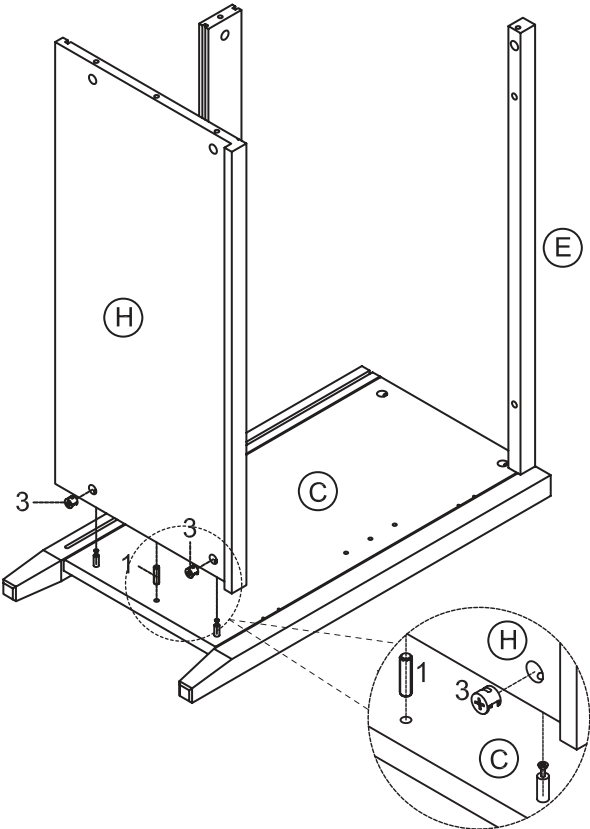

 
Step 4

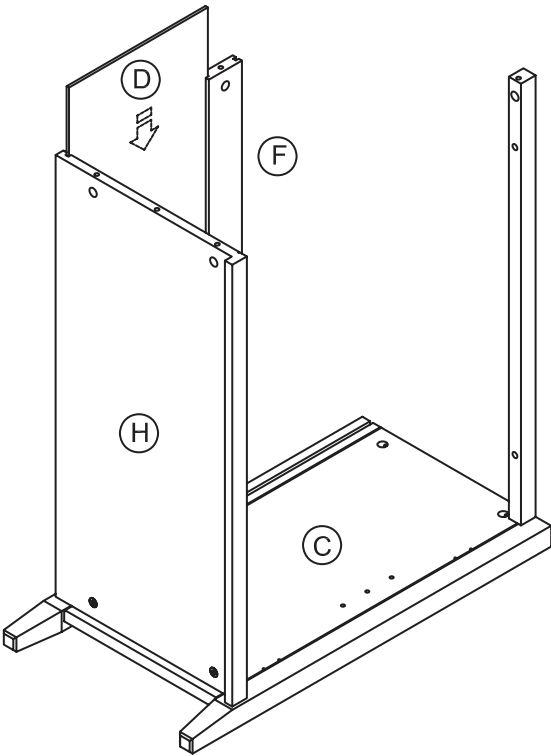

 
Step 5

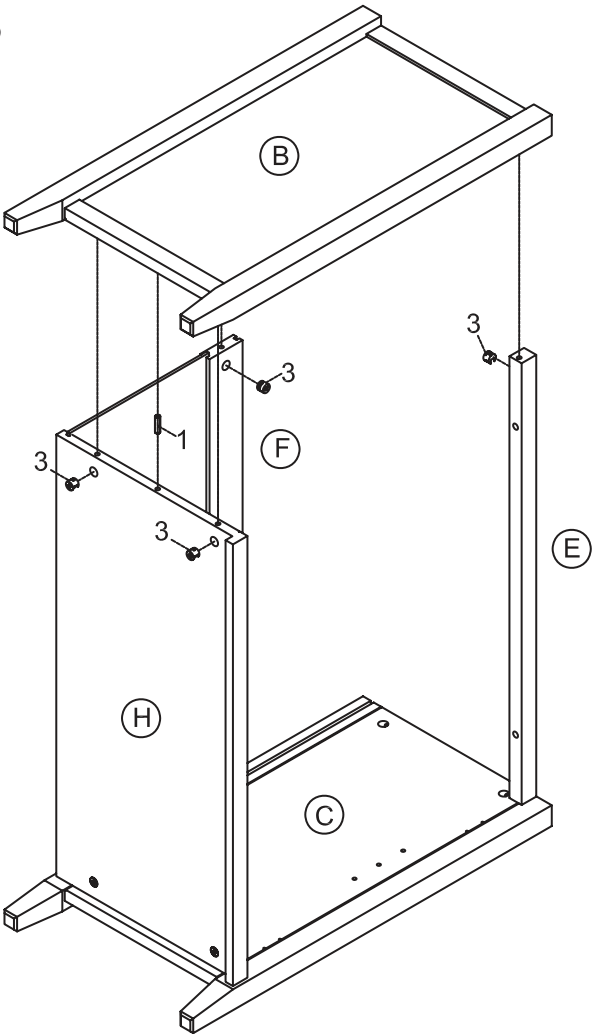

 
Step 6

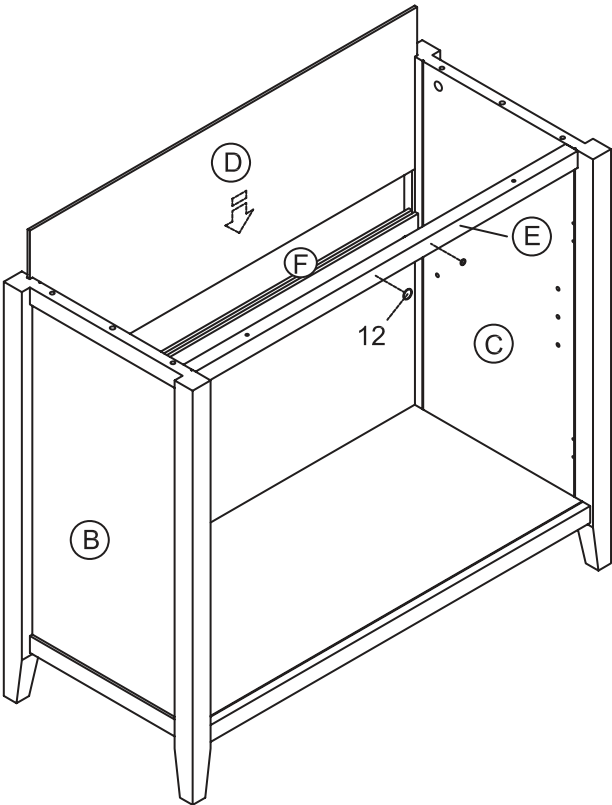

 
Step 7

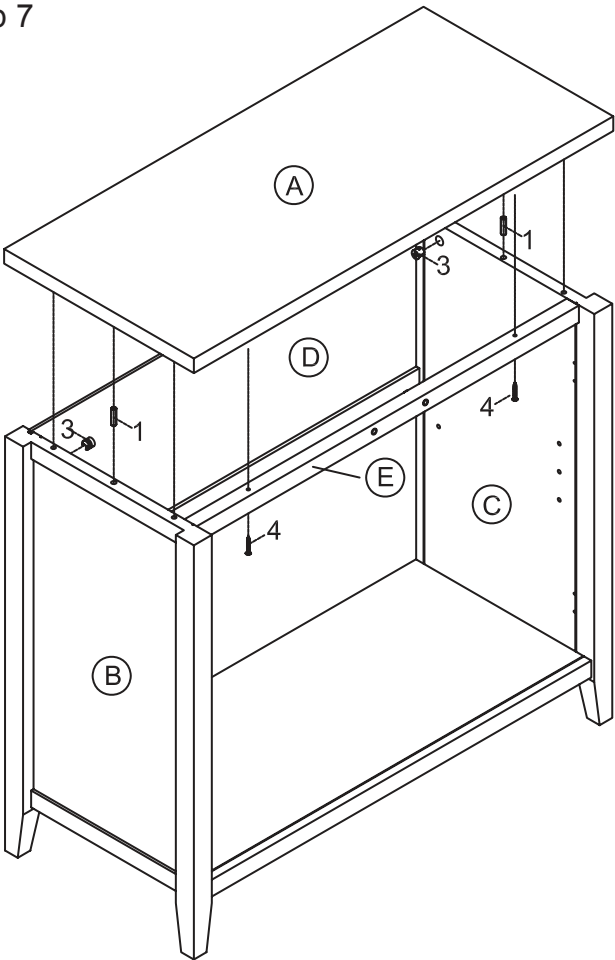

 
Step 8

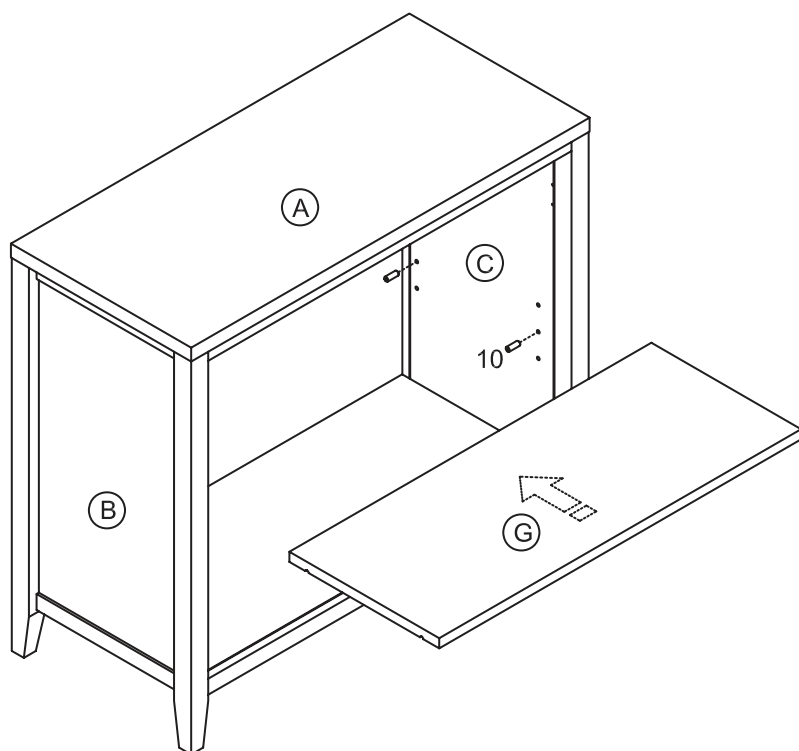

 
Step 9

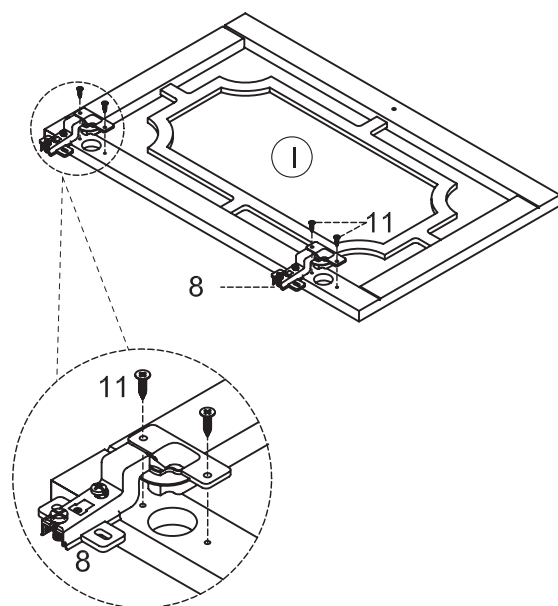

 Step 10


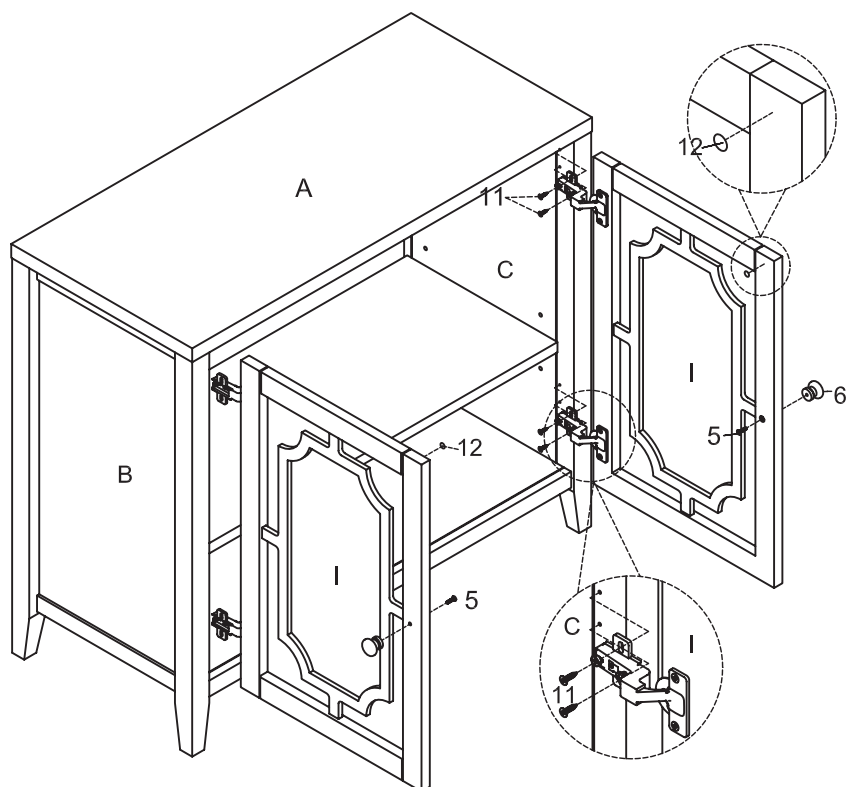


 Step 11


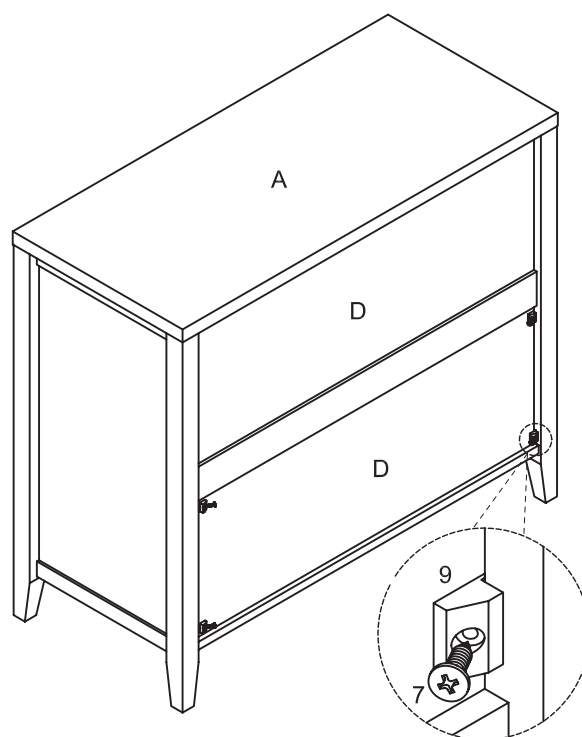


Step 12

  To move doors left or right, loosen screw as shown and move doors to suit. Re-tighten screw.

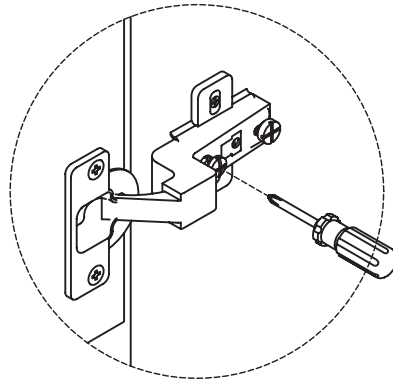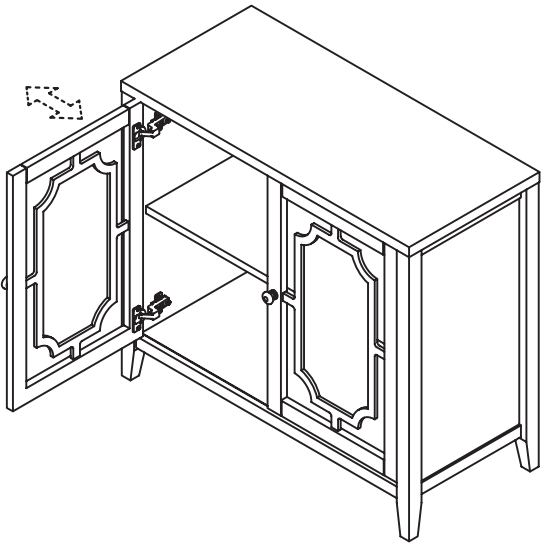

  To move doors up or down, loosen screws as shown and move doors to suit. Re-tighten screws.

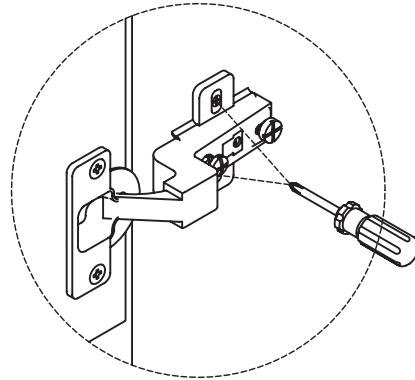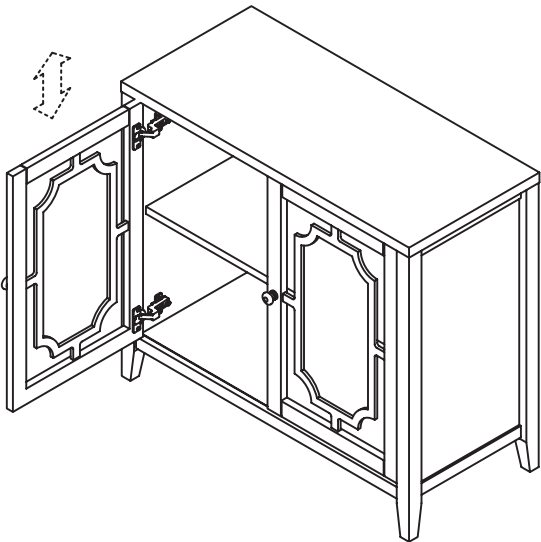

To move doors in or out, loosen screw as shown and move doors to suit. Re-tighten screw.

